



Rear Wall


Jig Instructions

REAR WALL - SET UP LIST

- Put caulk by heater
- Caulking gun
- Framing nail gun
- Framing nails
- Panel nails
- Triangle
- Drill motor with spade bit
- Screw gun with T25 bit
- Long screws
- Short screws
- Chalk line
- Stapler
- Staples
- Mallet
- Hammer
- Pry bar

Step 1


- Place 89" 2x4s on the jig for the top and bottom of the wall.
- Select the straightest 84" 2x4 board (stud), and reserve it for Step 4.
- Place 84" 2x4 studs on the jig for each side of the wall.
- Line up the corners to be flush on top and sides
 - one person holds and the other nails.
- Put 1 FRAMING nail (the longer ones) at each corner through the top and bottom 2x4s to connect the corners, about 1/3 of the way down
- Check that the perimeter is square by measuring the diagonals; they should be the same
- Put a second nail directly under each of the first nails, about 2/3 of the way down

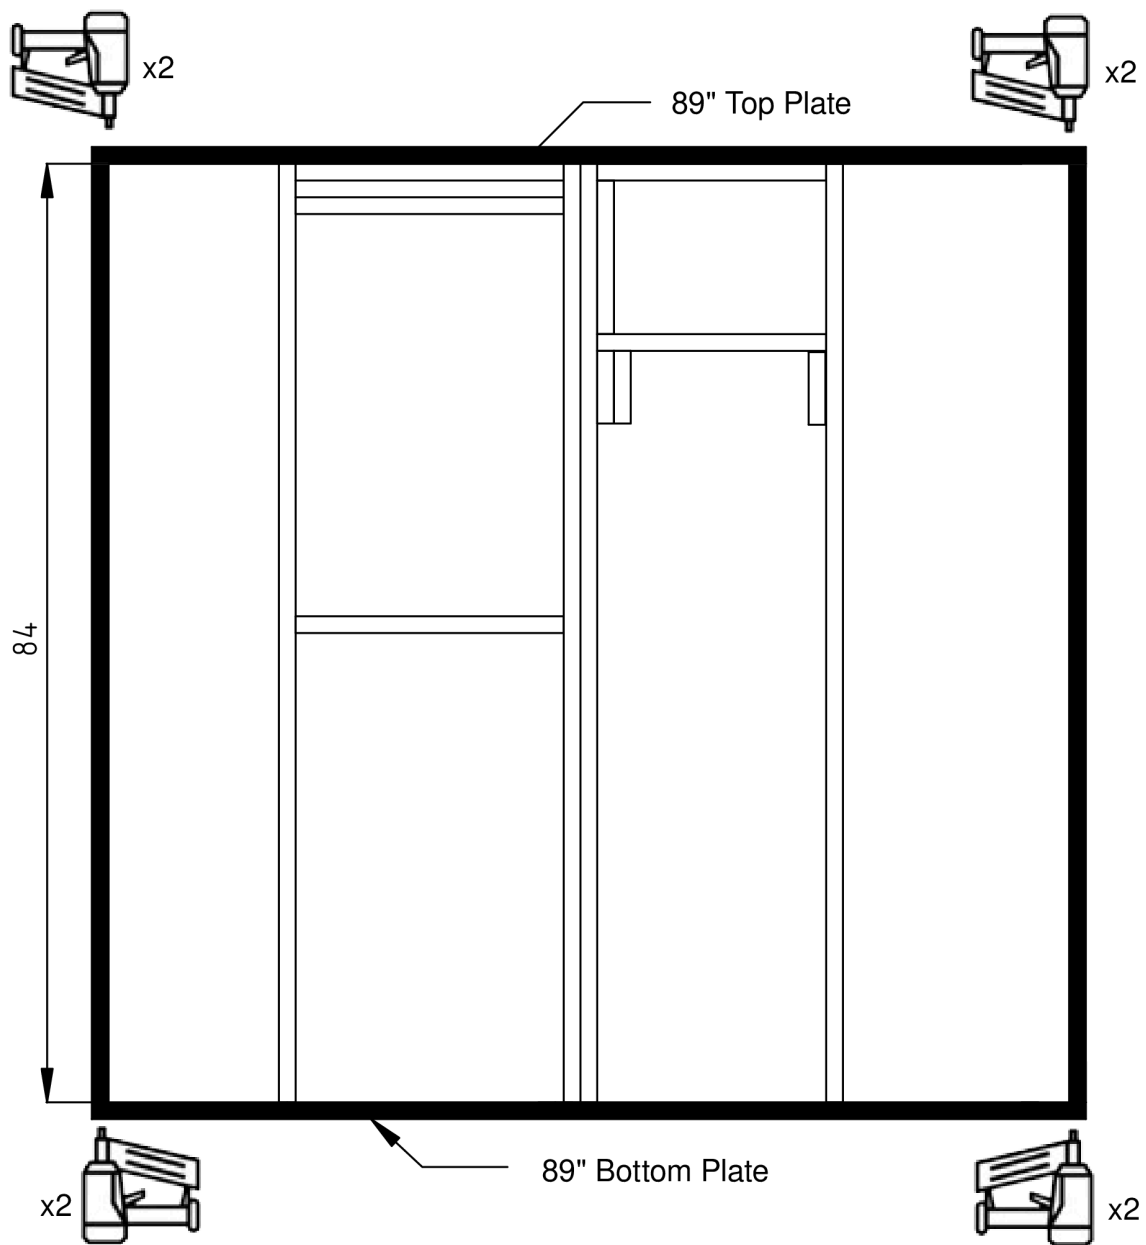

Step 1 Rear Wall

Step 2


- Place 2 studs (84") into the jig, one on either side of the window opening. If studs are bowed, place so that bow is to the inside of the window area.
- Team leader
 - When stud are in place, draw a straight vertical line at the middle of each stud to indicate where to put the nails.
- Place
 - 3 short 2x4s at the top of the window opening (if one is shorter, put it in the middle of the set of three)
 - 1 short 2x4 at the bottom of the window opening
- Clamp the 3 short boards at the top together.
- Nail these short boards to the top plate
 - 3 nails through the top plate into the top of the 3 boards
 - 3 nails inside pointing out
- Squeeze the long boards up against the 3 short boards and put one nail through the long board into the end of each of the short boards on both sides
- Put 2 nails into both ends of the short 2x4 in the middle (at the bottom of the window).
 - make sure that the short board is flush with the studs before nailing each end

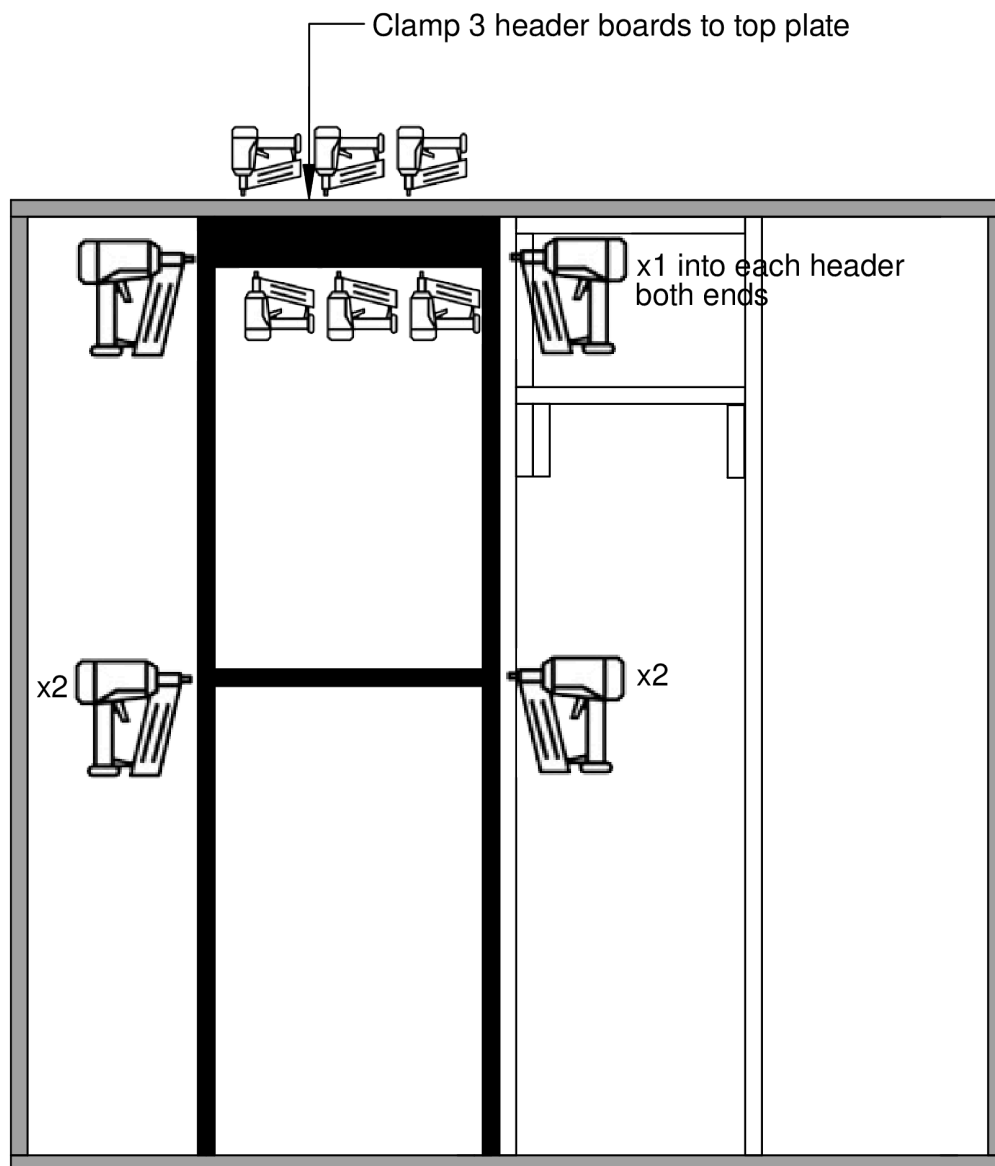

Step 2 Rear Wall

Step 3


- Secure the studs on both sides of the window
 - 2 nails into each stud at the top
 - 2 nails into those same studs at the bottom
- Place next stud as shown in diagram
- CLAMP and put 3 nails into the double studs
 - ONLY in the lower half BELOW the window.
- Put 2 FRAMING nails at each end of this stud, through the top and bottom plates, on the marked lines.

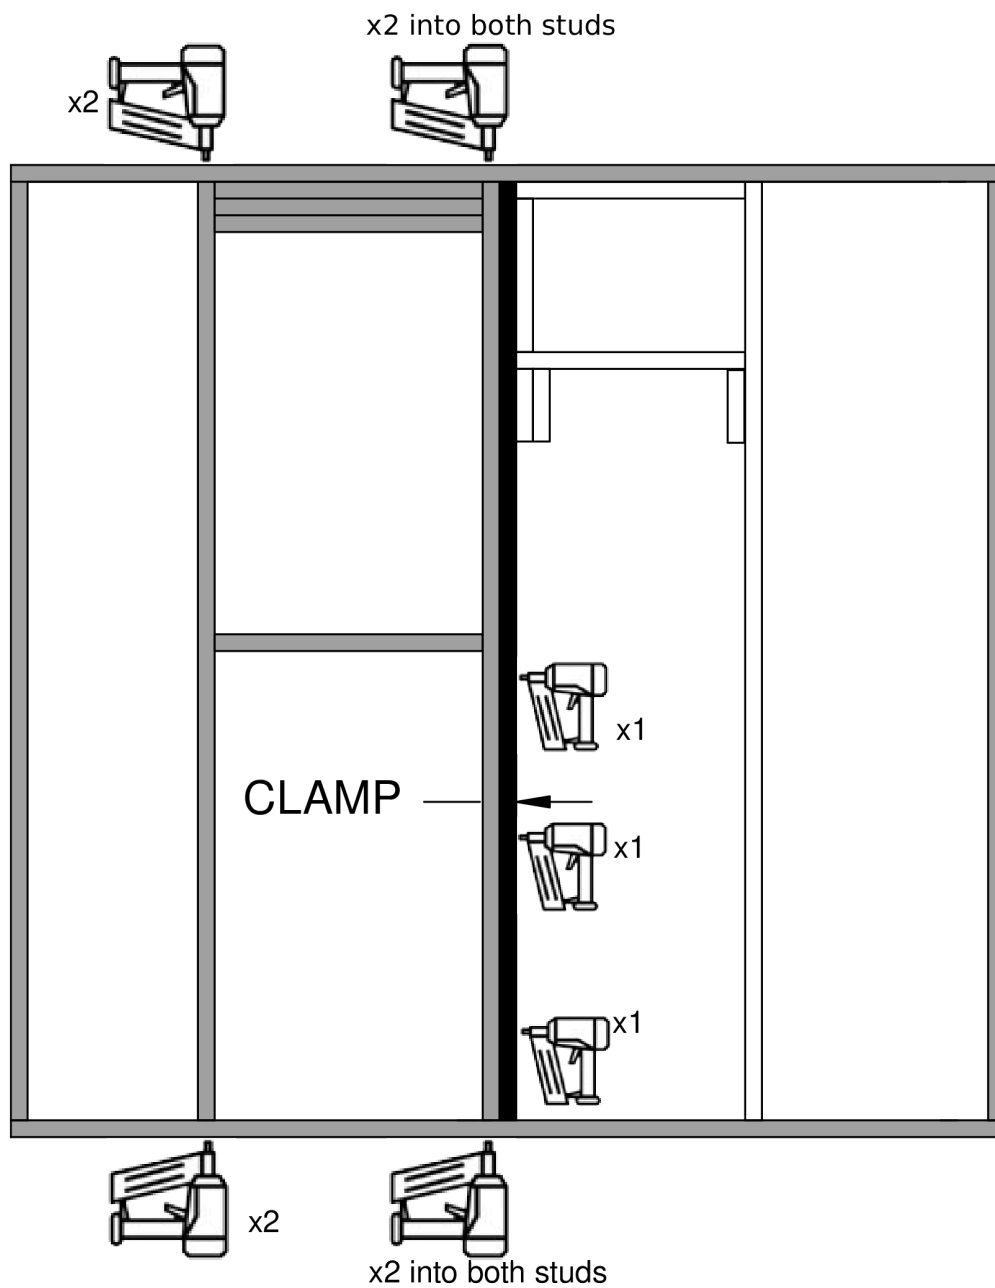

Step 3 Rear Wall

Step 4


- Place the straight stud selected in Step 1 between the double stud and the wall edge, as shown in the diagram.
- Place a 20-1/2" block horizontally against the top plate, as shown in the diagram. Clamp it in place, and nail it to the top plate.
- Place a 13-3/4" block vertically against the double stud and up against the block above. Clamp it to the double studs and nail it to these studs in two places.
- Place a second 20-1/2" block horizontally below the vertical block as shown, and nail it to this block, and then through the newly installed stud, as shown in the diagram. Make certain that the block is flush with the surface of the stud.
- Finally, put two nails through the top and bottom plates into the new stud.

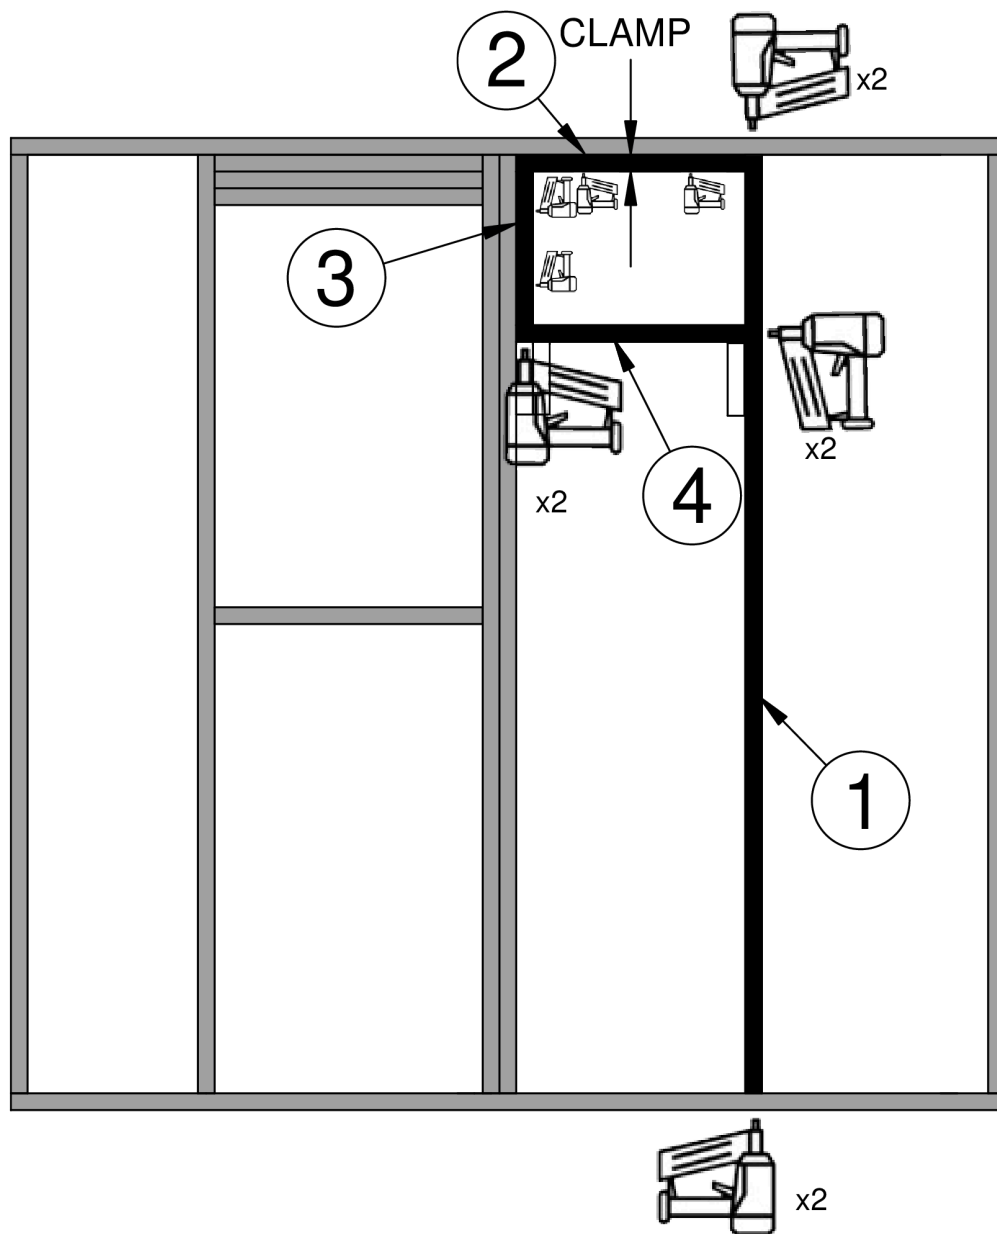

Step 4 Rear Wall

Step 4b


- Position a 6½” block on each side below the air conditioner opening as shown in the diagram, and nail each block to the adjacent stud with 2 nails.
- Position a third 6½” block next to the one on the window side, and nail this block to its neighbor, again with two nails

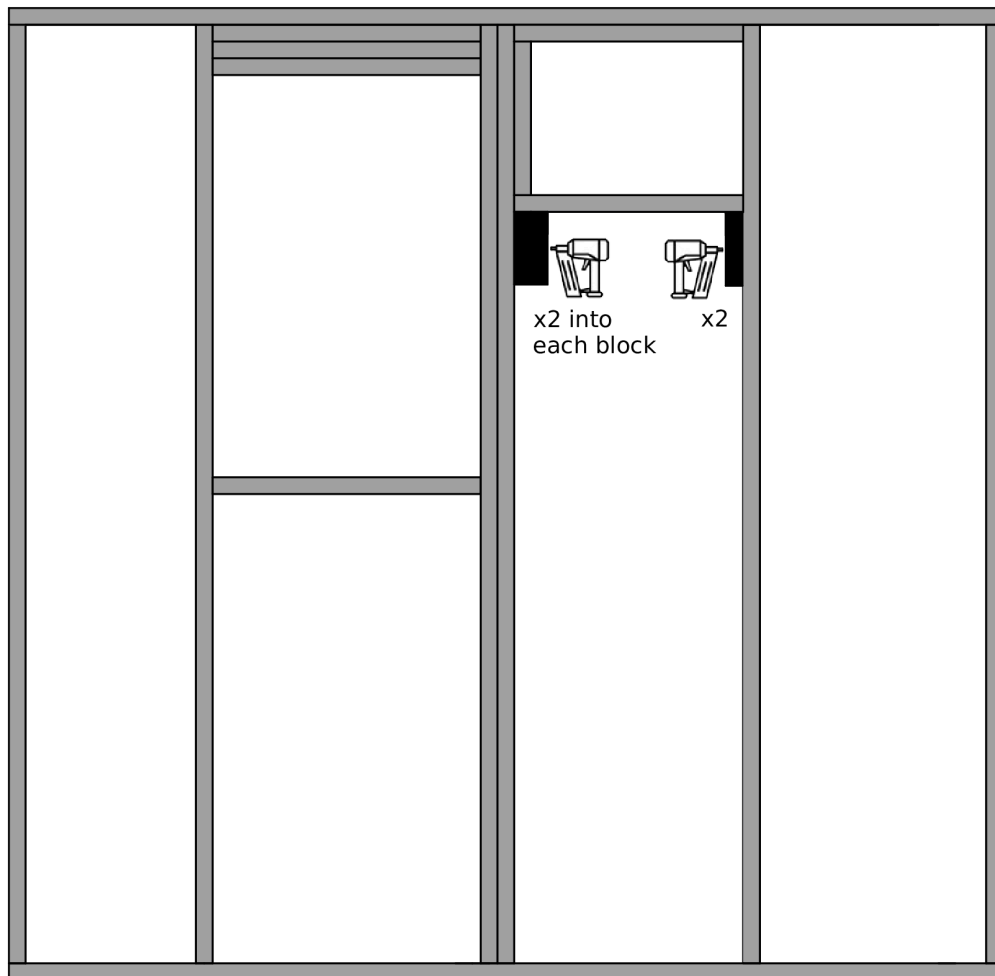

Step 4b Rear Wall

Step 5

- Line the Tyvek up to be flush with the top and overlap about 6" on the sides, so that the Tyvek extends beyond the alignment posts on the side of the jig.
- Roll out a few feet at a time and staple 8" apart along the top plate, pulling the Tyvek so that it will be tight. At the end of the top cut off the roll with about 6" extra on the side
- Staple around the perimeter pulling so that it is tight
- Staple along ALL of the inner studs, across the top and bottom of the window .and across the bottom of the A/C blocking

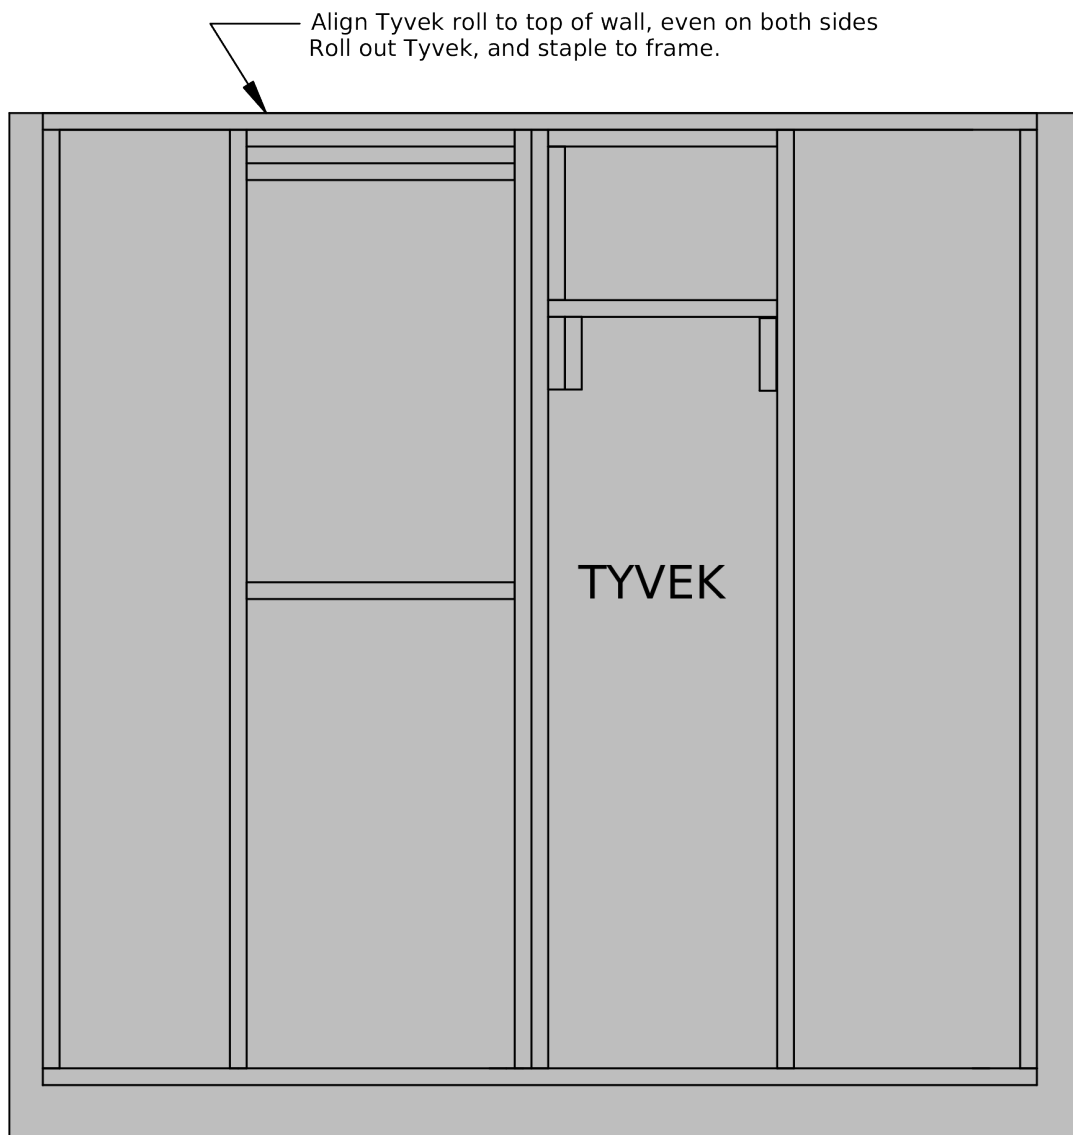

Step 5 Rear Wall


Step 6

- Cut out the Tyvek where the window goes on all 4 sides
- Using the pattern board, cut Peel-and-Stick flashing for the sides and top and bottom of the window opening (“inner long” and “inner short”).
- Put flashing around the window opening.
 - half of each strip sticks up above the framing
 - flashing wraps around the corners
 - use a knife to slit the flashing above the frame at each corner, and fold down over the Tyvek.

IMPORTANT — Be sure to put the flashing ABOVE, not on the brackets on the jig.

- Add 4 small pieces of flashing at the corners of the window, as shown in the figure


Trim Tyvek flush with inside of window opening

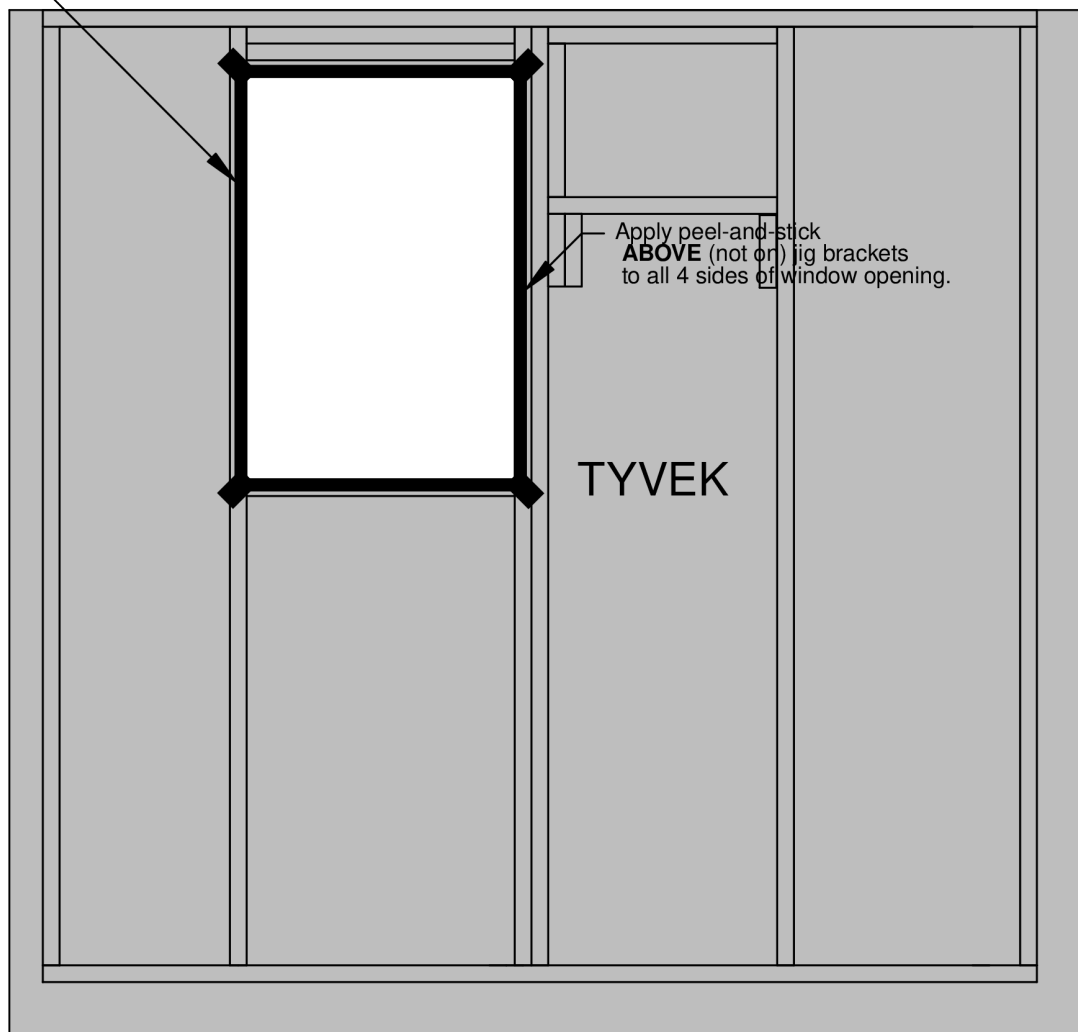

Step 6 Rear Wall

Step 7


- Place Panel 1 with window cut out
 - align top of panel with top plate of frame
 - align outside edge with the alignment posts
- Nail (PANEL NAILS)
 - along top, outside edge, bottom, and internal studs
 - use chalk lines
 - DO NOT nail around the window or on center edge
- Caulk along the center edge of Panel 1.
- Place Panel 2
- Nail (PANEL NAILS)
 - along top every 8"
 - Using body weight, seal the center seam and nail at an angle, about $\frac{1}{2}$ " away from the panel edge
 - along outer edge, bottom, and internal studs, every 8"
 - use chalk lines
- Position the A/C nailing template over the top center of the wall, against the jig stop marked, and make pencil marks at the spots indicated at the edges of the template. Nail (PANEL NAILS) at each mark.

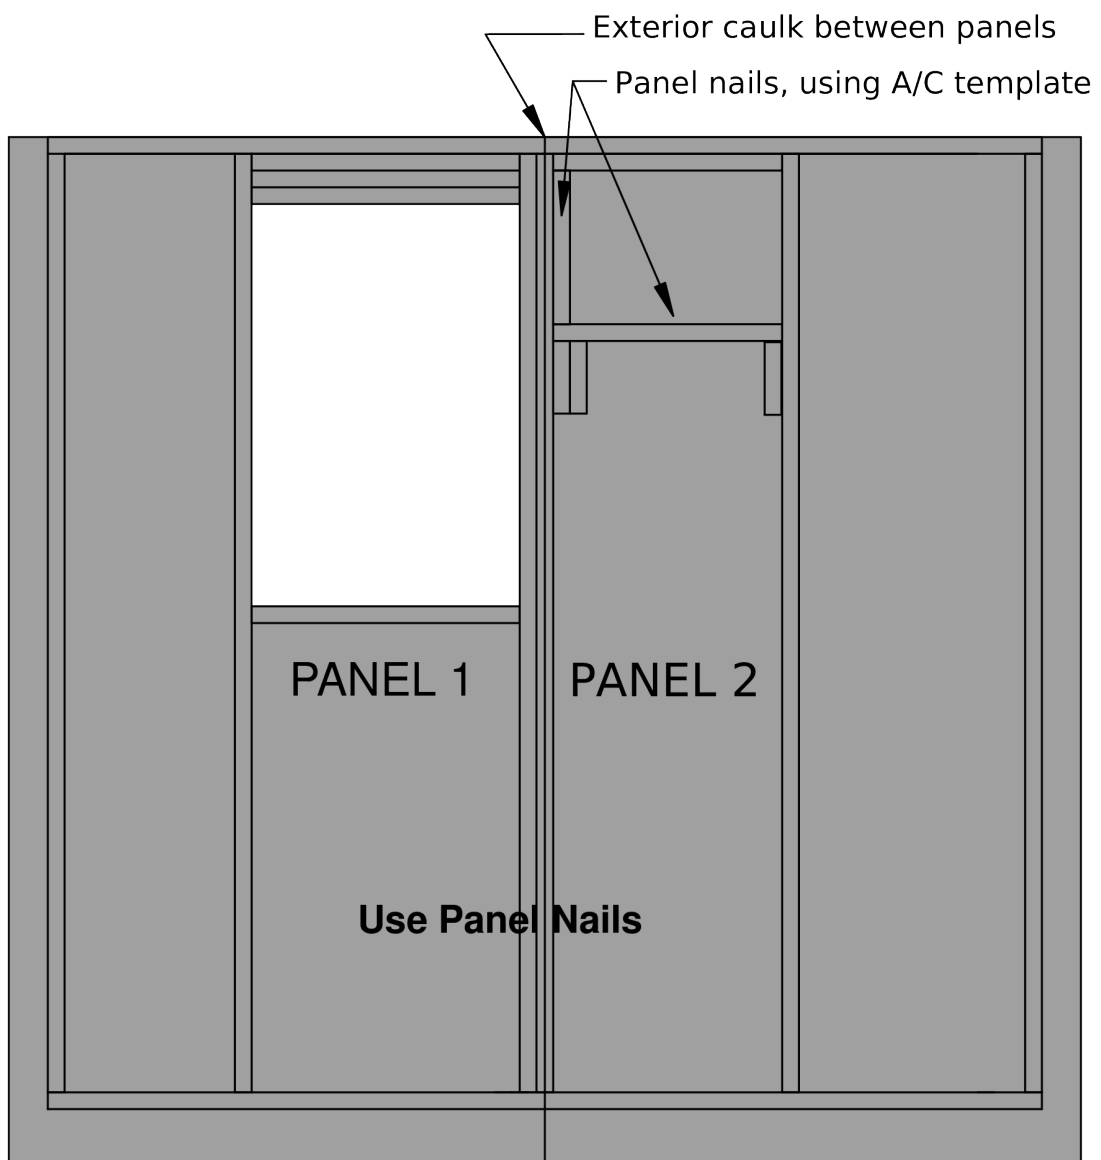

Step 7 Rear Wall

Step 8

- Place the window screen-side down on a convenient spot on the wall.
 - apply caulk on the opposite side from the screen, the edge that will lie on the panel. Caulk only the sides and the top, NOT on the bottom flange
 - caulk line should be outside the line of slots in the window flange
- Place the window into the window opening, taking care to avoid getting caulk on fingers or gloves.
 - latch side down into the opening
 - Push the window either up or down to contact the framing, so that it is aligned, and then push the other way about 1/2", so that it will be possible to fit foam backer rod all the way around the window later.
- Put SHORT SCREWS around the window
 - 4 on each side and 3 on top and bottom
- Team leader: Using a piece of 1x4 trim, draw a pencil line on all four sides of the window, to show Where the trim will go
- Put peel and stick on 3 sides of the window.
 - Using the pattern board, cut two "outer long" pieces and one "outer short" piece.
 - Align each piece against the corners of the window, sides first, then the top
 - Make sure it does not extend beyond the pencil lines
 - NOT on the bottom of the window
- Gently pry the top and bottom plates to raise the wall out of the jig, and place blocks under these boards.
- Staple Tyvek to underside of panel, both sides and bottom
- Trim Tyvek on both sides and bottom
- Caulk all nails after tilt-up

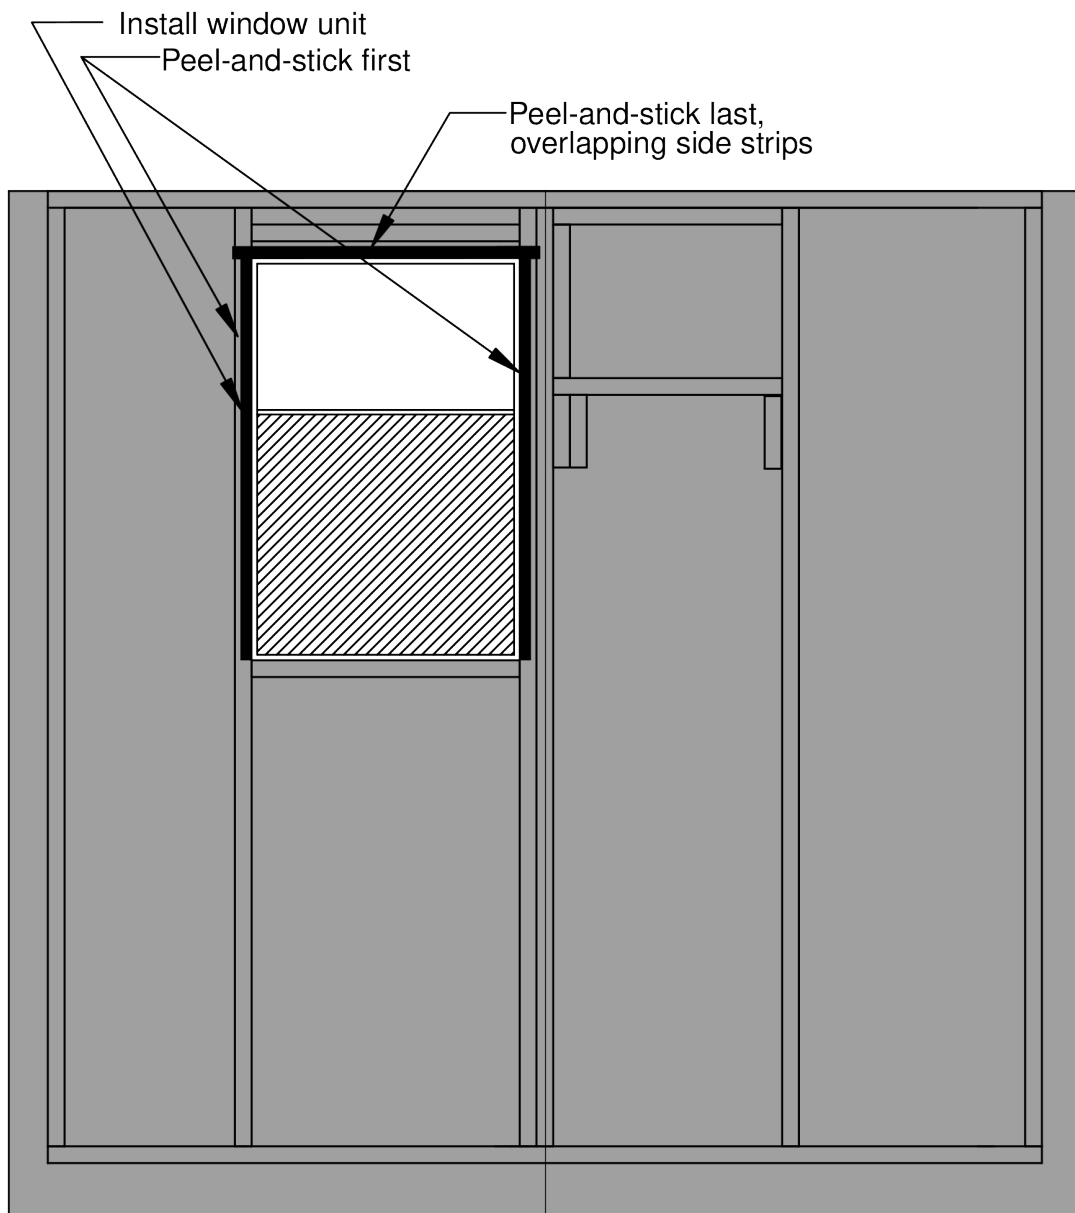

Step 8 Rear Wall