



Floor/Door Installation

Floors

Door Conversion – ADA Threshold

Door Installation

Floor Installation

Preparation


- Clean interior with blower, twice, including window frames and A/C cutout
- Collect tools and material:
 - 4½ to 5 boxes of flooring; use ripped planks if available
 - Knee pads, safety glasses, ear protection, gloves
 - Black marker, pencil, tape measure, utility knife, speed square, blower
 - Flooring cutter, jig saw, mallet, tapping blocks, small pry bars, tapping bar
 - 1/2" plywood spacer blocks
- Verify that there is a limit line in the doorway. It should be 3/4" from the inside of the wall panel to the line.

First Row – next to side wall on door side of home

- Assemble first row from three full lengths (or use 3 ripped pieces from a previous floor).
 - The wide gray tongue on the long edge should face the interior of the home
 - Engage short edges, and align exactly, and, using a block to protect the flooring, tap the joints together with a mallet.
- Place this string against the side wall, using blocks to assure space. Measure from the end of the string to the limit line.
 - Cut last length to this dimension.
 - Measure from the end of the flooring string to the wall, and subtract 1". Measure from the side wall to the edge of the doorway.
 - Using these dimensions, mark two lines on the last length of flooring, using a speed square to make sure lines are square.
 - Use a jigsaw to cut out the corner behind the door.
- Use spacers against the walls to insure 1/2" gap

Intermediate Rows

- For even numbered rows, start with 2' length; add 2 full lengths, and then use remainder of cutoff at the door end. For odd numbered rows, start with a full length.
- Trim off the gray tongue from the short edge of the first piece where it faces the wall. Use a spacer to insure 1/2" gap from the back wall
- Tilt each plank up about 30°, and engage the long edge with the flooring already placed. Then lower the new plank and slide it towards a previous one until the short ends overlap. Tap the joint with a block and mallet to seat the plank.
- Trim last length to match limit line in doorway (3/4" towards outside from inside of interior wall), or 1/2" less than the distance to the front wall.

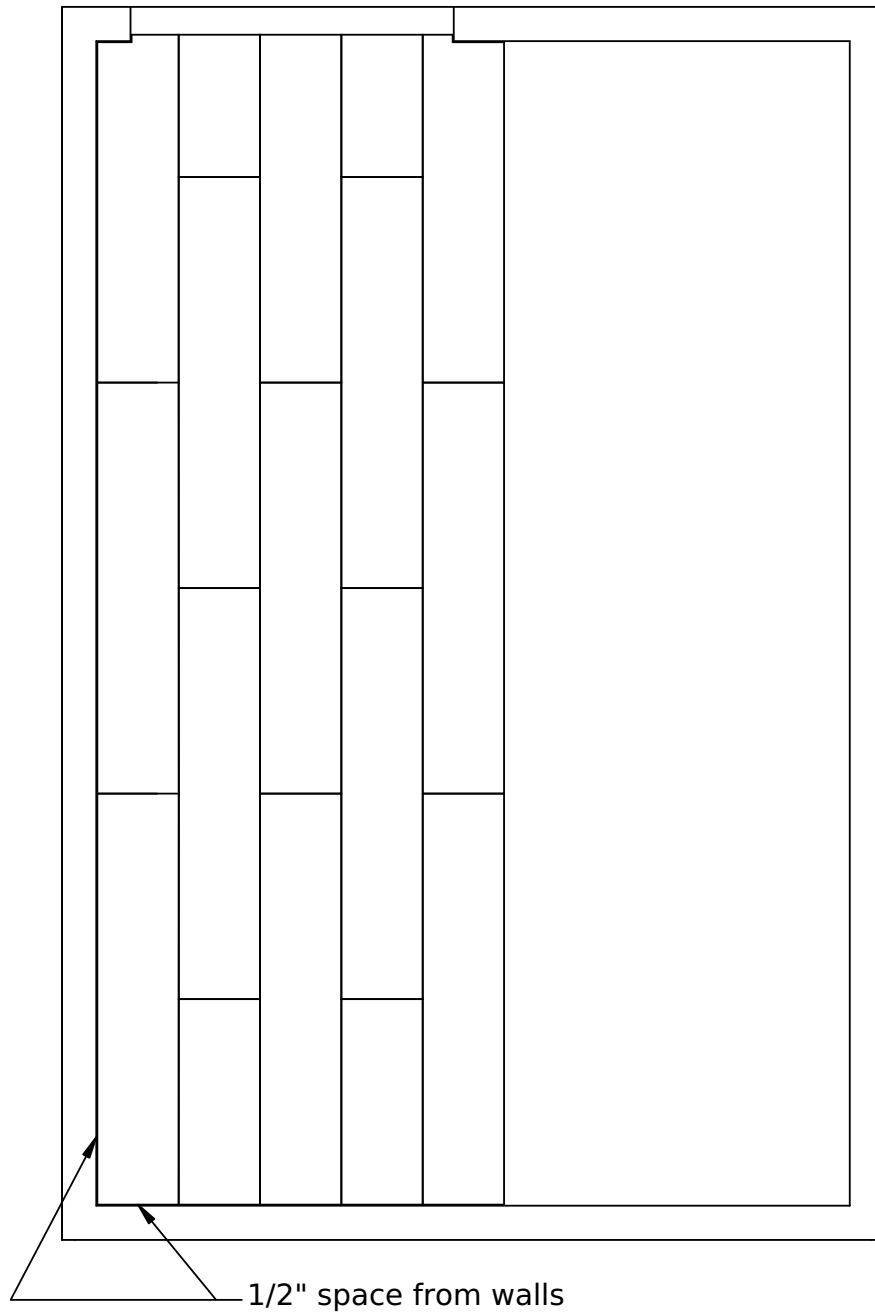

Flooring

Last Row

- Measure distance from brown edge of last intermediate row to wall in several places. If the measurement varies more than $\frac{1}{4}$ ", cut each piece so that there will be $\frac{1}{4}$ " gap between the floor and the wall. Otherwise, use the minimum width for all three pieces
- Using the table saw set up for this, rip pieces to the required width above. Save the remaining partial pieces for the next floor.
- To complete assembly, use the small pry bars as hooks to engage the last row with the rest of the floor, and then either tap the planks together using the tapping bar, or else use the small pry bars to apply force. The flooring should lie flat when the joint is seated correctly

Doorway

- Place a 3" strip of flooring across the doorway, flush with the outside of the building. This will be secured with flexible flashing when the door is installed. The strip can either be a single 36" piece, or be made up from scraps interlocked together (e.g. $5 \times 7" = 35"$).