

VENT CAP INSTALLATION

Materials:


- 4x 5 $\frac{3}{4}$ " 2x4 blocks (cut two 2x4x11 $\frac{1}{2}$ blocks in half)
- 1x 9 $\frac{1}{2}$ " x 96" interior plywood
- 1x 9 $\frac{1}{2}$ " x 44" interior plywood
- 18x #10 x 3" brown screws

Tools:


- Drill and countersink bit
- Screw gun with T25 bit
- Measuring Tape
- Spirit Level
- Support Block installation pattern
- Vent Cap Drill pattern

1. Cut two 11½" 2x4 blocks (jenga blocks) in half to yield the 5½" support blocks.
2. Preset 2 brown screws in the center of each block, as shown opposite.
3. Position the T-shaped guide against the trim on the back wall, and mark along the white ridge boards where three of the four support blocks should go. Reverse the guide, placing the T against the trim on the front wall, and mark the fourth block position.
4. Position a support block crosswise on the vent blocks with its edges at the pencil marks, and use a spirit level to verify that the block is approximately parallel to the floor. If it is not, insert a shim between the support block and the vent-block.
5. Drive the two screws into the white ridge boards. This is a **lot** easier if one person holds the block (and any shim) in place while the second person drives the screws in.
6. Similarly, install the other three support blocks.
7. Position the long drill pattern against one side of the 96" plywood piece, matching the end of the pattern with the end of the plywood. Mark the locations for 6 holes, as shown in the diagram opposite. Drill, countersink, and preset 3" brown screws in these 6 places.
8. With two people, position this vent cap on the blocks, starting at the rear of the home. The rear edge of the vent cap should be 1" away from the rear wall trim, and centered on the white ridge boards. The front edge of the vent cap should be half-way onto the mounting block at the front. Drive one screw most of the way into the rear mounting block.
9. Check that the front of the vent cap is centered; then drive both screws fully into the rear mounting block.

(More on next page)

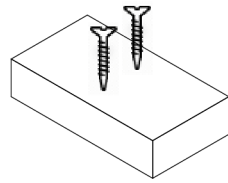

Block preparation

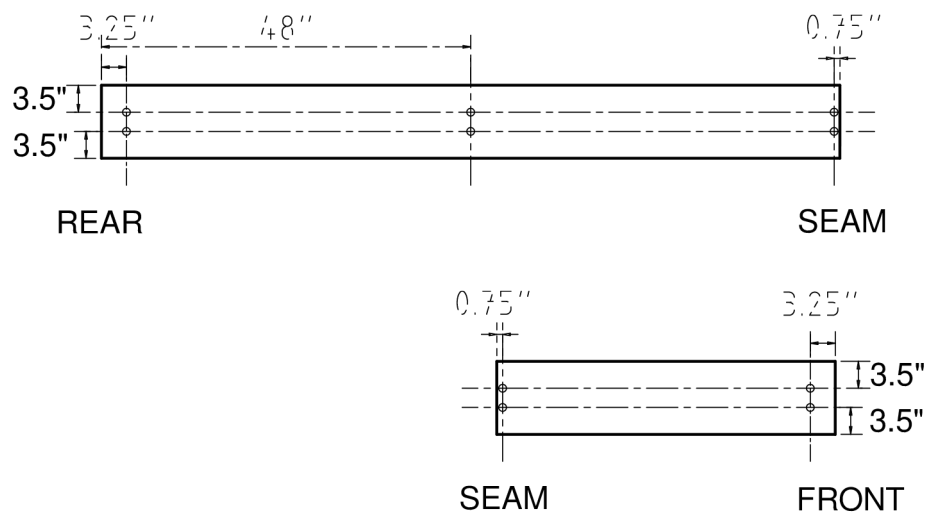

Vent Cap Details

10. While one person continues to support the vent cap, the other person drives the two screws in the middle of the vent cap into their mounting block, and then finally drives the two screws at the front of the vent cap into their mounting block.
11. Measure the distance from the front edge of the installed vent cap to the front wall trim, subtract 1", and cut the shorter piece of plywood to this length.
12. Mark, drill, countersink, and preset 4 screws in this piece, as shown in the diagram on the previous page.
13. With two people, position this plywood piece so that it butts against the long vent cap previously installed, and make sure the two pieces form a straight line. Drive in the screws at the joint between the two pieces of the vent cap, and then drive in the screws near the front wall.