

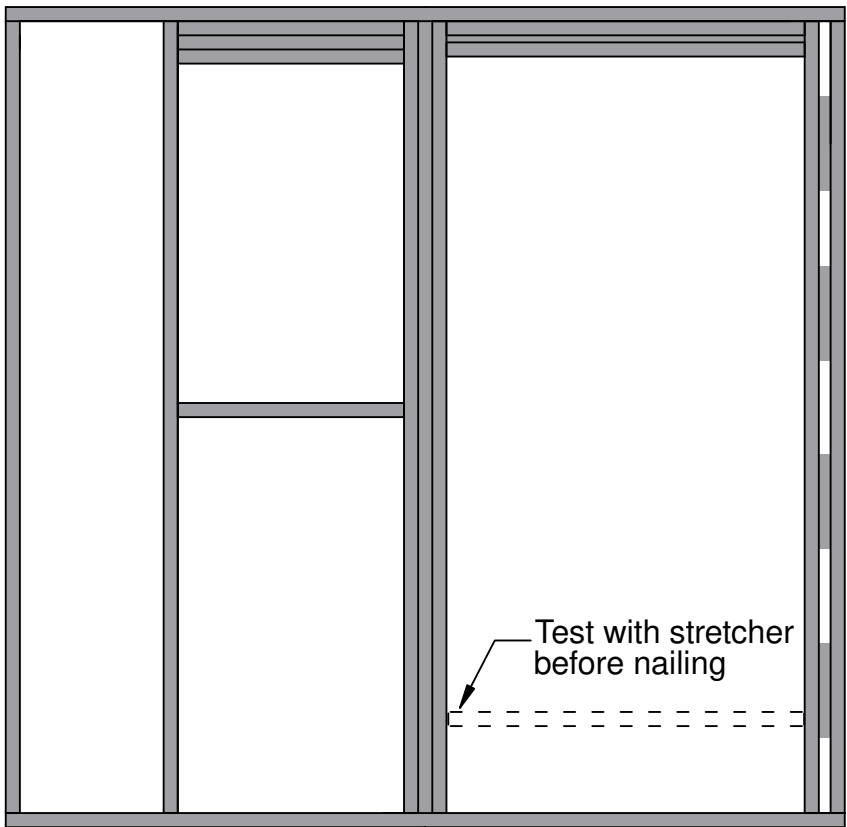




Top



Test with stretcher
before nailing

Nail all 3 studs
only after
stretcher fits



Bottom

Step 6
Front Wall