


Top

Exterior caulk between panels

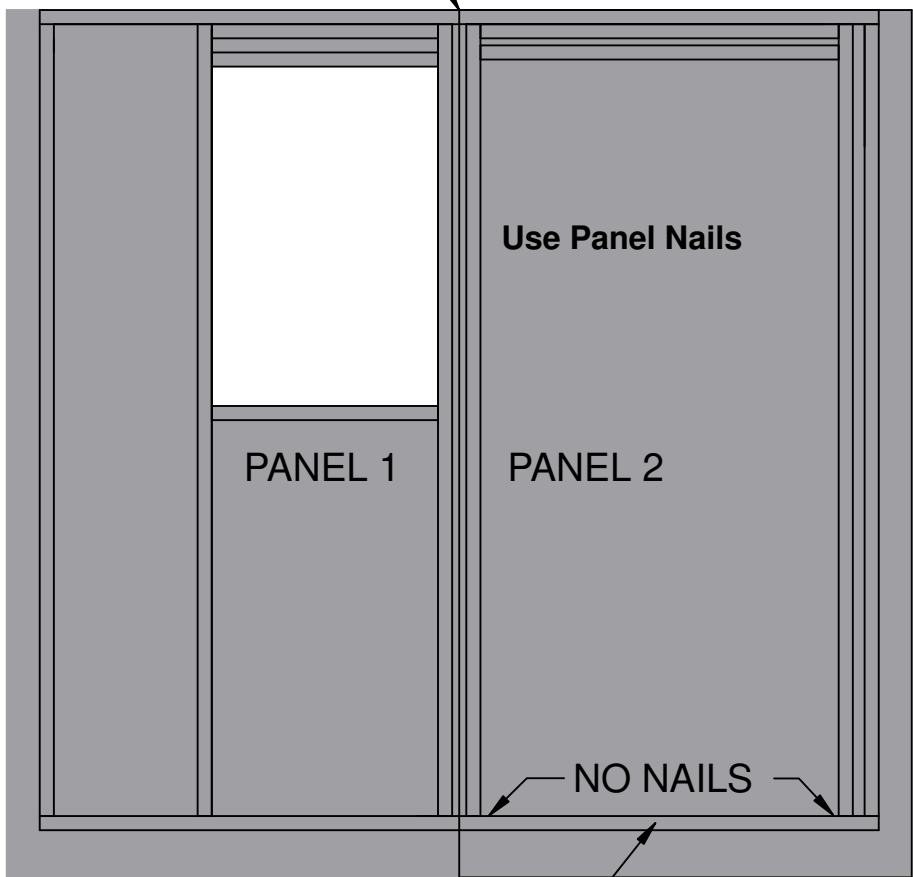

Use Panel Nails

PANEL 1

PANEL 2

NO NAILS

Three #8 (yellow)
temporary screws

Bottom

Step 9
Front Wall