


Top

Caulk around opening,
install window unit

Bore clearance hole 8" below top edge
and 9 1/2" in from right edge,
and rout out the door opening

Peel-and-stick first

Peel-and-stick last

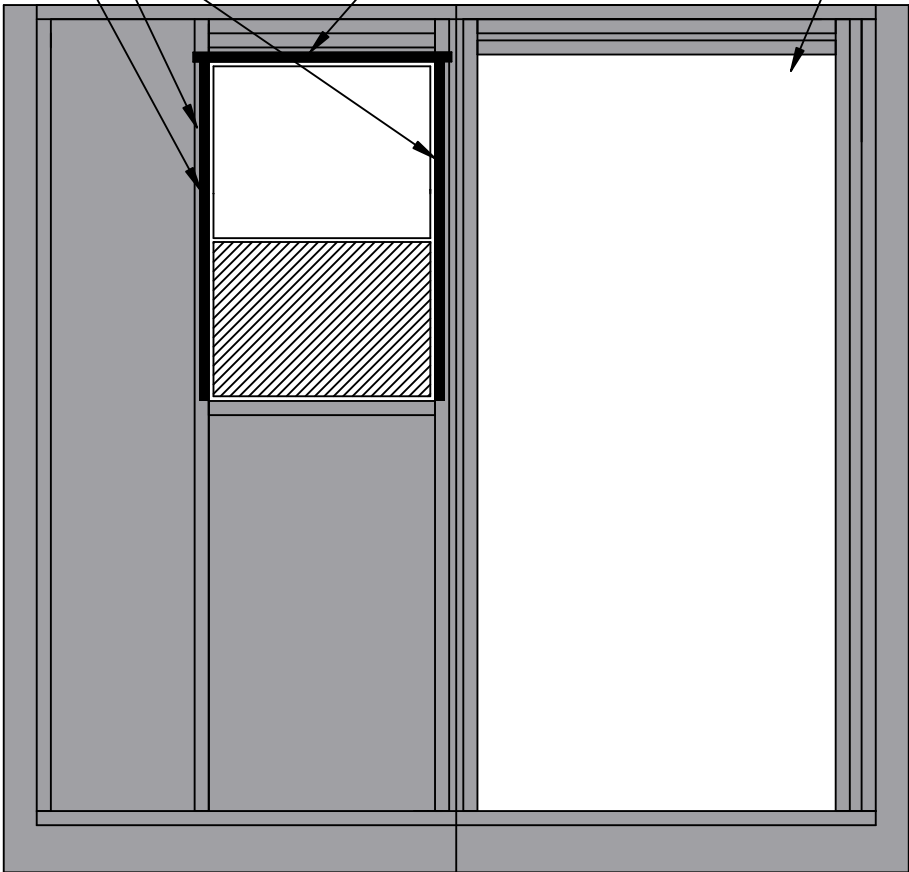

Bottom

Step 10
Front Wall