


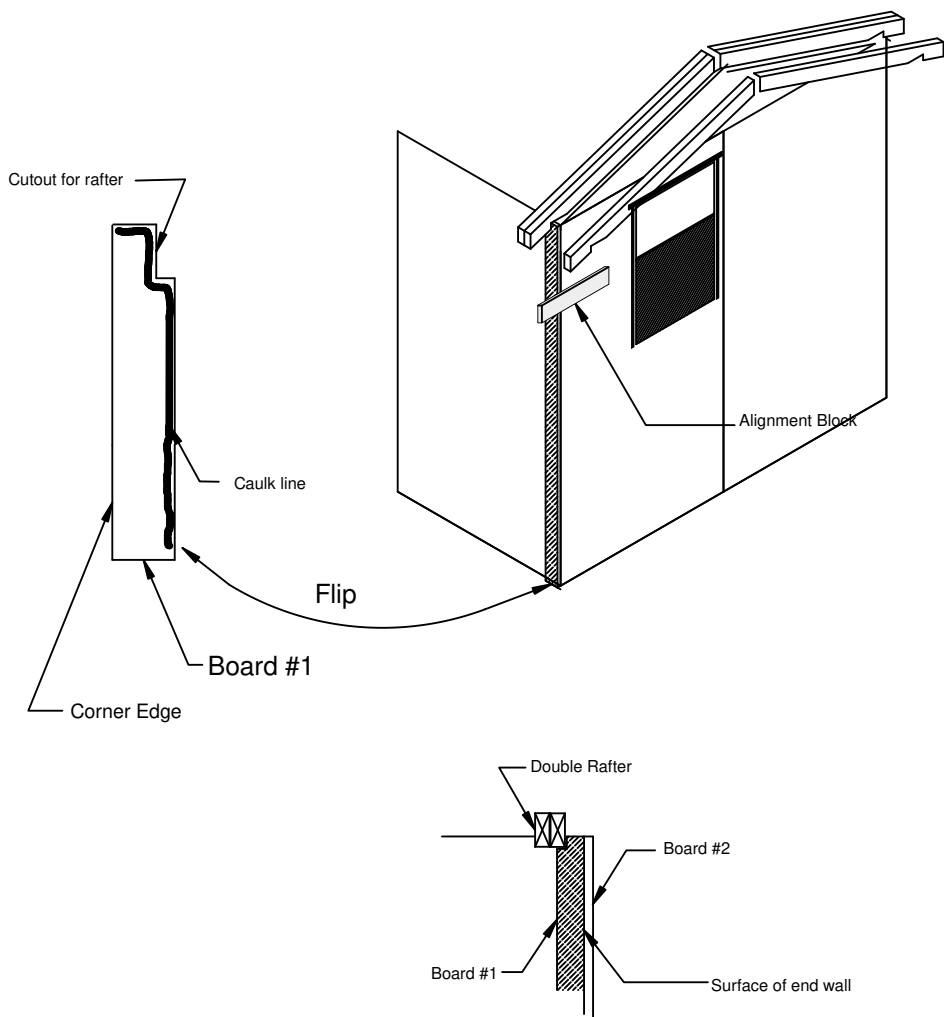

Step 1

Corner Trim Installation