


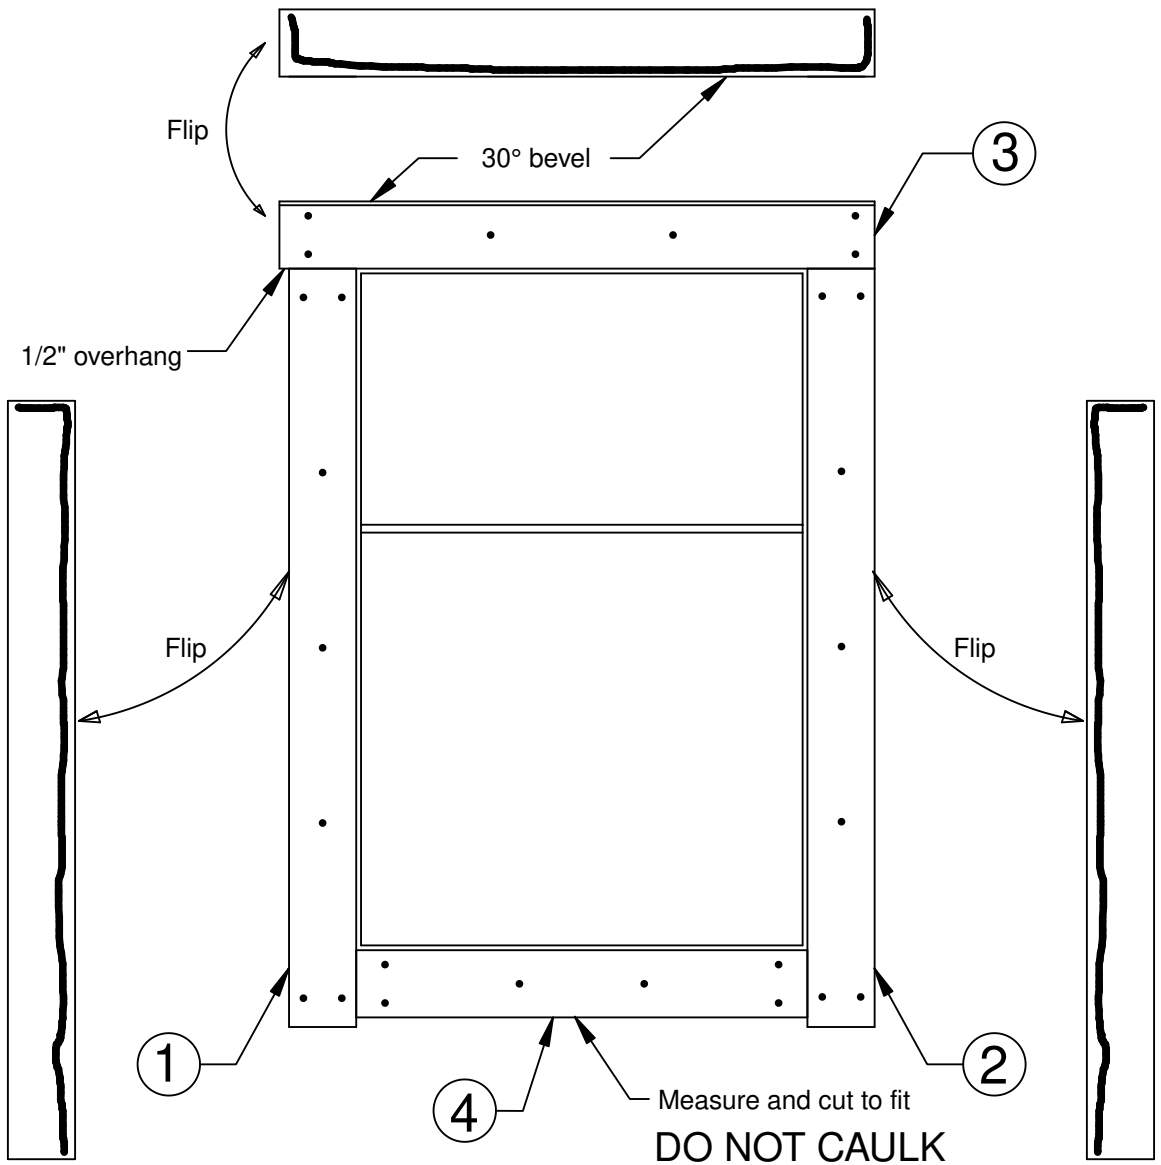

Note: nail 1½" in from each end each board

Rear Window Trim