
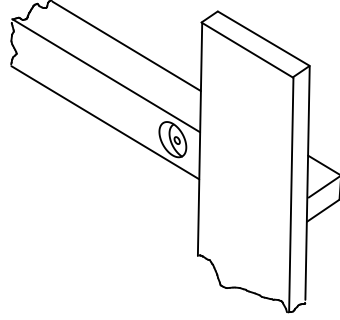


TOP

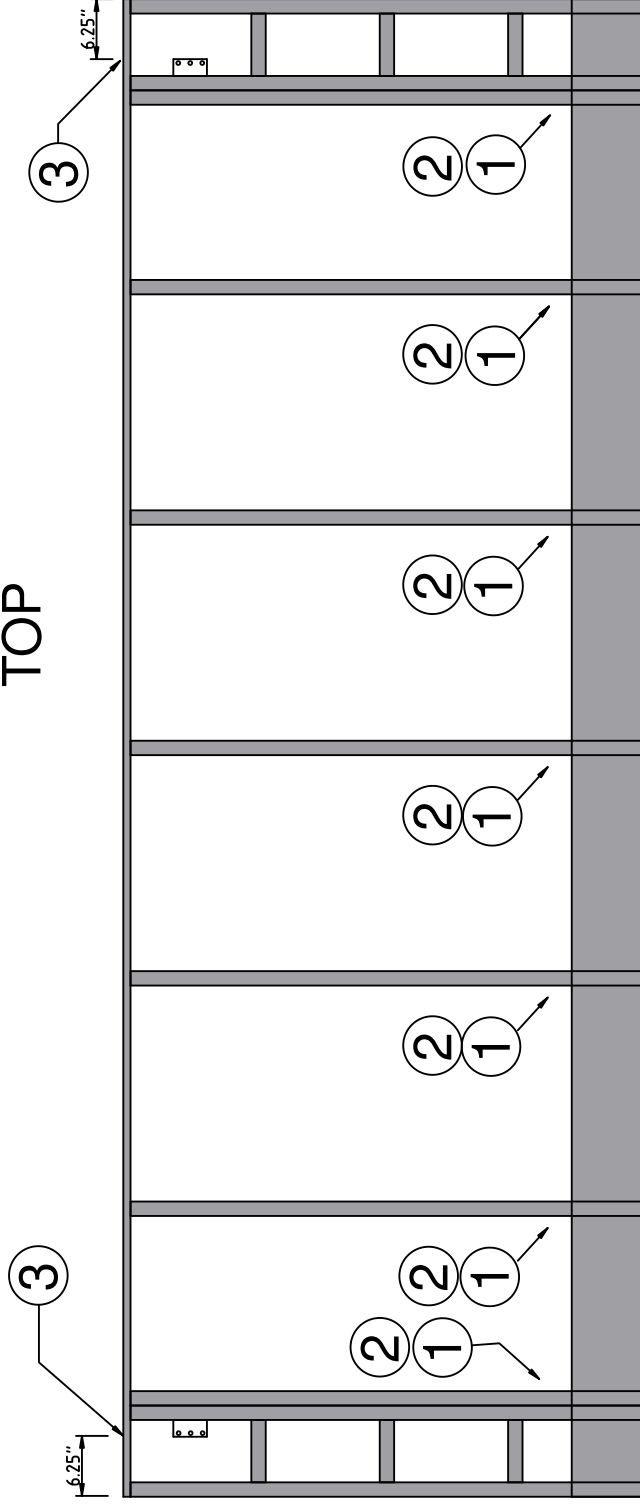

Edge of bored hole
should be 1/2"
above white board

BOTTOM

- ① Spade bit, perpendicular to floor
- ② Straight bit, perpendicular to floor
- ③ Pencil mark at bottom of white board

Half Roof Assembly Step 7