


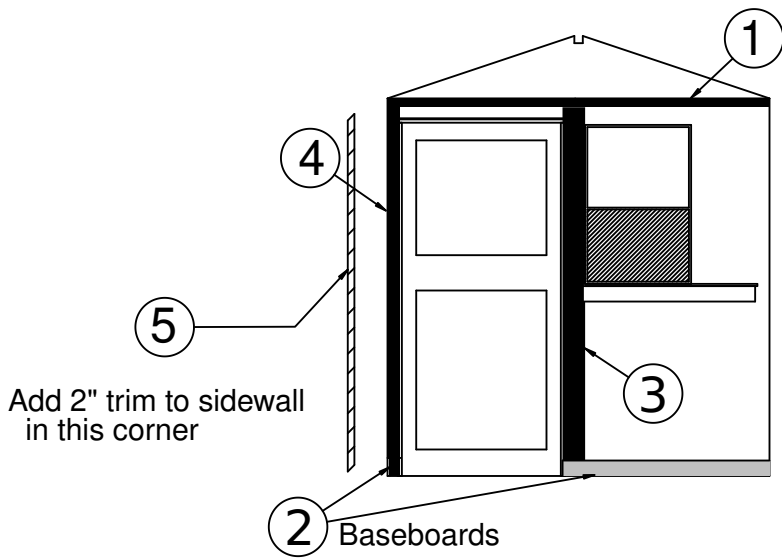

#4 trim board goes on **first**, because it is wider and less flexible.
Then #5 trim is nailed onto the sidewall.
This does not match the other corners, but is correct.

Front Wall Trim

Interior Trim