


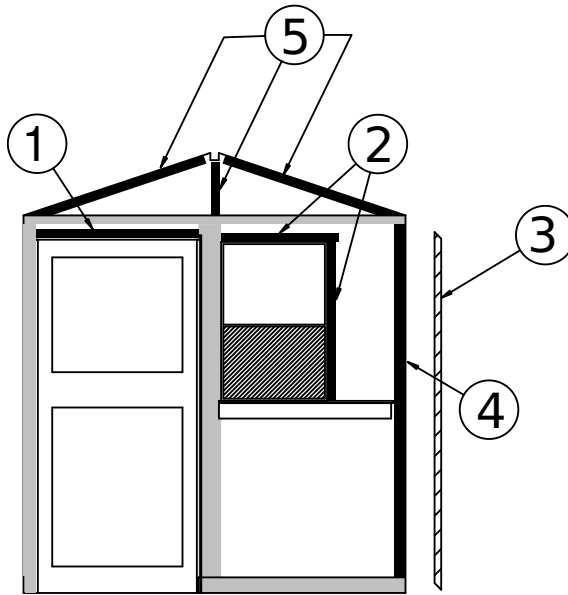

Install 2" trim to side wall in this corner before front-wall corner trim, unless there is not enough space between side trim and shelf edge. In this case, install front-wall corner trim first, and then side-wall trim.

Front Wall Trim

Interior Trim