


Trim Tyvek flush with inside of window opening

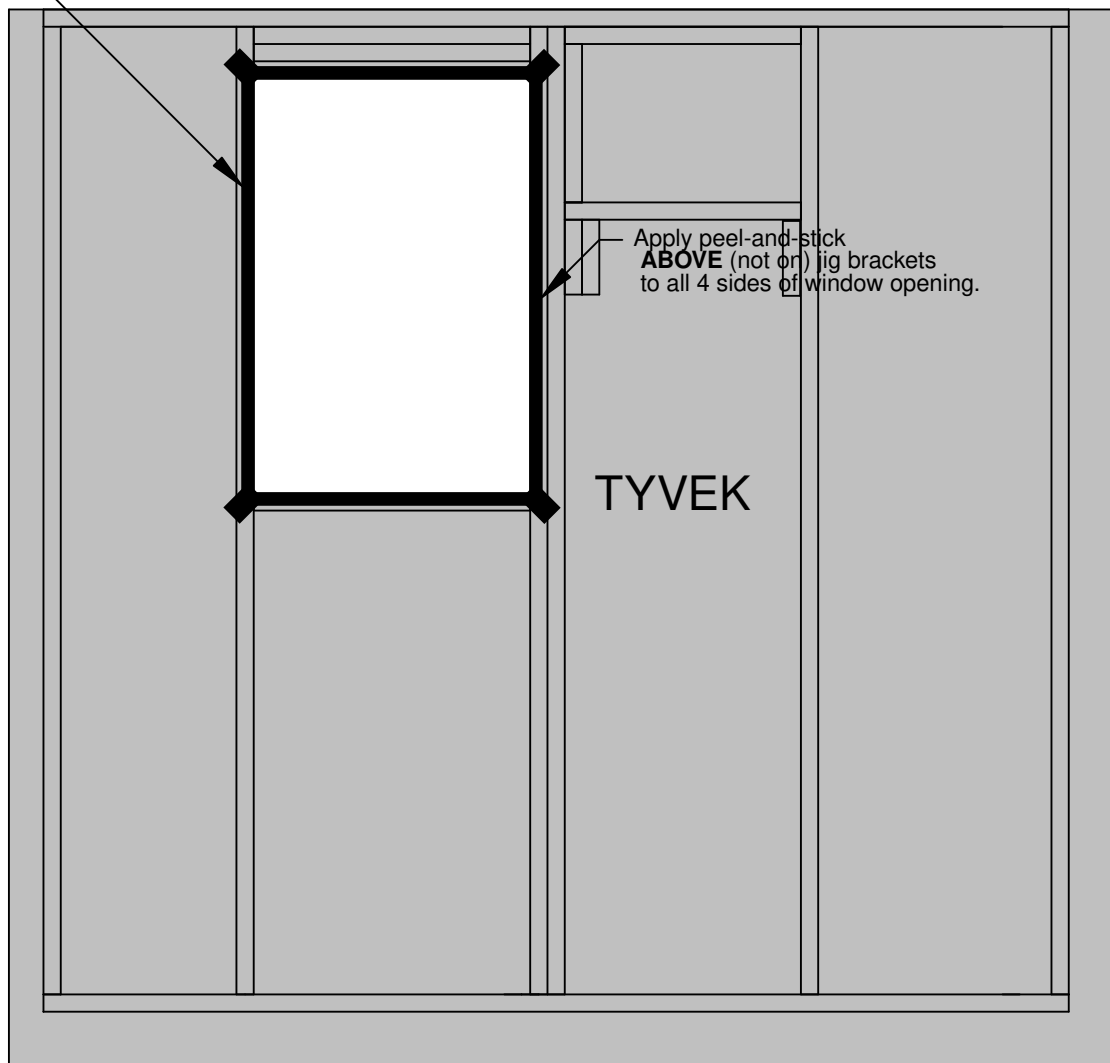

Step 6
Rear Wall