# **American International University- Bangladesh Department of Computer Engineering**

COE 3201: Data Communication Laboratory

## **<u>Title:</u>** Analog Signal quantization using MATLAB

# **Abstract:**


This experiment is designed to-

- 1.To understand the use of MATLAB for solving communication engineering problems.
- 2.To develop understanding of Quantization concept and how to implement it in Matlab.

# **Introduction:**


**Digitizing a signal**: As we have seen in the previous tutorials, that digitizing an analog signal into a digital, requires two basic steps. Sampling and quantization. Sampling is done on x axis. It is the conversion of x axis (infinite values) to digital values.

The below figure shows sampling of a signal.

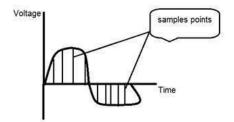


**Quantization:** Quantization is opposite to sampling. It is done on y axis. When you are quantizing an signal, you are actually dividing a signal into quanta(partitions).

On the x axis of the signal, are the co-ordinate values, and on the y axis, we have amplitudes. So digitizing the amplitudes is known as Quantization.

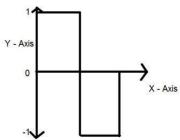


The signal has been quantified into three different levels (-1,0,1). That means that when we sample a signal, we actually gather a lot of values, and in quantization, we set levels to these values. This can be clearer in the image below.



In the figure shown in sampling, although the samples have been taken, but they were still spanning vertically to a continuous range of gray level values. In the figure shown above, these vertically ranging values have been quantized into 5 different levels or partitions. Ranging from 0 black to 4 white. This level could vary according to the type of signal you want.

Quantization is a non-linear transformation which maps elements from a continuous set to a finite set. It is also the second step required by A/D conversion.

## Types of quantization:

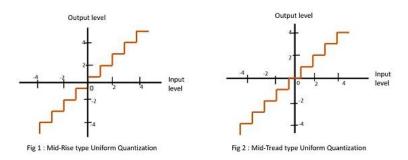

A unipolar quantizer deals with analog signals ranging from 0 volt to a positive reference voltage, and a bipolar quantizer deals with analog signals ranging from a negative reference to a positive reference.


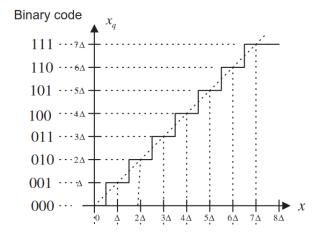


Fig. : Characteristics of the unipolar quantizer.

Let  $Q : R \to Q$  be a quantizer with four possible outputs labeled q1 through q4. The output xq of the quantizer belongs to set Q, and it must therefore be equal to one of the four possible points listed above. Figure shows the functional representation of a four-level quantization scheme.

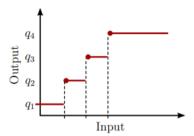

The Figure 3.1: This is a functional representation of a quantizer where the input is converted to one of four possible values. output of the quantizer in this example is determined according to a nearest neighbor rule and this implies that:

$$Q(x) = \begin{cases} q_1 & \text{if } x < \frac{q_1 + q_2}{2} \\ q_2 & \text{if } \frac{q_1 + q_2}{2} \leq x < \frac{q_2 + q_3}{2} \\ q_3 & \text{if } \frac{q_2 + q_3}{2} \leq x < \frac{q_3 + q_4}{2} \\ q_4 & \text{if } x \geq \frac{q_3 + q_4}{2} \end{cases}.$$
Amplitude-continues, Time-discrete

Another simple method of quantization is given below:

$$\Delta = (\text{xmax-xmin})/(\text{L-1}); \Delta = \text{step size}$$

$$L = 2^m$$
; m= number of bits

$$i = round\{(x-xmin)/\Delta\}$$

$$xq = xmin + i*\Delta; i = 0, 1, ..., L-1$$

where  $x_{max}$  and  $x_{min}$  are the maximum value and minimum values, respectively, of the analog input signal x. The symbol L denotes the number of quantization levels, where m is the number of bits used in ADC. The symbol  $\Delta$  is the step size of the quantizer or the ADC resolution. Finally, xq indicates the quantization level, and i is an index corresponding to the binary code.

#### **Example of an analog signal quantization in MATLAB (Method 1):**

```
clc
close all
Am = 4; %setting the sine wave amplitude
bit = 3; % setting the number btis
f = 50; %sine wave frequency
fs = 30000; % setting sampling frequency
t = 0:1/fs:1/f; %defining the signal duration for plotting
y = Am*sin(2*pi*f*t);
%sampled sine wave y(30 samples in a cycle)
Nsamples=length(y); %calculating the total number of samples
quantised out=zeros(1, Nsamples);
%making an array of size = number of samples midrise
del=2*Am/(2^bit); %determining the step size
Llow=-Am+del/2;
Lhigh=Am-del/2;
for i=Llow:del:Lhigh
%Iterating from lowest to the highest levels
   for j=1:Nsamples
%taking the whole sampled vector
      if(((i-del/2) \le y(j)) \& (y(j) \le (i+del/2)))
% Quantizing the sampled value
         quantised out(j)=i; % to the quantization level if it
      end % lies within the bound of -del/2 and
   end % del/2 of the level.
end
plot(t, y, 'r-.', 'linewidth', 1.5);
hold on;
plot(t, quantised out, 'k-.', 'linewidth', 1.5);
%plotting wave forms.
xlabel('time')
ylabel('amplitude')
title ('example of manual quantization method 1')
legend('Original signal', 'quantized signal')
```

#### Example of an analog signal quantization in MATLAB (Method 2):

```
clc
close all
fs = 40e3;% sampling frequency
f = 50;% frequency of the signal
t = 0:1/fs:1/f;%discrete time
A = 2;
x = A*sin(2*pi*f*t); % discrete signal
%----%
n = 3;
L = (2^n);
delta = (max(x) - min(x)) / (L-1);
xg = min(x) + (round((x-min(x))/delta)).*delta;
%-----%
plot(t,x,'r-.', 'linewidth',1.5);
hold on;
plot(t,xq,'k-.', 'linewidth',1.5);
%plotting wave forms.
xlabel('time')
ylabel('amplitude')
title ('example of manual quantization method 1')
legend('Original signal', 'quantized signal')
```

### **Performance Task for Lab Report: (your ID = AB-CDEFG-H)**

```
x(t) = (H+5)*\cos(2\pi((D+E+5)*10)t) + (H+7)*\sin(2\pi((E+F+10)*10)t)
```

Q: Apply uniform quantization on signal 'x(t)' using both of the manual quantization methods learnt in this manual. Use  $(2^H + 2)$  levels for first method and use  $(12 - 2^H)$  levels for the second one. Attach codes and necessary figures in your report.