



REV 011d MERGED BRACKET PLATES — 1:1 · blade + shock tab in ONE · two DISTINCT plates, mark L/R

Print at 100% / Actual Size (A4 LANDSCAPE). Verify the 150 mm ruler. Front end (fork side) at LEFT; all holes on the blade centreline height = axle height.


TRAILING-SIDE PLATE 262 x 40 x 6 — eye at 242 (Ø8.4, 22.4 up from the bottom edge)

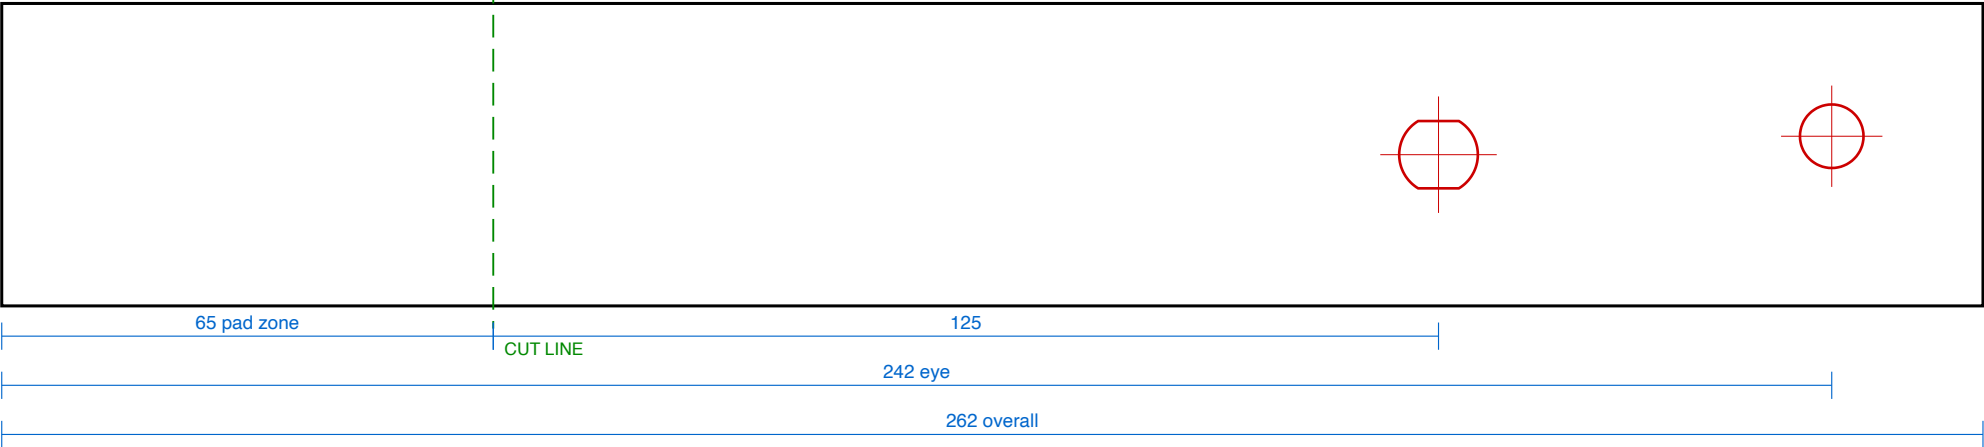

LEADING-SIDE PLATE 210 x 40 x 6 — eye at 138 (Ø8.4, 22.4 up from the bottom edge)

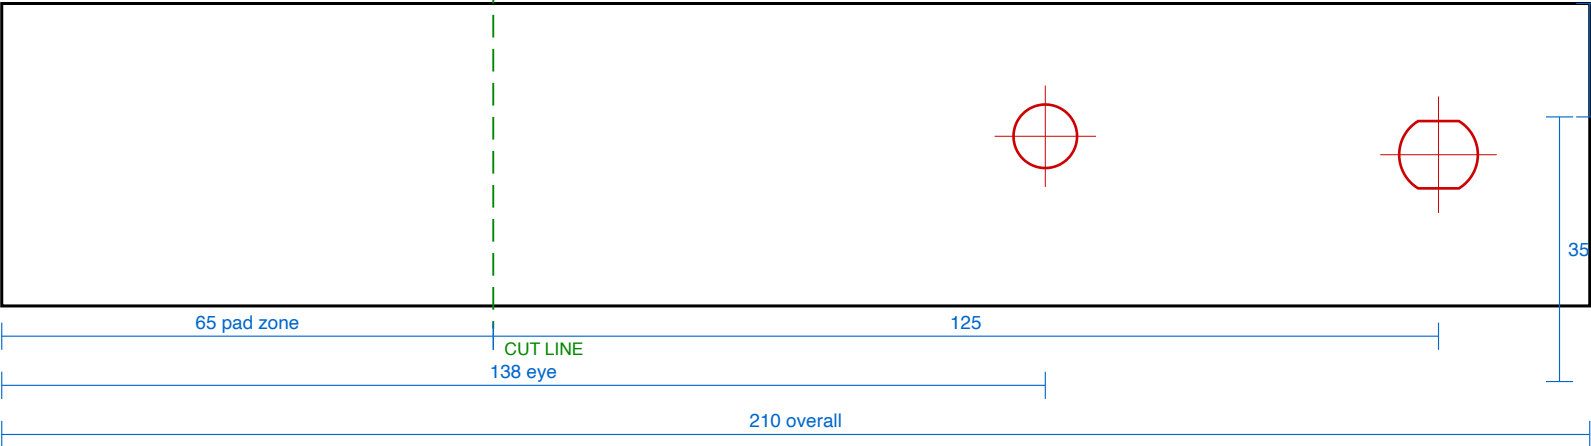

BOLT PAD 65 x 55 x 6 (x2)

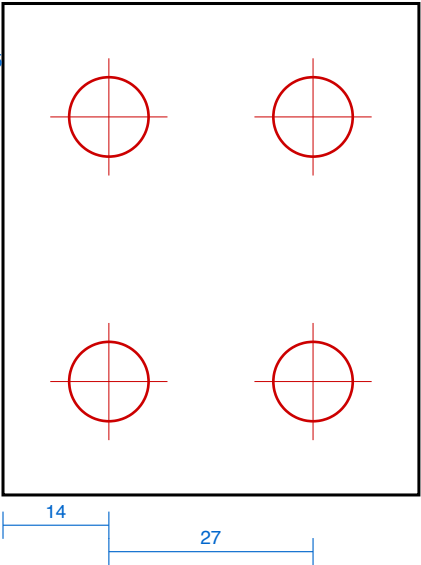

STACK ON THE HUB AXLE: carrier (74-80) · PLATE (80-86) · washer · hub nut — both plates keyed; index flats with the axle inserted.

FORK SIDE stack: leg 4 / packing 11 (6+5, 65x55) / PAD 6 / BLADE 6 — pad sits UNDER the blade covering the full 55 leg height; two 65-long fillets along the blade edges.

BOLTS: 4 x M10 x 45 cl.8.8 + nylocks. Lower row (14 up) drills through BLADE+pad, upper row (41 up) through the pad alone. Tack pad to blade, then drill all layers in one setup.

SHOCK: eye pin M8 through the plate's Ø8.4, washers out to the shock plane — no separate stub on the rear pod. Front pod keeps Rev 011c stubs.

NEW AXLE: 125 behind the cut line, 20 above the leg bottom edge (old height). Wheel moves 55 rearward. Belt arc clears the cut edge 14.

ORDER: cut legs > bolt snug > hang pod > belt on > hand-run > then perimeter-weld pad-to-leg and plate-to-carrier.

4 x Ø10.5 (M10).
Top edge = CUT LINE side.
Left edge = leg BOTTOM edge.



0

150 mm — must measure exactly