

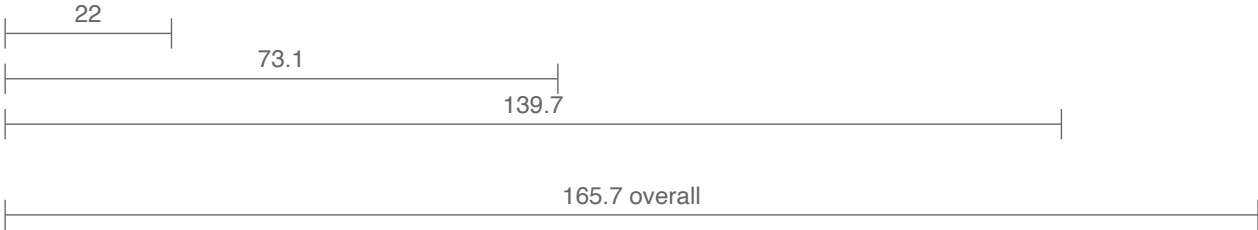
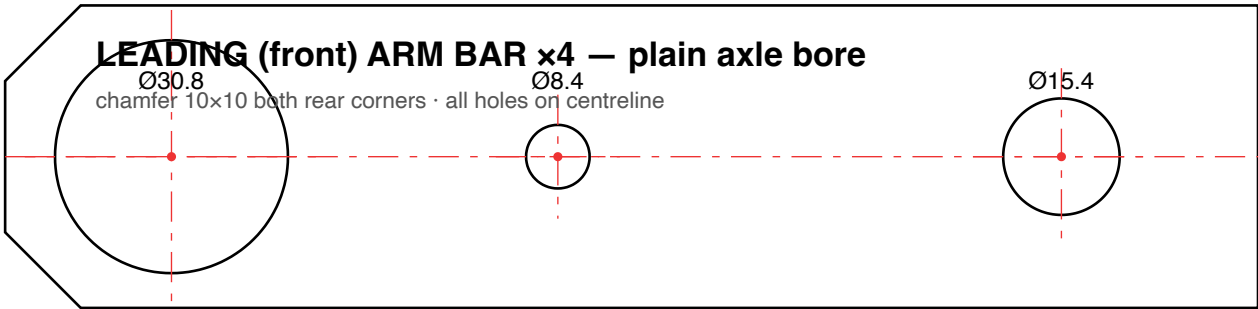
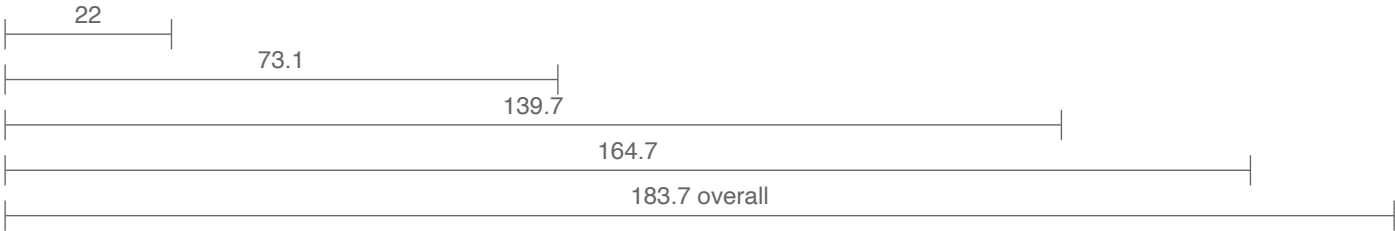


Rev 011 — 1:1 DRILLING TEMPLATE · arm bars (40 × 6.35 bar)

Print at 100% / Actual size — no "fit to page". Check the ruler below before cutting anything. Glue or tape onto the bar, centre-punch every red cross, peel the paper off, then drill. Cut 4 of each (2 per pod); the two plates of a fork are identical — clamp and drill them as a pair.

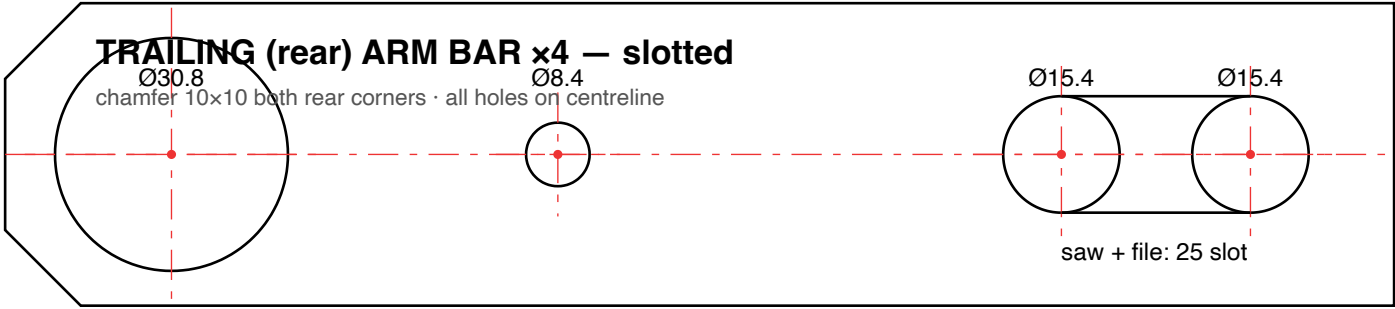


SCALE CHECK — this line must measure exactly 100 mm. If not, reprint at 100% / "A



Rev 011 — 1:1 DRILLING TEMPLATE · carrier + small parts

Carrier: 50 × 6 bar, 4 off. Pivot bore Ø16 — drill 15.5 and ream/file to a snug 16, always as a clamped pair so both carriers of a pod match. Axle slot: drill Ø10.4 then file the two flats 8.9 apart (this is the torque-arm key).

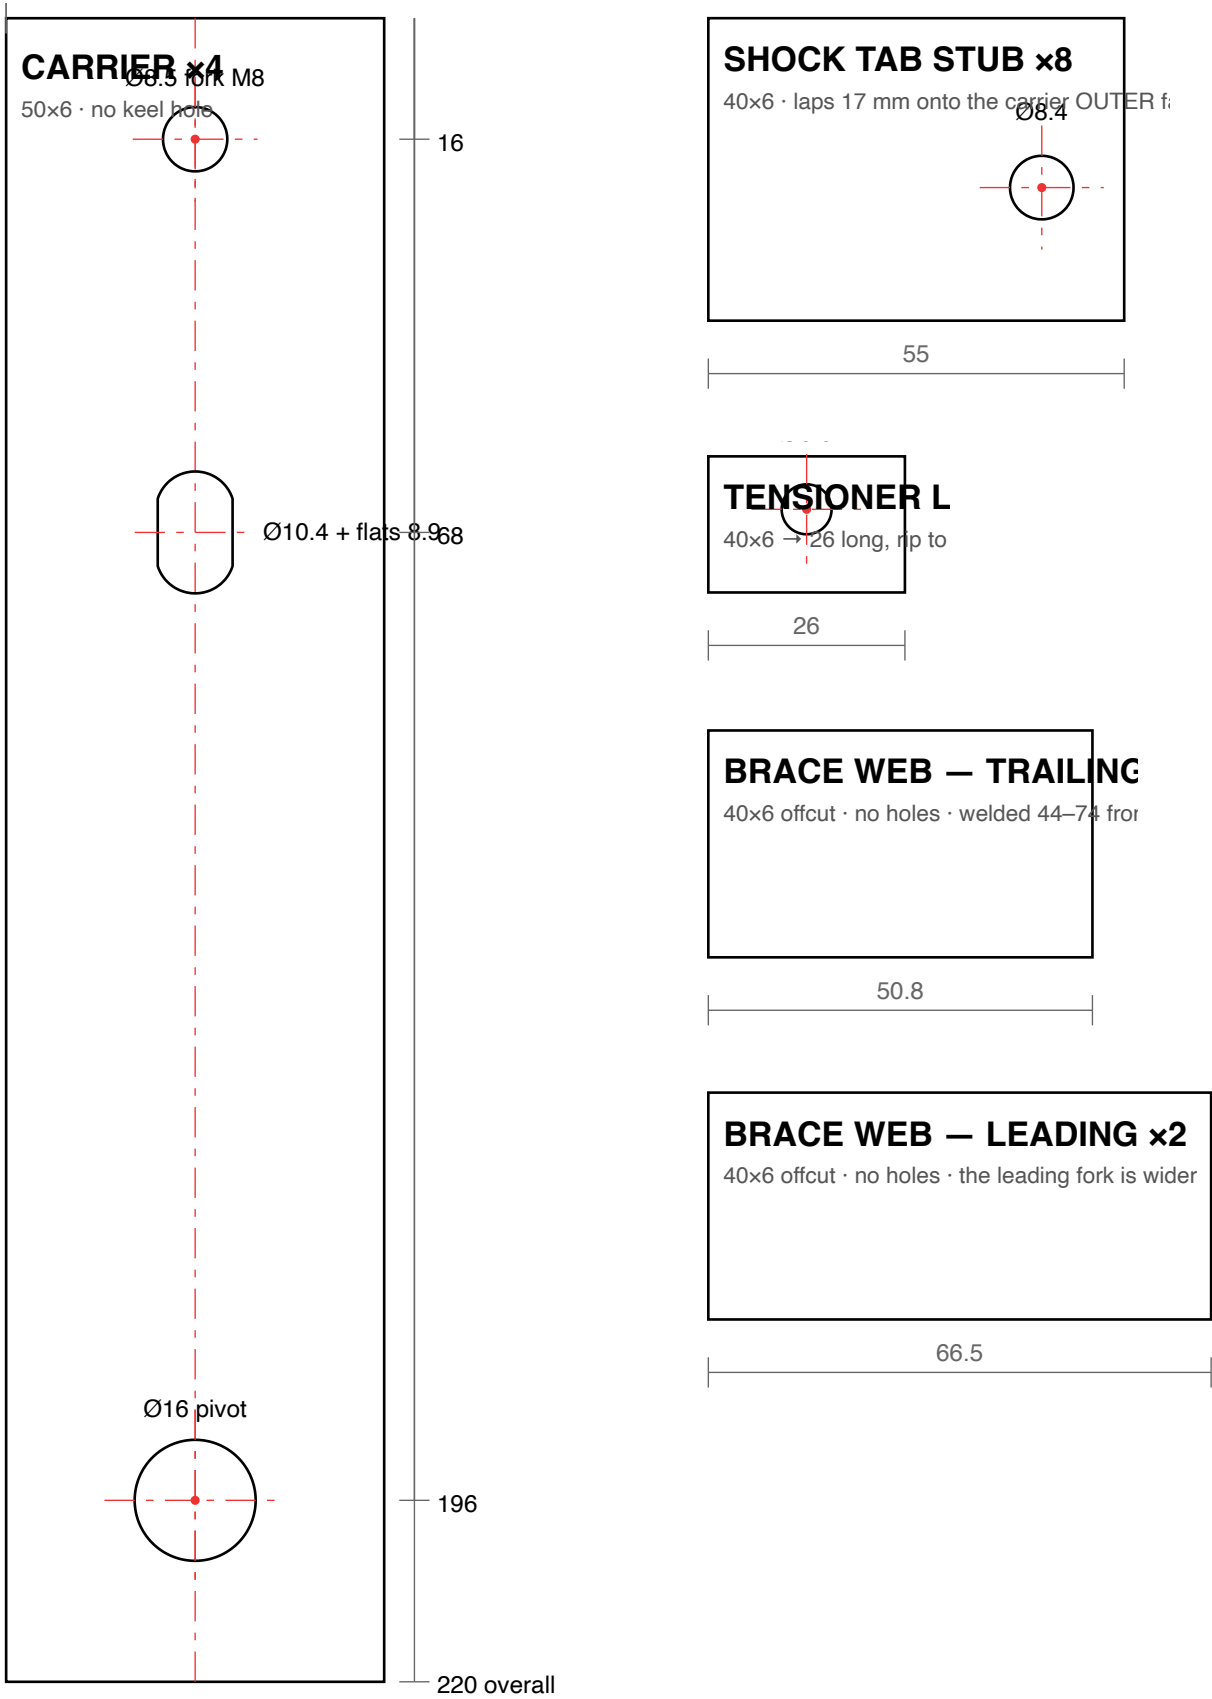

SCALE CHECK — this line must measure exactly 100 mm. If not, reprint at 100% / "%

