



REV 011d MERGED BRACKET PLATES — 1:1 · blade + shock tab in ONE · two DISTINCT plates, mark L/R

Print at 100% / Actual Size (A4 LANDSCAPE). Verify the 150 mm ruler. Front end (fork side) at LEFT; all holes on the blade centreline height = axle height.


TRAILING-SIDE PLATE 262 x 40 x 6 — eye at 242 (Ø8.4, 22.4 up from the bottom edge)

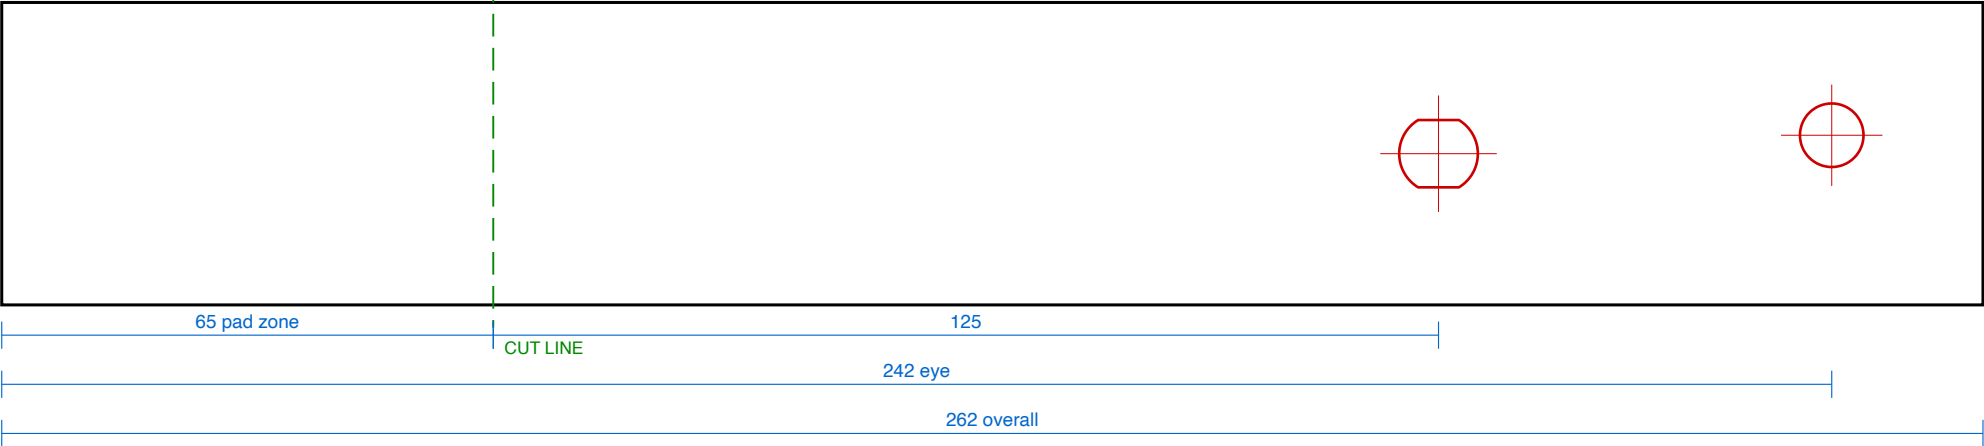

LEADING-SIDE PLATE 210 x 40 x 6 — eye at 138 (Ø8.4, 22.4 up from the bottom edge)

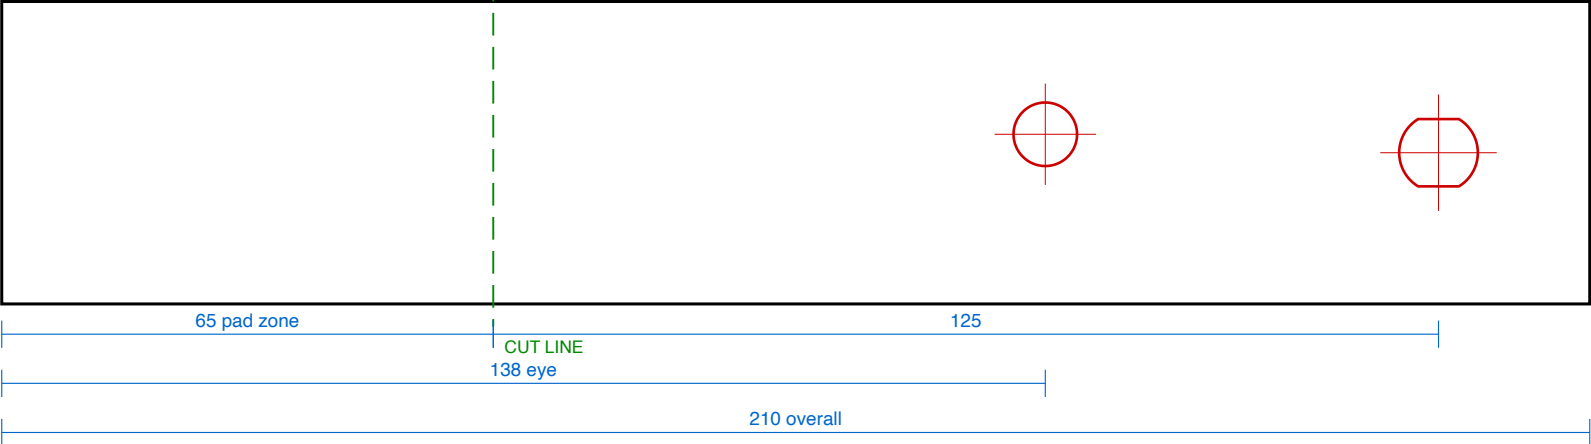

BOLT PAD 65 x 40 x 6 (x2) — plain 40 bar

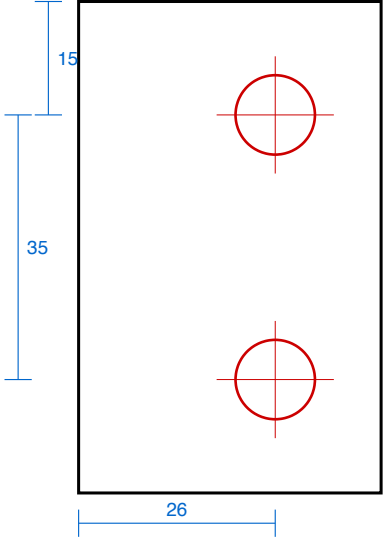

STACK ON THE HUB AXLE: carrier (74-80) · PLATE (80-86) · washer · hub nut — both plates keyed; index flats with the axle inserted.

FORK SIDE stack: leg 4 / packing 11 (6+5) / one 6 plate. PAD (65x40, one layer in, covers leg 15..55) overlaps the BLADE (covers 0..40) over 15..40 — two 65-long fillets there.

BOLTS: 4 x M10 x 45 cl.8.8 + nylocks. Lower row (14 up) in the BLADE, upper row (41 up) in the PAD — both grip 21 (leg+packing+one plate). Tack pad to blade, drill all layers in one setup.

SHOCK: eye pin M8 through the plate's Ø8.4, washers out to the shock plane — no separate stub on the rear pod. Front pod keeps Rev 011c stubs.

NEW AXLE: 125 behind the cut line, 20 above the leg bottom edge (old height). Wheel moves 55 rearward. Belt arc clears the cut edge 14.

ORDER: cut legs > bolt snug > hang pod > belt on > hand-run > then perimeter-weld pad-to-leg and plate-to-carrier.

2 x Ø10.5 (M10) — the UPPER row.
Top edge = CUT LINE side.
Weld: laps the blade 25; sits 15 up
from the leg bottom (covers 15..55).



0

150 mm — must measure exactly