



REV 011d MERGED BRACKET PLATES — 1:1 · blade + shock tab in ONE · NO pad · two DISTINCT plates, mark L/R

Print at 100% / Actual Size (A4 LANDSCAPE). Verify the 150 mm ruler. Front end (fork side) at LEFT; all holes on the blade centreline height = axle height.

TRAILING-SIDE PLATE 262 x 40 x 6 — eye at 242 (Ø8.4, 22.4 up from the bottom edge)

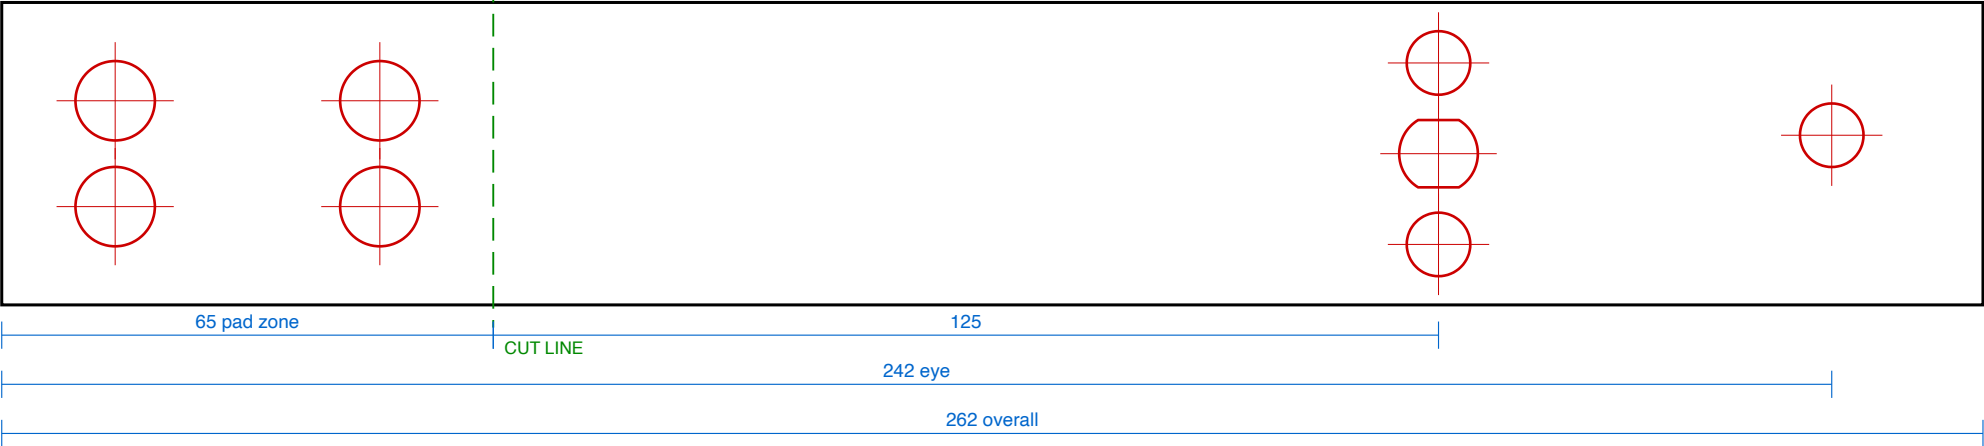

LEADING-SIDE PLATE 210 x 40 x 6 — eye at 138 (Ø8.4, 22.4 up from the bottom edge)

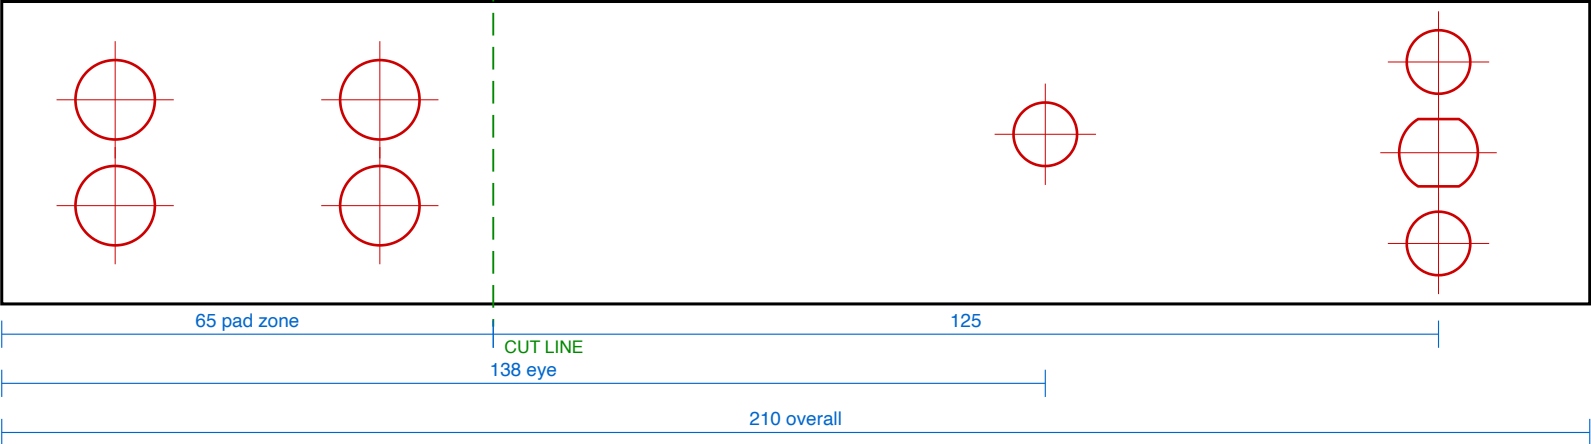

STACK ON THE HUB AXLE: carrier (74-80) · PLATE (80-86) · washer · hub nut — both plates keyed; index flats with the axle inserted.

FORK SIDE — REMOVABLE, NO WELD TO THE FORK: 2x2 M10 pattern 35 x 14, columns 15/50 from the front end, rows 7 above/below the centreline (13/27 up the leg).

SANDWICH: backing strip 65x40x6 on the leg INNER face / leg 4 / packing 17 (6+6+5, cut to measured gap — blade plane is fixed at 80 by the carrier) / blade 6 = grip 33 → M10 x 55 cl.8.8 + nylocks. Friction joint: retorque 1h/5h/20h, paint-pen marks.

CUT LIST adds: 2 x backing strip 65 x 40 x 6 (same 40 bar, same 4 holes as the blade bolt zone — clamp strip+leg+packing+blade and drill all layers in one setup). Cross-tube Ø22x3 welded BLADE-to-BLADE at the bolt zone (pod side) carries side loads

SHOCK: eye pin M8 through the plate's Ø8.4, washers out to the shock plane — no separate stub on the rear pod. Front pod keeps Rev 011c stubs.

CARRIER JOINT: 2 x Ø8.4 at the key column, 12 above/below the axle — M8 x 30 through blade+carrier (reuse the freed carrier-to-leg bolts), matching holes in the carrier; weld blade-to-carrier at final fit.

NEW AXLE: 125 behind the cut line, 20 above the leg bottom edge (old height). Wheel moves 55 rearward. Belt arc clears the cut edge 14.

ORDER: cut legs > bolt snug > hang pod > belt on > hand-run > then perimeter-weld pad-to-leg and plate-to-carrier.

