

PATUAKHALI SCIENCE AND TECHNOLOGY UNIVERSITY

COURSE CODE: CCE-211

SUBMITTED TO:

Prof. Dr. Md Samsuzzaman

Department of Computer and Communication Engineering
Faculty of Computer Science and Engineering

SUBMITTED BY:

Shaid Ibna Sobhan

ID: **2102057**

Registration No: 10184

Faculty of Computer Science and Engineering

Date of submission: 23 September 2024

Assignment: Chapter 5

Review Questions

- 1. The process of changing one of the characteristics of an analog signal based on the information in digital data is called *digital-to-analog conversion*. It is also called modulation of a digital signal. The baseband digital signal representing the digital data modulates the carrier to create a broadband analog signal.
- 2. A *carrier* is a single-frequency signal that has one of its characteristics (amplitude, frequency, or phase) changed to represent the baseband signal.
- 3.
- **a.** AM changes the amplitude of the carrier
- **b.** FM changes the frequency of the carrier
- c. PM changes the phase of the carrier
- **4.** We can say that the most susceptible technique is AM because the amplitude is more affected by noise than the phase or frequency.
- **5.** Normally, *analog transmission* refers to the transmission of analog signals using a band-pass channel. Baseband digital or analog signals are converted to a complex analog signal with a range of frequencies suitable for the channel.
- 6.
- **a.** ASK changes the *amplitude* of the carrier.
- **b.** FSK changes the *frequency* of the carrier.
- c. PSK changes the *phase* of the carrier.
- d. QAM changes both the *amplitude* and the *phase* of the carrier.

- A constellation diagram can help us define the amplitude and phase of a signal element, particularly when we are using two carriers. The diagram is useful when we are dealing with multilevel ASK, PSK, or QAM. In a constellation diagram, a signal element type is represented as a dot. The bit or combination of bits it can carry is often written next to it. The diagram has two axes. The horizontal *X* axis is related to the in-phase carrier; the vertical *Y* axis is related to the quadrature carrier.
- **8.** The process of changing one of the characteristics of an analog signal to represent the instantaneous amplitude of a baseband signal is called *analog-to-analog con-version*. It is also called the modulation of an analog signal; the baseband analog signal modulates the carrier to create a broadband analog signal.
- **9.** We can say that the most susceptible technique is **ASK** because the amplitude is more affected by noise than the phase or frequency.
- **10.** The two components of a signal are called *I* and *Q*. The I component, called inphase, is shown on the horizontal axis; the Q component, called quadrature, is shown on the vertical axis.

Problems

5.1:

We use the formula $B = (1 + d) \times (1/r) \times N$, but first we need to calculate the value of r for each case.

a.
$$r = 1 \rightarrow B = (1 + 1) \times (1/1) \times (6000 \text{ bps}) = 12000 \text{ Hz}$$

b.
$$r = 1 \rightarrow B = (1 + 1) \times (1/1) \times (6000 \text{ bps}) + 4 \text{ KHz} = 18000 \text{ Hz}$$

c.
$$r = 2 \rightarrow B = (1 + 1) \times (1/2) \times (6000 \text{ bps}) = 6000 \text{ Hz}$$

d.
$$r = 4 \rightarrow B = (1 + 1) \times (1/4) \times (6000 \text{ bps}) = 3000 \text{ Hz}$$

5.2:

We can use the formula: $N = [1/(1 + d)] \times r \times B = 1 \times 6 \times 6 \text{ MHz} = 36 \text{ Mbps}$

5.3:

a. B
$$_{AM}$$
 = 2 × B = 2 × 5 = 10 KHz

b. B _{FM} =
$$2 \times (1 + \beta) \times B = 2 \times (1 + 5) \times 5 = 60 \text{ KHz}$$

c. B_{PM} =
$$2 \times (1 + \beta) \times B = 2 \times (1 + 1) \times 5 = 20$$
 KHz

5.4:

b.
$$n = (108 - 88) \text{ MHz} / 200 \text{ KHz} = 100$$

5.5:

We use the formula $r = log_2L$ to calculate the value of r for each case. **a.**log₂4= 2


b.
$$log_2 8 = 3$$

c.
$$log_2 4 = 2$$


d.
$$log_2 128 = 7$$

5.6:


a. We have two signal elements with peak amplitudes 1 and 3. The phase of both signal elements are the same, which we assume to be 0 degrees.

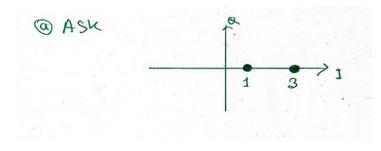


b. We have two signal elements with the same peak amplitude of 2. However, there must be 180 degrees difference between the two phases. We assume one phase to be 0 and the other 180 degrees.

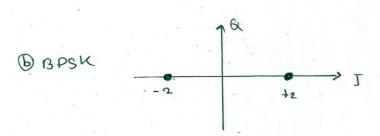

c. We have four signal elements with the same peak amplitude of 3. However, there must be 90 degrees difference between each phase. We assume the first phase to be at 45, the second at 135, the third at 225, and the fourth at 315 degrees. Note that this is one out of many configurations. The phases can be at 0, 90, 180, and 270. As long as the differences are 90 degrees, the solution is satisfactory.

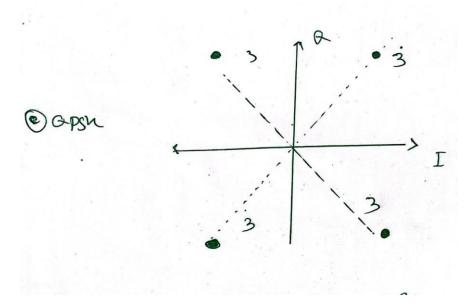

d. We have four phases, which we select to be the same as the previous case. For each phase, however, we have two amplitudes, 1 and 3 as shown in the figure.
Note that this is one out of many configurations. The phases can be at 0, 90,
180, and 270. As long as the differences are 90 degrees, the solution is satisfactory.

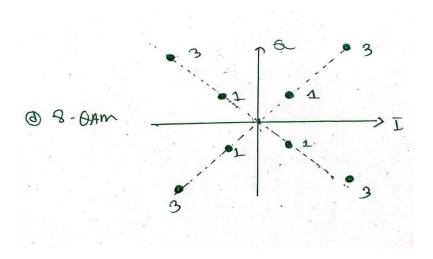

5.7:

We use the formula $S = (1/r) \times N$, but first we need to calculate the value of r for each case.

a.
$$r = log_2 2 = 1 \rightarrow S = (1/1) \times (3000 \text{ bps}) = 3000 \text{ baud}$$

b.
$$r = log_2 2 = 1 \rightarrow S = (1/1) \times (2000 bps) = 2000 baud$$

c.
$$r = log_2 4 = 2 \rightarrow S = (1/2) \times (4000 bps) = 2000 baud$$

d.
$$r = log_264 = 6 \rightarrow S = (1/6) \times (36,000 bps) = 6000 baud$$

5.8:

We use the formula $\mathbf{N} = \mathbf{r} \times \mathbf{S}$, but first we need to calculate the value of r for each case.

a.
$$r = log 22 = 1 \rightarrow N = (1) \times (1000 bps) = 1000 bps$$

b.
$$r = log 22 = 1 \rightarrow N = (1) \times (1000 bps) = 1000 bps$$

c.
$$r = log 22 = 1 \rightarrow N = (1) \times (1000 bps) = 1000 bps$$

d.
$$r = log 216 = 4 \rightarrow N = (4) \times (1000 bps) = 4000 bps$$

5.9:

First, we calculate the bandwidth for each channel = (1 MHz) / 10 = 100 KHz. We then find the value of r for each channel:

$$B = (1 + d) \times (1/r) \times (N) \rightarrow r = N / B \rightarrow r = (1 \text{ Mbps/100 KHz}) = 10$$

We can then calculate the number of levels: $L = 2^r = 2^{10} = 1024$. This means that that we need a 1024-QAM technique to achieve this data rate.

5.10:

The number of points define the number of levels, L. The number of bits per baud is the value of r. Therefore, we use the formula r = log2L for each case. **a.** $log_2 4= 2$


- **b.** $log_2 8 = 3$
- **c.** $log_2 2 = 1$
- **d.** $log_2 1024 = 10$

5.11:


a. This is ASK. There are two peak amplitudes both with the same phase (0 degrees). The values of the peak amplitudes are A1 = 2 (the distance between the first dot and the origin) and A2 = 3 (the distance between the second dot and the origin).




b. This is BPSK, There is only one peak amplitude (3). The distance between each dot and the origin is 3. However, we have two phases, 0 and 180 degrees.

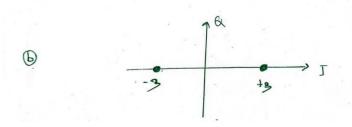

c. This can be either QPSK (one amplitude, four phases) or 4-QAM (one amplitude and four phases). The amplitude is the distance between a point and the origin, which is (22 + 22)1/2 = 2.83.

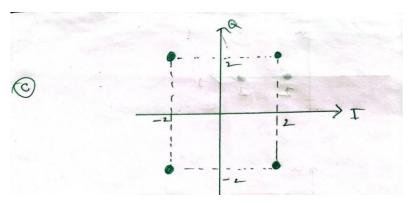

d. This is also BPSK. The peak amplitude is 2, but this time the phases are 90 and 270 degrees.

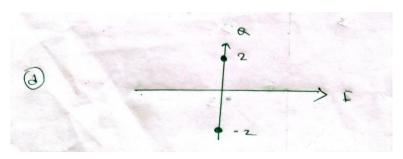

5.12:

We use the formula $N = [1/(1 + d)] \times r \times B$, but first we need to calculate the value of r for each case.

a.
$$r = log 22 = 1 \rightarrow N = [1/(1 + 0)] \times 1 \times (4 \text{ KHz}) = 4 \text{ kbps}$$

b.
$$r = log24=2 \rightarrow N = [1/(1+0)] \times 2 \times (4 \text{ KHz}) = 8 \text{ kbps}$$

c.
$$r = log 216 = 4 \rightarrow N = [1/(1+0)] \times 4 \times (4 \text{ KHz}) = 16 \text{ kbps}$$

d.
$$r = log 264 = 6 \rightarrow N = [1/(1+0)] \times 6 \times (4 \text{ KHz}) = 24 \text{ kbps}$$