

# D5000 ScreenTape Assay for TapeStation Systems **Quick Guide**

The Agilent 4150 (G2992AA) and 4200 (G2991AA and G2991BA) TapeStation systems are automated platforms for scalable, flexible, fast, and reliable electrophoresis of nucleic acids.

This Quick Guide is intended for use with the Agilent 4150 and 4200 TapeStation systems only. A Quick Guide specific for use with the Agilent 2200 TapeStation system is available online.

The D5000 Screen Tape assay is designed for analyzing double-stranded DNA molecules from 100 to 5000 basepairs.

## **Specifications**

Analytical specifications	D5000 ScreenTape assay
Sizing range	100 – 5000 bp
Typical resolution	400 – 5000 bp: 15 %
Sensitivity <sup>1</sup>	0.1 ng/μL
Sizing precision <sup>2</sup>	5 % CV
Sizing accuracy <sup>2</sup>	±10 %
Quantitative precision	0.1 – 1 ng/μL: 15 % CV, 1 – 50 ng/μL: 10 % CV
Quantitative accuracy	±20 %
Quantitative range	0.1 - 50 ng/µL
Maximum buffer concentration in	250 mM KCl, 250 mM Tris-HCl, 125 mM NaCl, 50 mM NaOAc, 25 mM MgCl <sub>2</sub> ,
sample	25 mg/mL BSA, 25 mM guanidine-HCl
Physical specifications	
Analysis time	15 samples: <25 min, 96 samples: <135 min
Samples per consumable	15
Sample volume required	1 μL
Kit stability	4 months
Kit size	105 samples

Signal-to-noise >3 (single peak)

<sup>&</sup>lt;sup>2</sup> Determined using D5000 Ladder as sample

### D5000 ScreenTape Assay for TapeStation Systems

## **Storage Conditions**

- Reagent vials and ScreenTape devices: 2 8 °C (36 46 °F).
- Store partially used ScreenTape devices upright at 2 8 °C (36 46 °F) for a maximum of 2 weeks.
- Never freeze ScreenTape devices. Discard any accidentally frozen ScreenTape devices.

## Kit Components

Part Number	Name	Color	Amount
5067-5588	D5000 ScreenTape		7 ScreenTape devices
5067-5589	D5000 Reagents D5000 Ladder D5000 Sample Buffer	•	2 vials 10 μL 1300 μL
5067-5590	D5000 Ladder	•	1 vial, 10 μL

## Limited Use Label License

Some products within this assay contain SYBR $^{\text{m}}$  Green I, which is licensed from Life Technologies Corporation for use in research and development only. SYBR $^{\text{m}}$  is a registered trademark of Life Technologies Corporation.

## For Research Use Only

Not for use in Diagnostic Procedures.

## Additional Material Required for Analysis with the TapeStation Systems

- Loading tips (5067-5598, 1 pk or 5067-5599, 10 pk)
- Optical Tube 8x Strip (401428) and Optical Tube Cap 8x Strip (401425)
- · Vortex mixer IKA MS3 with 96-well sample plate adapter
- 96-well sample plates (5042-8502) and 96-well Plate Foil Seal (5067-5154) (4200 TapeStation systems only)

# Additional Equipment Required (Not Supplied)

- Volumetric micropipettes for handling volumes from 1 to 15 μL
- Centrifuges for tube strips and 96-well sample plates



#### Toxic agents

- Refer to product material safety datasheets for further information.
- ✓ When working with the ScreenTape assay follow the appropriate safety procedures such as wearing safety goggles, laboratory gloves and protective clothing.



#### Damage to the TapeStation systems

Only use the recommended consumables and reagents with the TapeStation systems.

# D5000 ScreenTape Assay for TapeStation Systems

# **Essential Measurement Practices**

Read about good measurement practices in the Agilent Information Center and/or in the System Manual.

Environmental conditions	<ul> <li>Ambient operating temperature: 15 – 30 °C (59 – 86 °F)</li> <li>Keep reagents during sample preparation at room temperature</li> </ul>	
Steps before sample preparation	<ul> <li>Allow Sample Buffer to equilibrate at room temperature for 30 min prior to use</li> <li>Vortex each vial and briefly spin down</li> <li>Flick ScreenTape device to eliminate bubbles in the buffer chamber</li> </ul>	
Pipetting practice	<ul> <li>Pipette reagents carefully against the side of the 96-well sample plate or sample tube</li> <li>Ensure that no sample or Sample Buffer remains within or on the outside of the tip</li> <li>Care must be taken due to viscosity of the Sample Buffer</li> </ul>	
Mixing and centrifugation recommendations	<ul> <li>Apply foil seal to 96-well sample plate or cap the tube strips prior to mixing and centrifugation</li> <li>Centrifuge to collect liquid at the base; then vortex using the IKA MS3 vortexer and adaptor at 2000 rpm for 1 min</li> <li>Briefly centrifuge and visually confirm that all liquid is collected at the bottom of the 96-well sample plate or tube strips and any air bubble is removed</li> <li>Run samples immediately after preparation</li> </ul>	


# **Ladder Considerations**

- Ladder is exclusively loaded from location A1 on the tube strip holder.
- Always use a complete tube strip when running ladder or samples from the tube strip holder.
- The analysis of one ladder per ScreenTape device is required.

## D5000 ScreenTape Assay for TapeStation Systems

## D5000 ScreenTape Assay Operating Procedure

- 1 Allow D5000 Reagents to equilibrate at room temperature for 30 minutes.
- 2 Launch the Agilent TapeStation Controller software.
- 3 Flick the D5000 ScreenTape device and insert it into the ScreenTape nest of the TapeStation instrument.
- **4** Select required sample positions in the TapeStation Controller software.
- 5 The required consumables (tips, further ScreenTape devices) are displayed in the TapeStation Controller software.
- 6 Vortex reagents and samples. Spin down before use.
- 7 Prepare ladder:
  - For 1 or 2 ScreenTape devices: pipette 10 μL D5000 Sample Buffer (•) and 1 μL D5000 Ladder (•) at position
    A1 in a tube strip.
  - For more than 2 ScreenTape devices<sup>1</sup>: pipette 20 μL D5000 Sample Buffer (•) and 2 μL D5000 Ladder (•) at position A1 in a tube strip.
- 8 For each sample, pipette 10 μL D5000 Sample Buffer (•) and 1 μL DNA sample in a tube strip or 96-well sample plate<sup>1</sup>.
- **9** Apply caps to tube strips and/or foil seals to 96-well sample plates.
- 10 Mix liquids using the IKA MS3 vortexer at 2000 rpm for 1 min.
- 11 Spin down samples and ladder for 1 min.

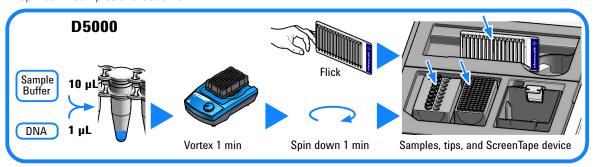

# Sample Analysis

- 1 Load samples into the TapeStation instrument. Place ladder in position A1 on tube strip holder.
- 2 Carefully remove caps of tube strips. Visually confirm that liquid is positioned at the bottom.
- 3 Click Start.
- 4 The TapeStation Analysis software opens automatically after the run and displays results.

# **Technical Support and Further Information**

For technical support, please visit **www.agilent.com/chem/contactus**. Visit Agilent Technologies' web site. It offers useful information, support and current developments about the products and technology: **www.agilent.com/genomics/tapestation**.

# www.agilent.com

© Agilent Technologies Inc. 2018-2021 Printed in Germany, Edition: 01/2021



Part No: G2991-90051 Rev. B Document No: SD-UF0000093 Rev. B



Agilent 4200 TapeStation system only