

## **To Review Fluid Codes**


- 1. Bulkload new FC's
- 2. If SP3D is open, exit session and re-enter SP3D
- 3. Access SP3D Piping task

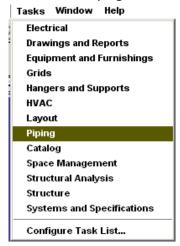


4. Set the Locate Filter to ALL

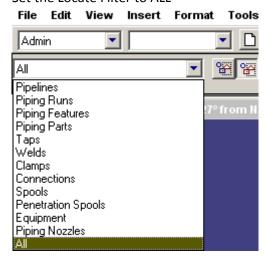


5. Right click on a Pipeline System and select Properties

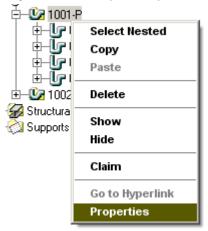

6. Click the Fluid Requirement field, select a desired fluid system from the drop down list

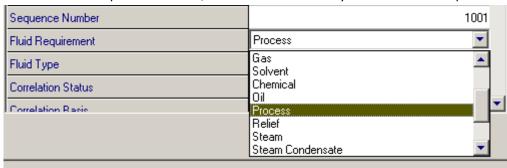

7. Click the Fluid Type field, select a desired fluid code from the pull down list

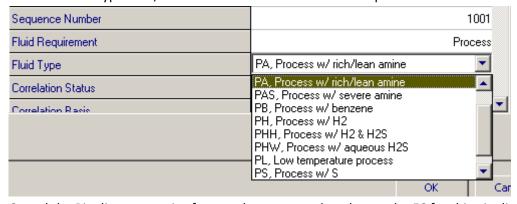

8. Cancel the Pipeline properties form, unless you need to change the FC for this pipeline