


PreSens Measurement Studio 2 –

Getting Started

1. Connect the O₂ and pH meters via USB to your PC and start the software. The meters are displayed in the Devices and Channels section on the left of the software window.


Create a new user:

Go to the Users tab, click on **New** in the control bar and create a new user. Enter a name for the new user. Then select a




Create a new measurement:

Go to the Measurements tab and click on New in the control bar to create a new measurement. Enter a name for the new measurement. Then select a device channel in the Devices and Channels section and click the Assign to button in the control bar to assign the new measurement to the channel. This is necessary so data measured with this channel can be recorded. Repeat this with all channels you are going to use.

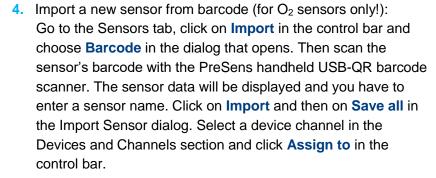

Create a new sensor:

Click on New in the control bar of the Sensors tab. Enter a sensor name and the sensor type in the dialog that opens. The input field for calibration data and sensor constants will open. Enter the calibration and constants values stated on the Final Inspection Protocol delivered with the sensor in the respective input fields and click Save. Select a device channel in the Devices and Channels section and click Assign to in the control bar.

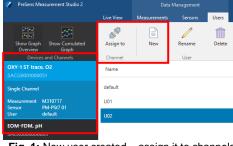

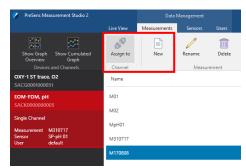


Fig. 2: New measurement created – assign it to channels

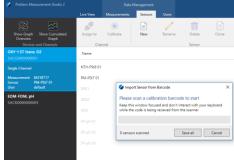


Fig. 3: Import Sensor from Barcode dialog



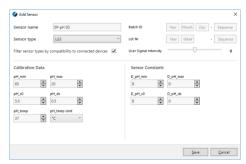



Fig. 4: Add Sensor dialog



5. When you have assigned a user, measurement and sensor to each channel you want to use go to the Live View tab. Adjust the measurement settings for each channel (left hand side of the main screen):

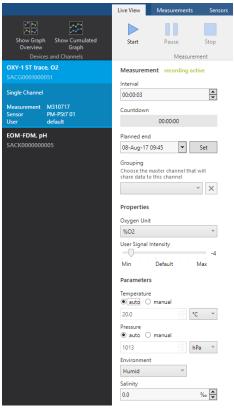



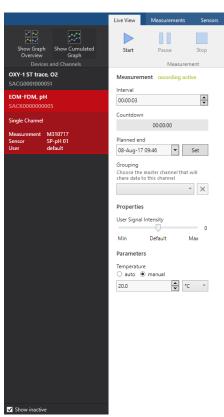

and pH measurements

6. Click the Start button in the control bar to start the measurement. (Recording measurement data is already activated once a measurement is assigned to the channel; use the Deactivate button, if you do not wish to record measurement data). Repeat this for all channels you want to use. In order to start measurements with all channels simultaneously switch from Single Channel to the Multi Channel View (control button in the upper right of the software window), select all channels you want to measure with and click Start in the control bar.

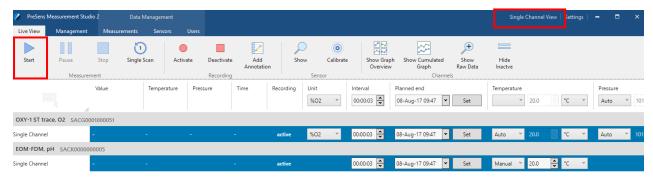


Fig. 6: Multi Channel View - Start a measurement with all channels simultaneously

Go to the Measurements tab, select a measurement and click on Export in the control bar to export the respective measurement data in .csv or .xls format.