
T01 STATION 1 (x = 150)

Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).

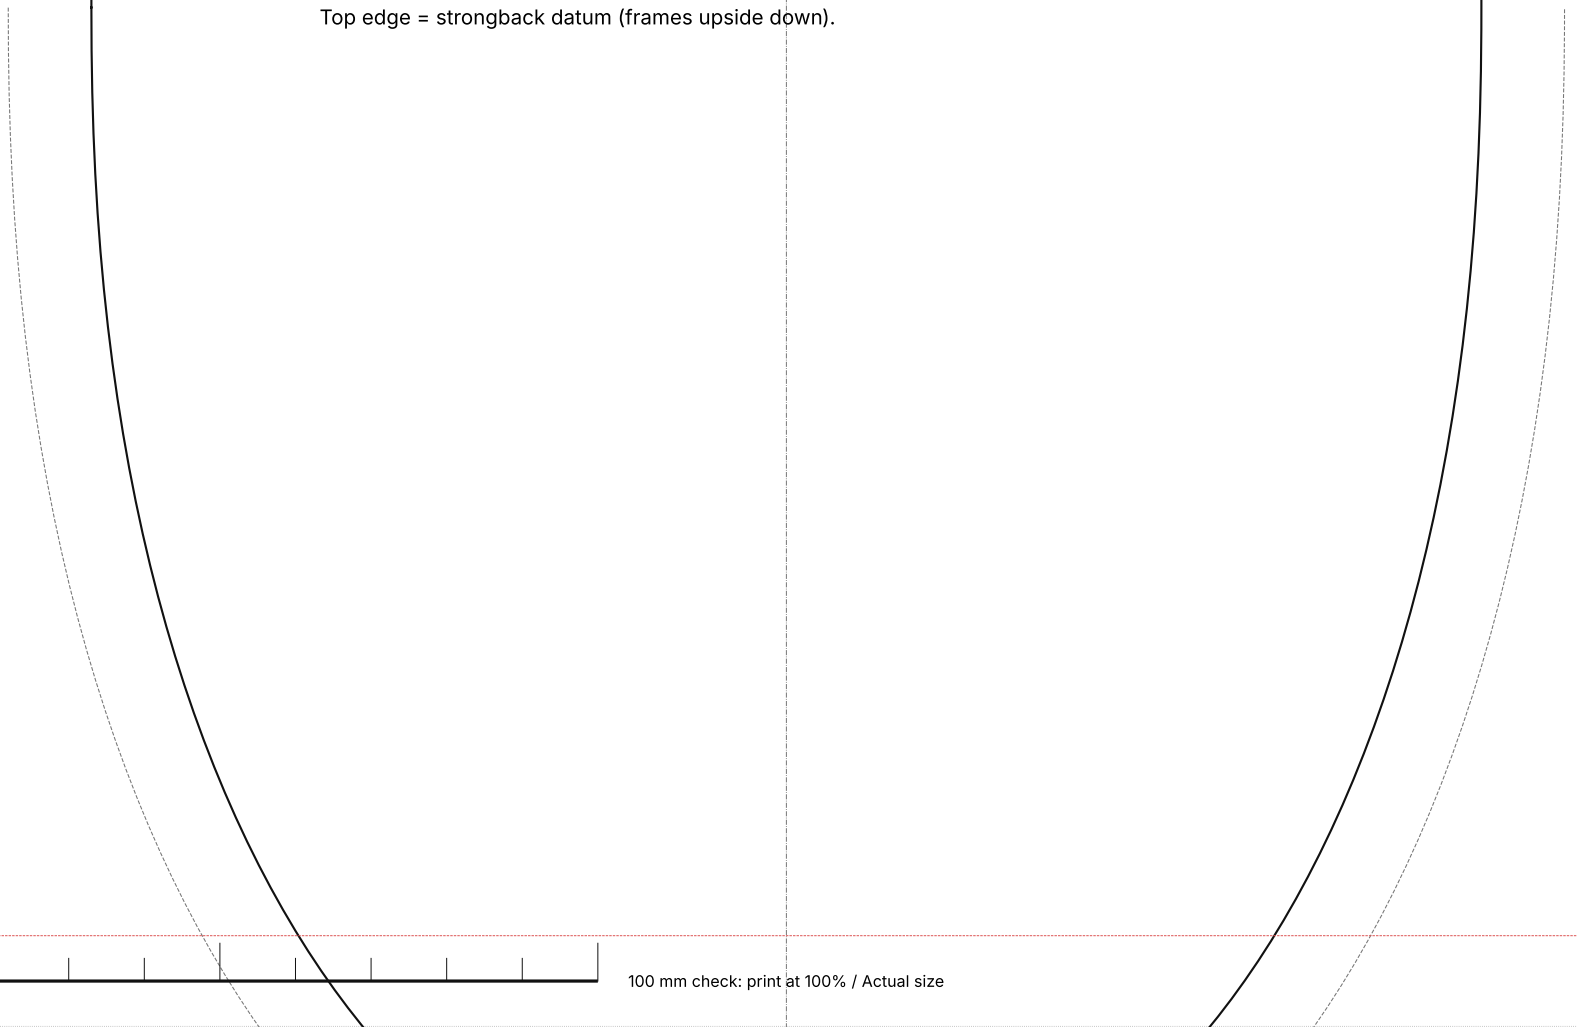

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

T02 STATION 2 (x = 300)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).

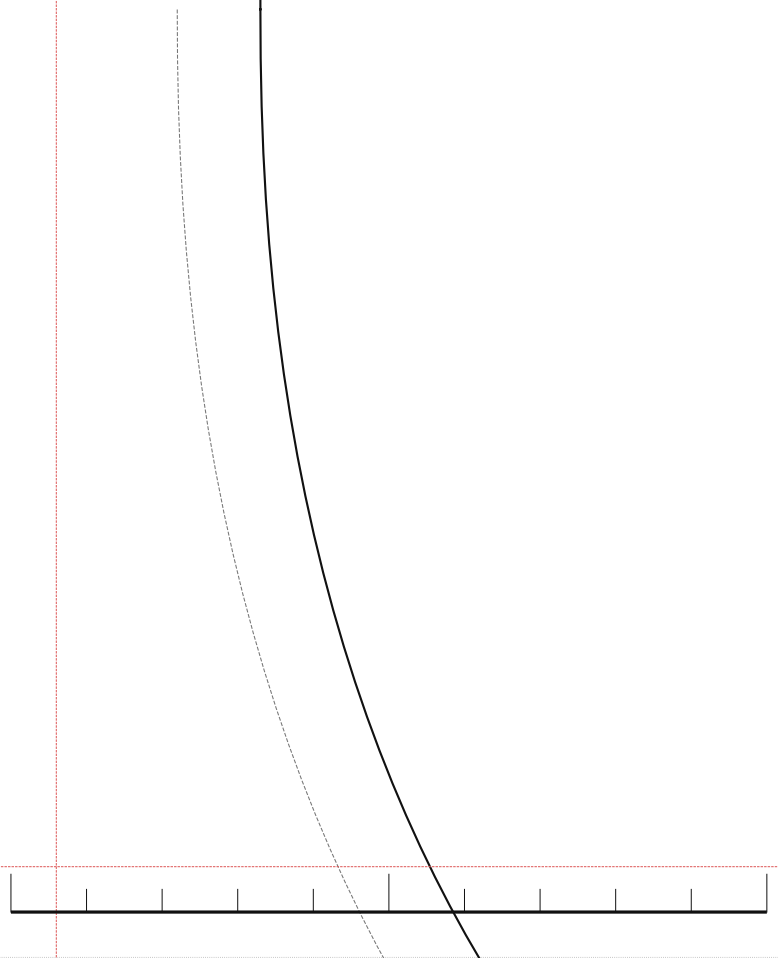

100 mm check: print at 100% / Actual size

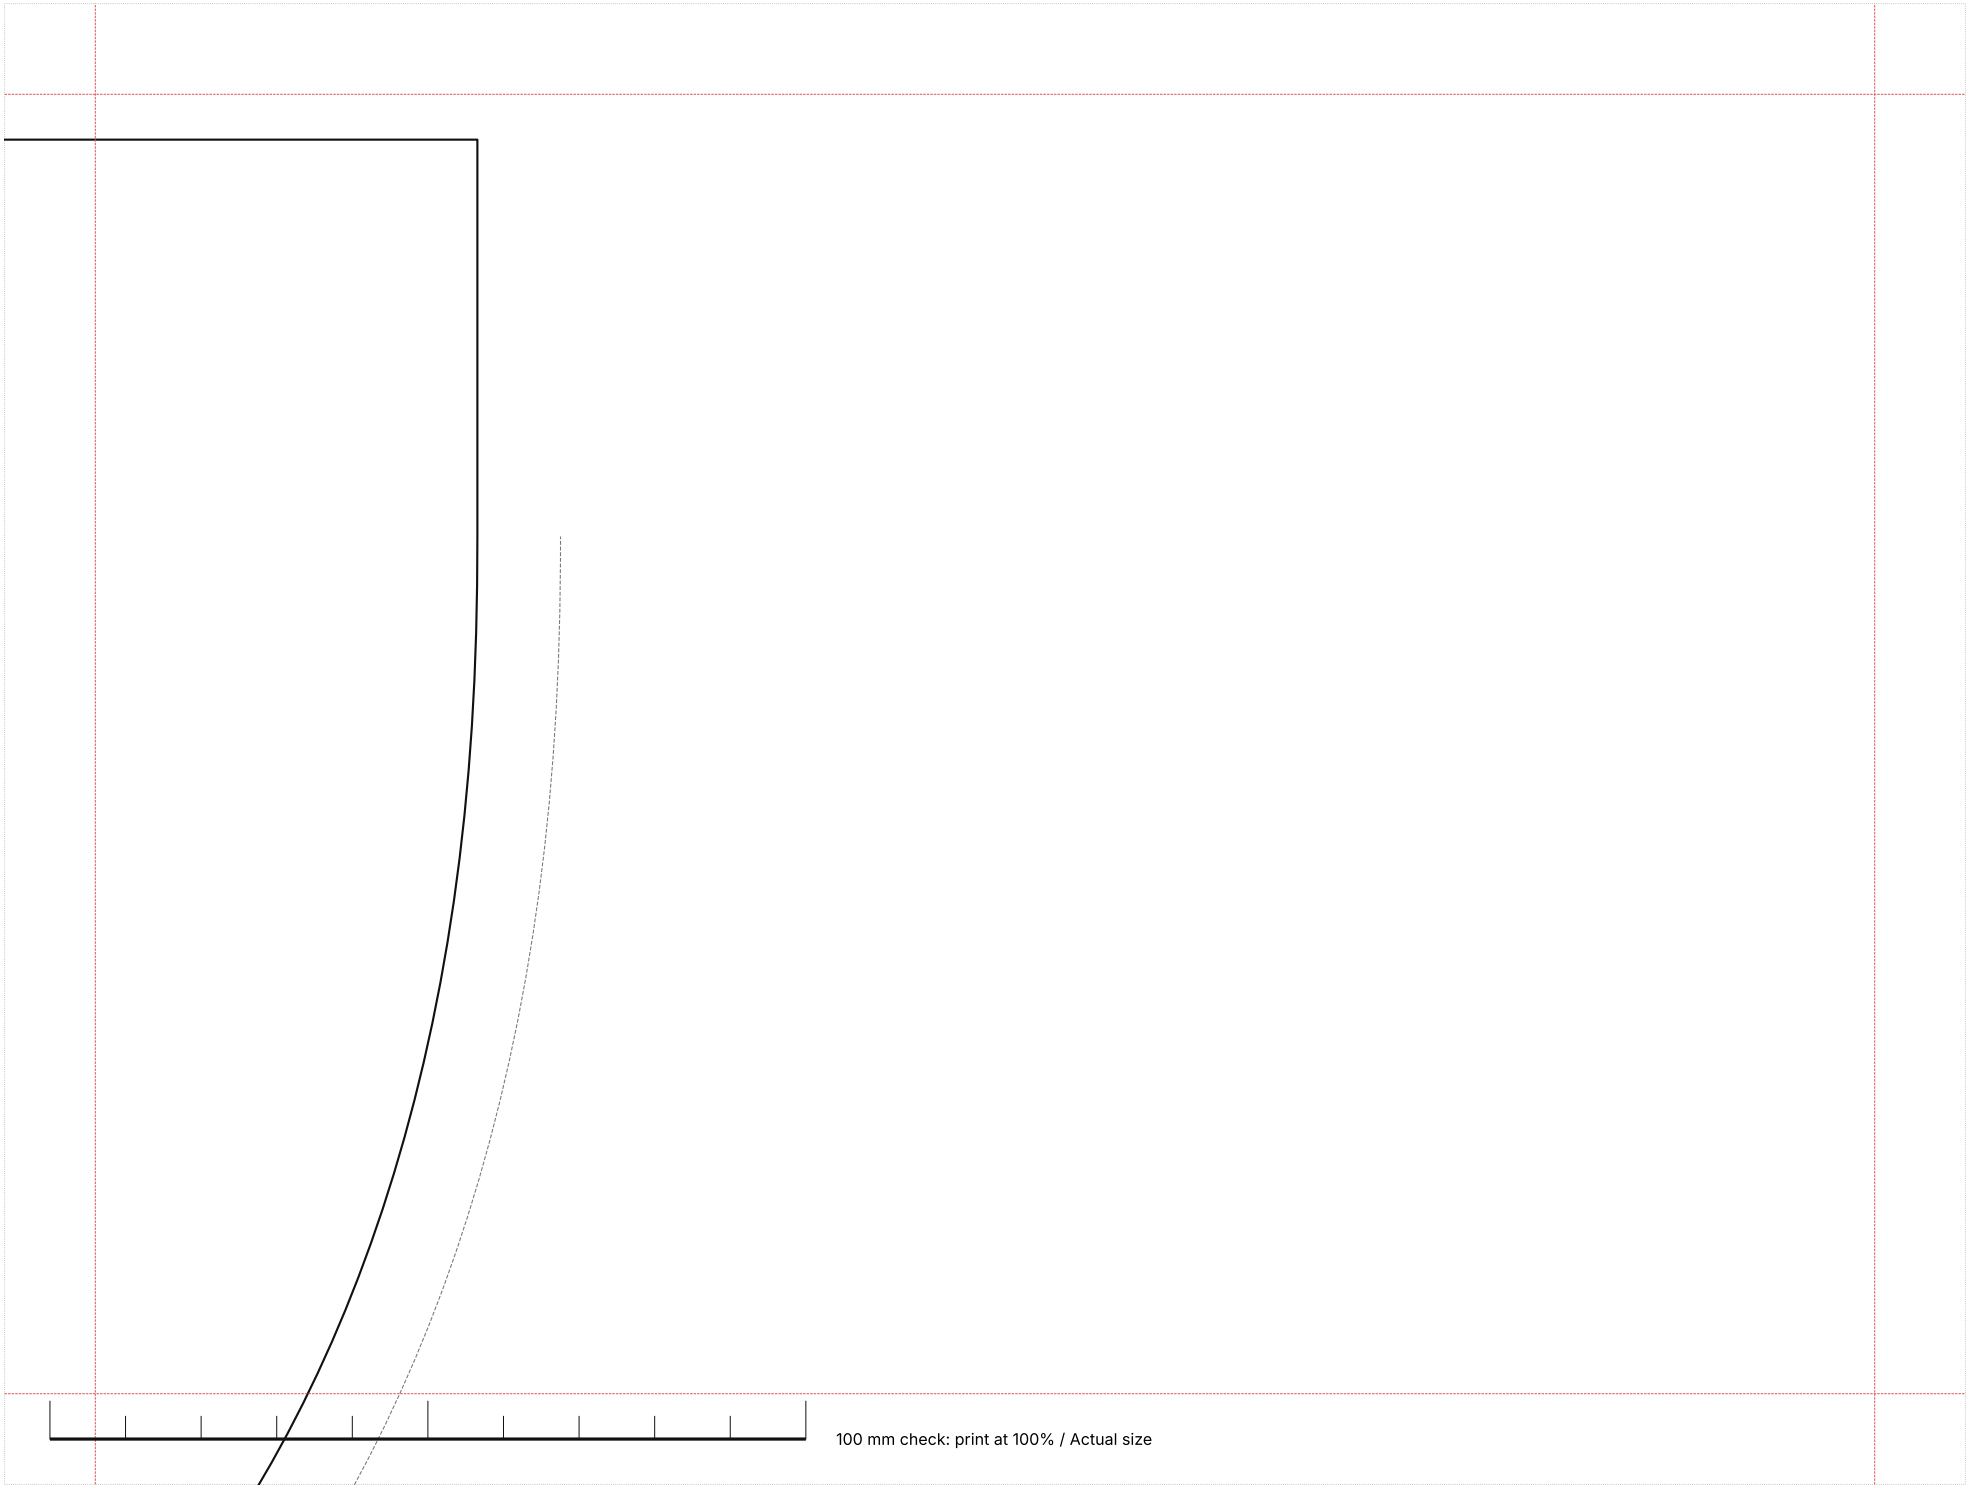

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

T03 STATION 3 (x = 450)


Cut on the solid FRAME line (hull minus 11 mm).


Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).

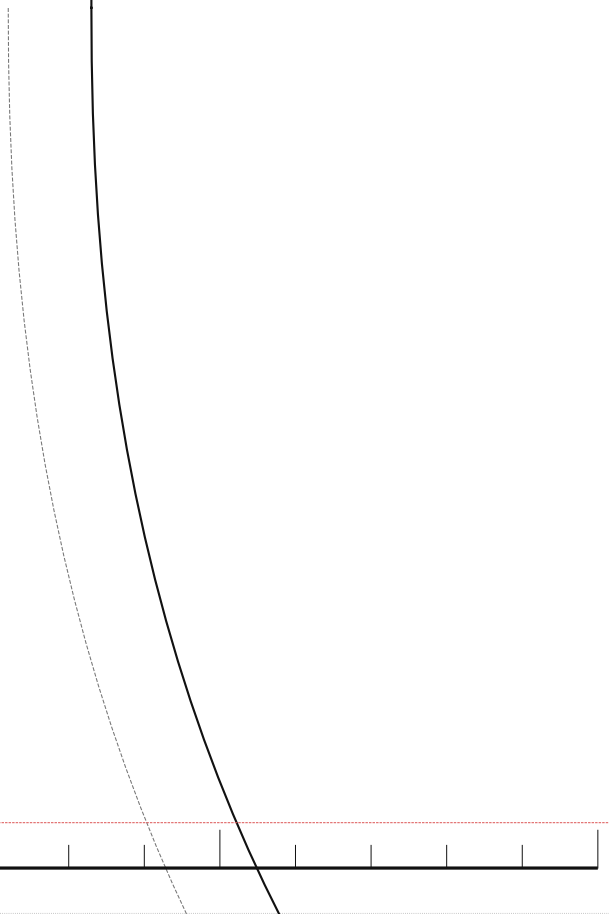

100 mm check: print at 100% / Actual size

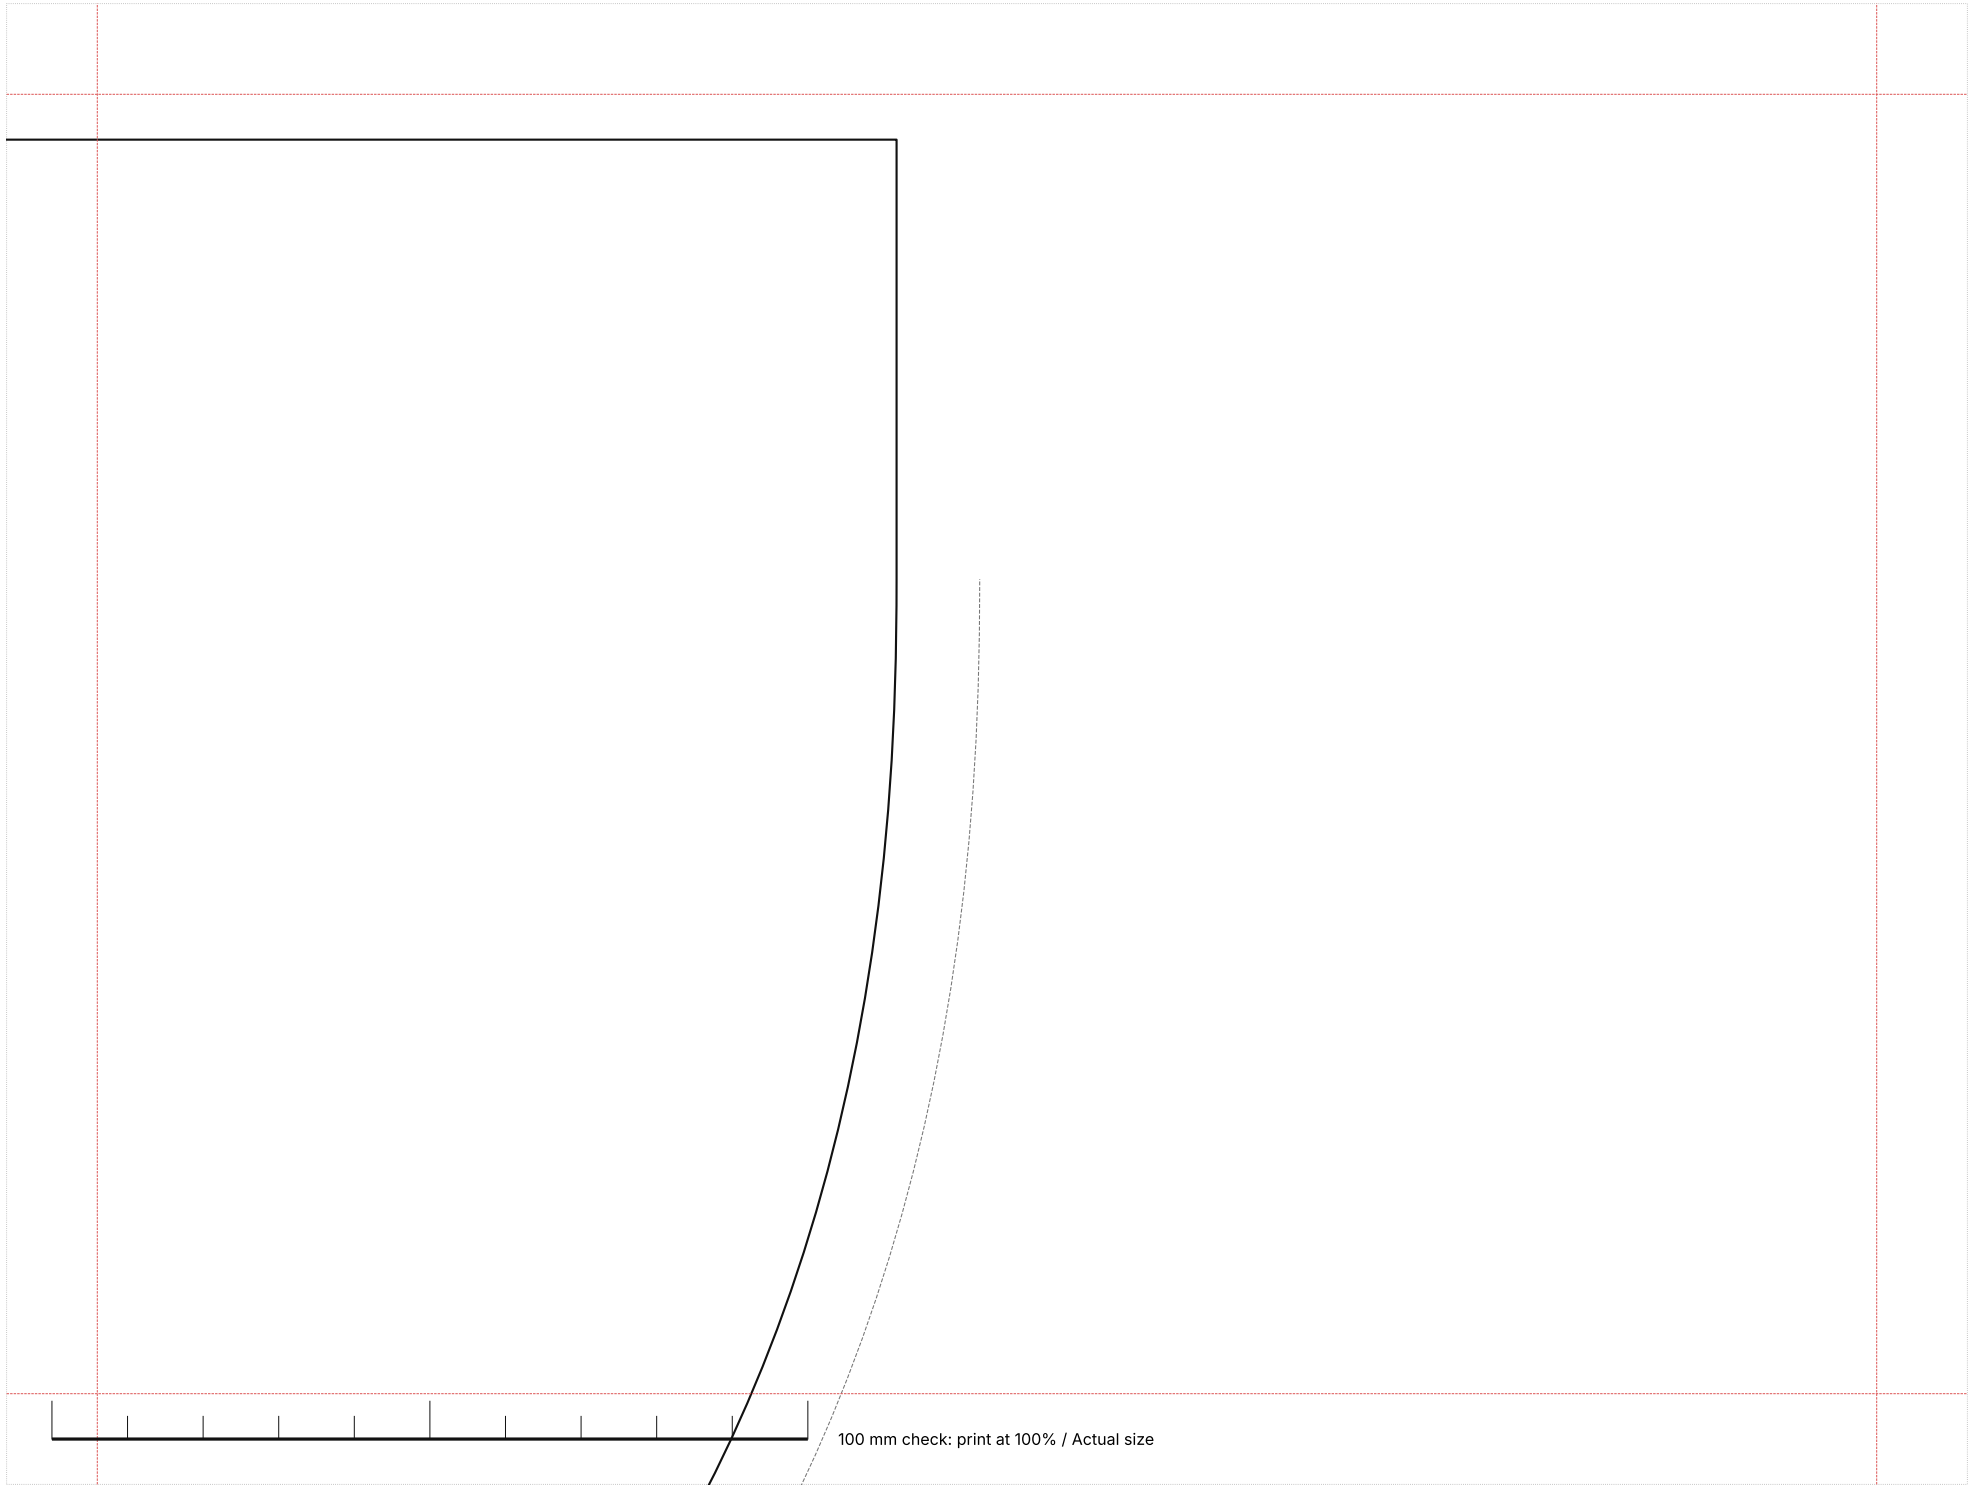
100 mm check: print at 100% / Actual size

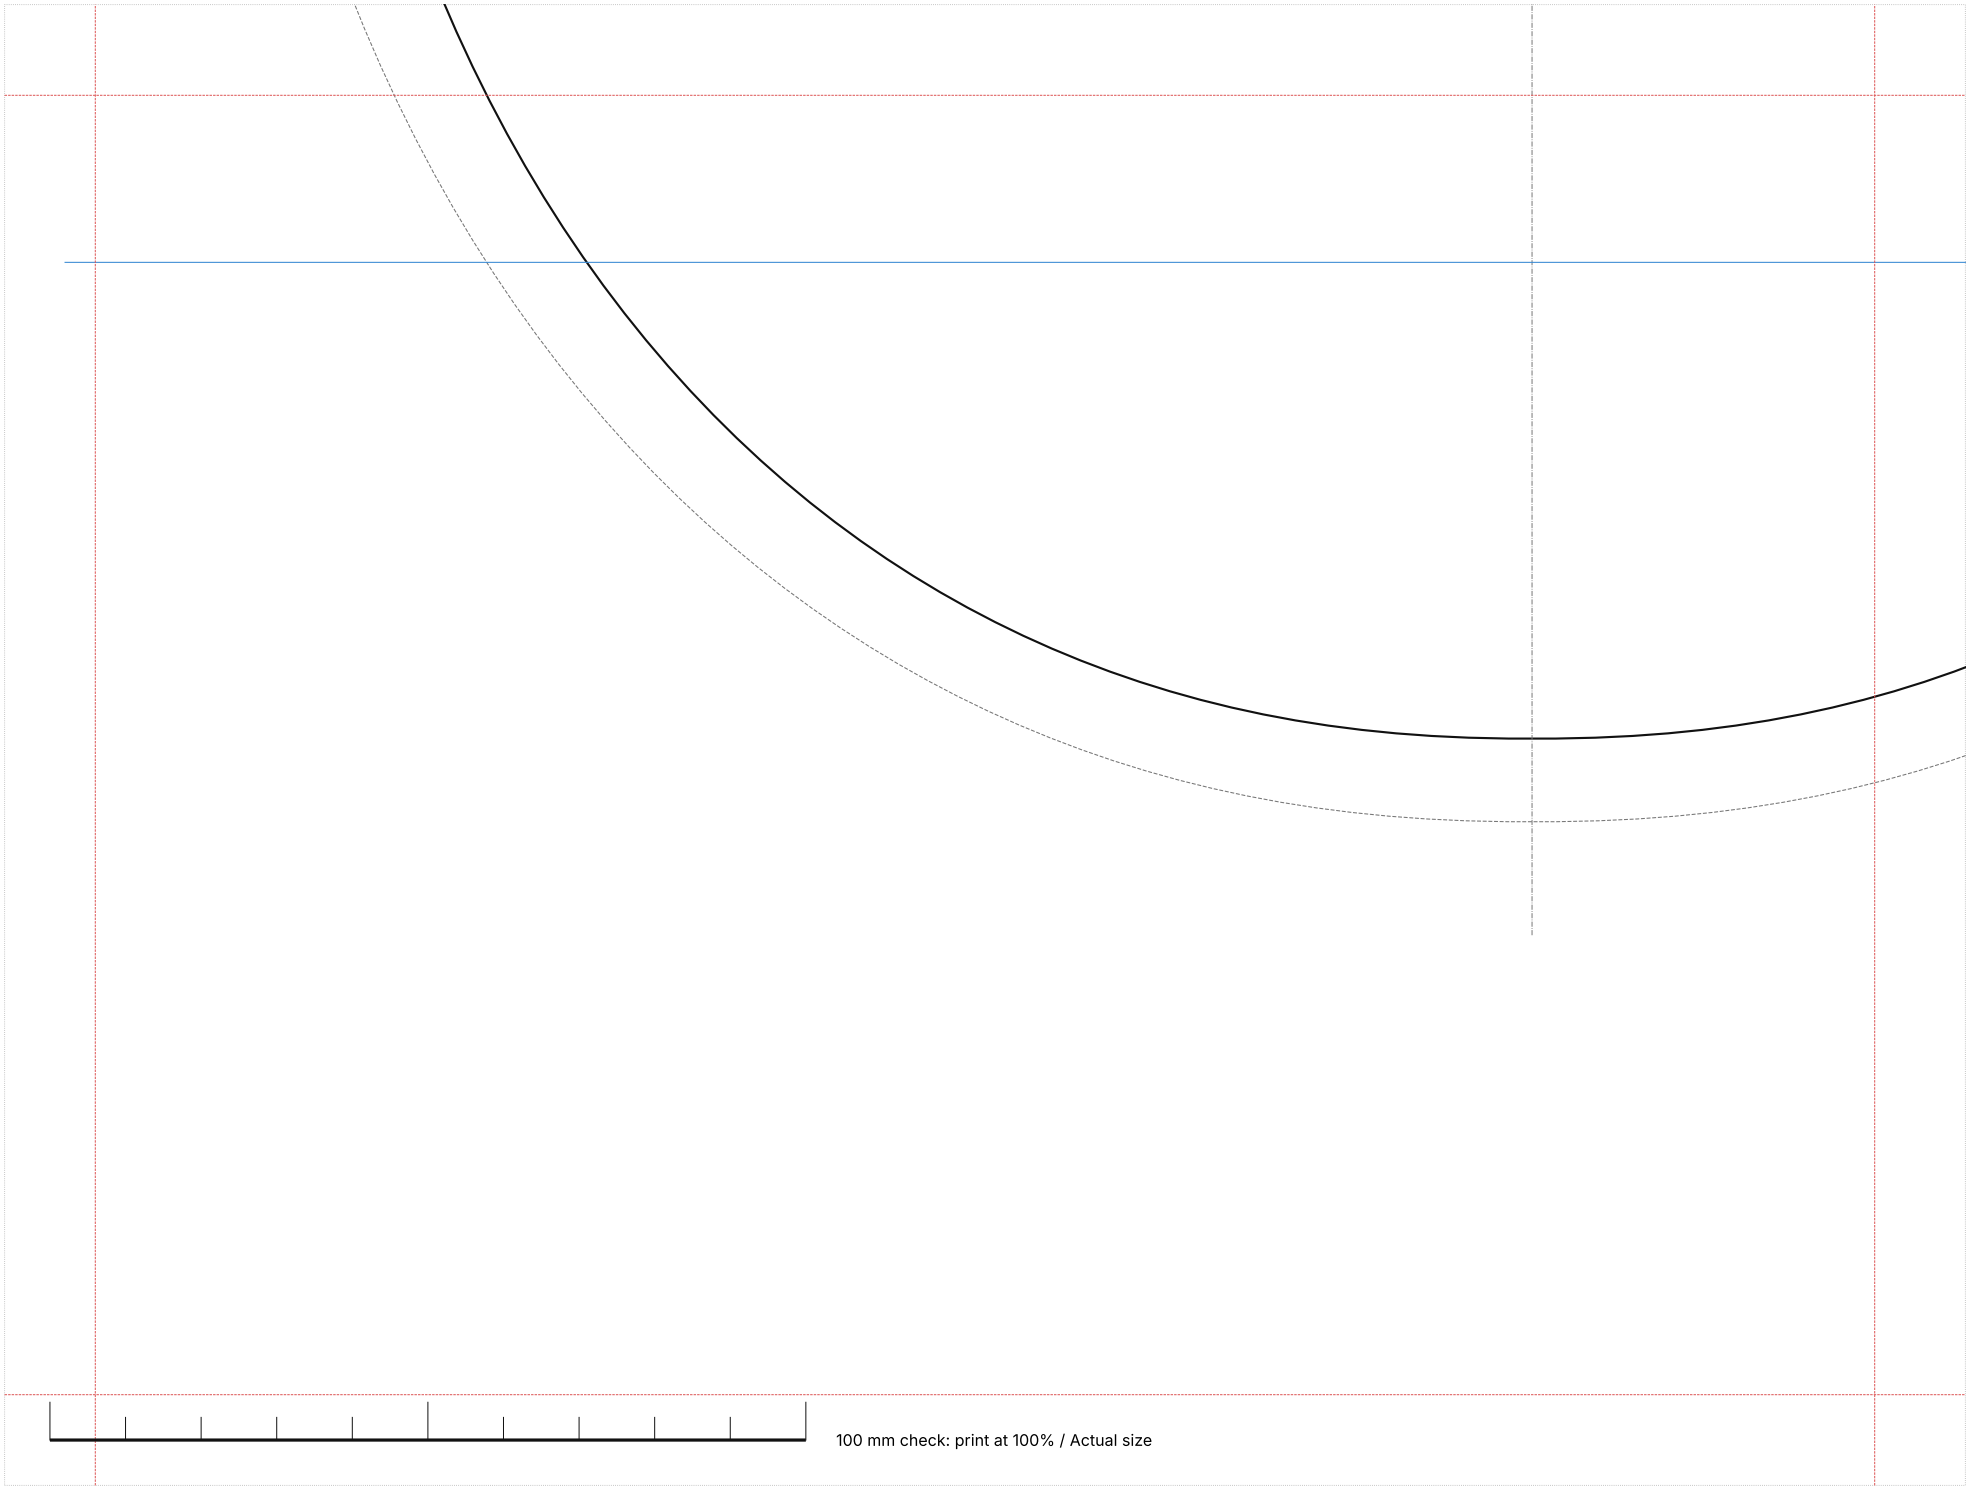

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T04 STATION 4 (x = 600)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size

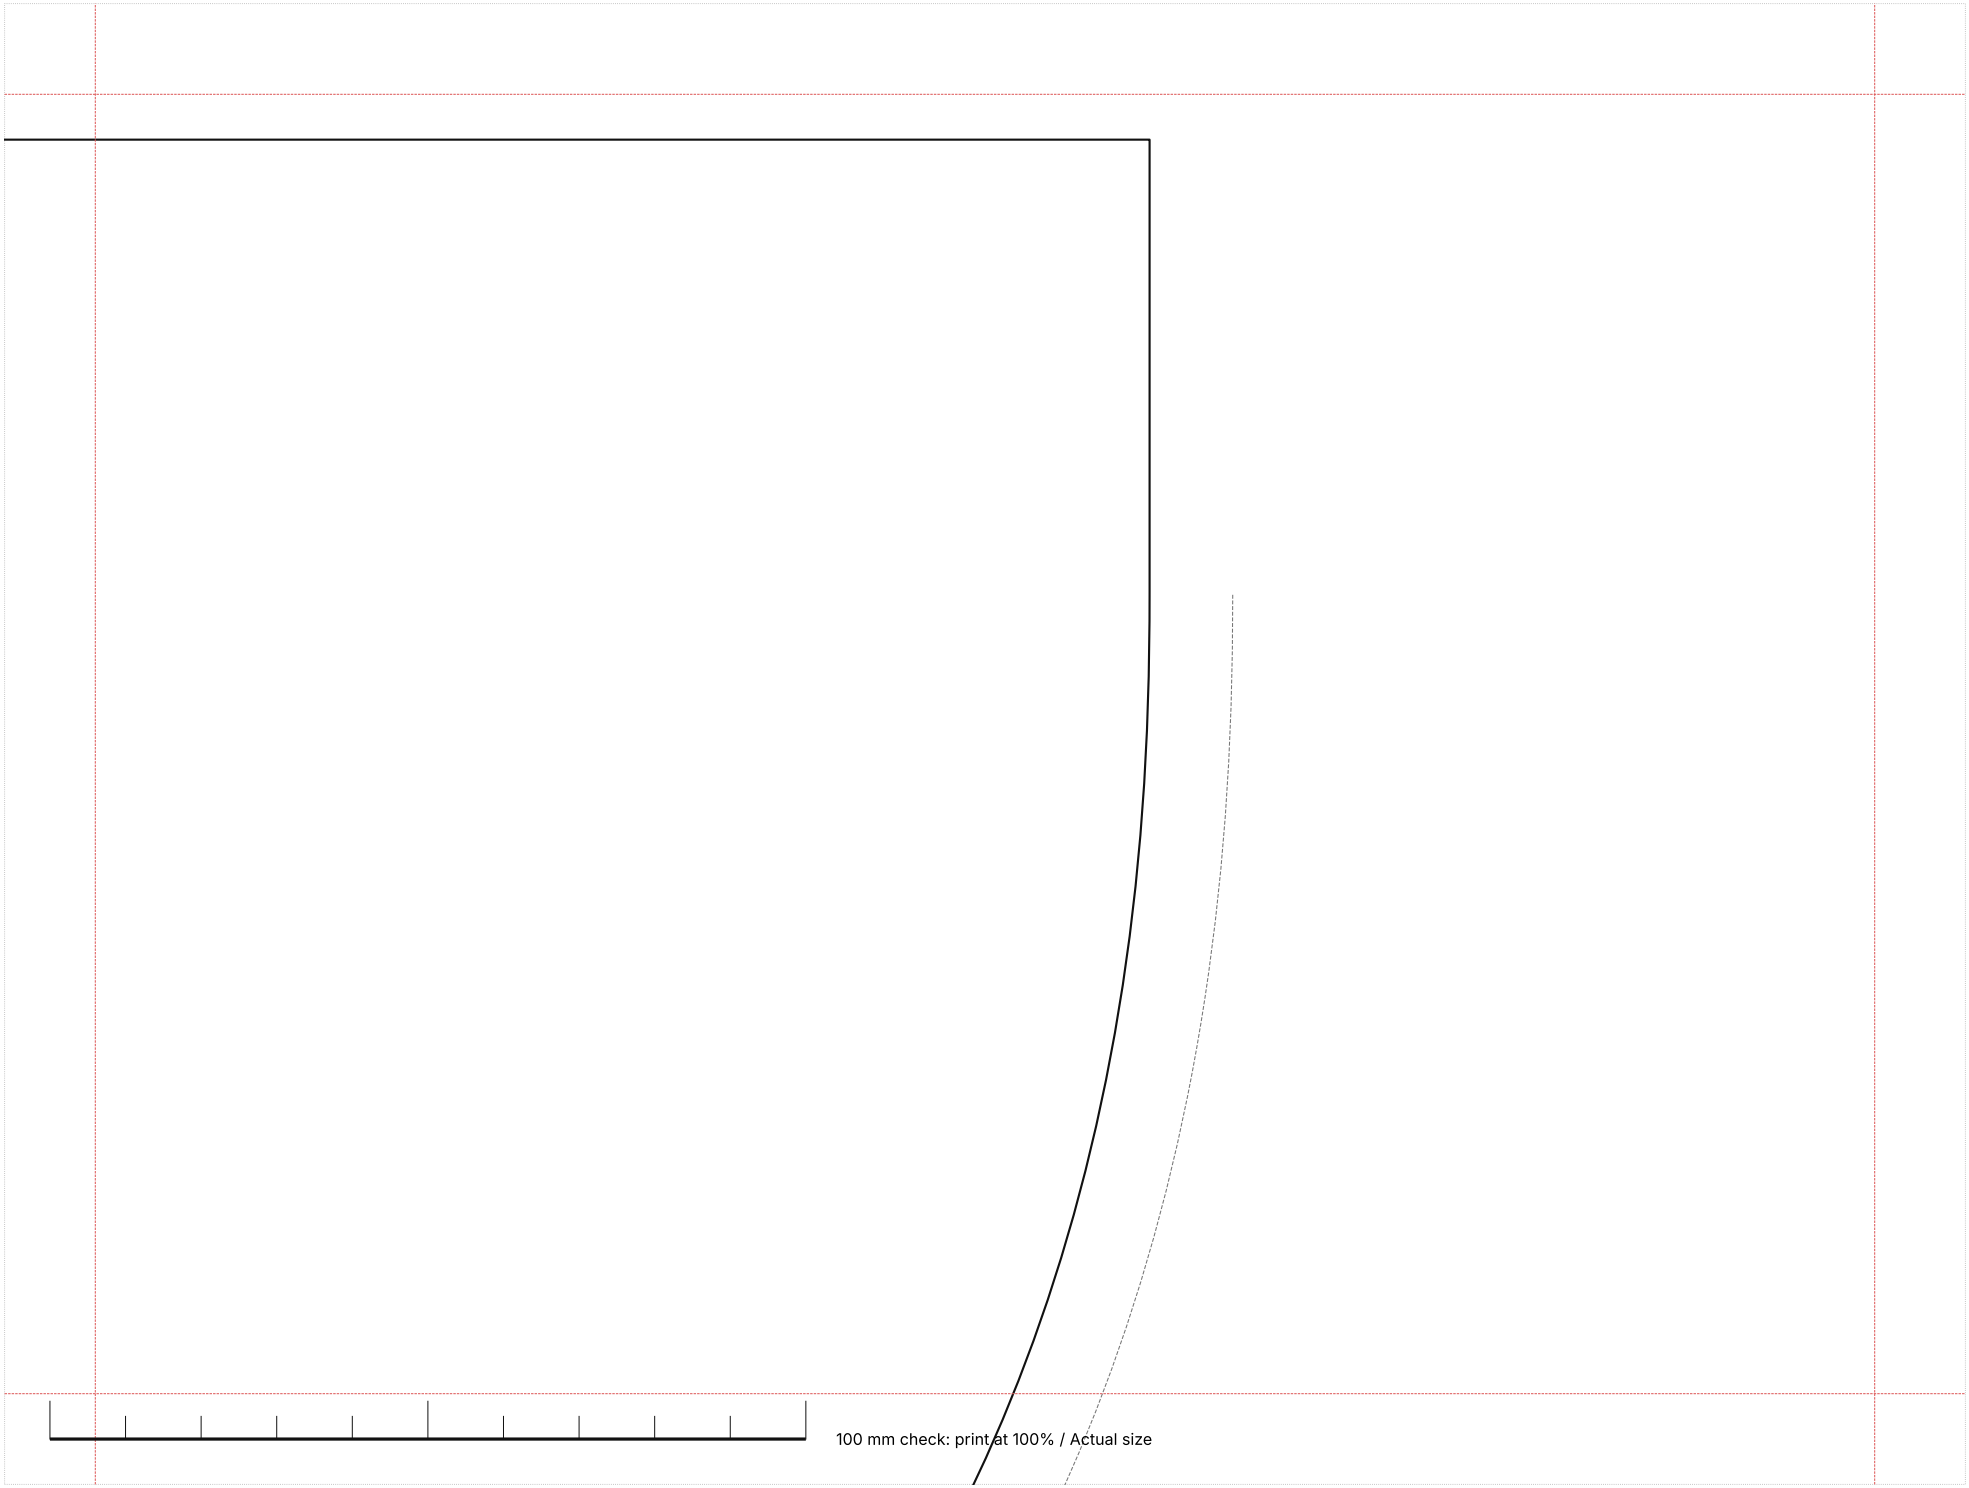
100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T05 STATION 5 (x = 750)

Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

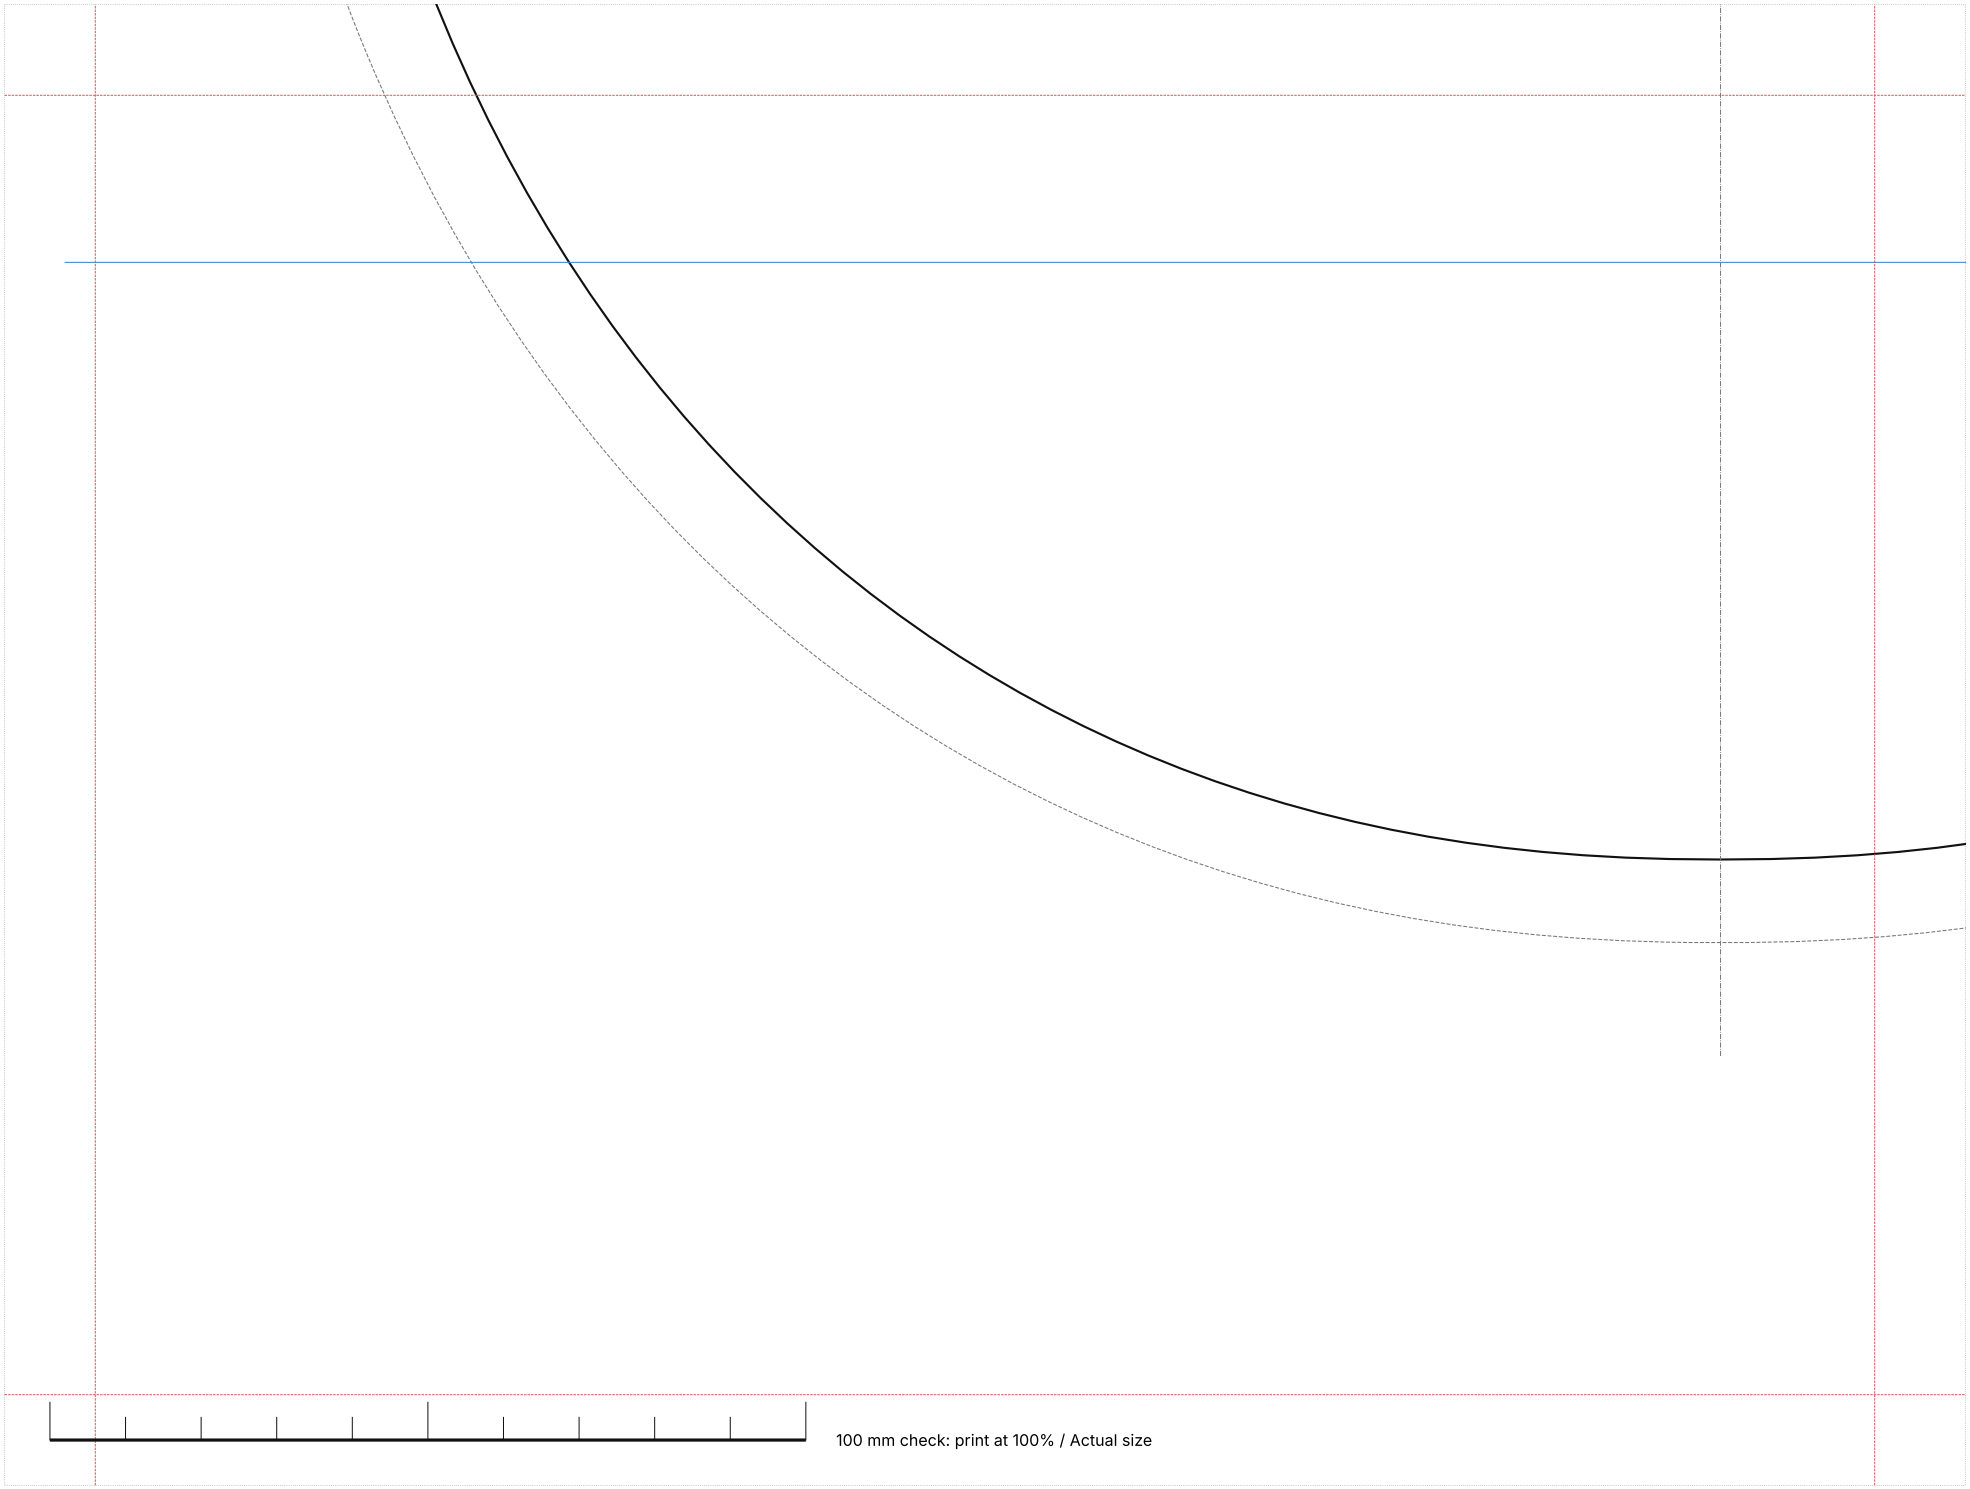

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T06 STATION 6 (x = 900)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size

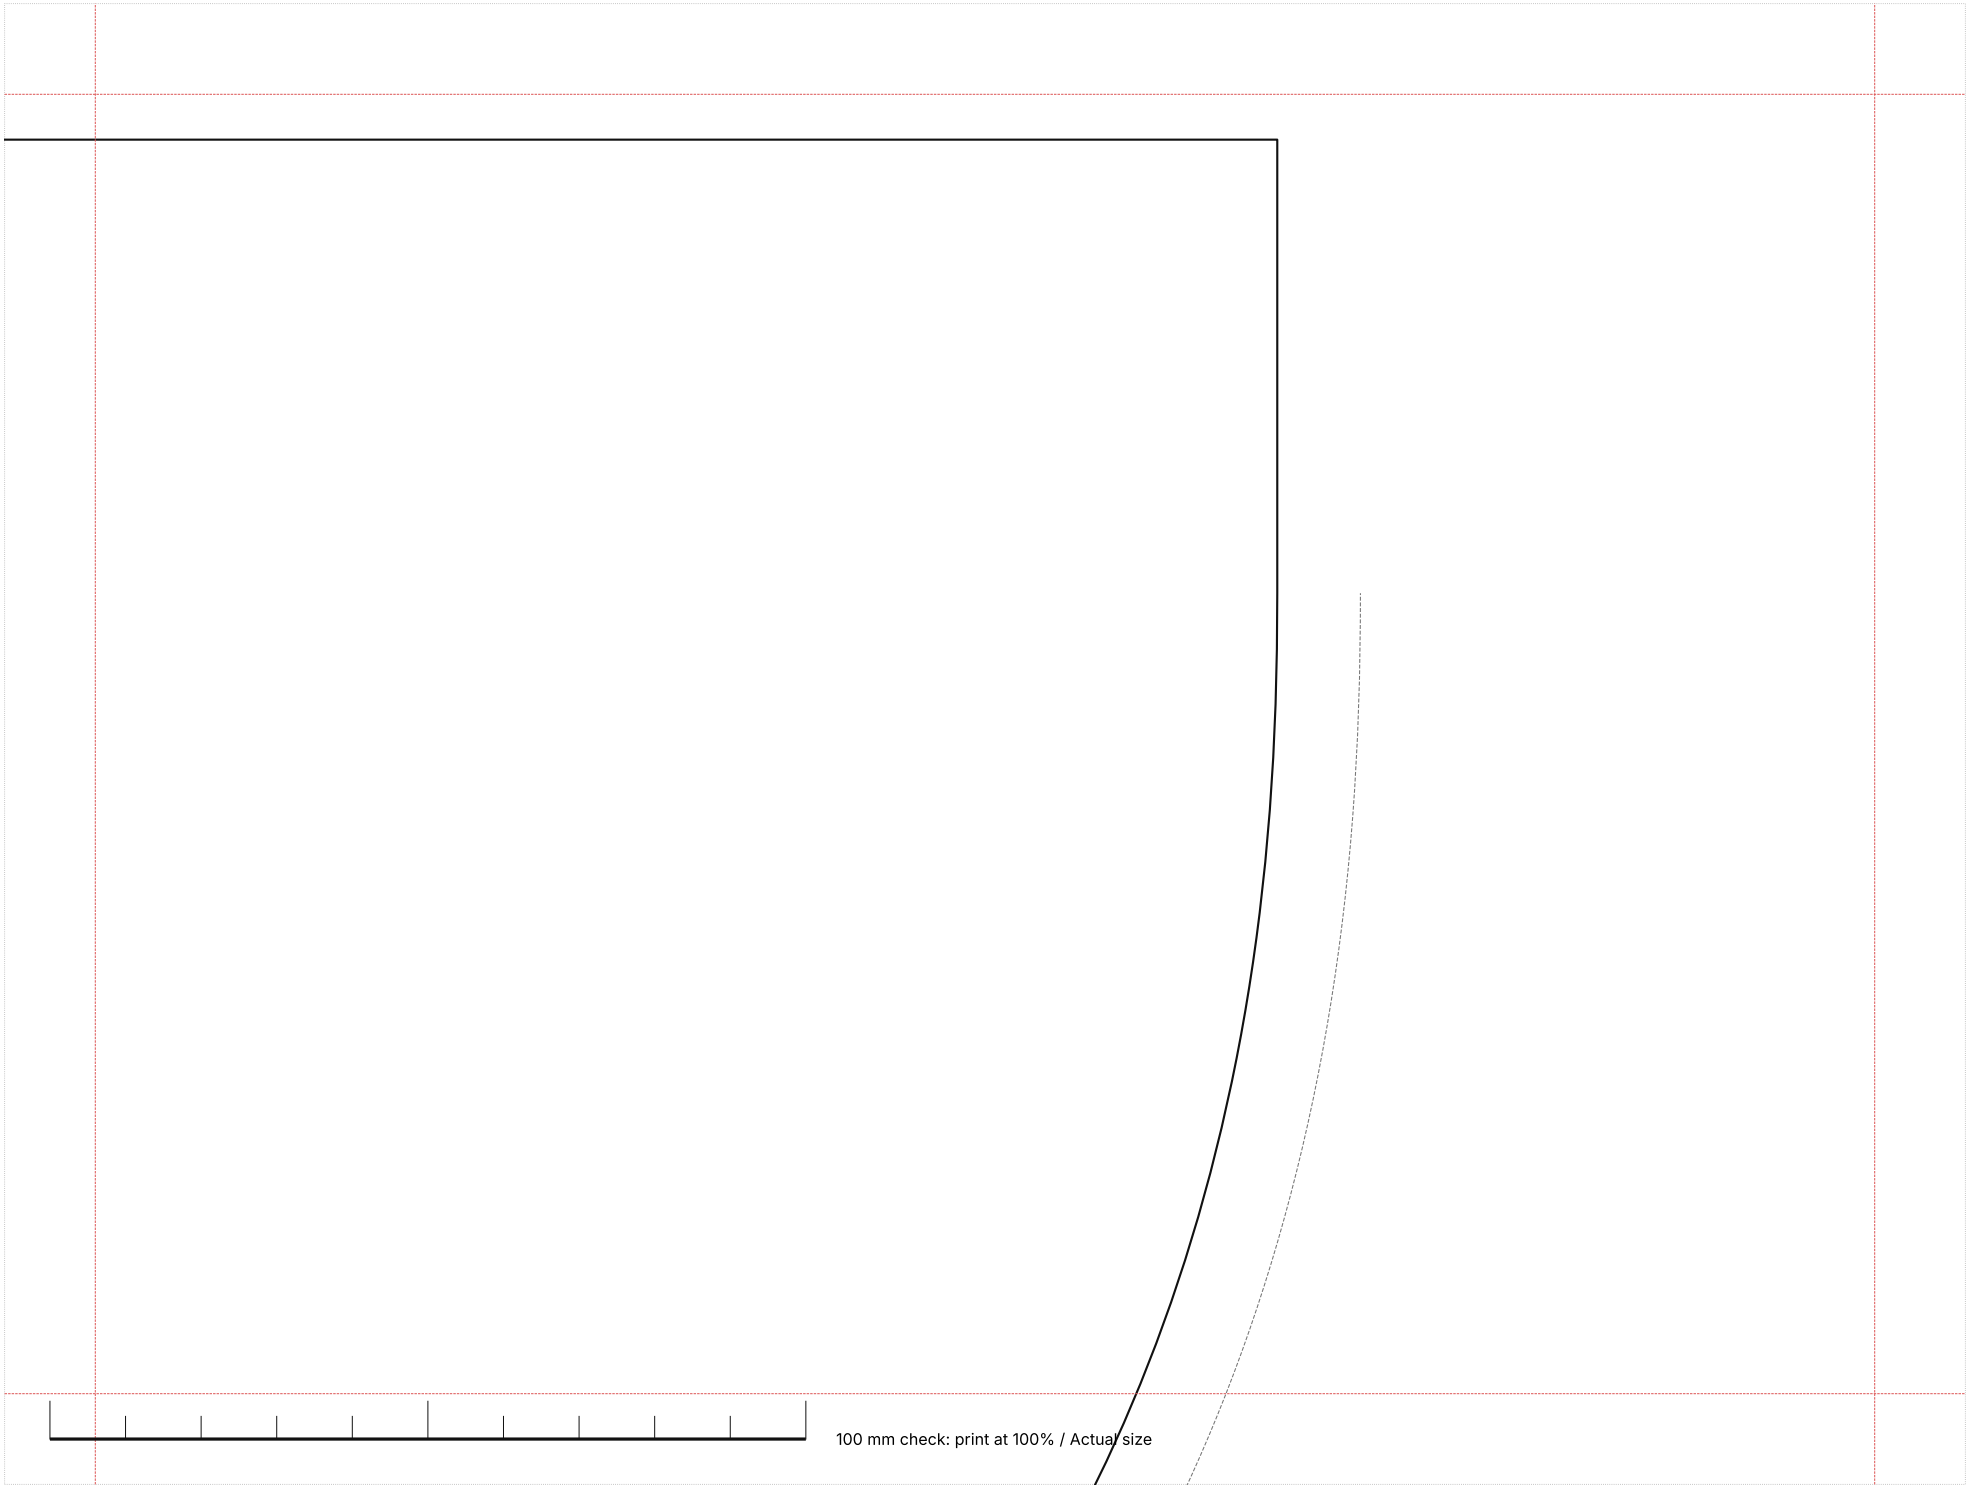

100 mm check: print at 100% / Actual size

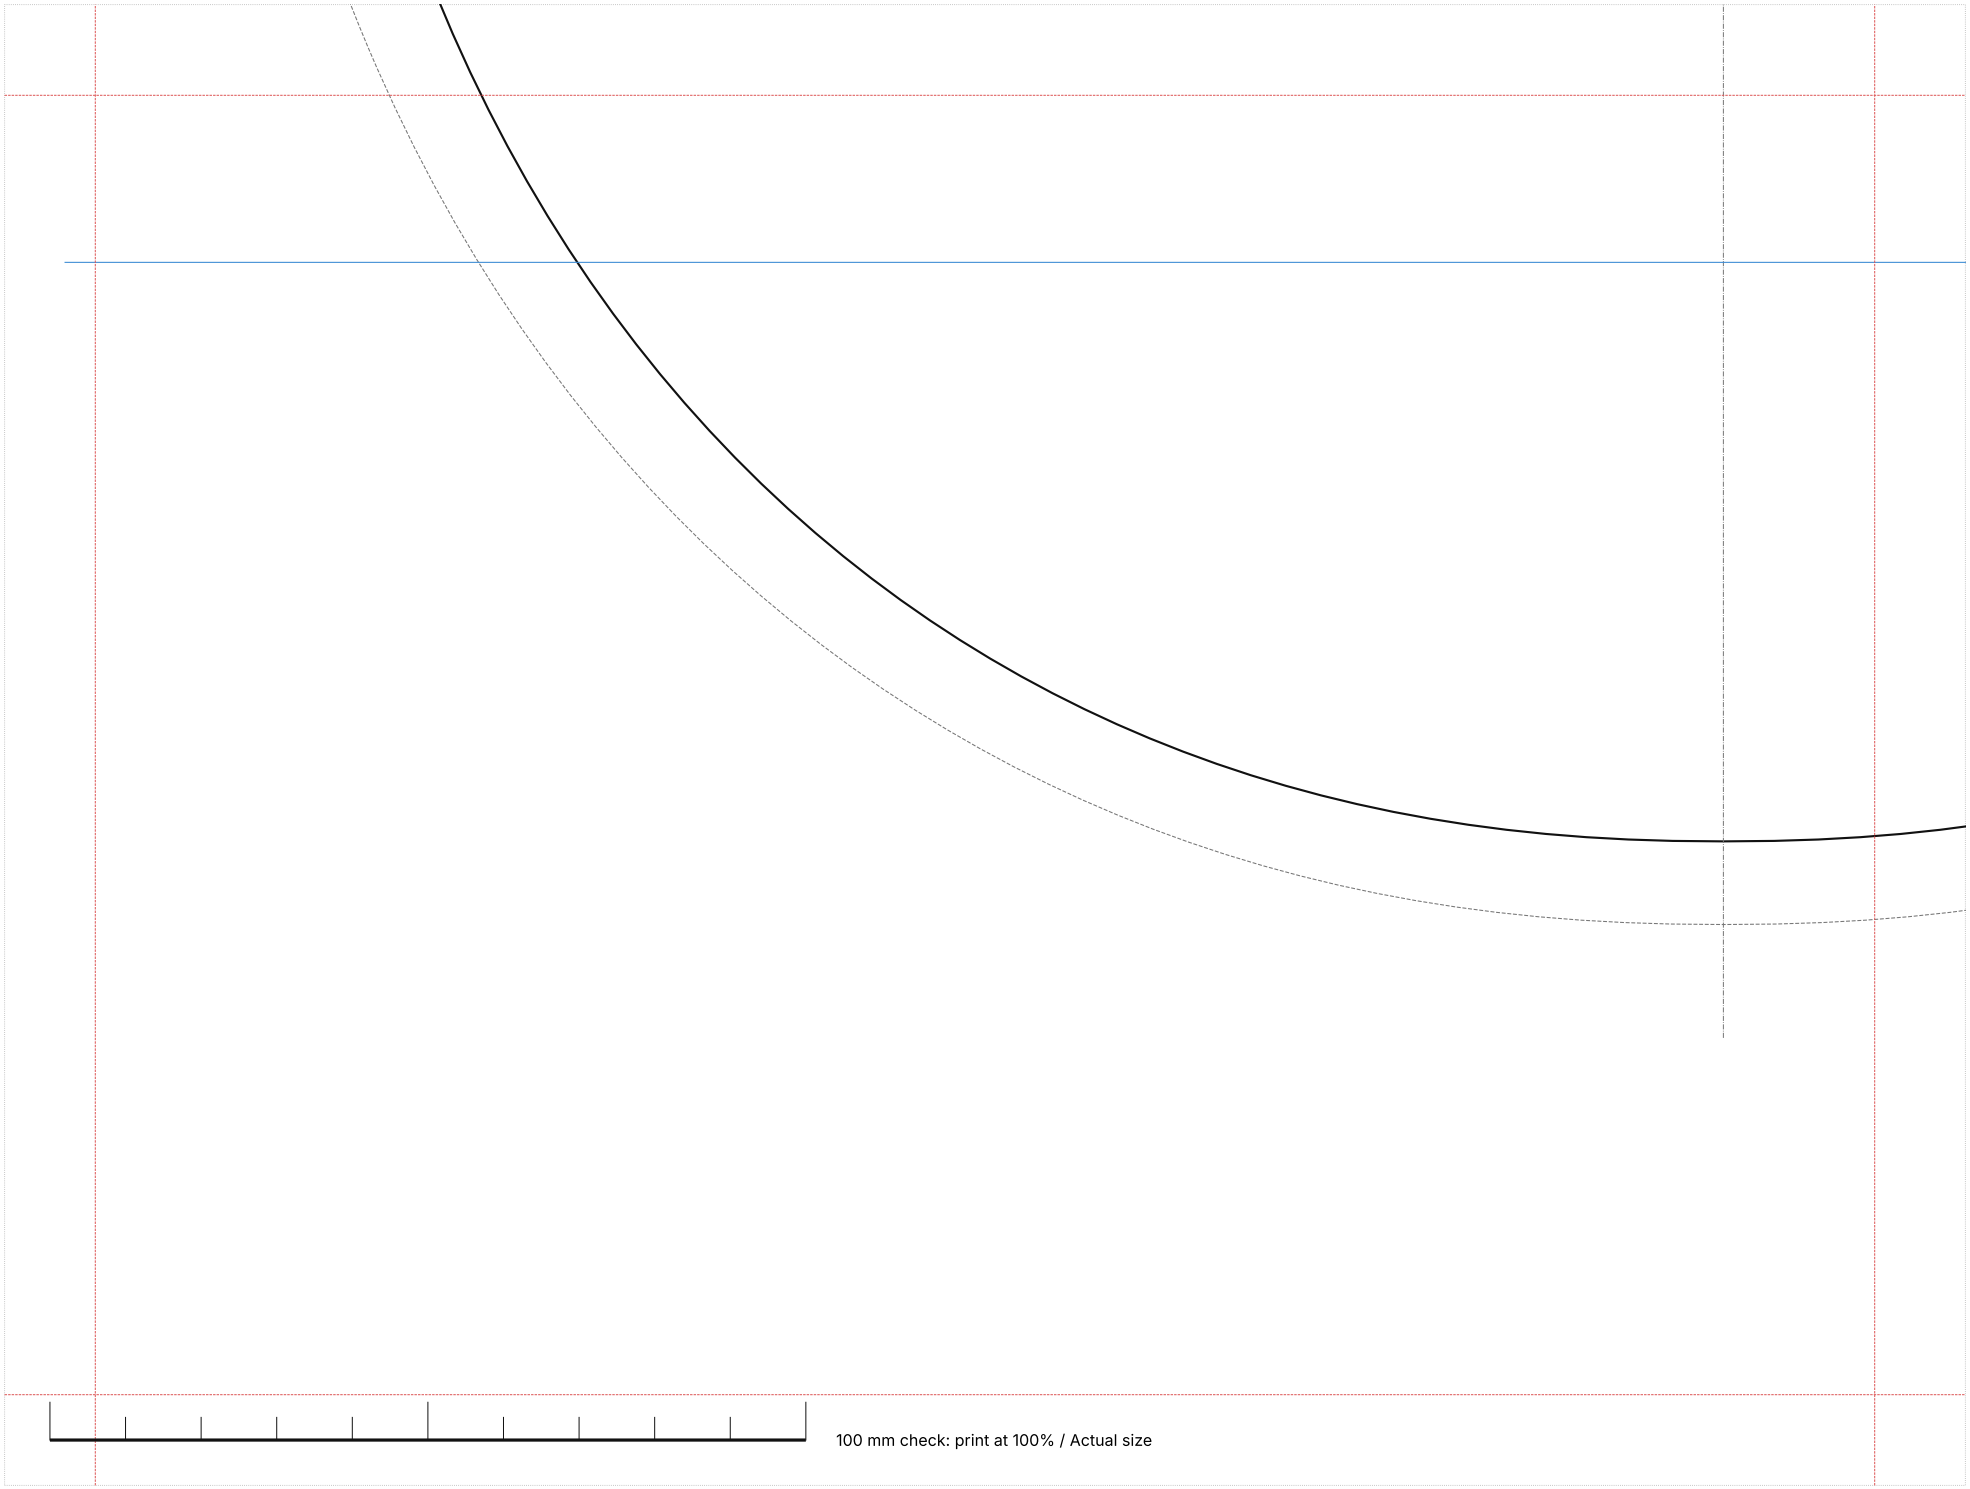

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T07 STATION 7 (x = 1050)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size

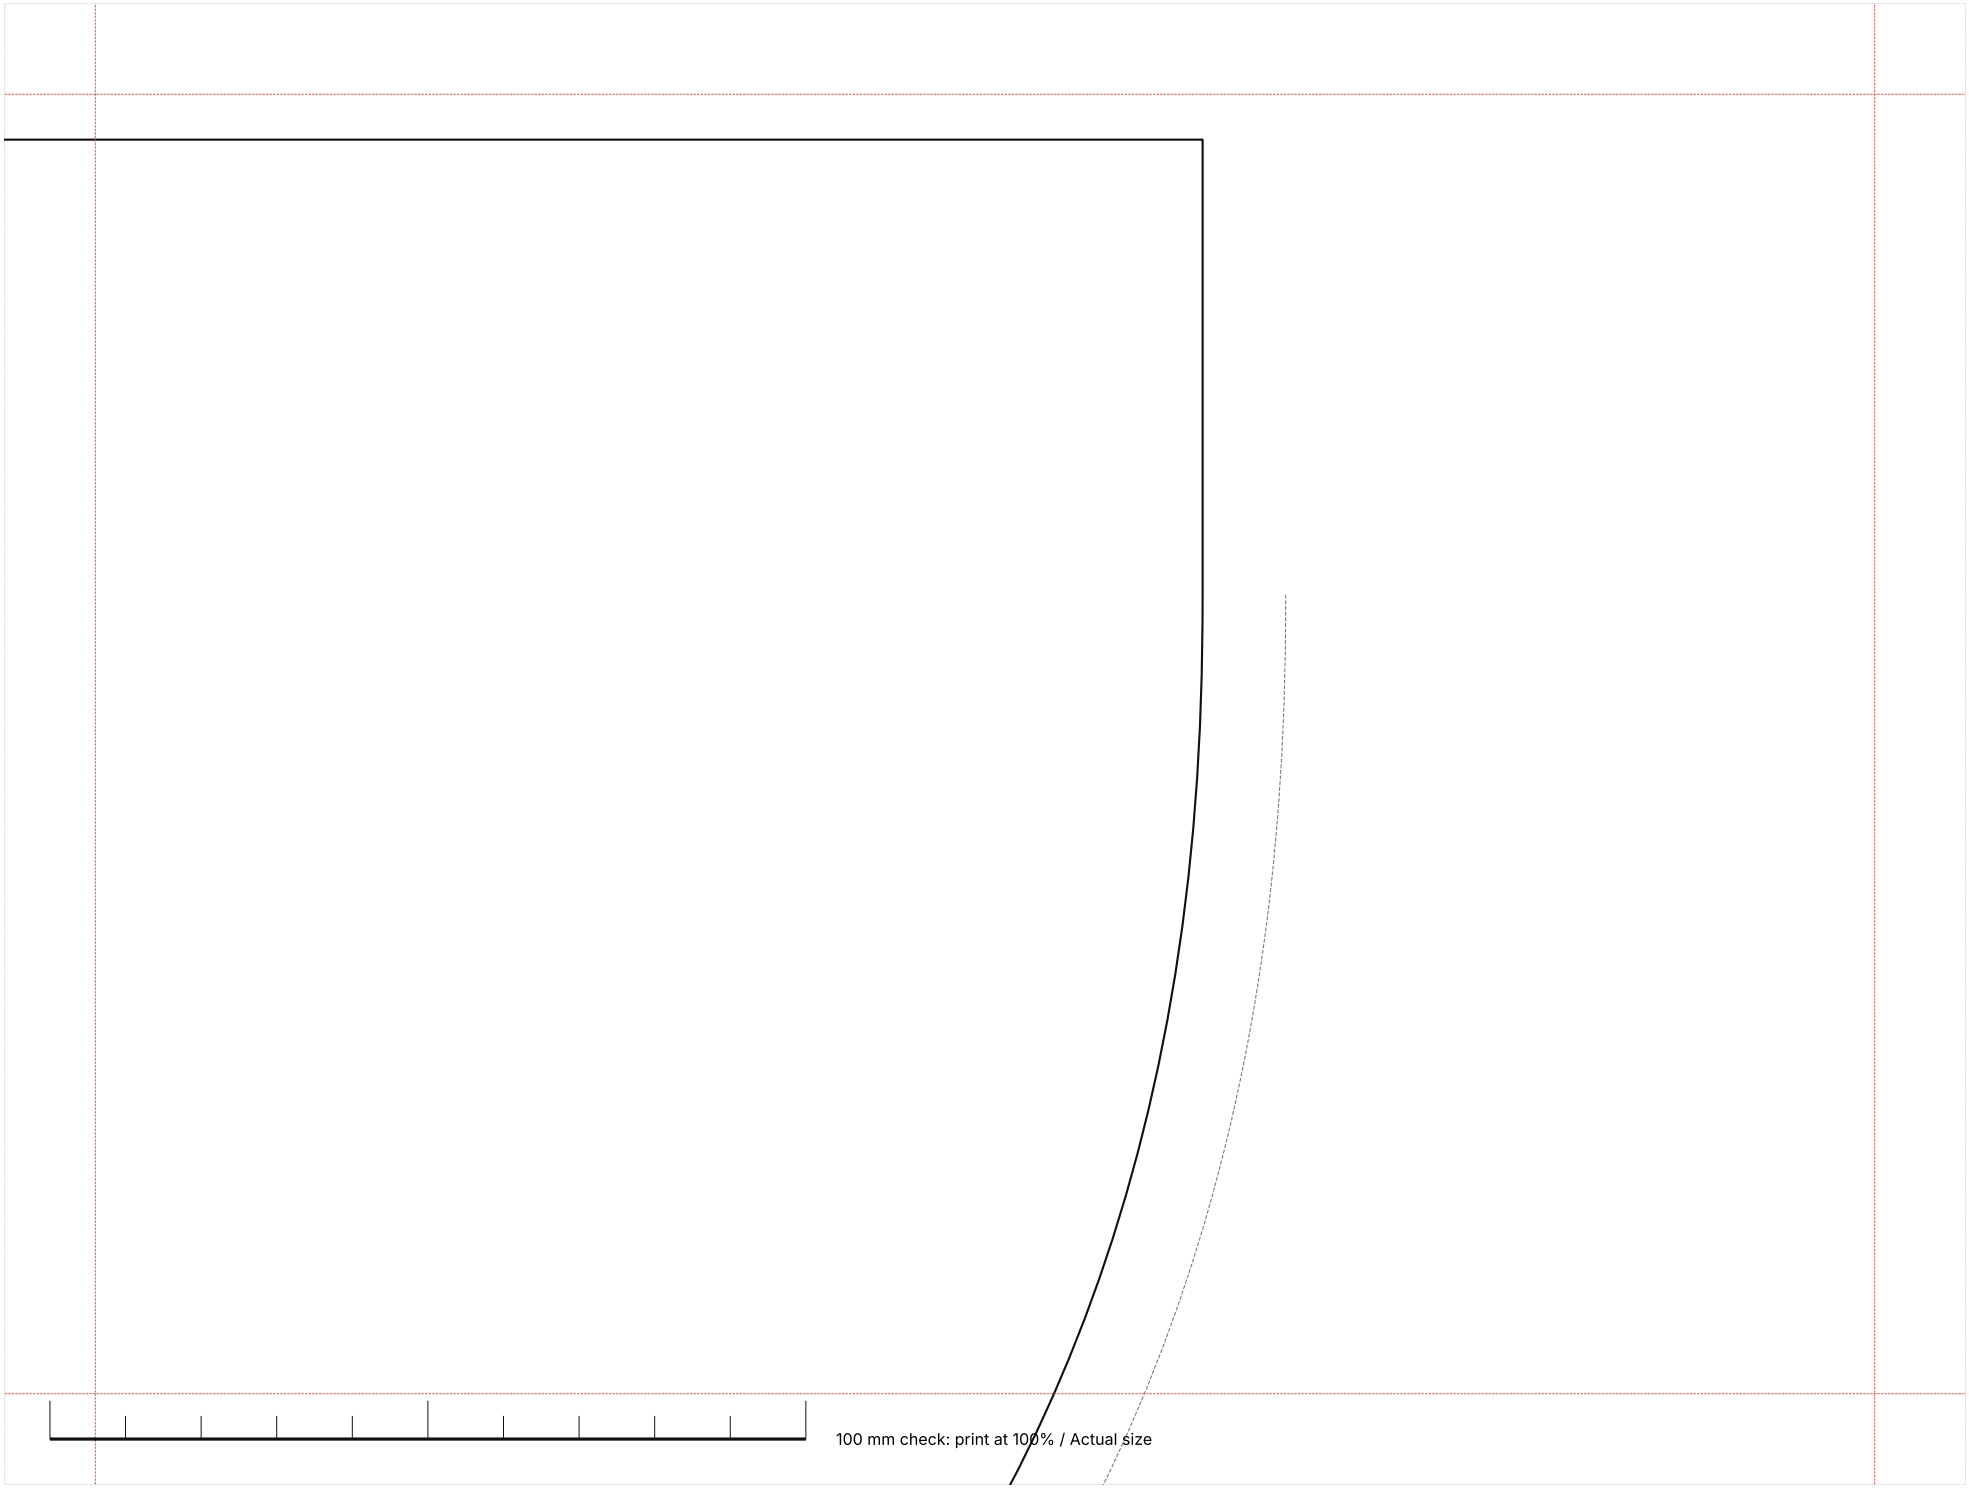

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T08 STATION 8 (x = 1200)

Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).




100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

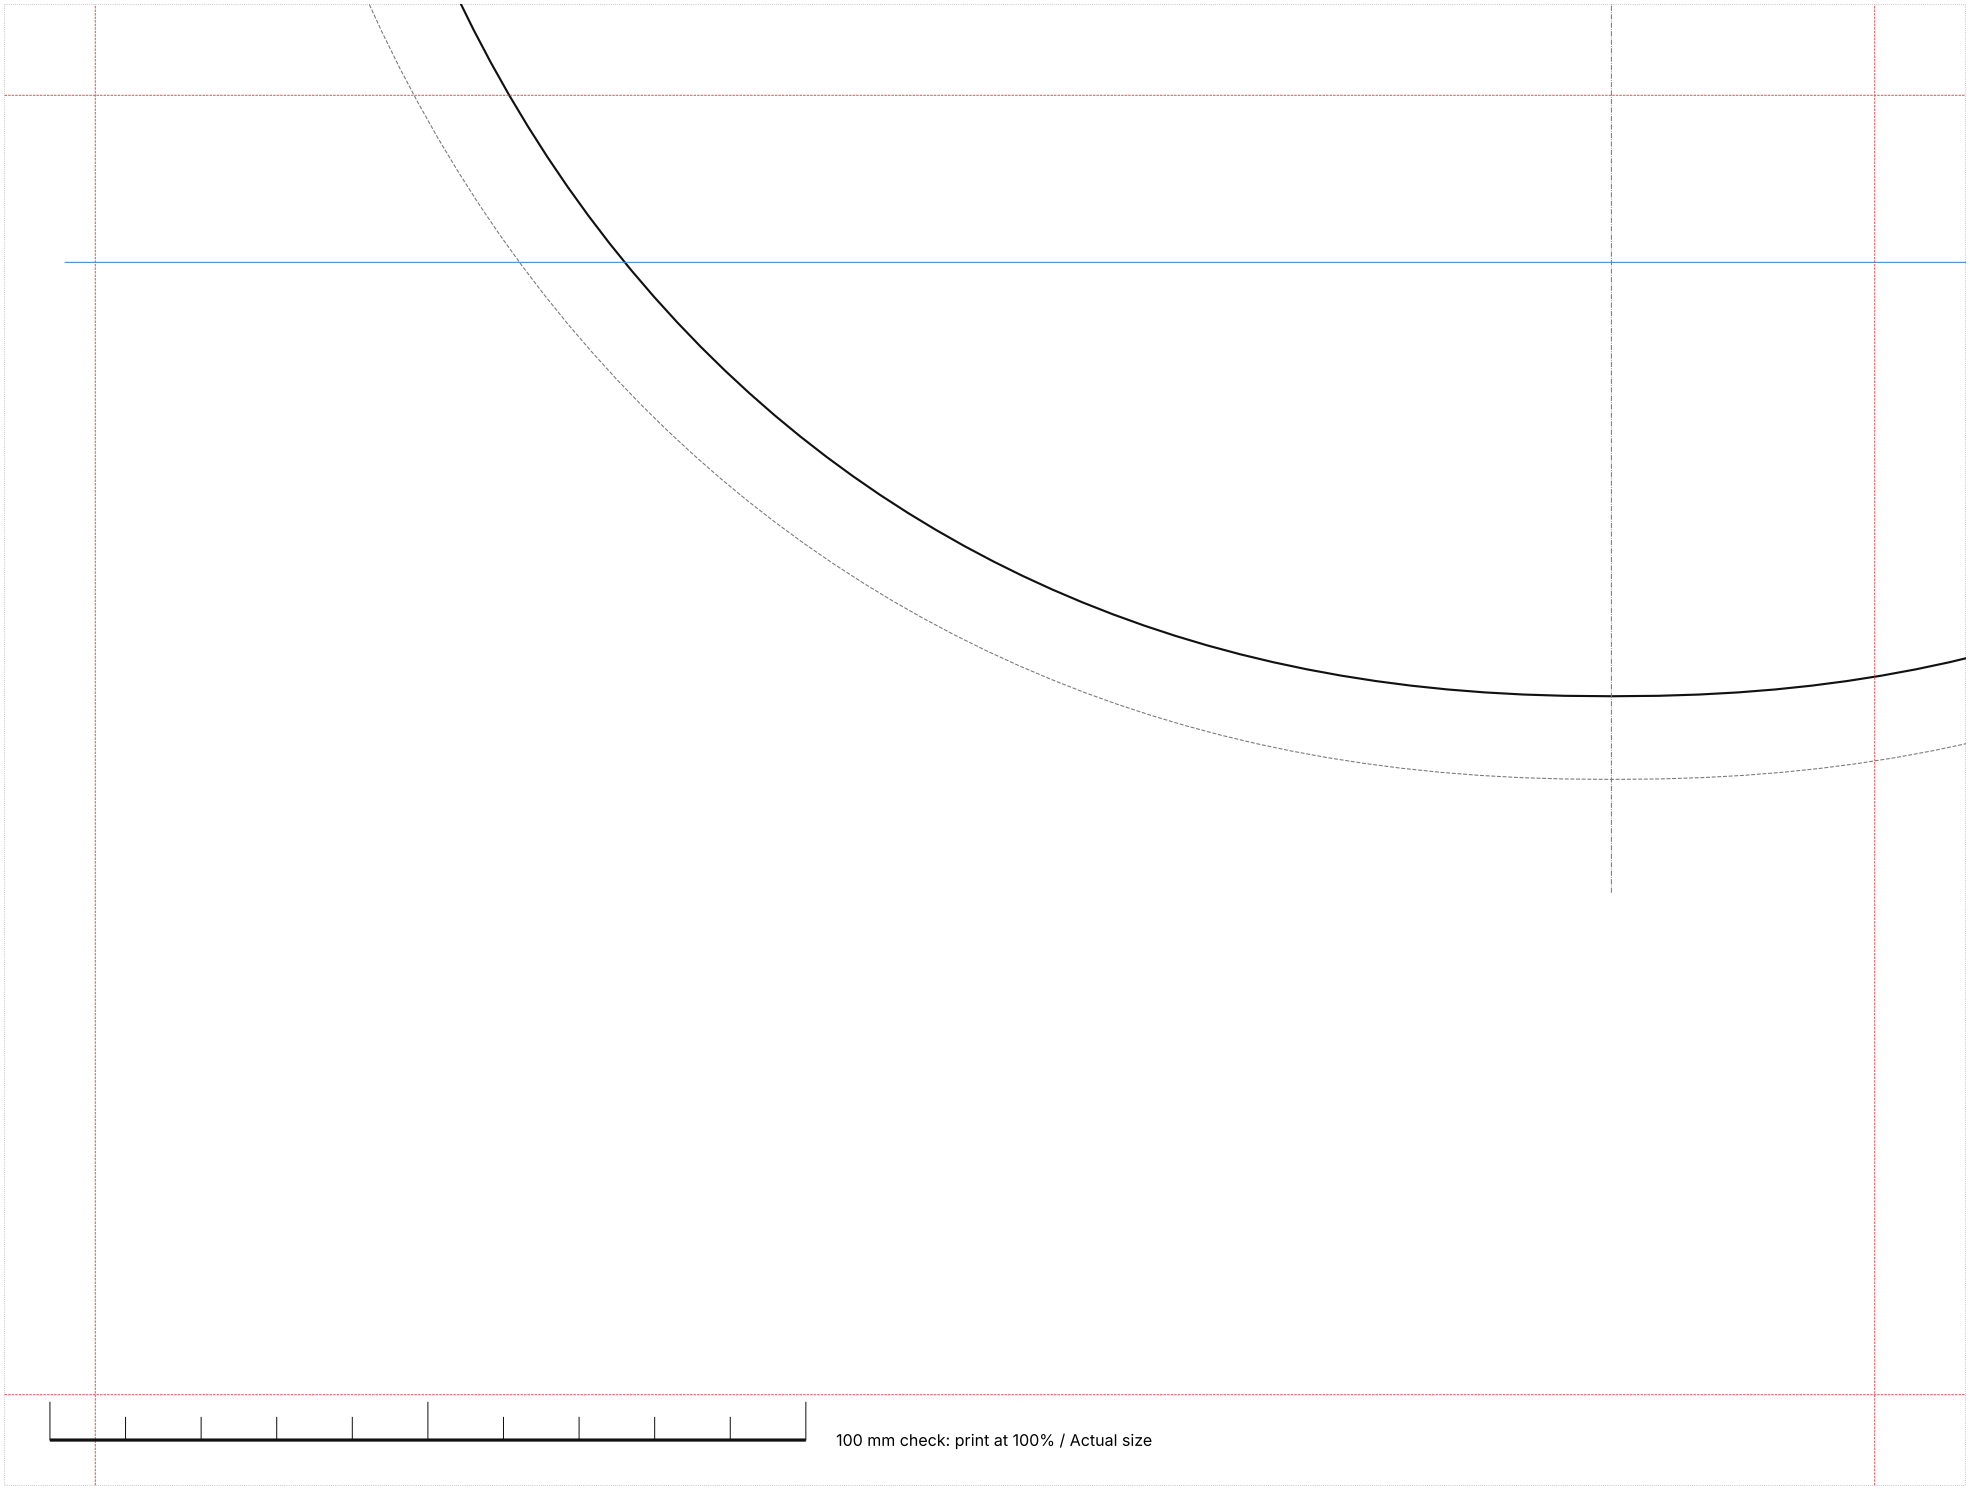

100 mm check: print at 100% / Actual size

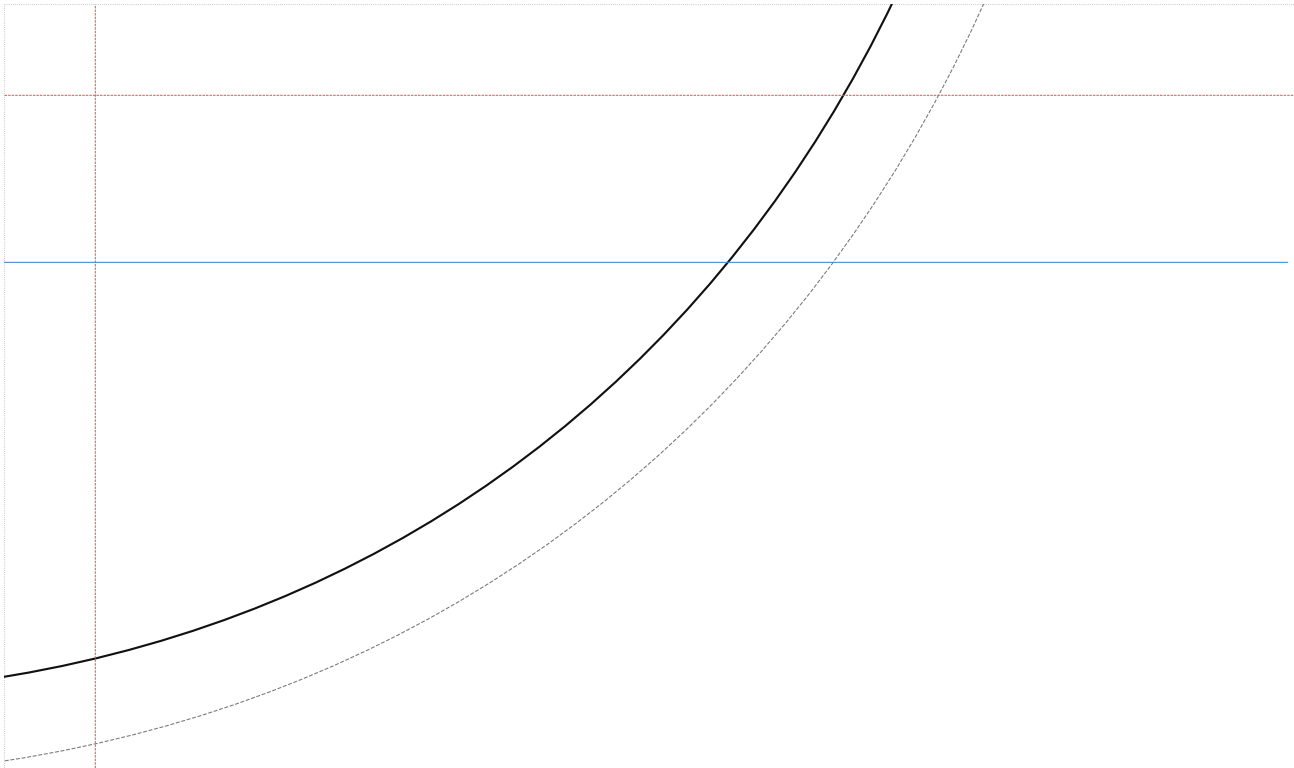




100 mm check: print at 100% / Actual size

T09 STATION 9 (x = 1350)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).

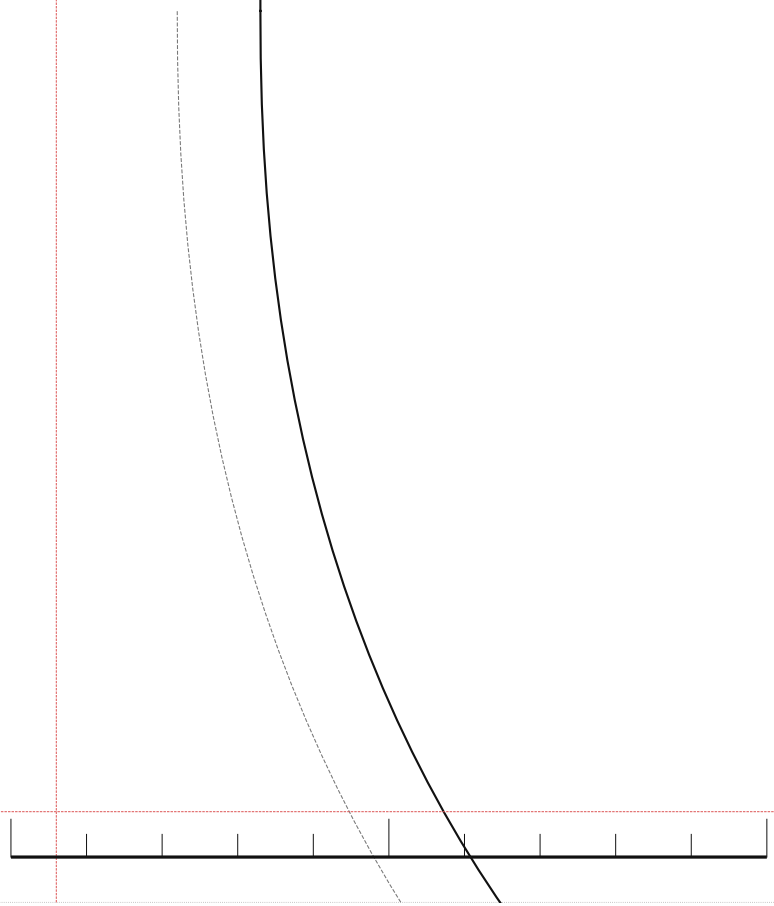


100 mm check: print at 100% / Actual size

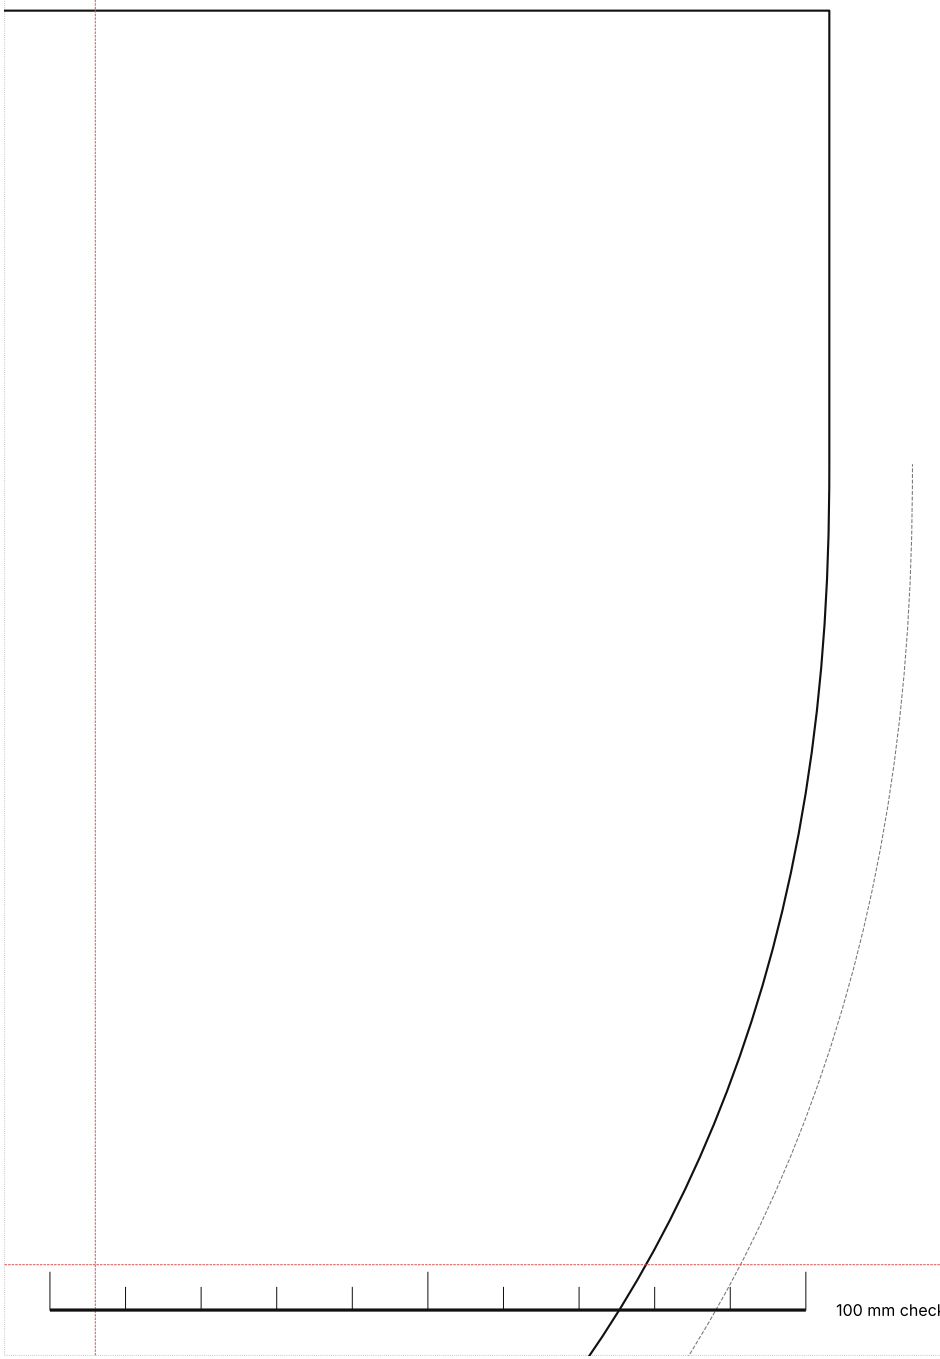

100 mm check: print at 100% / Actual size

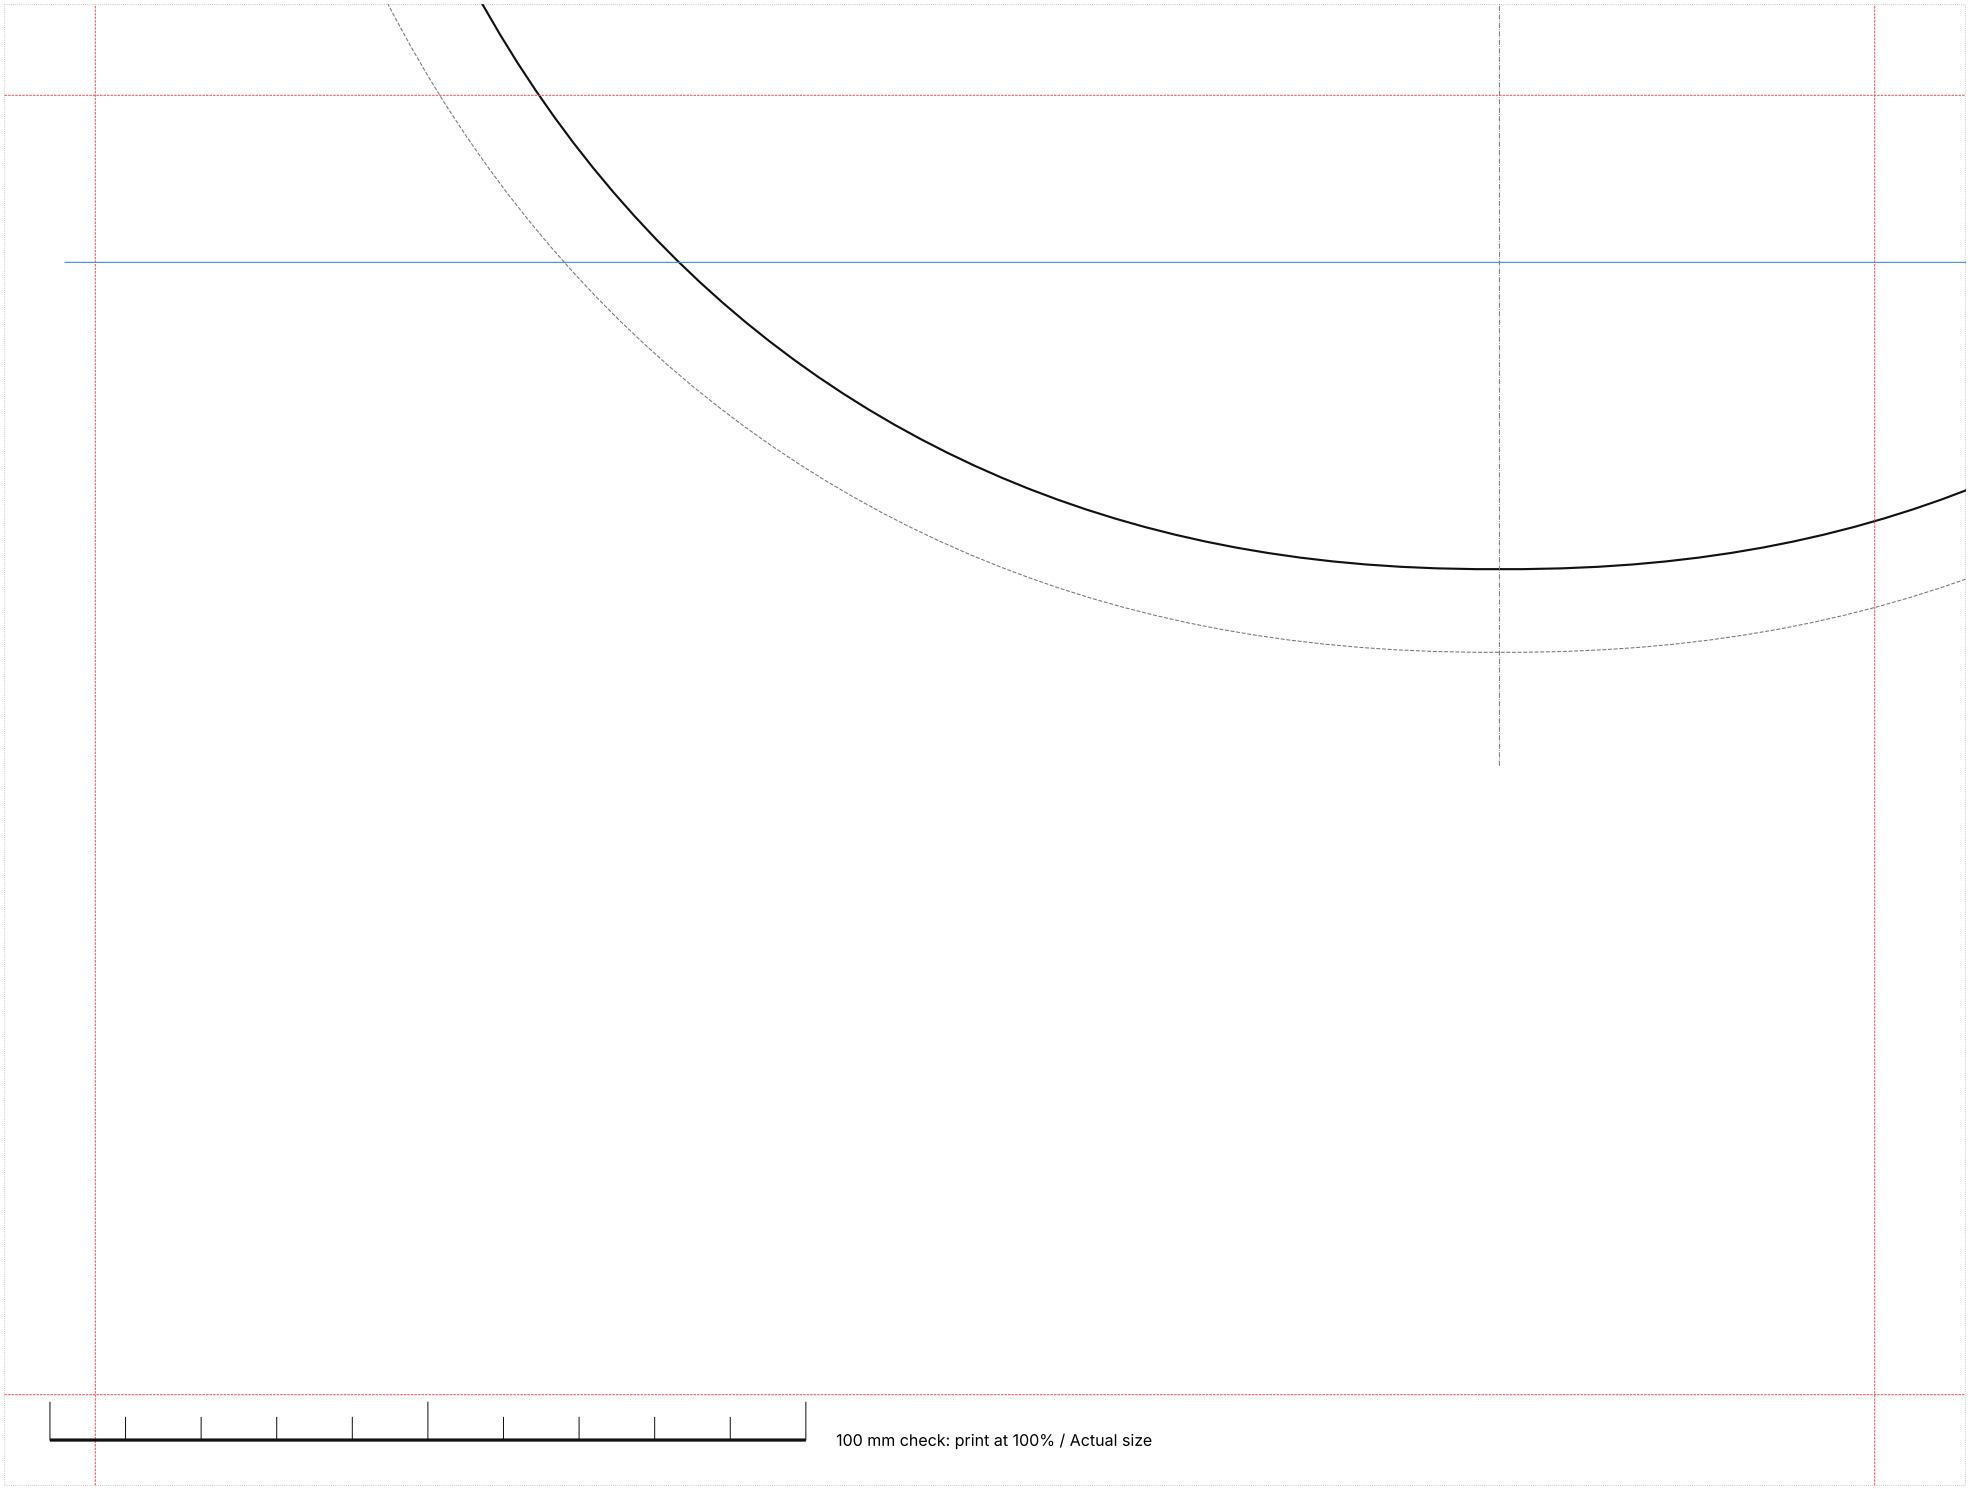

100 mm check: print at 100% / Actual size

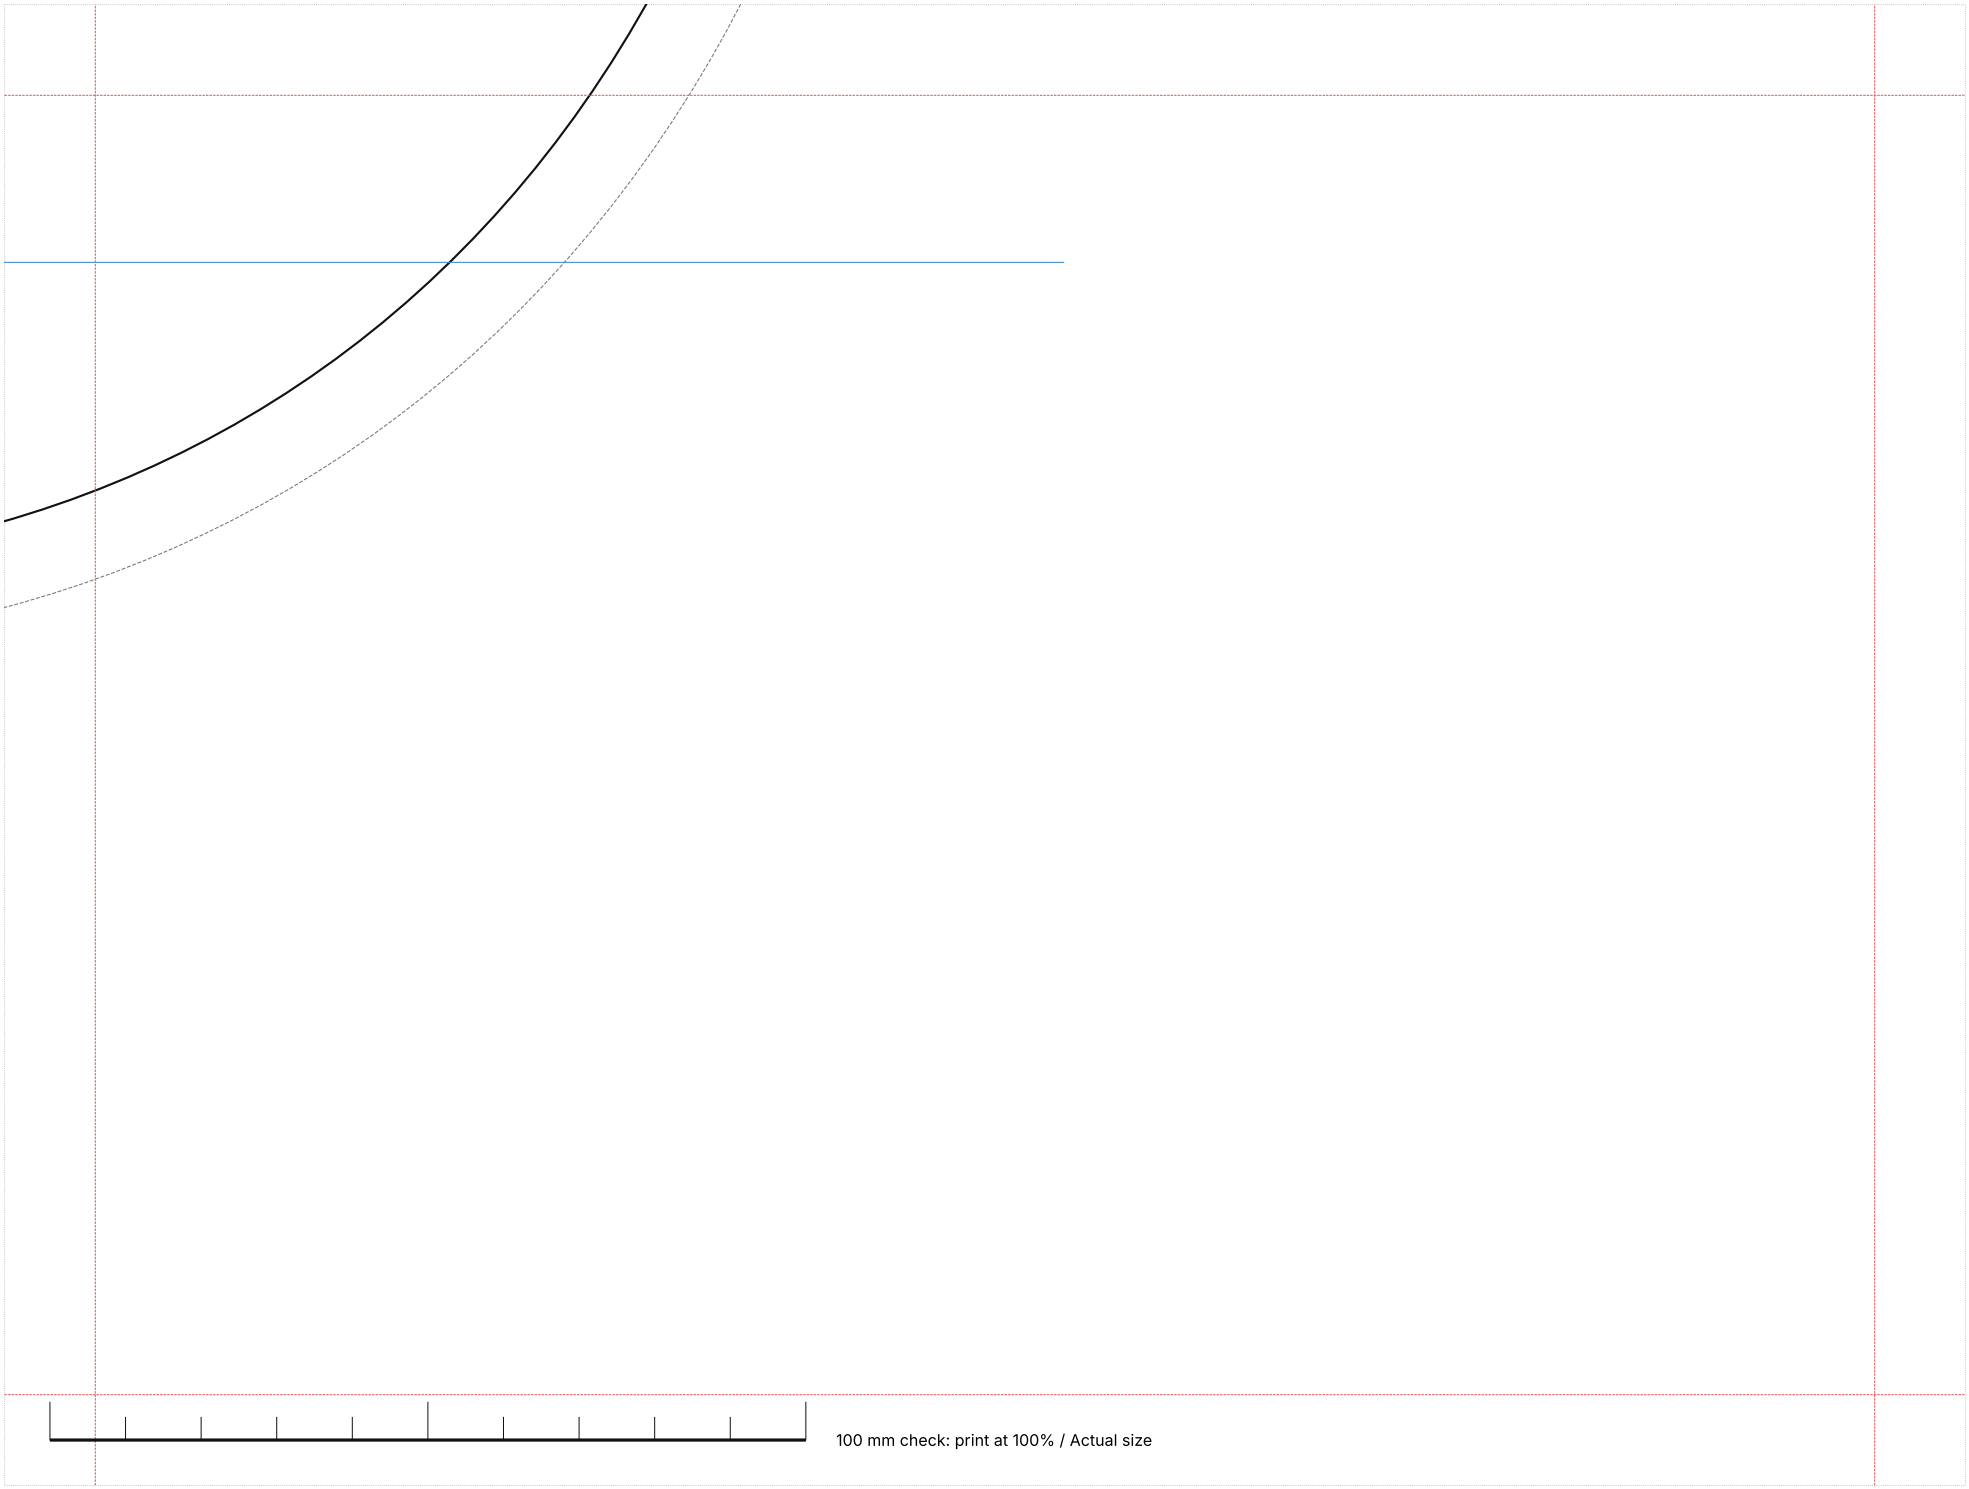


100 mm check: print at 100% / Actual size

T10 TRANSOM (outside shape)

Cut the foam transom to this line; bracket P06 bolts at z 160-260.



100 mm check: print at 100% / Actual size

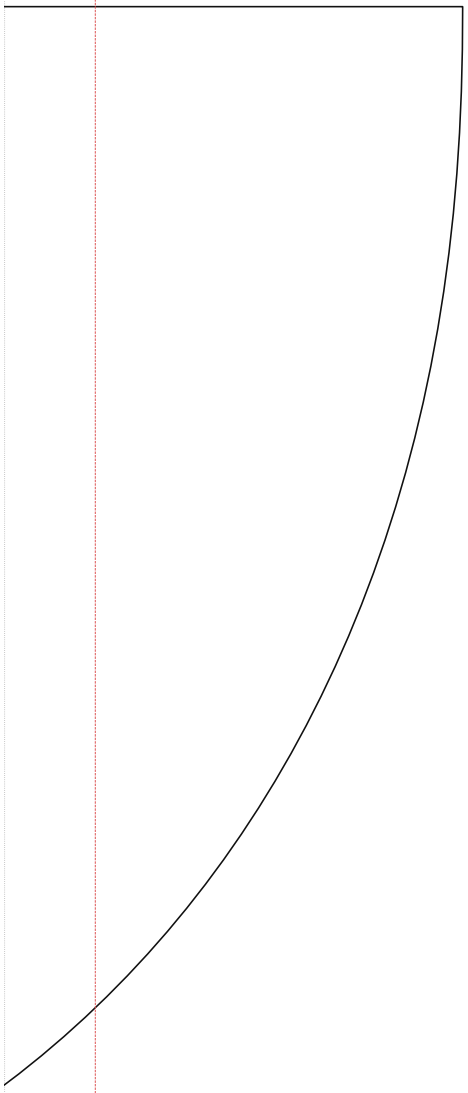




100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

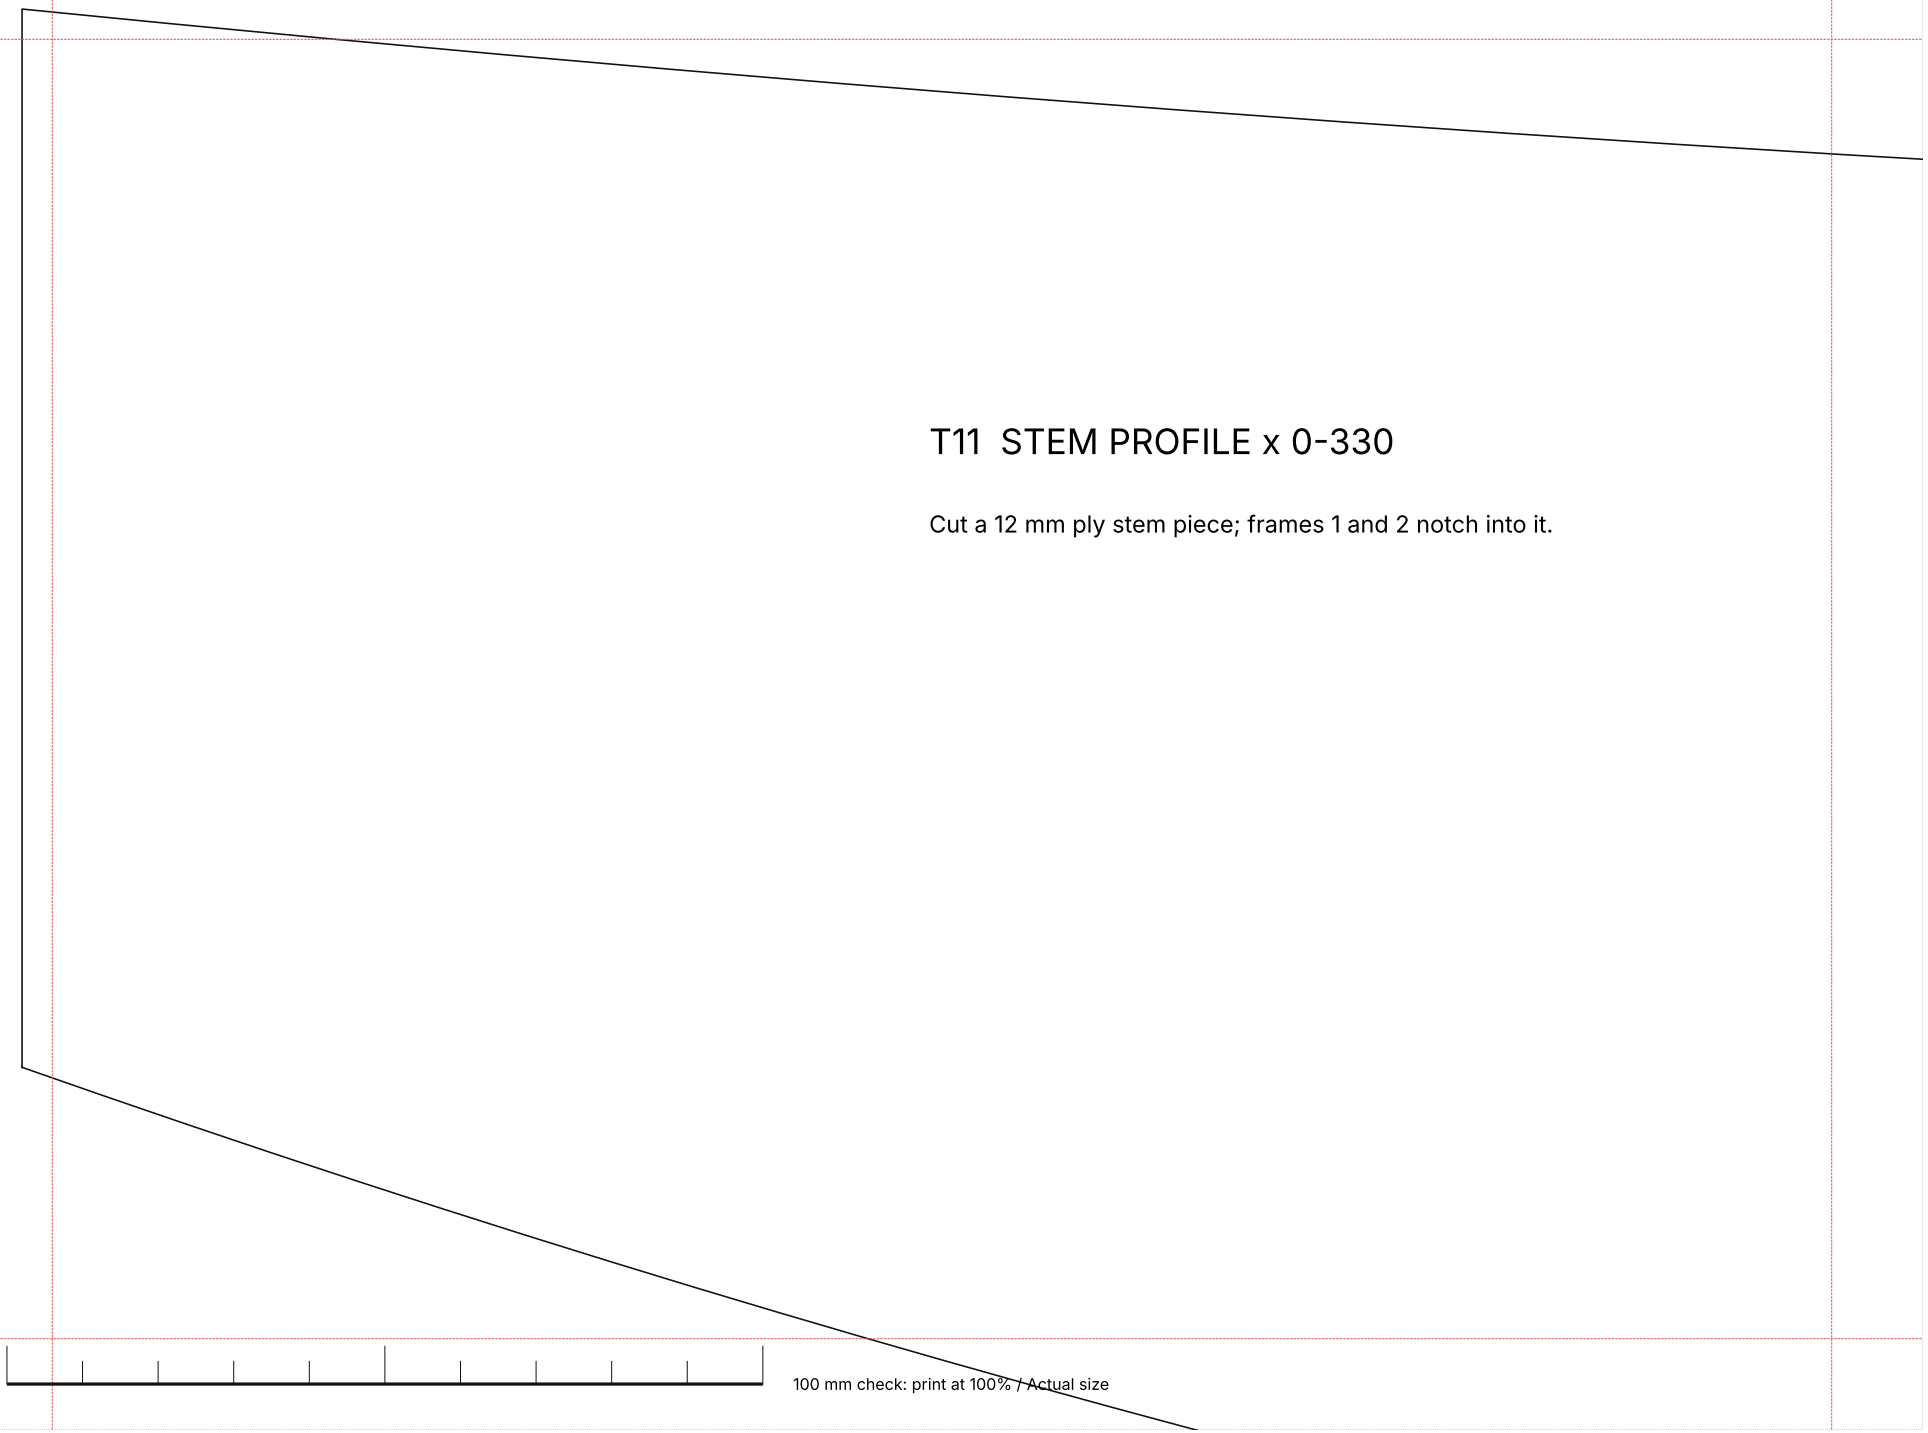

T11 STEM PROFILE x 0-330

Cut a 12 mm ply stem piece; frames 1 and 2 notch into it.

100 mm check: print at 100% / Actual size

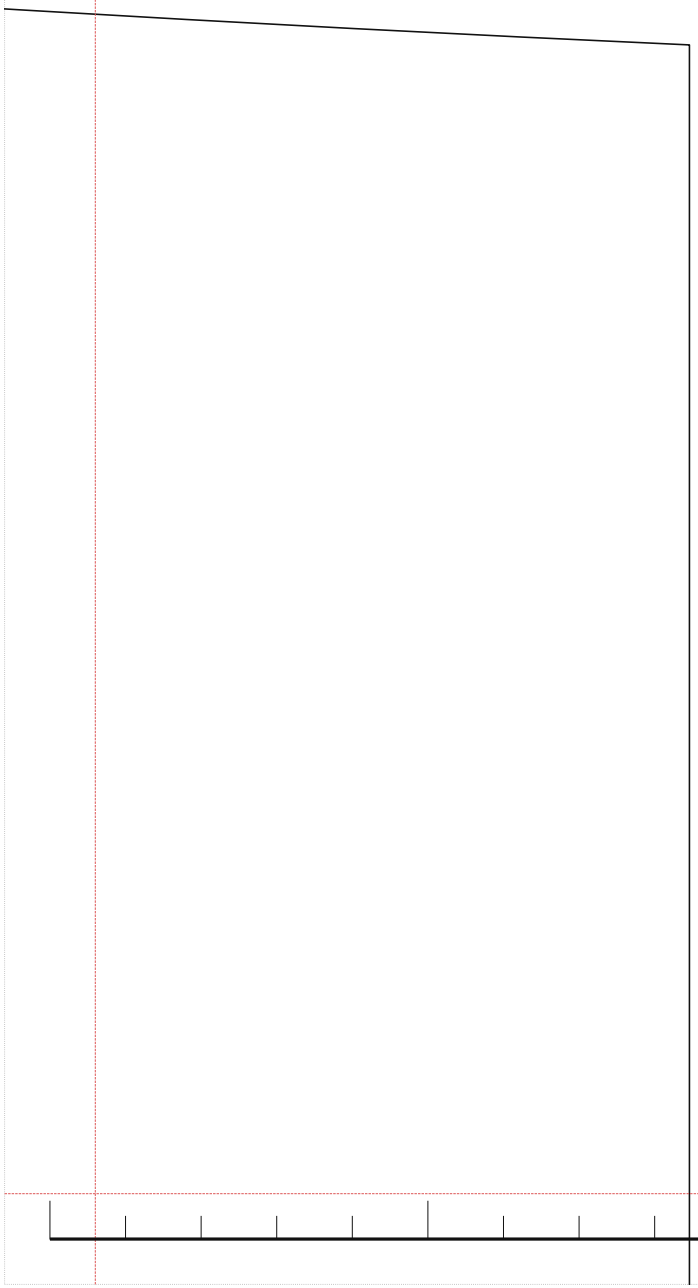




100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

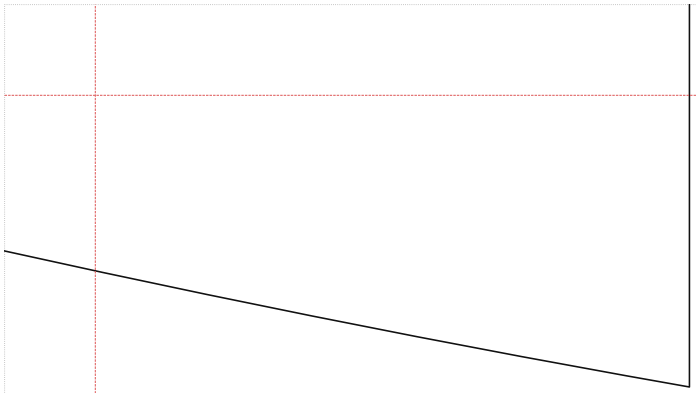



100 mm check: print at 100% / Actual size

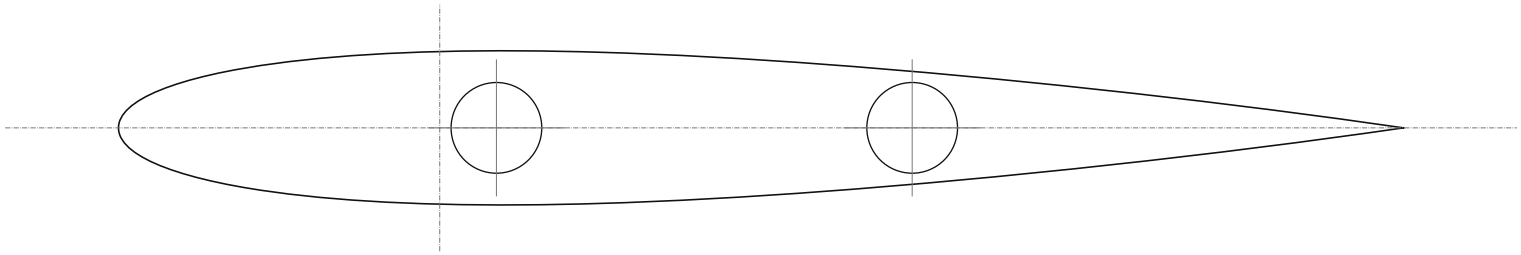


T12 FIN ROOT NACA 0012 chord 170 (rod holes D12)

Hot-wire: screw template to the block end; lead in and out at the trailing edge.




100 mm check: print at 100% / Actual size

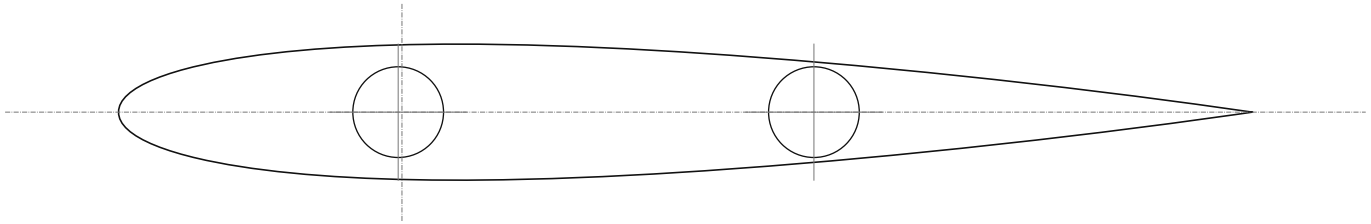

T13 FIN TIP NACA 0012 chord 150 (rod holes D12)

Hot-wire: screw template to the block end; lead in and out at the trailing edge.

100 mm check: print at 100% / Actual size

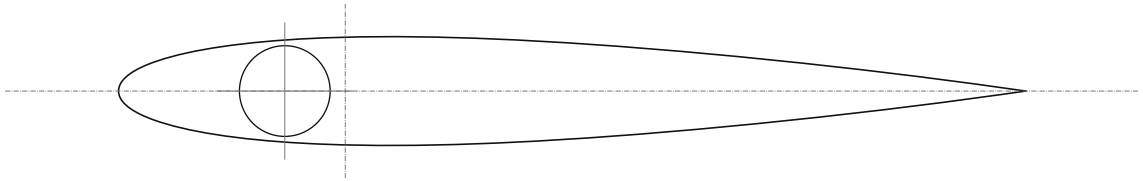


T14 RUDDER NACA 0012 chord 120 (stock D12)

Hot-wire: screw template to the block end; lead in and out at the trailing edge.




100 mm check: print at 100% / Actual size

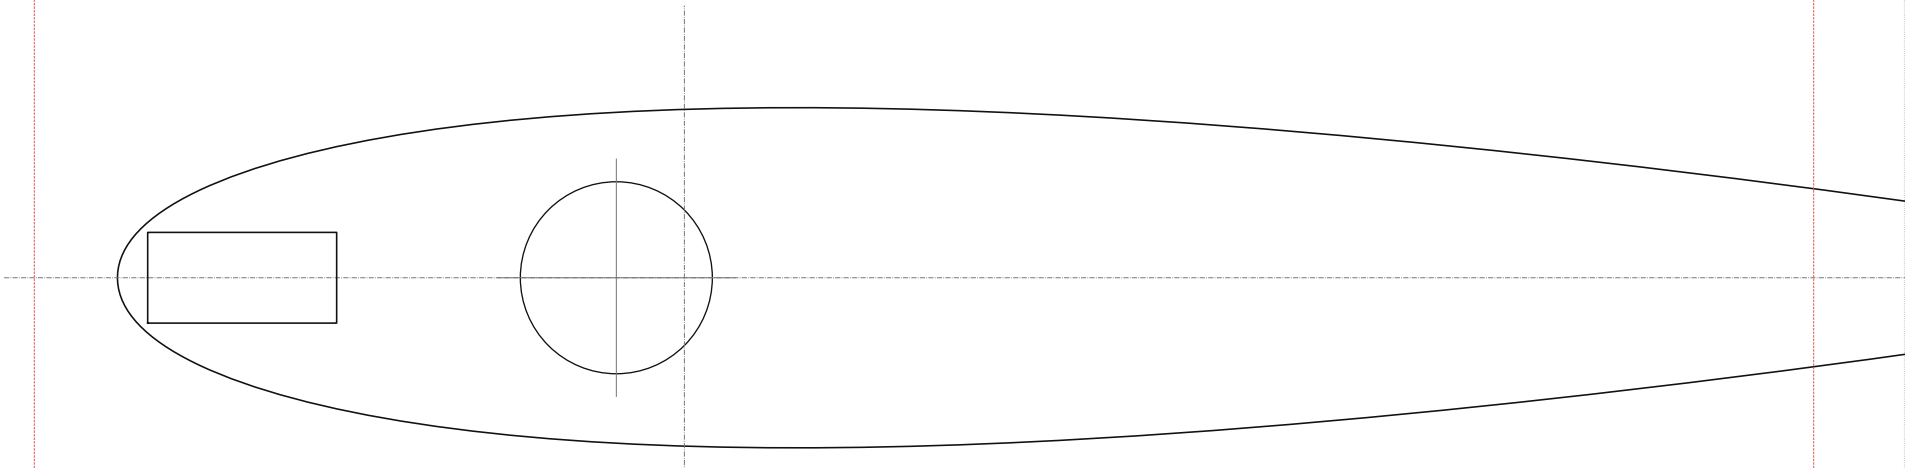

T15 WING NACA 0015 chord 300 (spar D25.4)

Hot-wire: screw template to the block end; lead in and out at the trailing edge.

100 mm check: print at 100% / Actual size

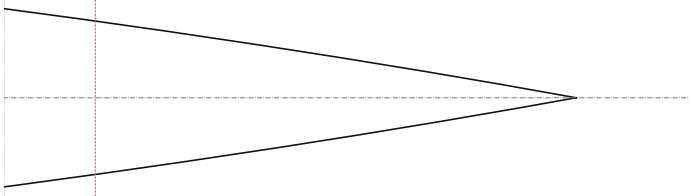




100 mm check: print at 100% / Actual size


T16 HATCH: lid, opening, O-ring, 12 x M5

x along the boat (bow to the left).


100 mm check: print at 100% / Actual size

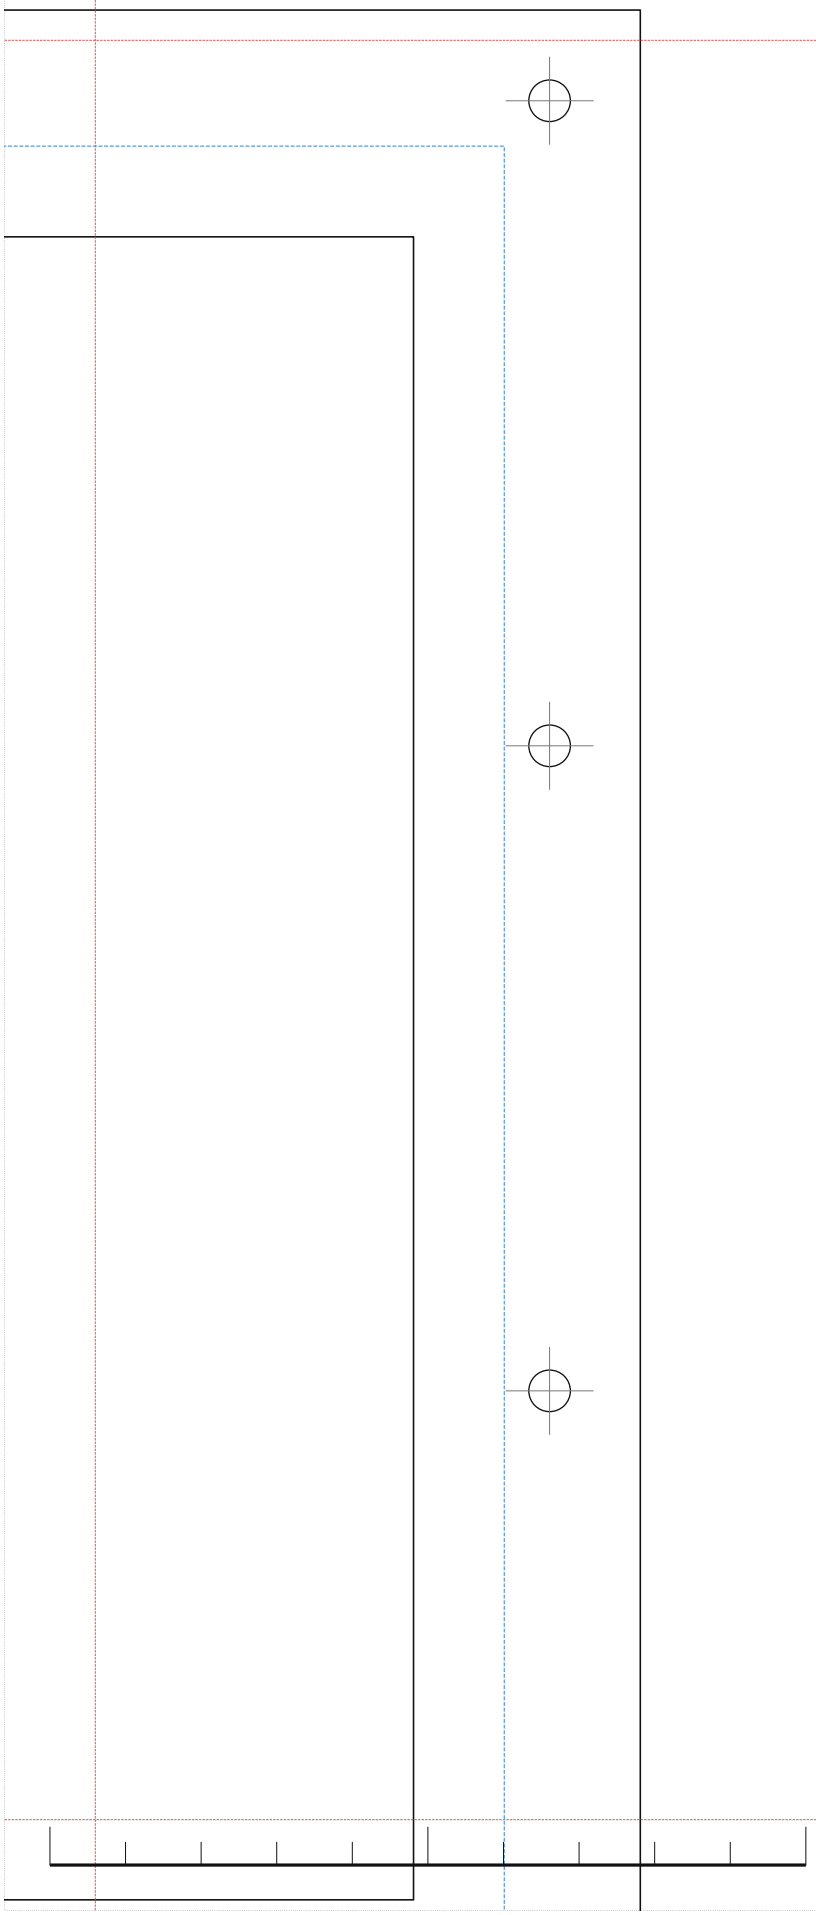

100 mm check: print at 100% / Actual size

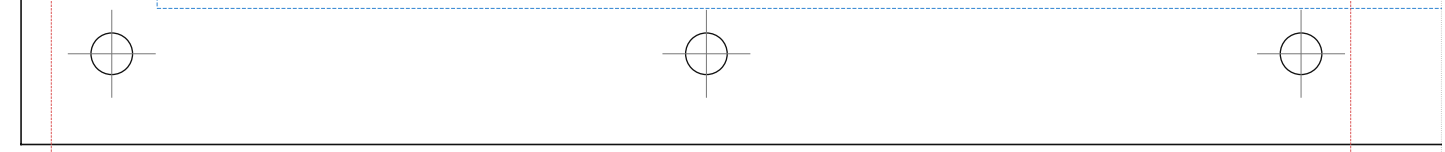

100 mm check: print at 100% / Actual size

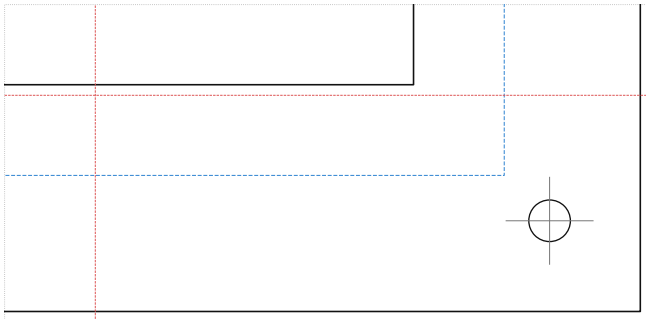



100 mm check: print at 100% / Actual size