
T01 STATION 1 (x = 150)

Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).

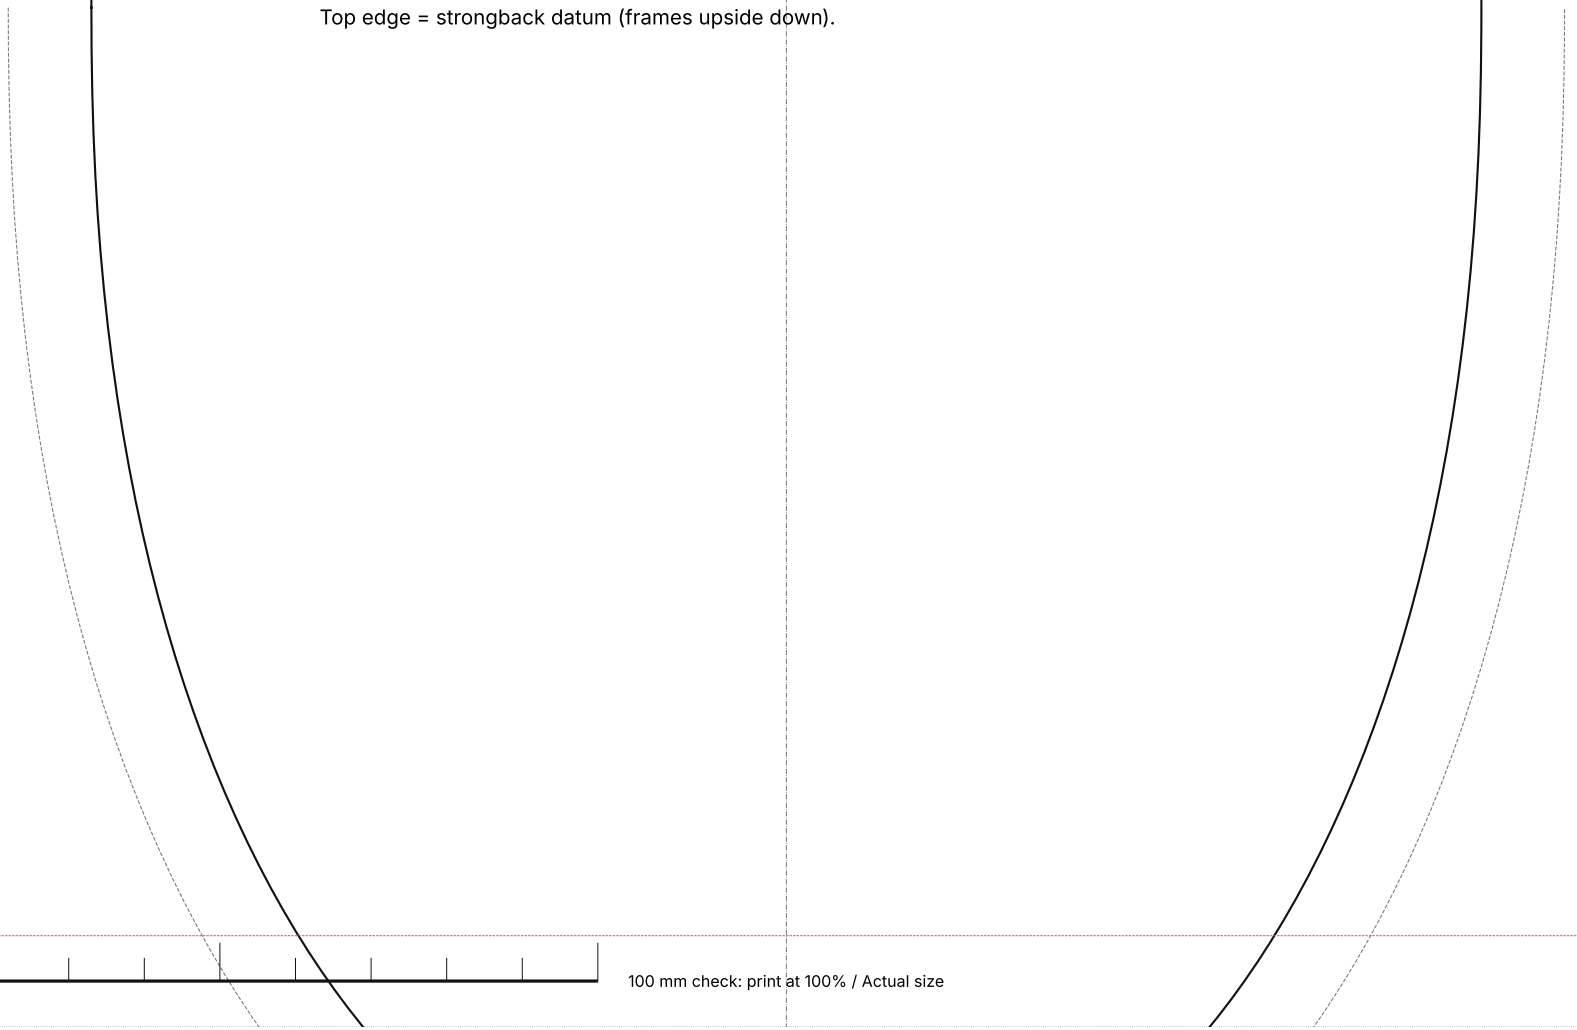

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

T02 STATION 2 (x = 300)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).

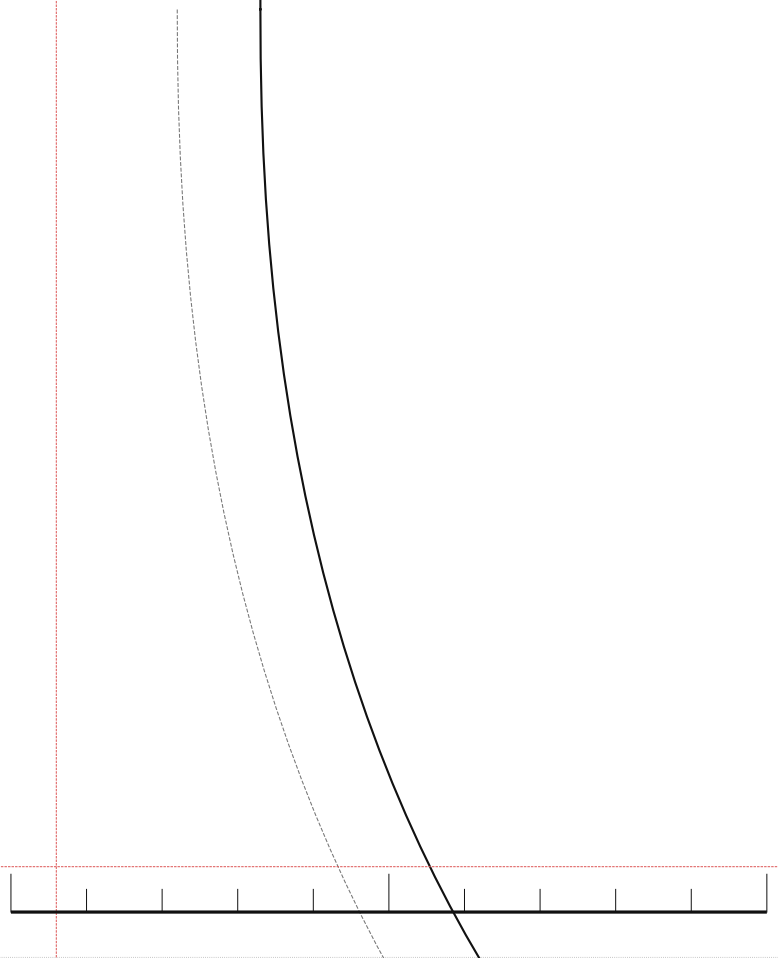

100 mm check: print at 100% / Actual size

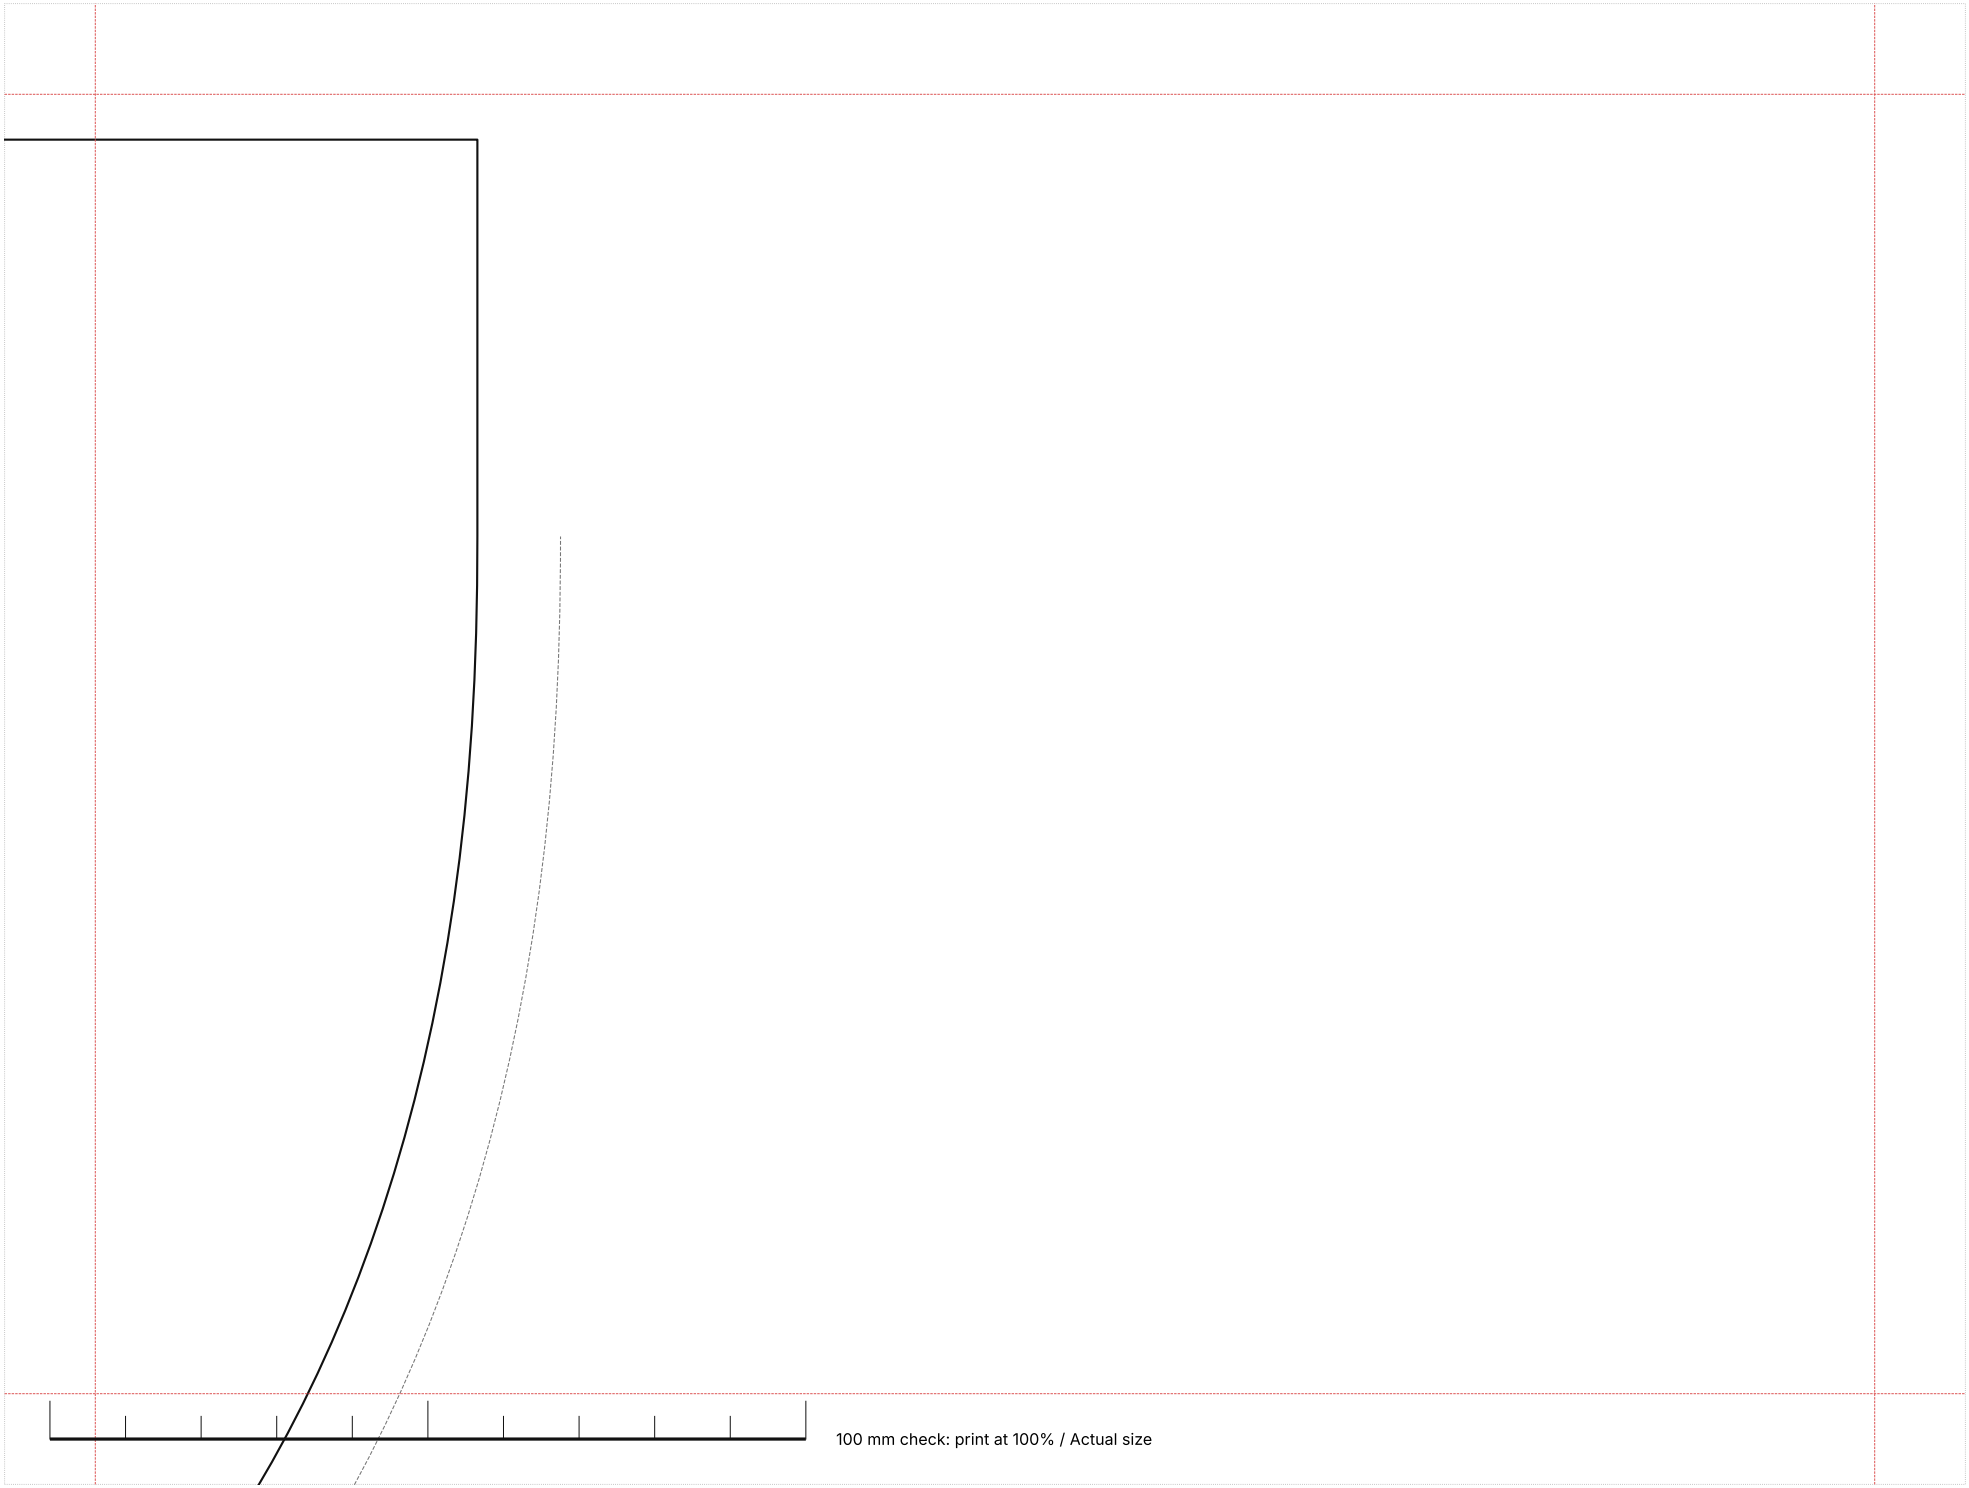

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

T03 STATION 3 (x = 450)


Cut on the solid FRAME line (hull minus 11 mm).


Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).

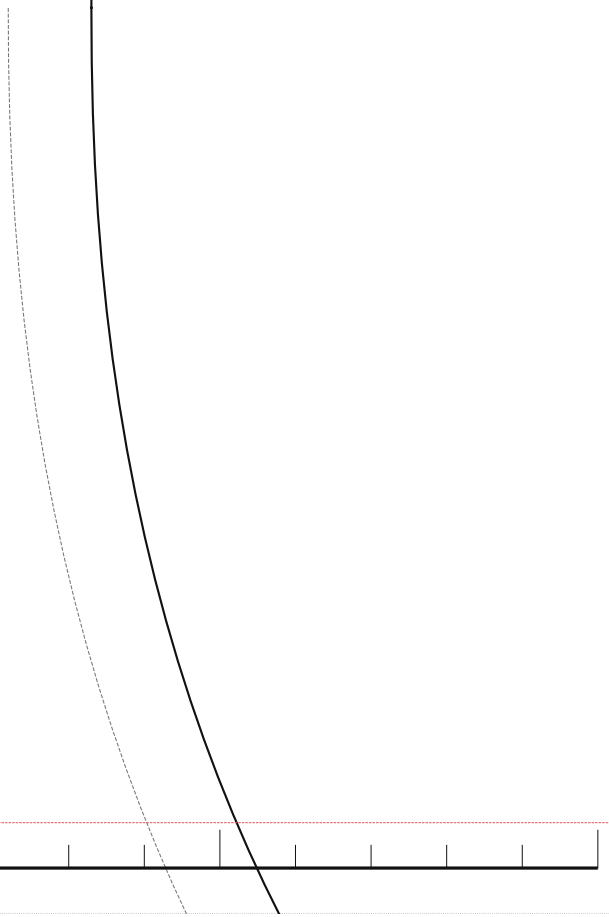

100 mm check: print at 100% / Actual size

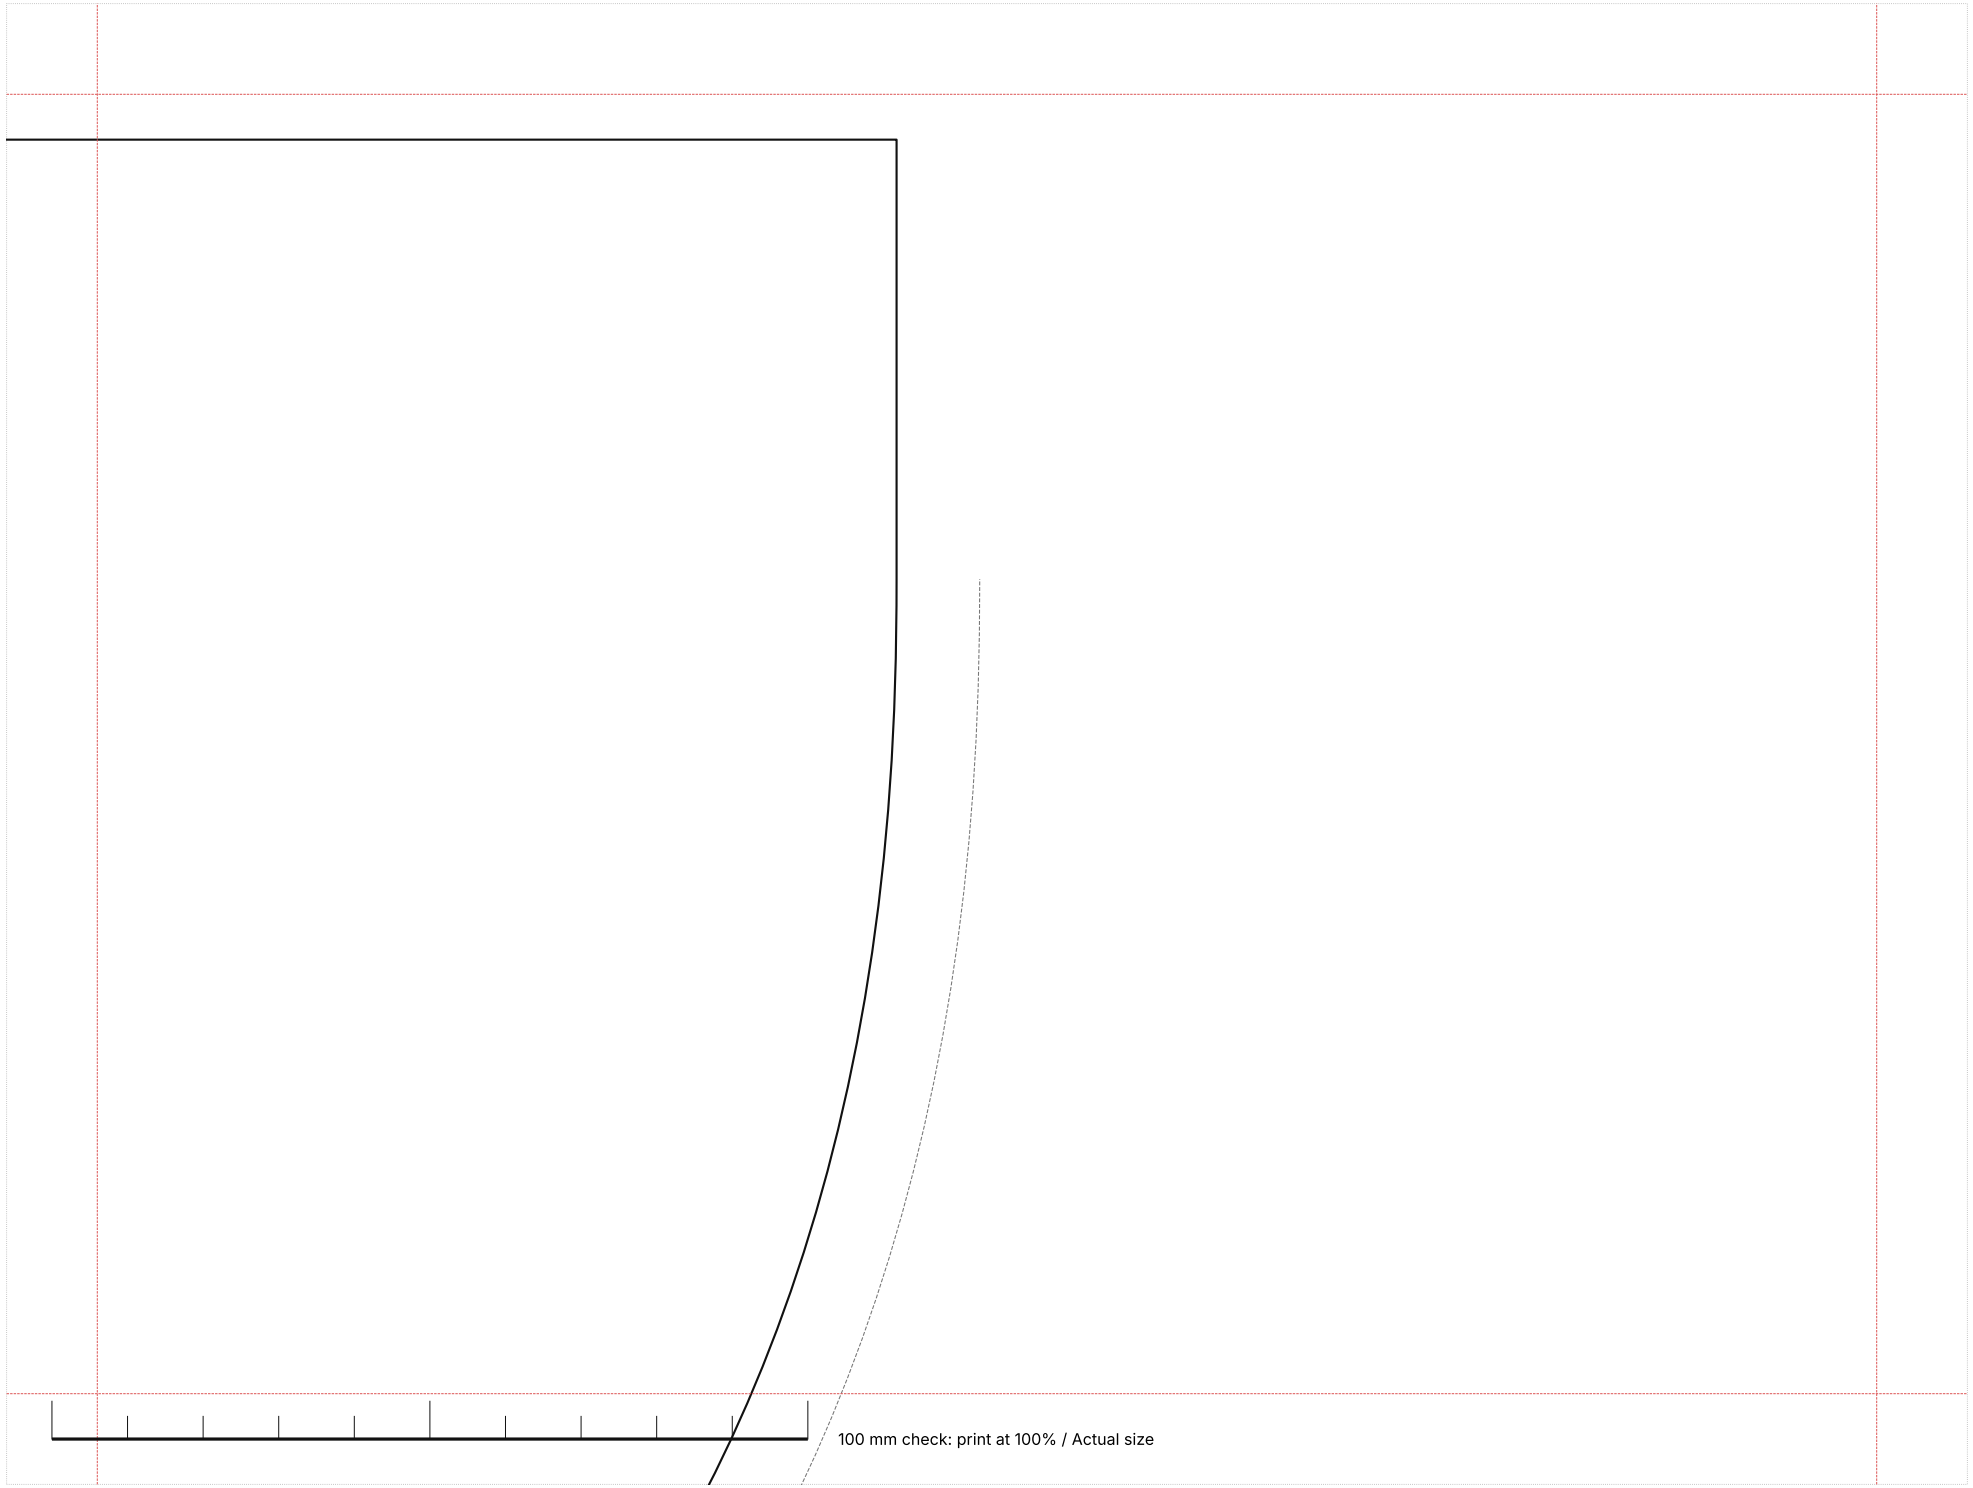
100 mm check: print at 100% / Actual size

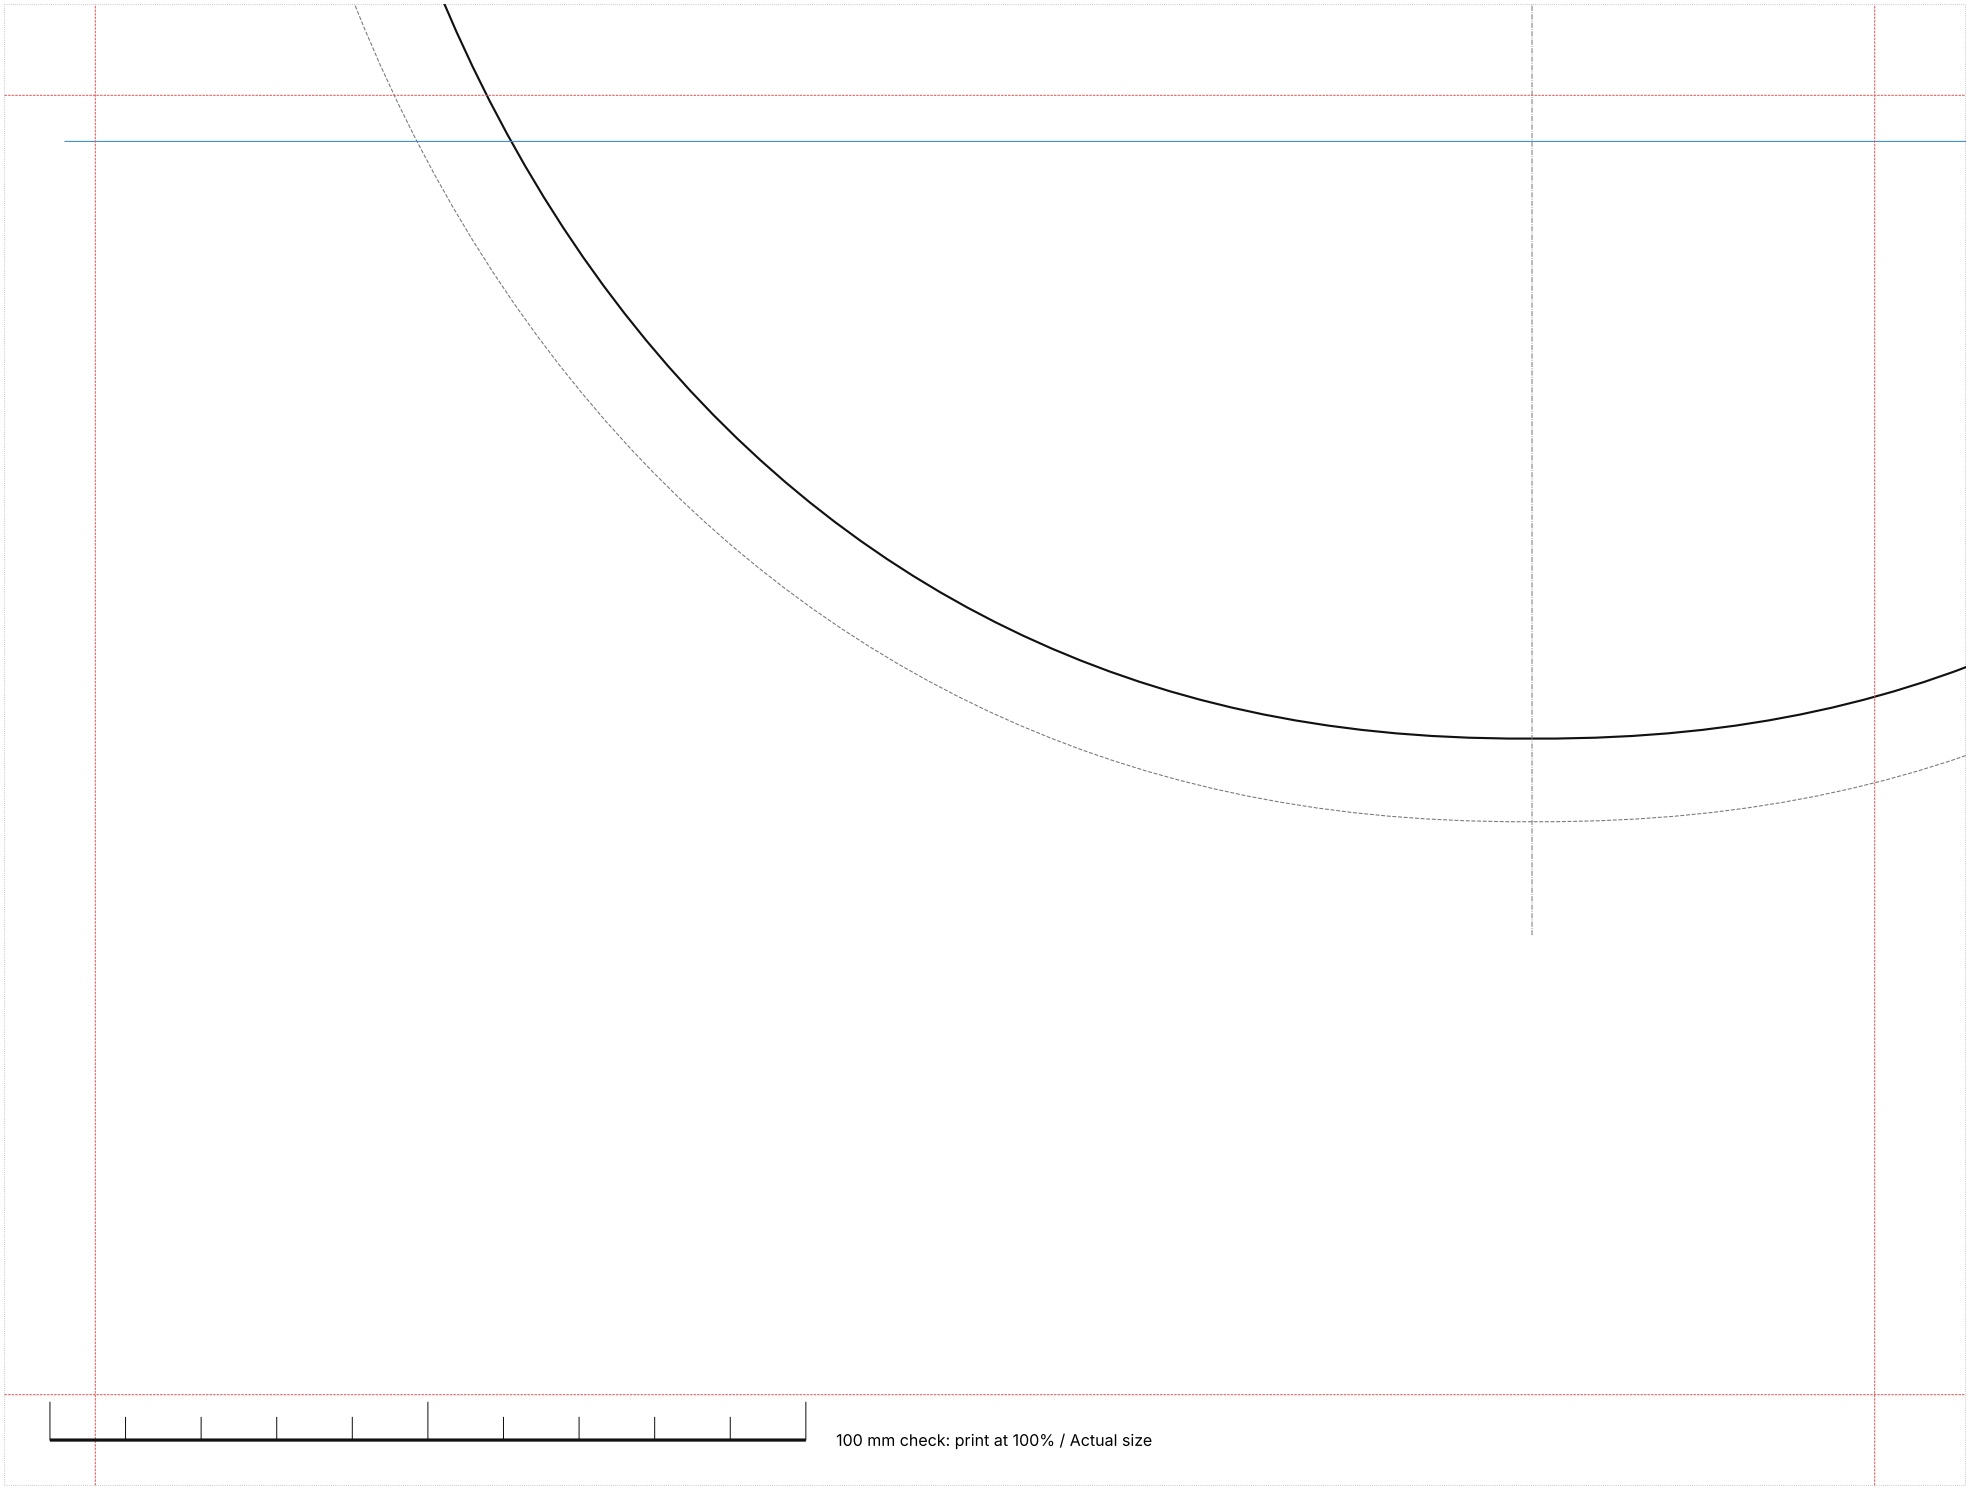

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T04 STATION 4 (x = 600)


Cut on the solid FRAME line (hull minus 11 mm).


Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size

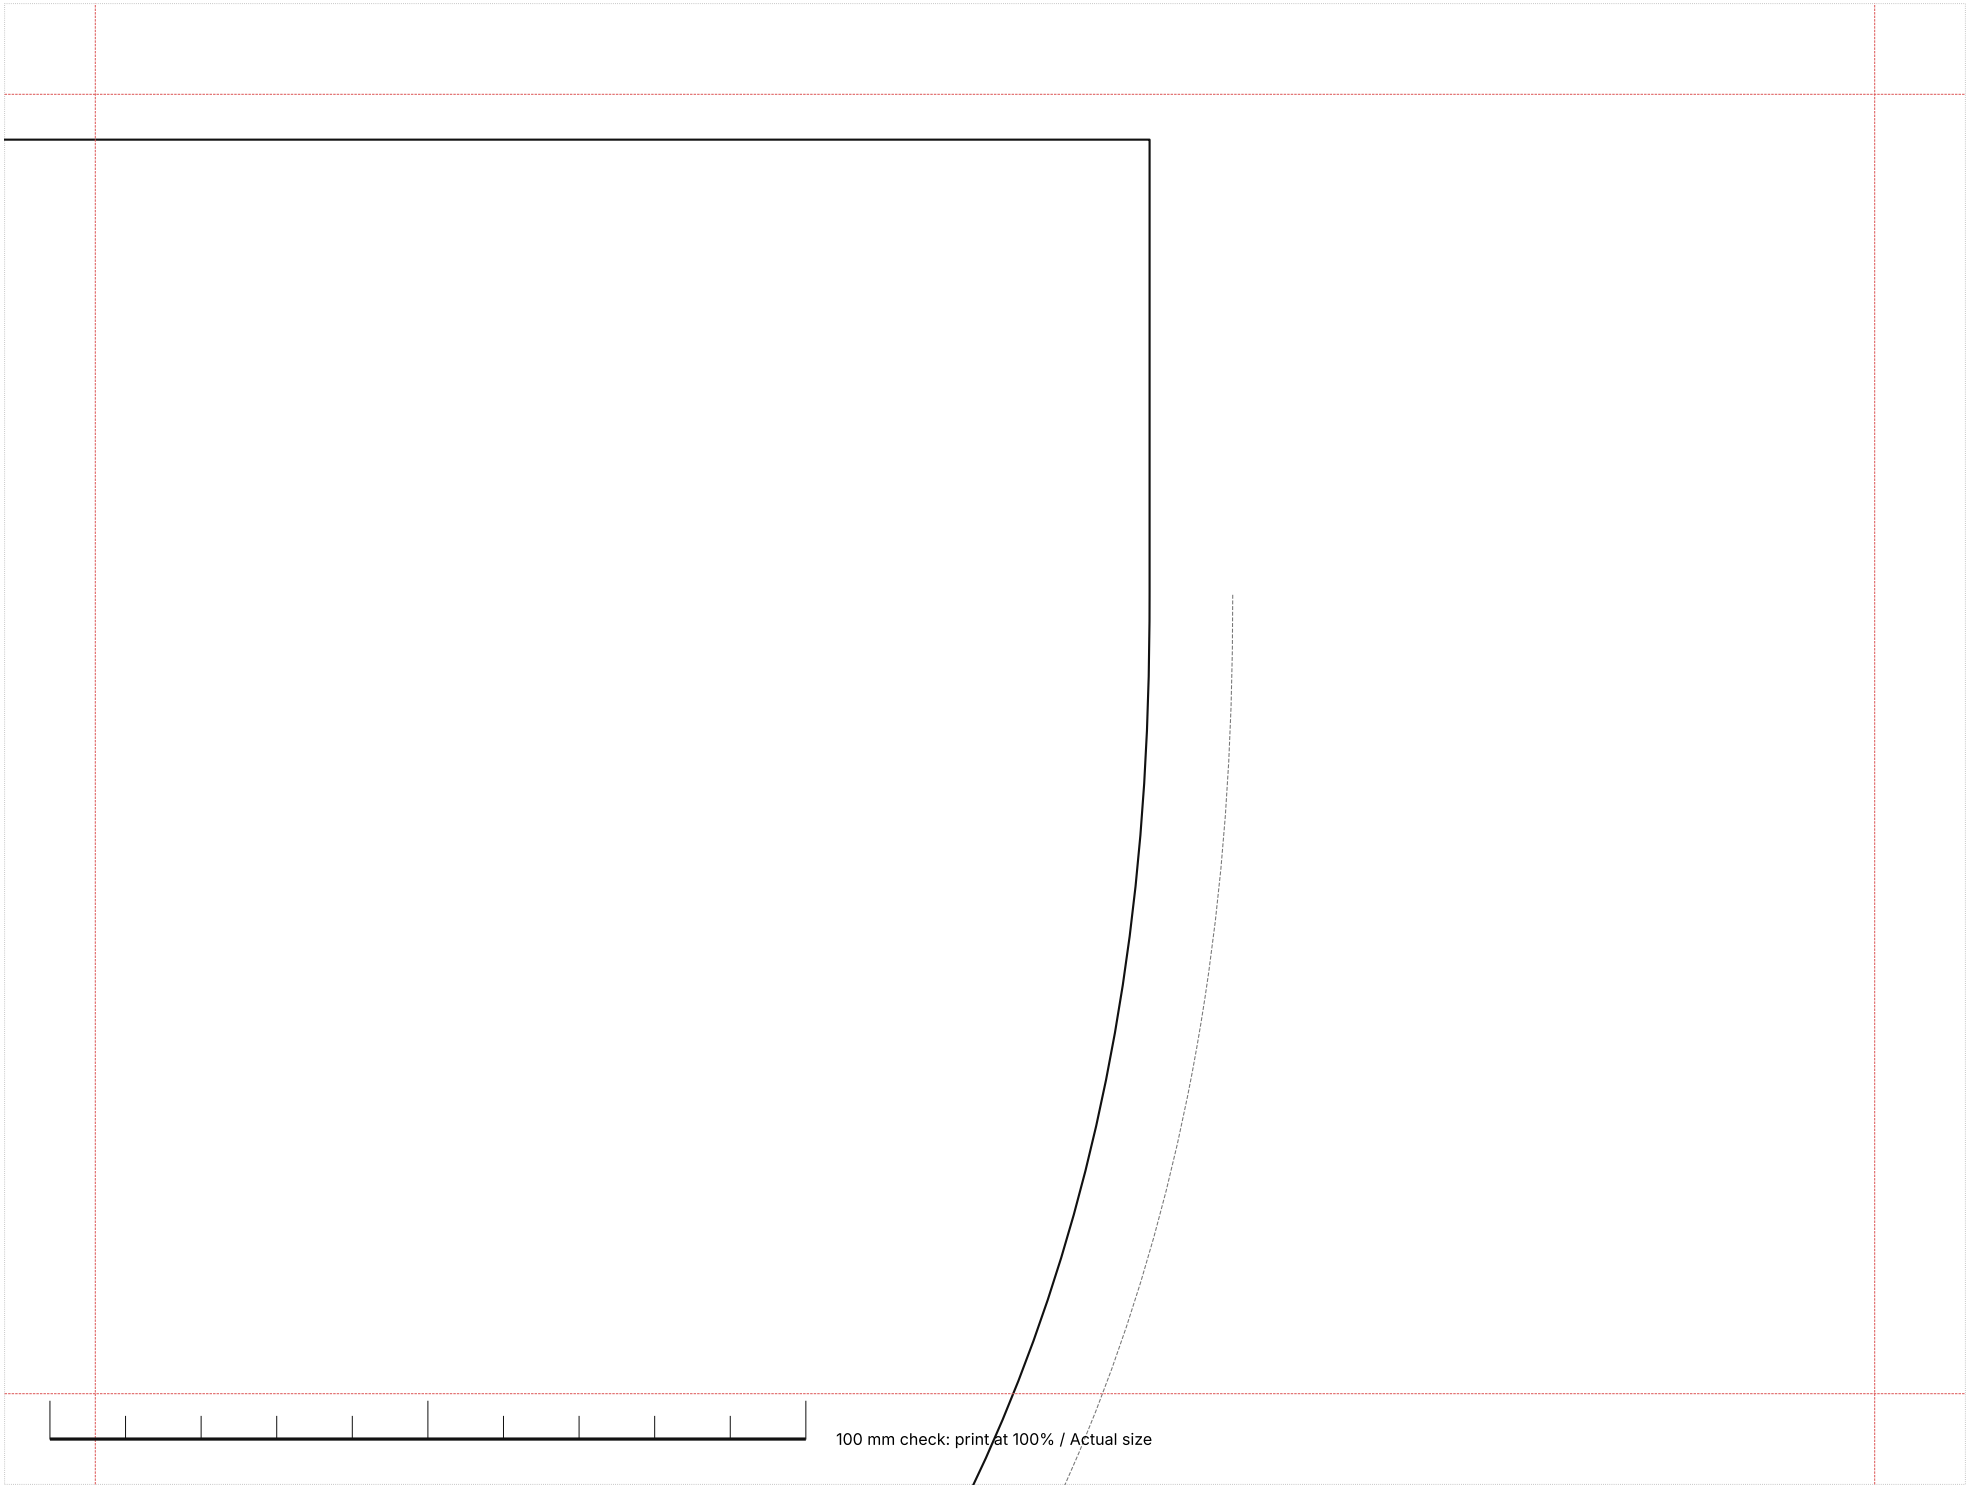
100 mm check: print at 100% / Actual size

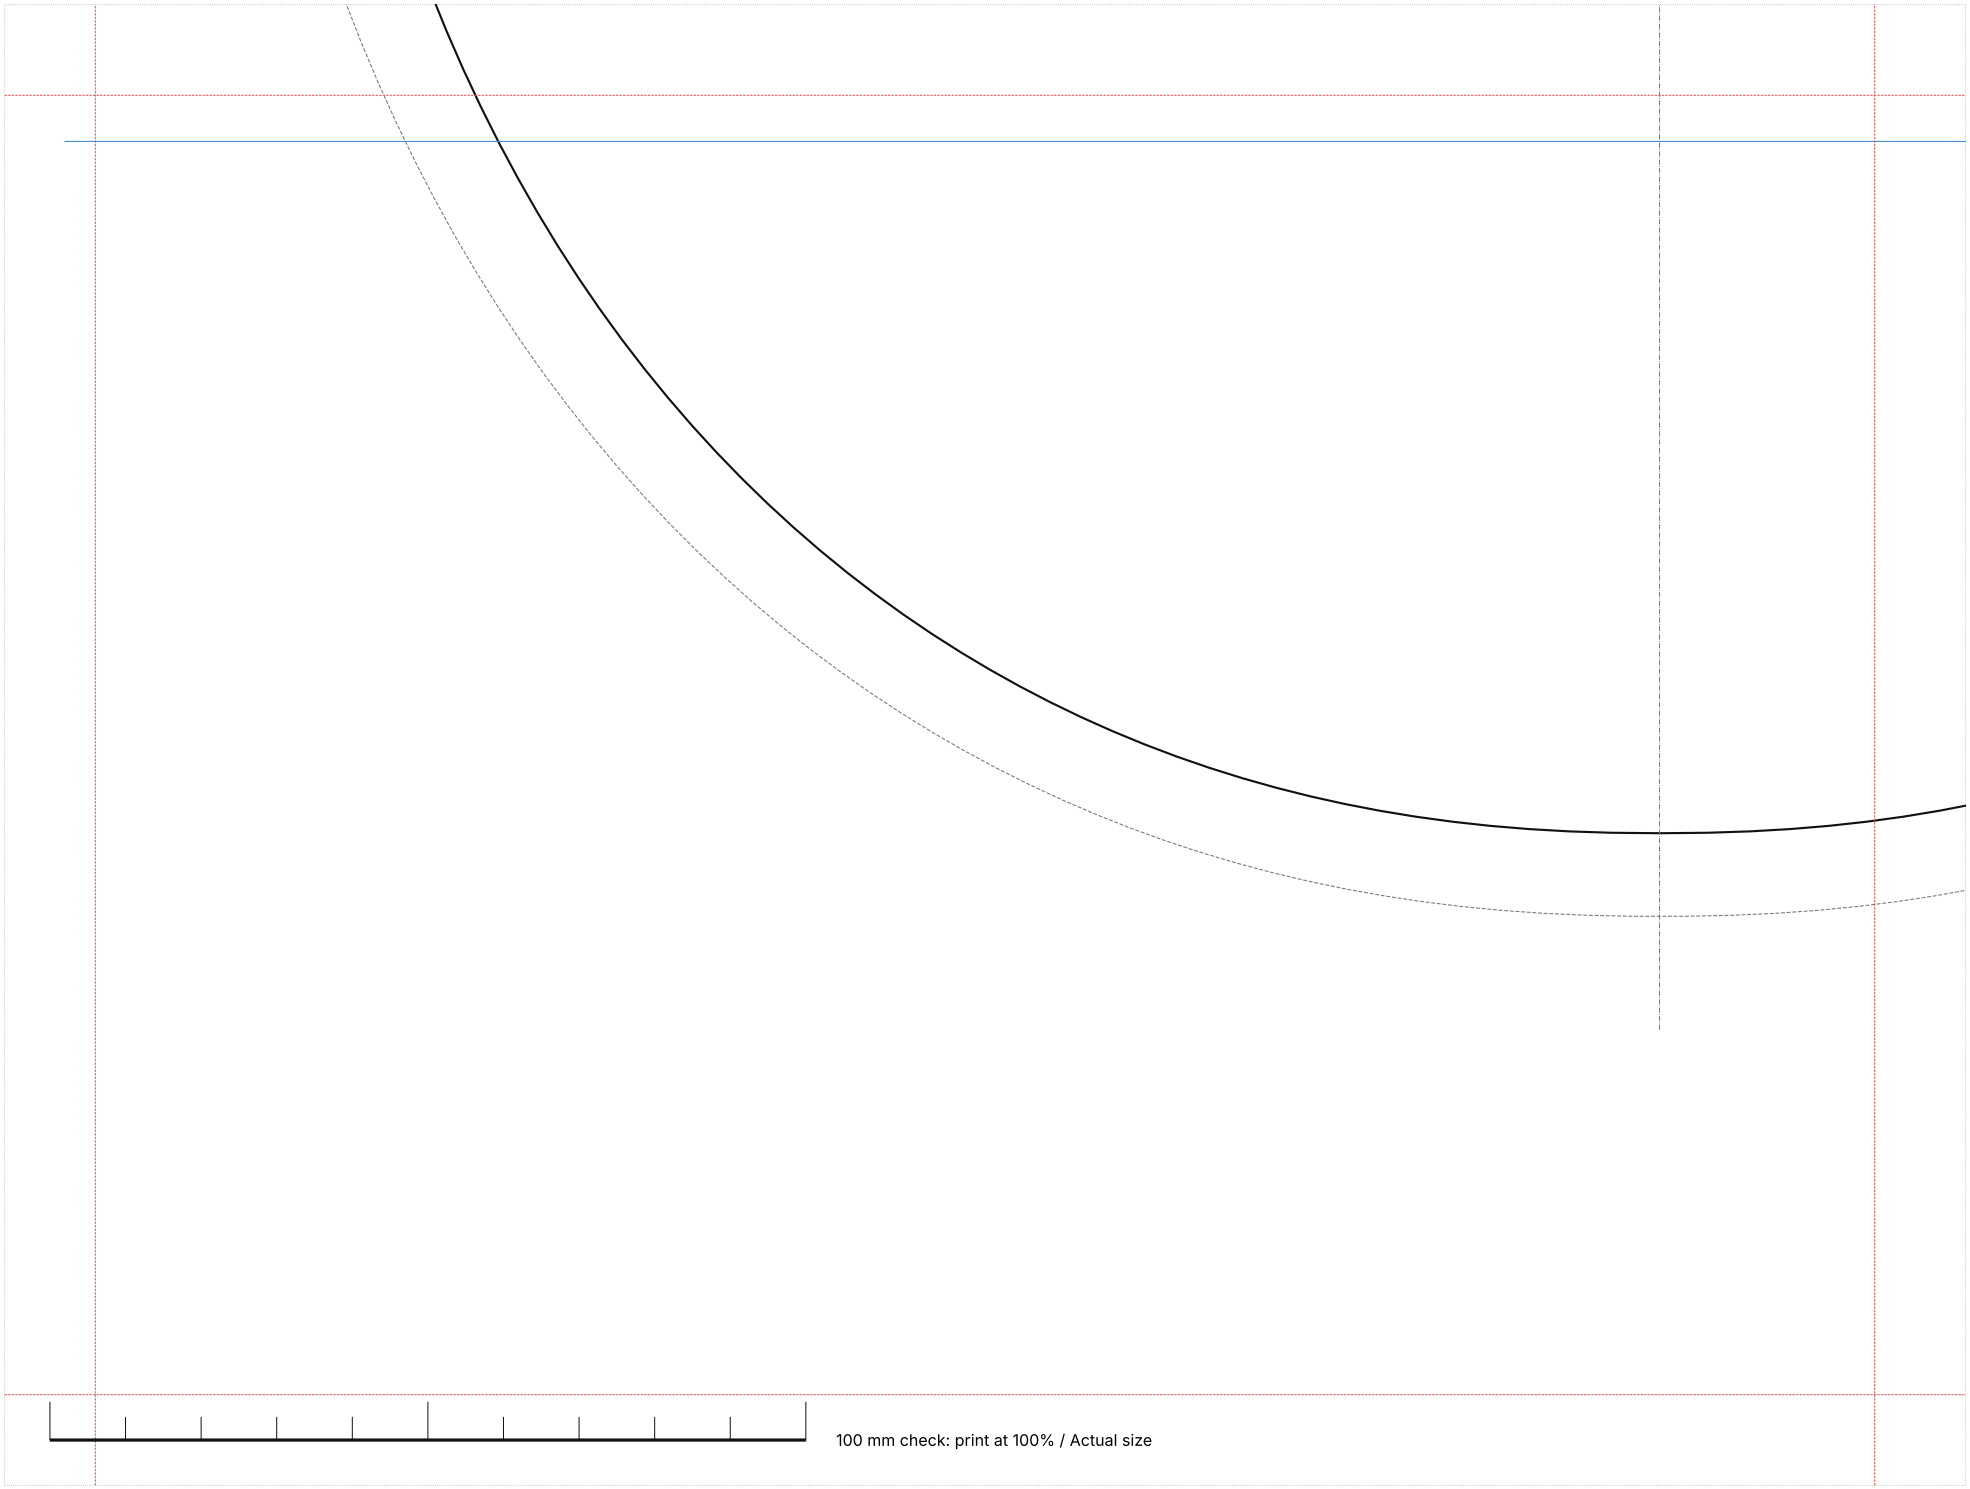

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T05 STATION 5 (x = 750)

Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

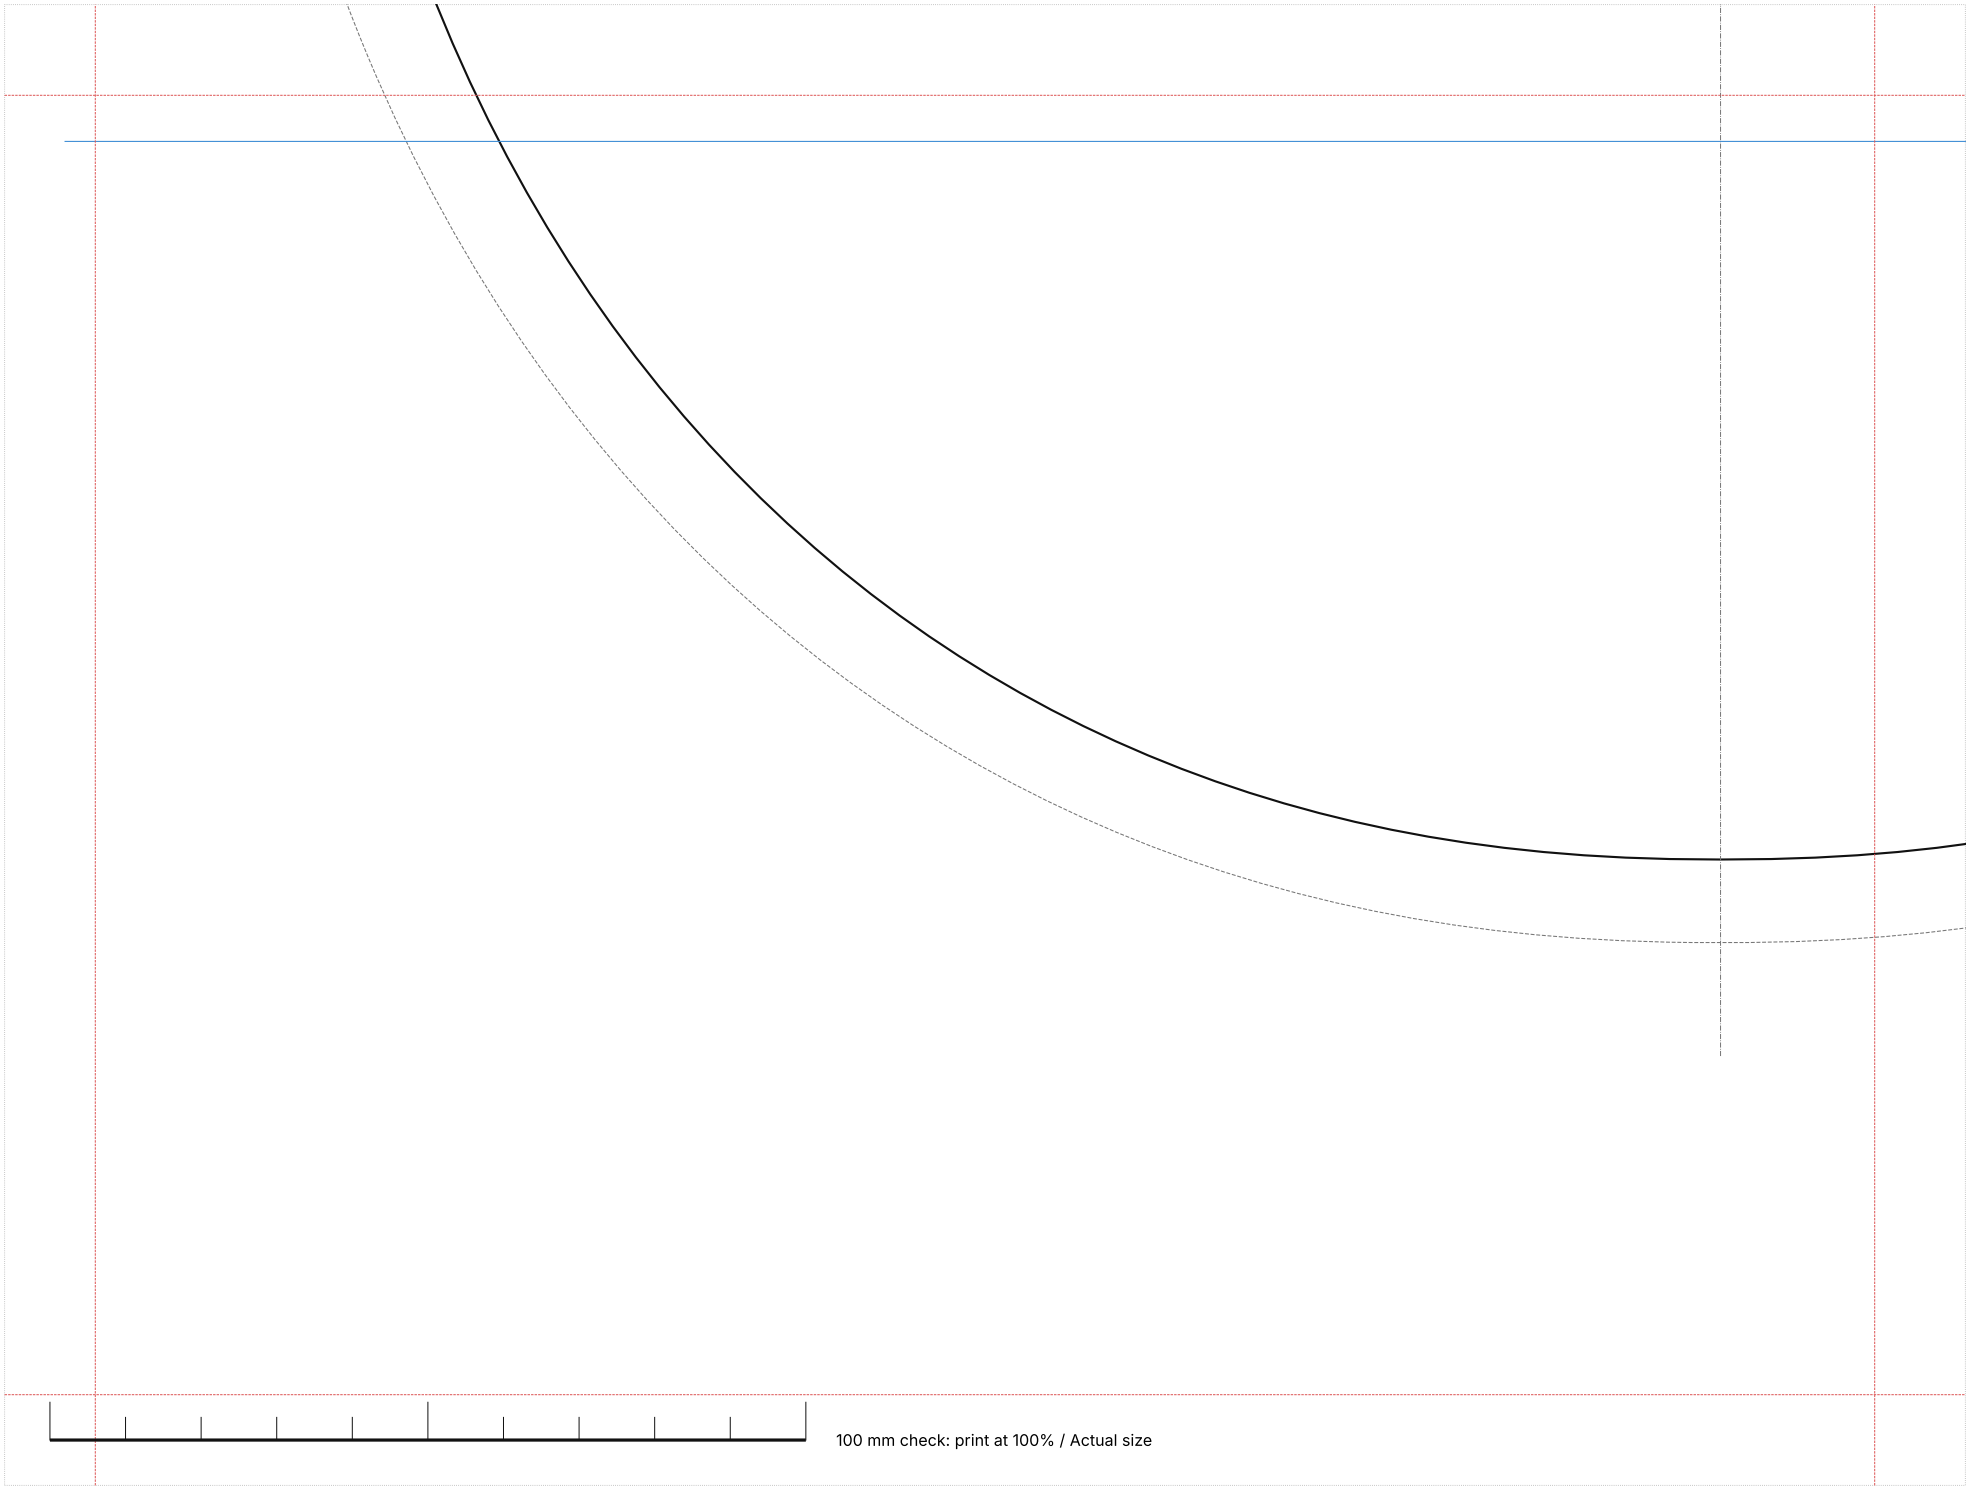

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T06 STATION 6 (x = 900)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size

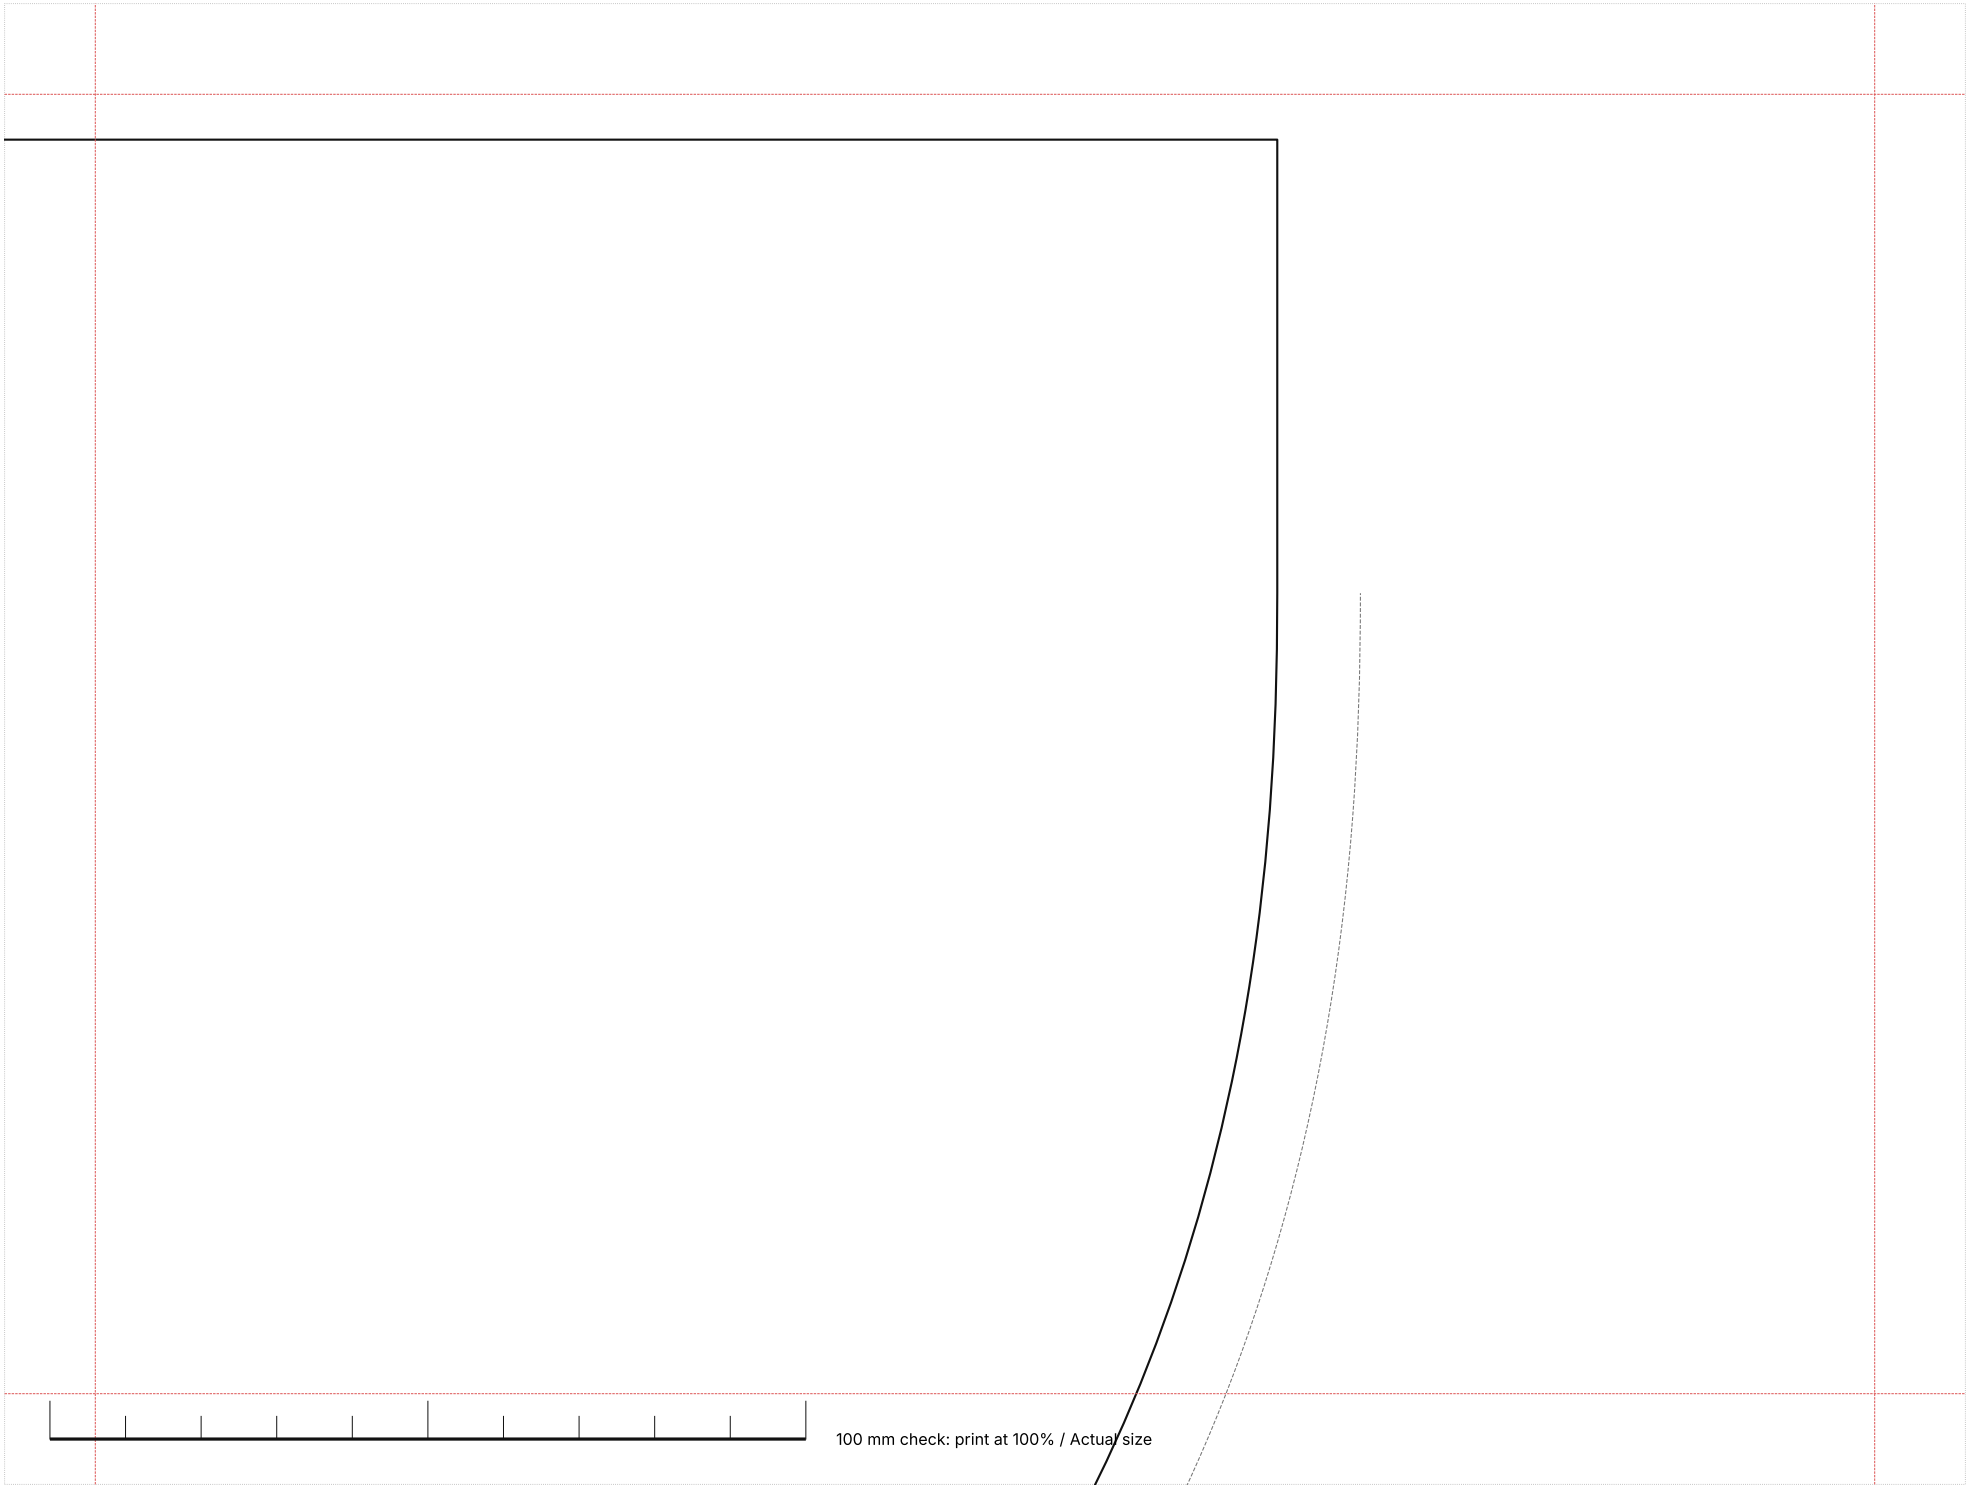

100 mm check: print at 100% / Actual size

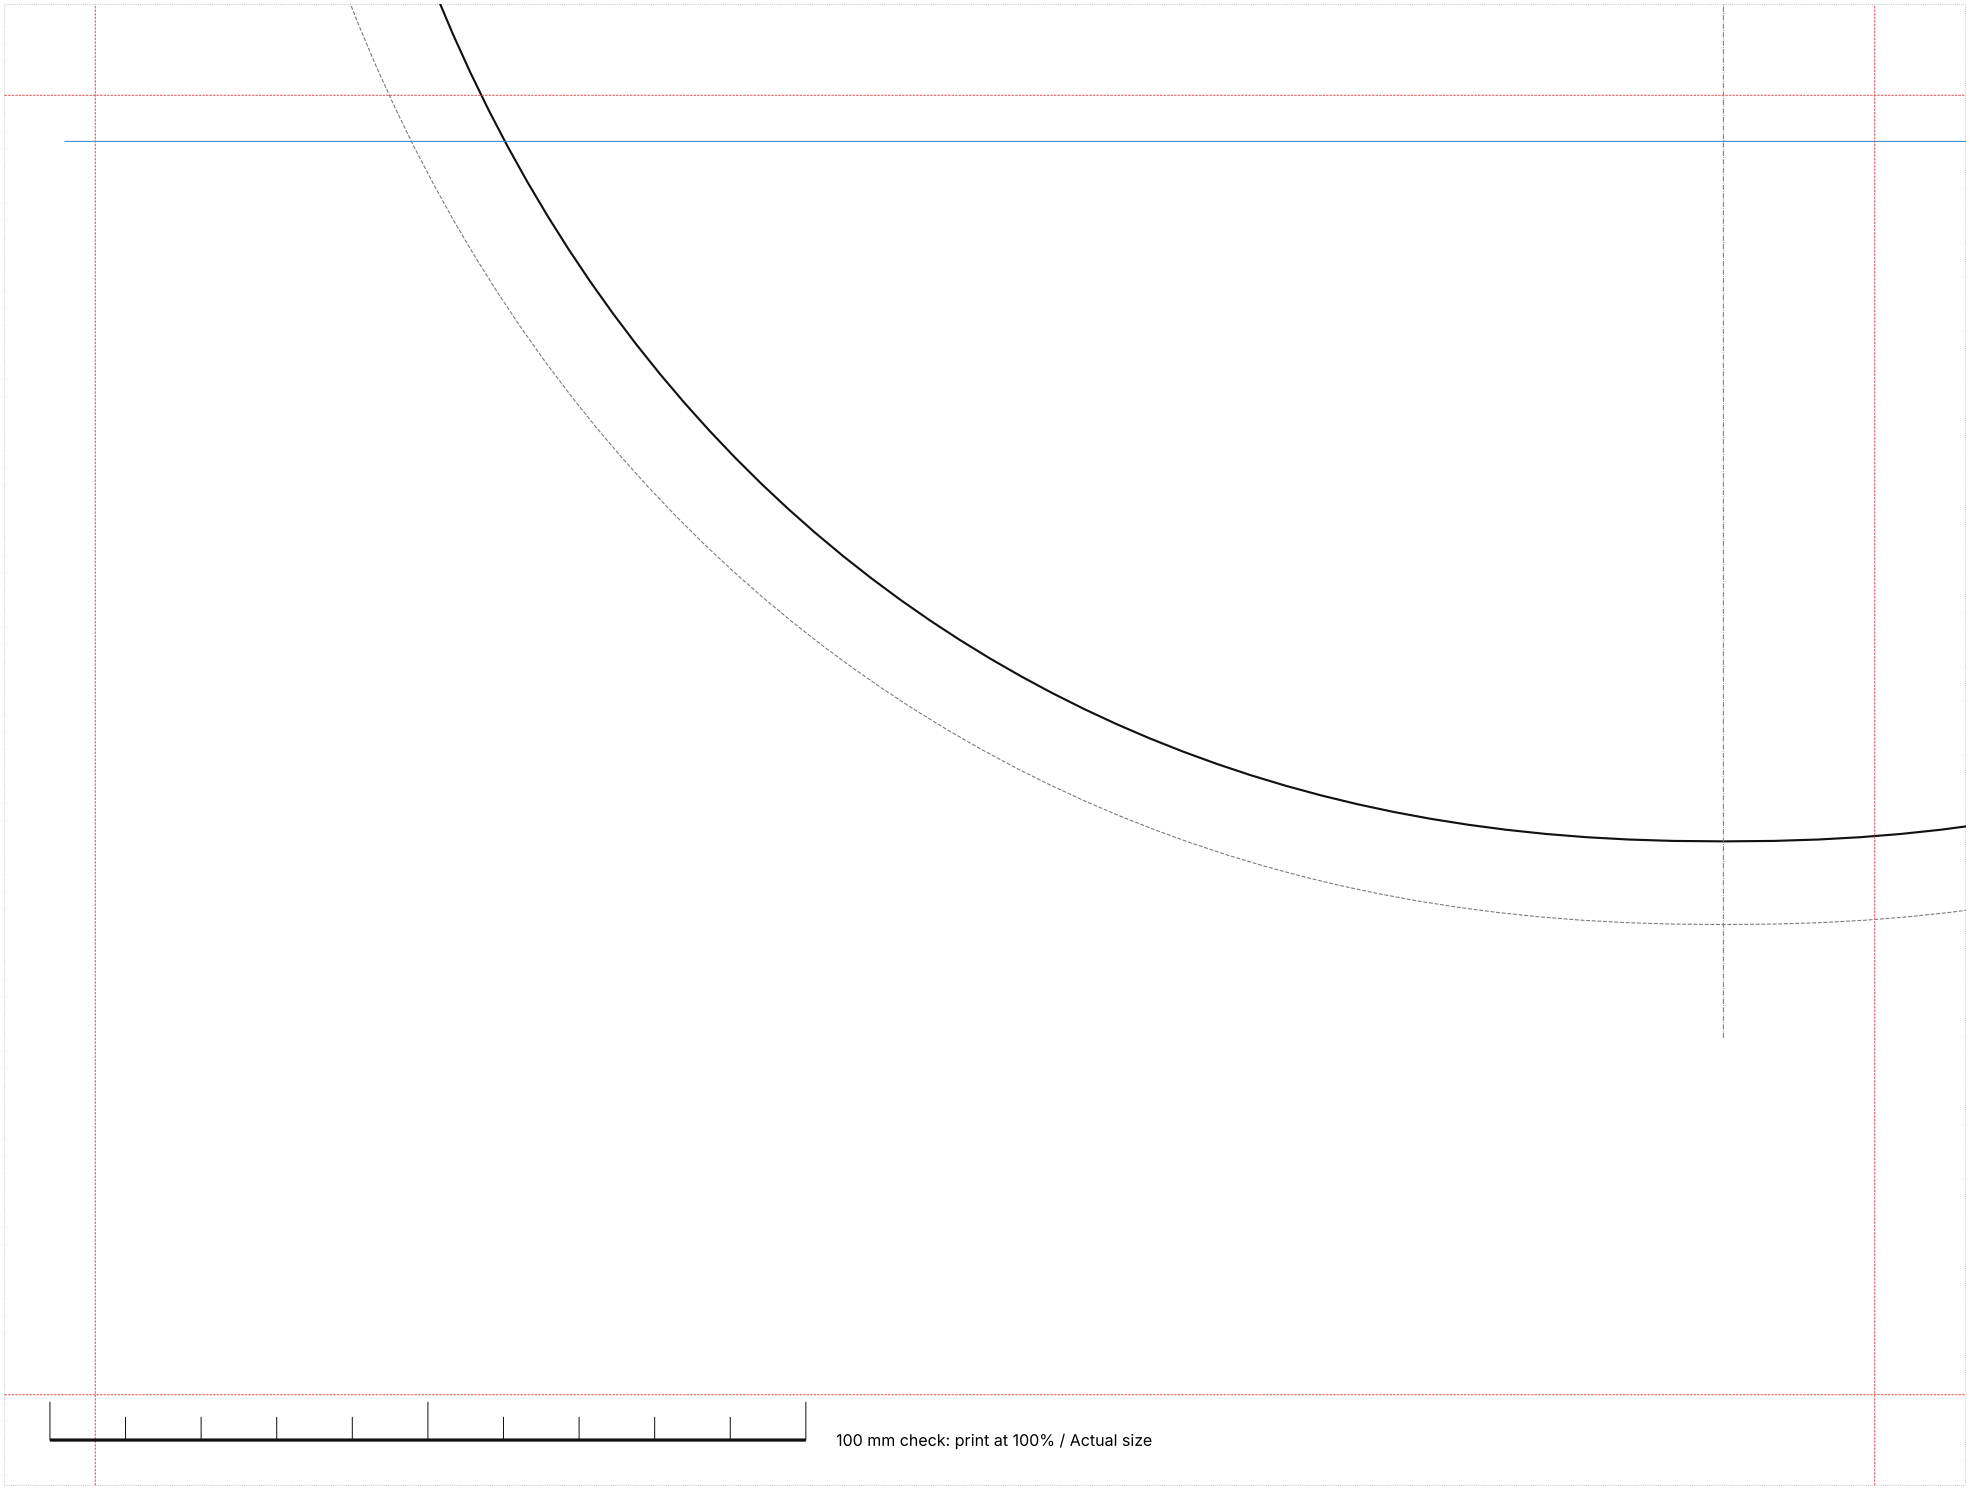

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T07 STATION 7 (x = 1050)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size

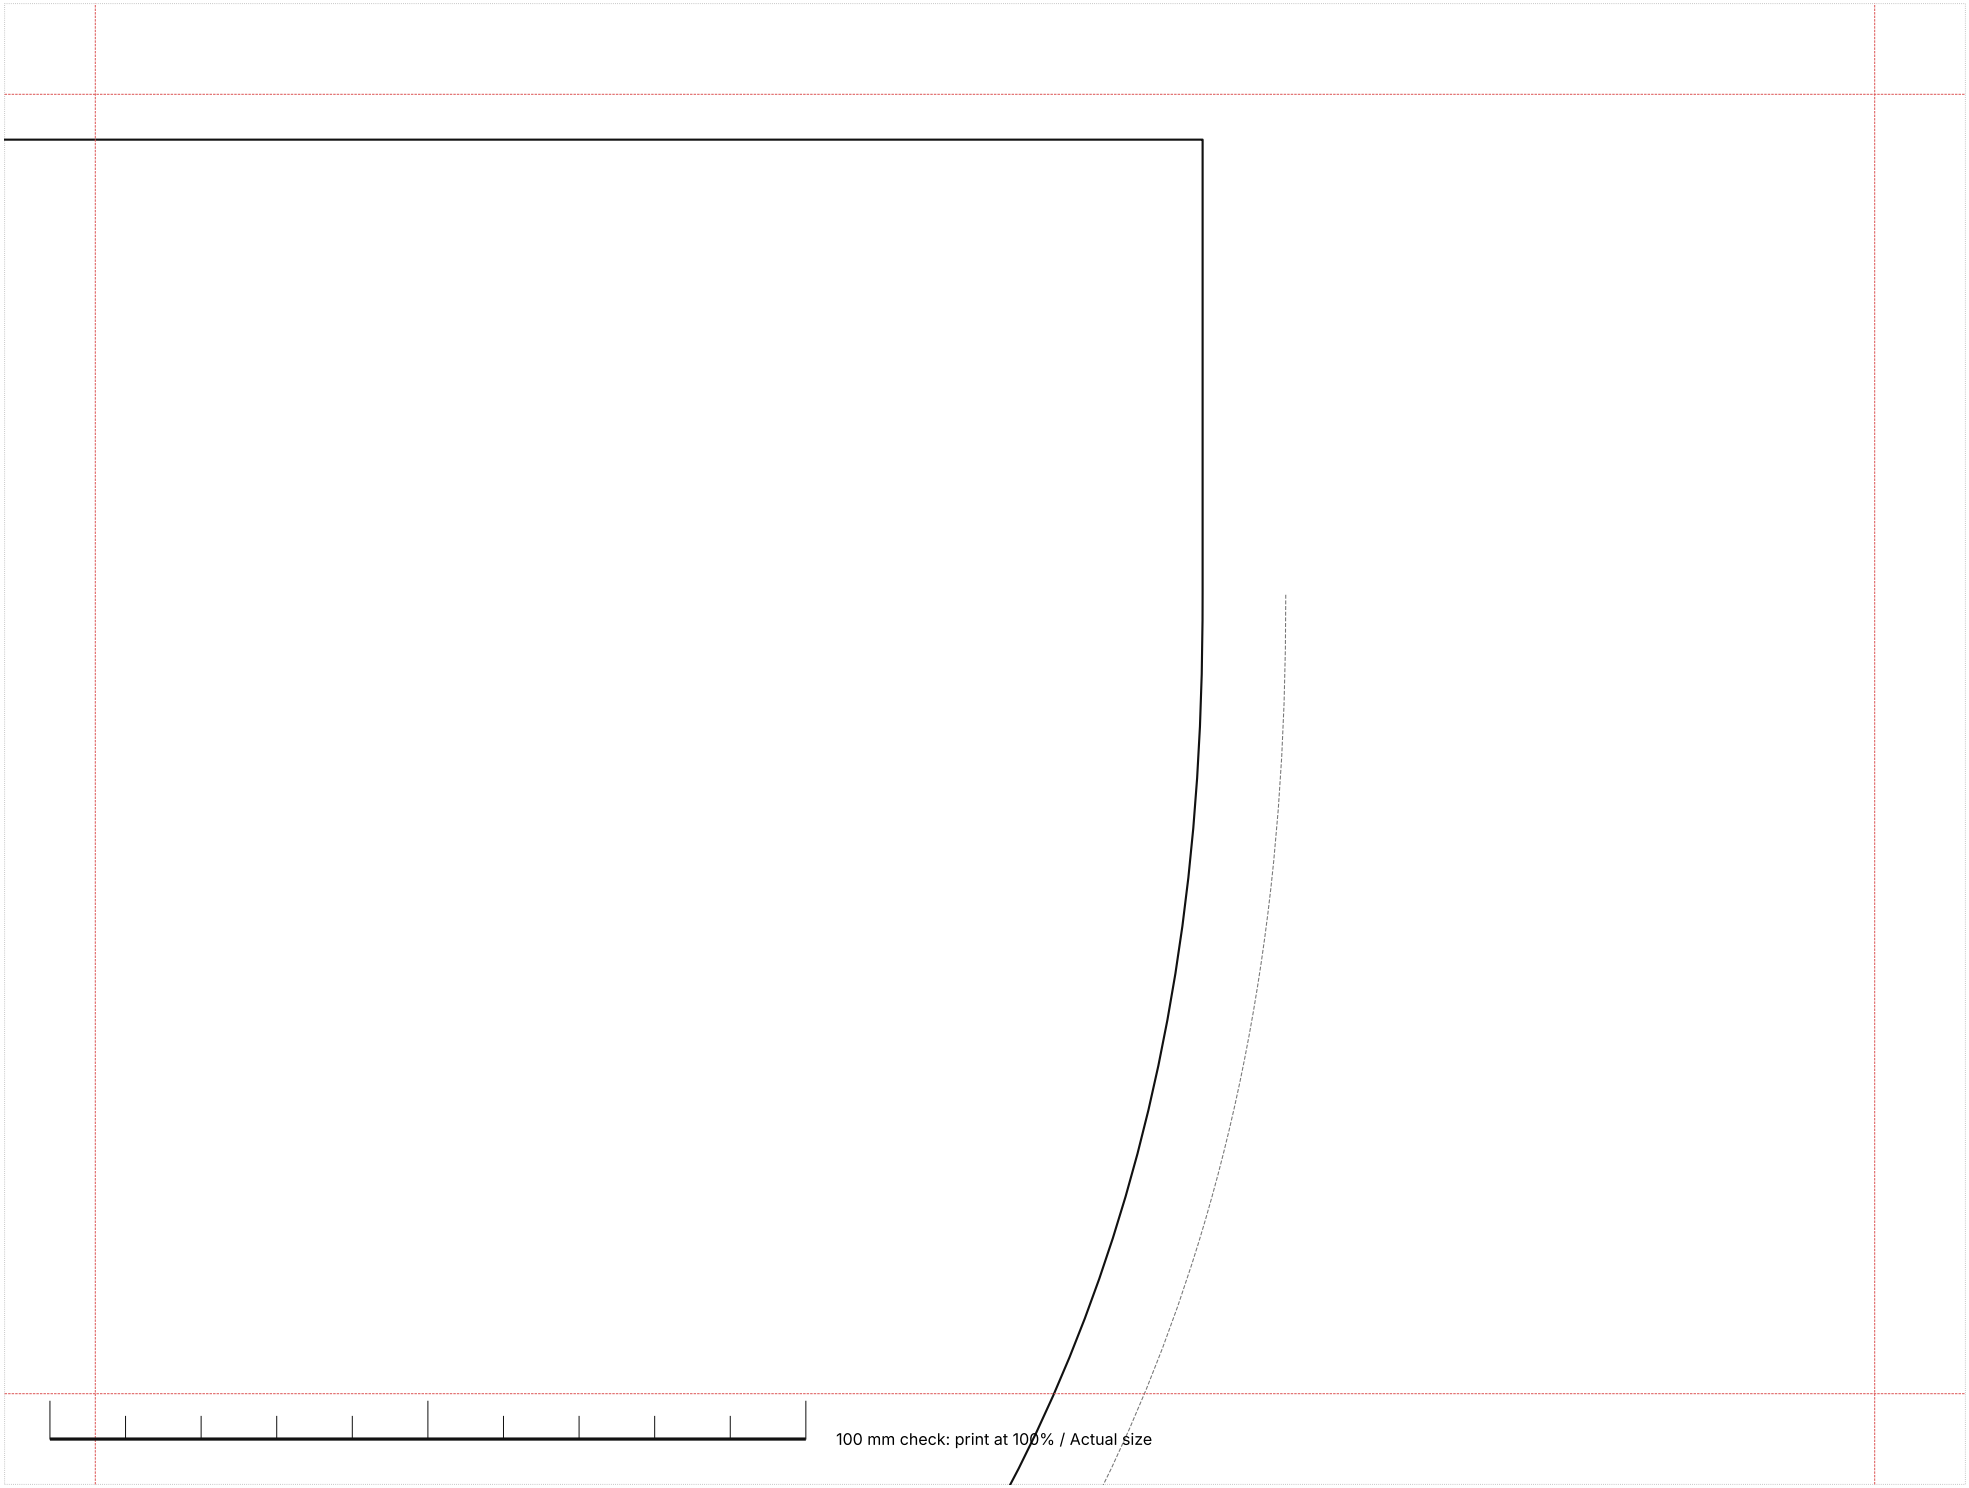

100 mm check: print at 100% / Actual size

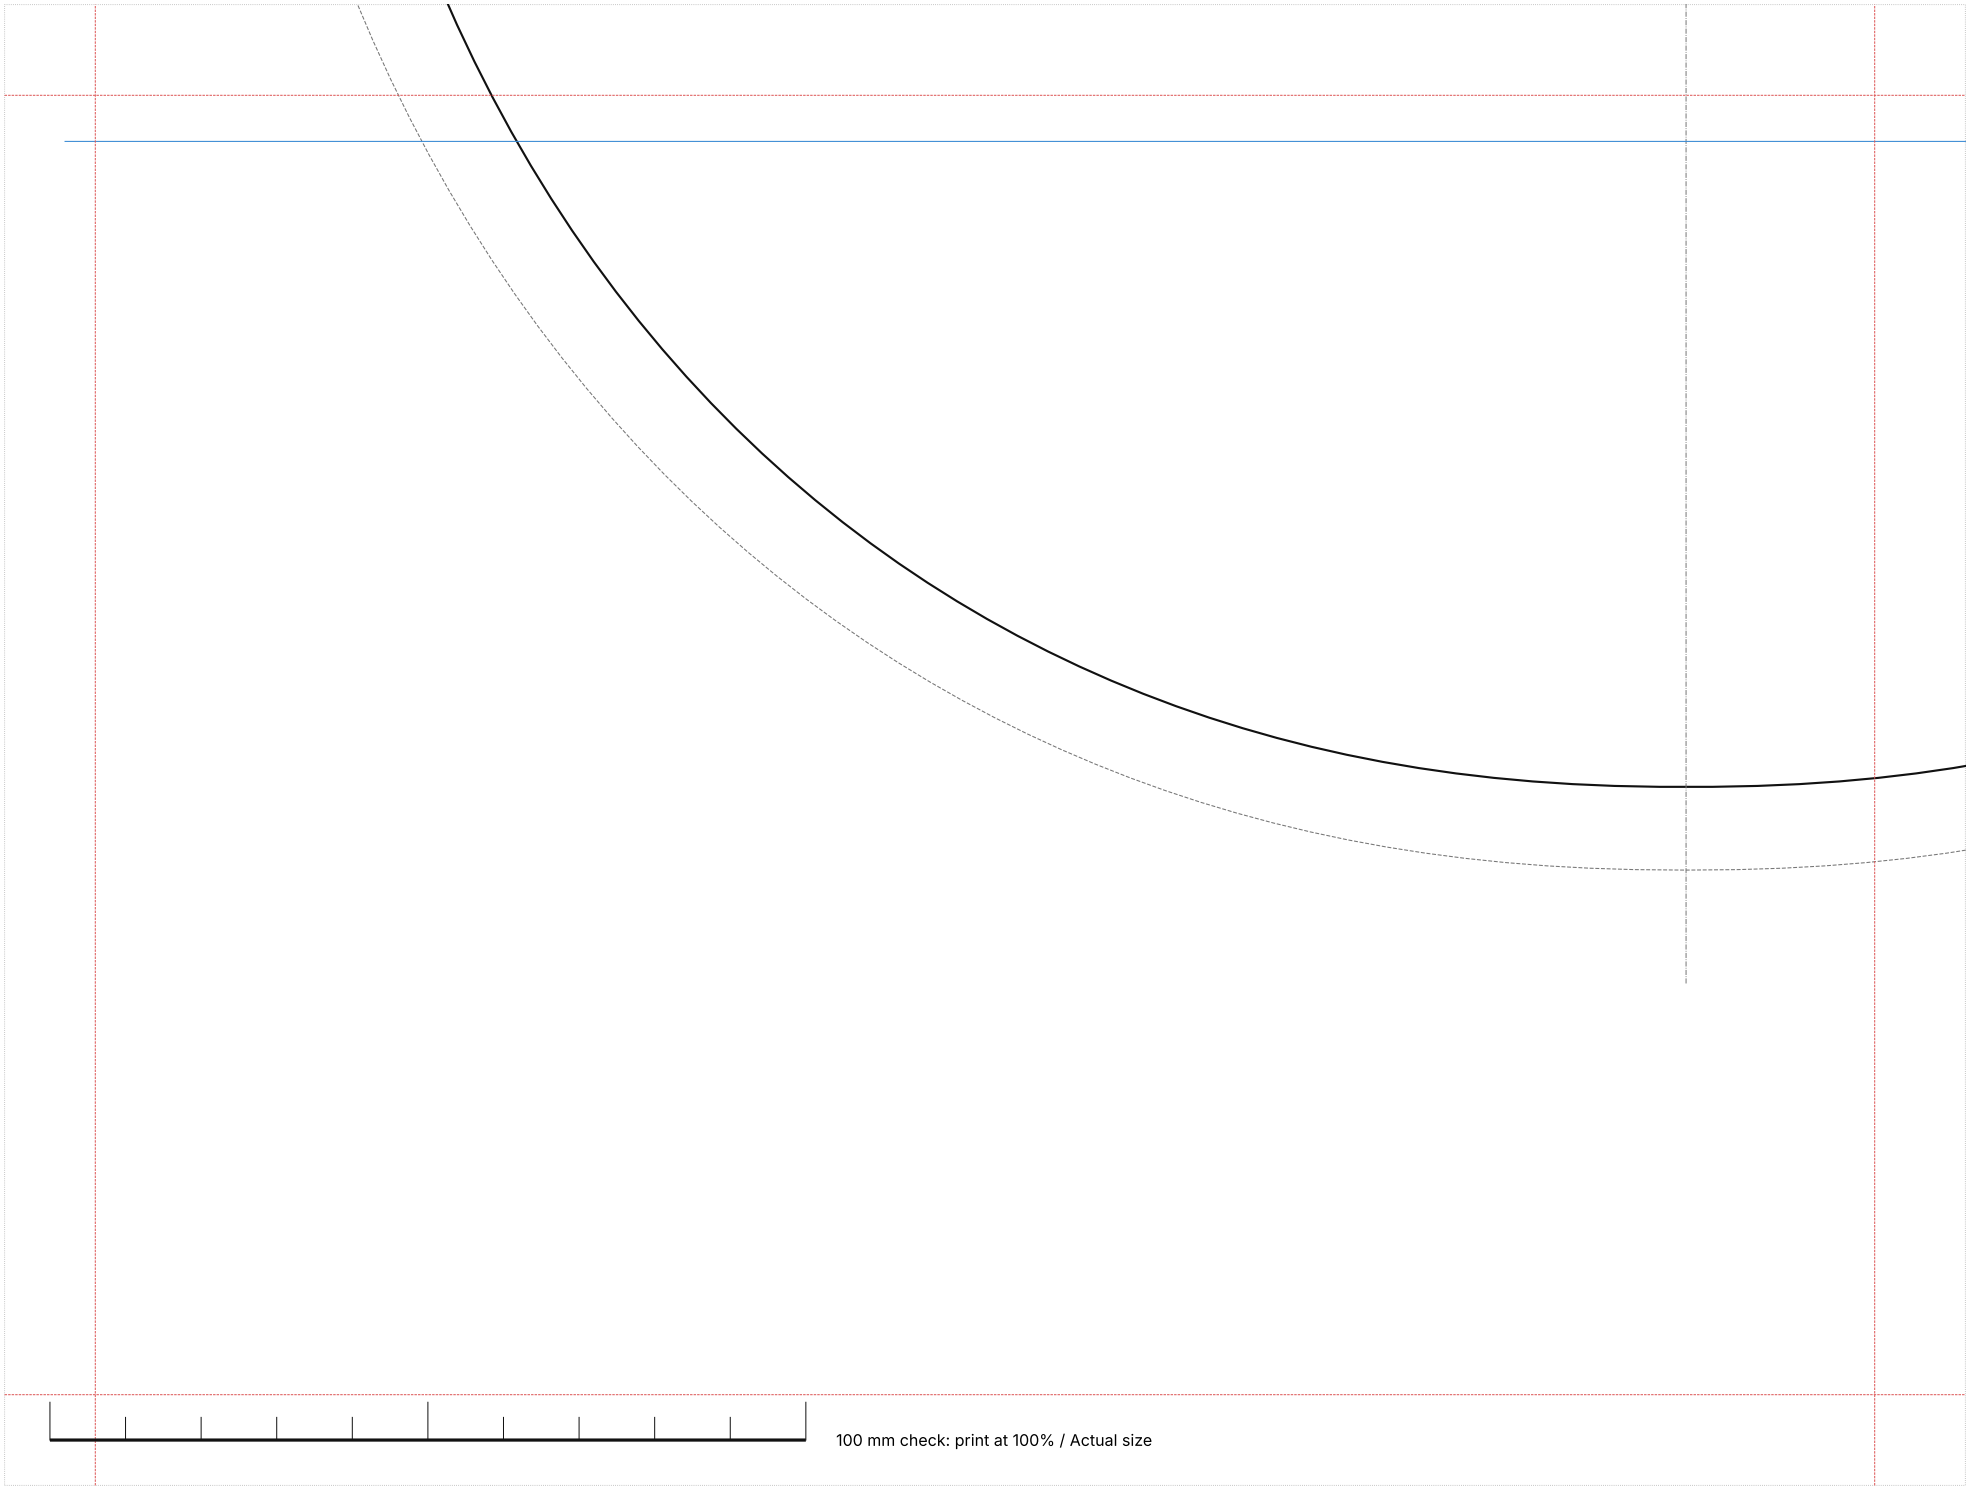

100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T08 STATION 8 (x = 1200)

Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.

Top edge = strongback datum (frames upside down).



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

T09 STATION 9 (x = 1350)


Cut on the solid FRAME line (hull minus 11 mm).

Dashed = outside of hull. Blue = DWL.


Top edge = strongback datum (frames upside down).

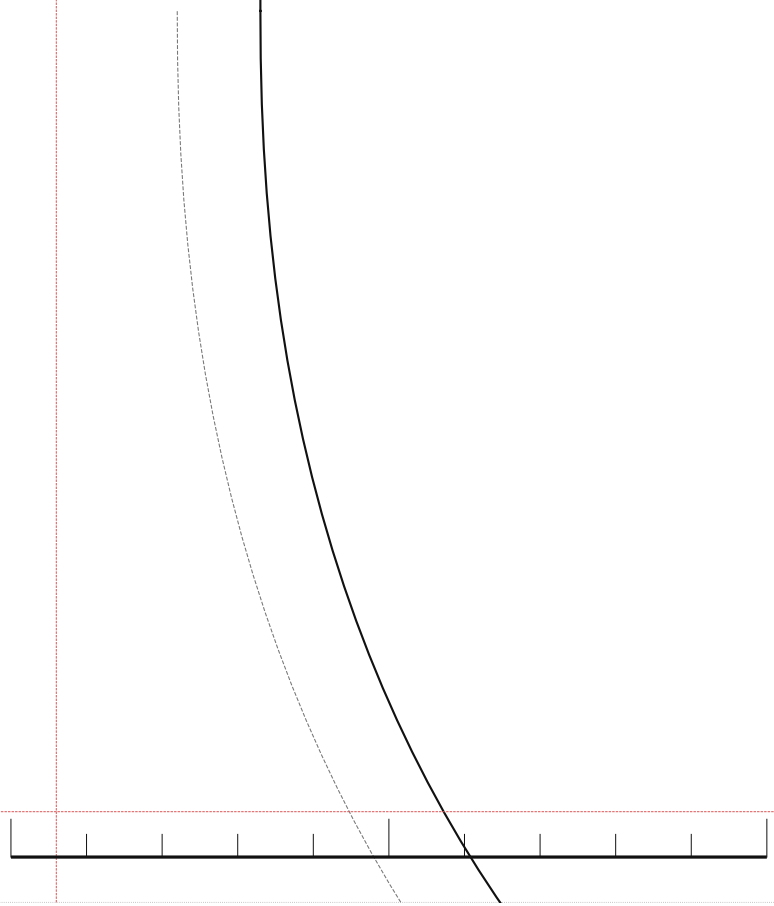

100 mm check: print at 100% / Actual size

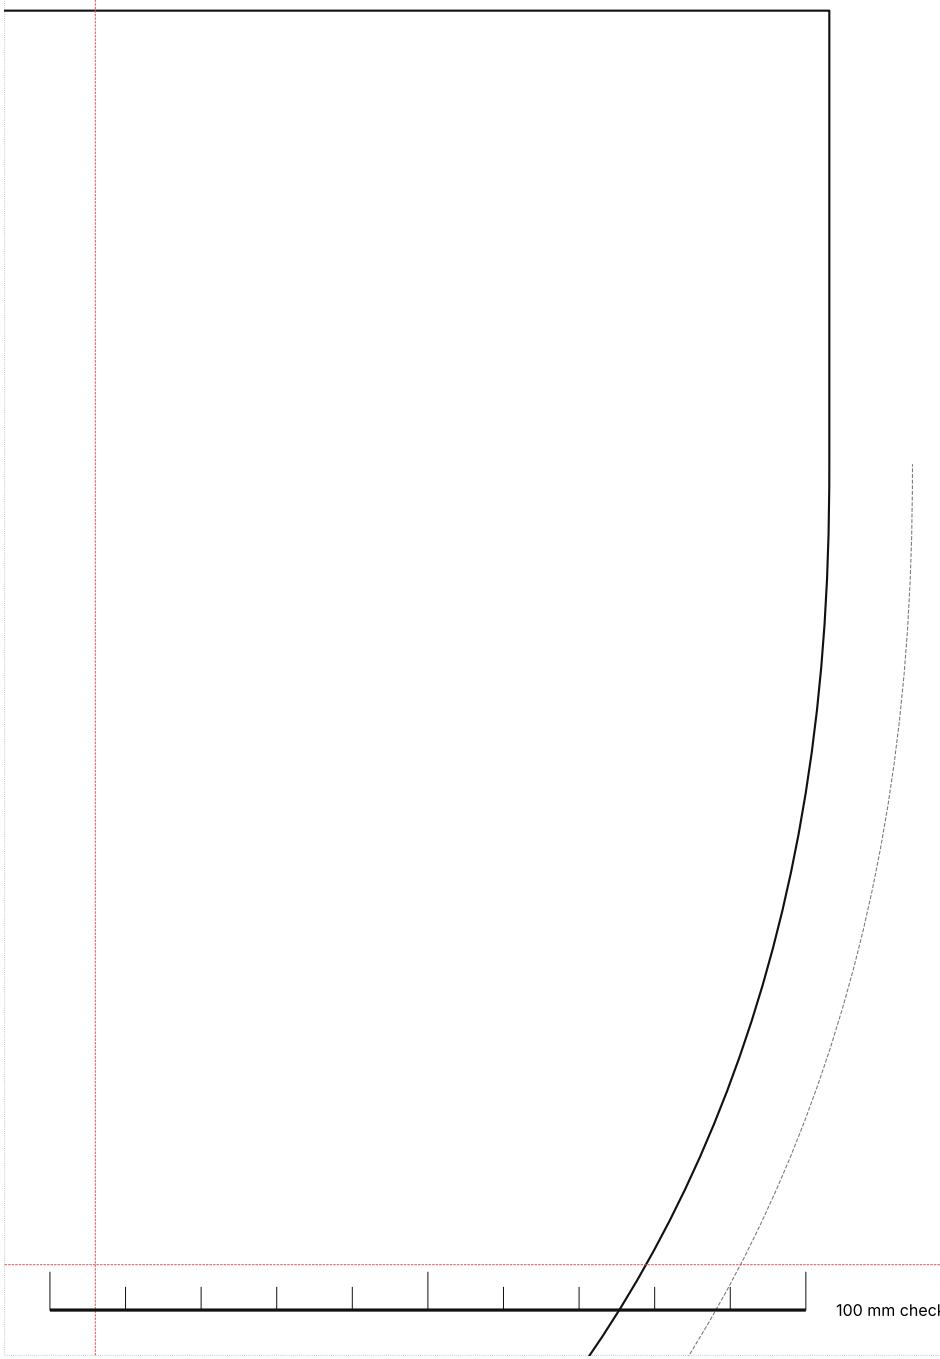

100 mm check: print at 100% / Actual size

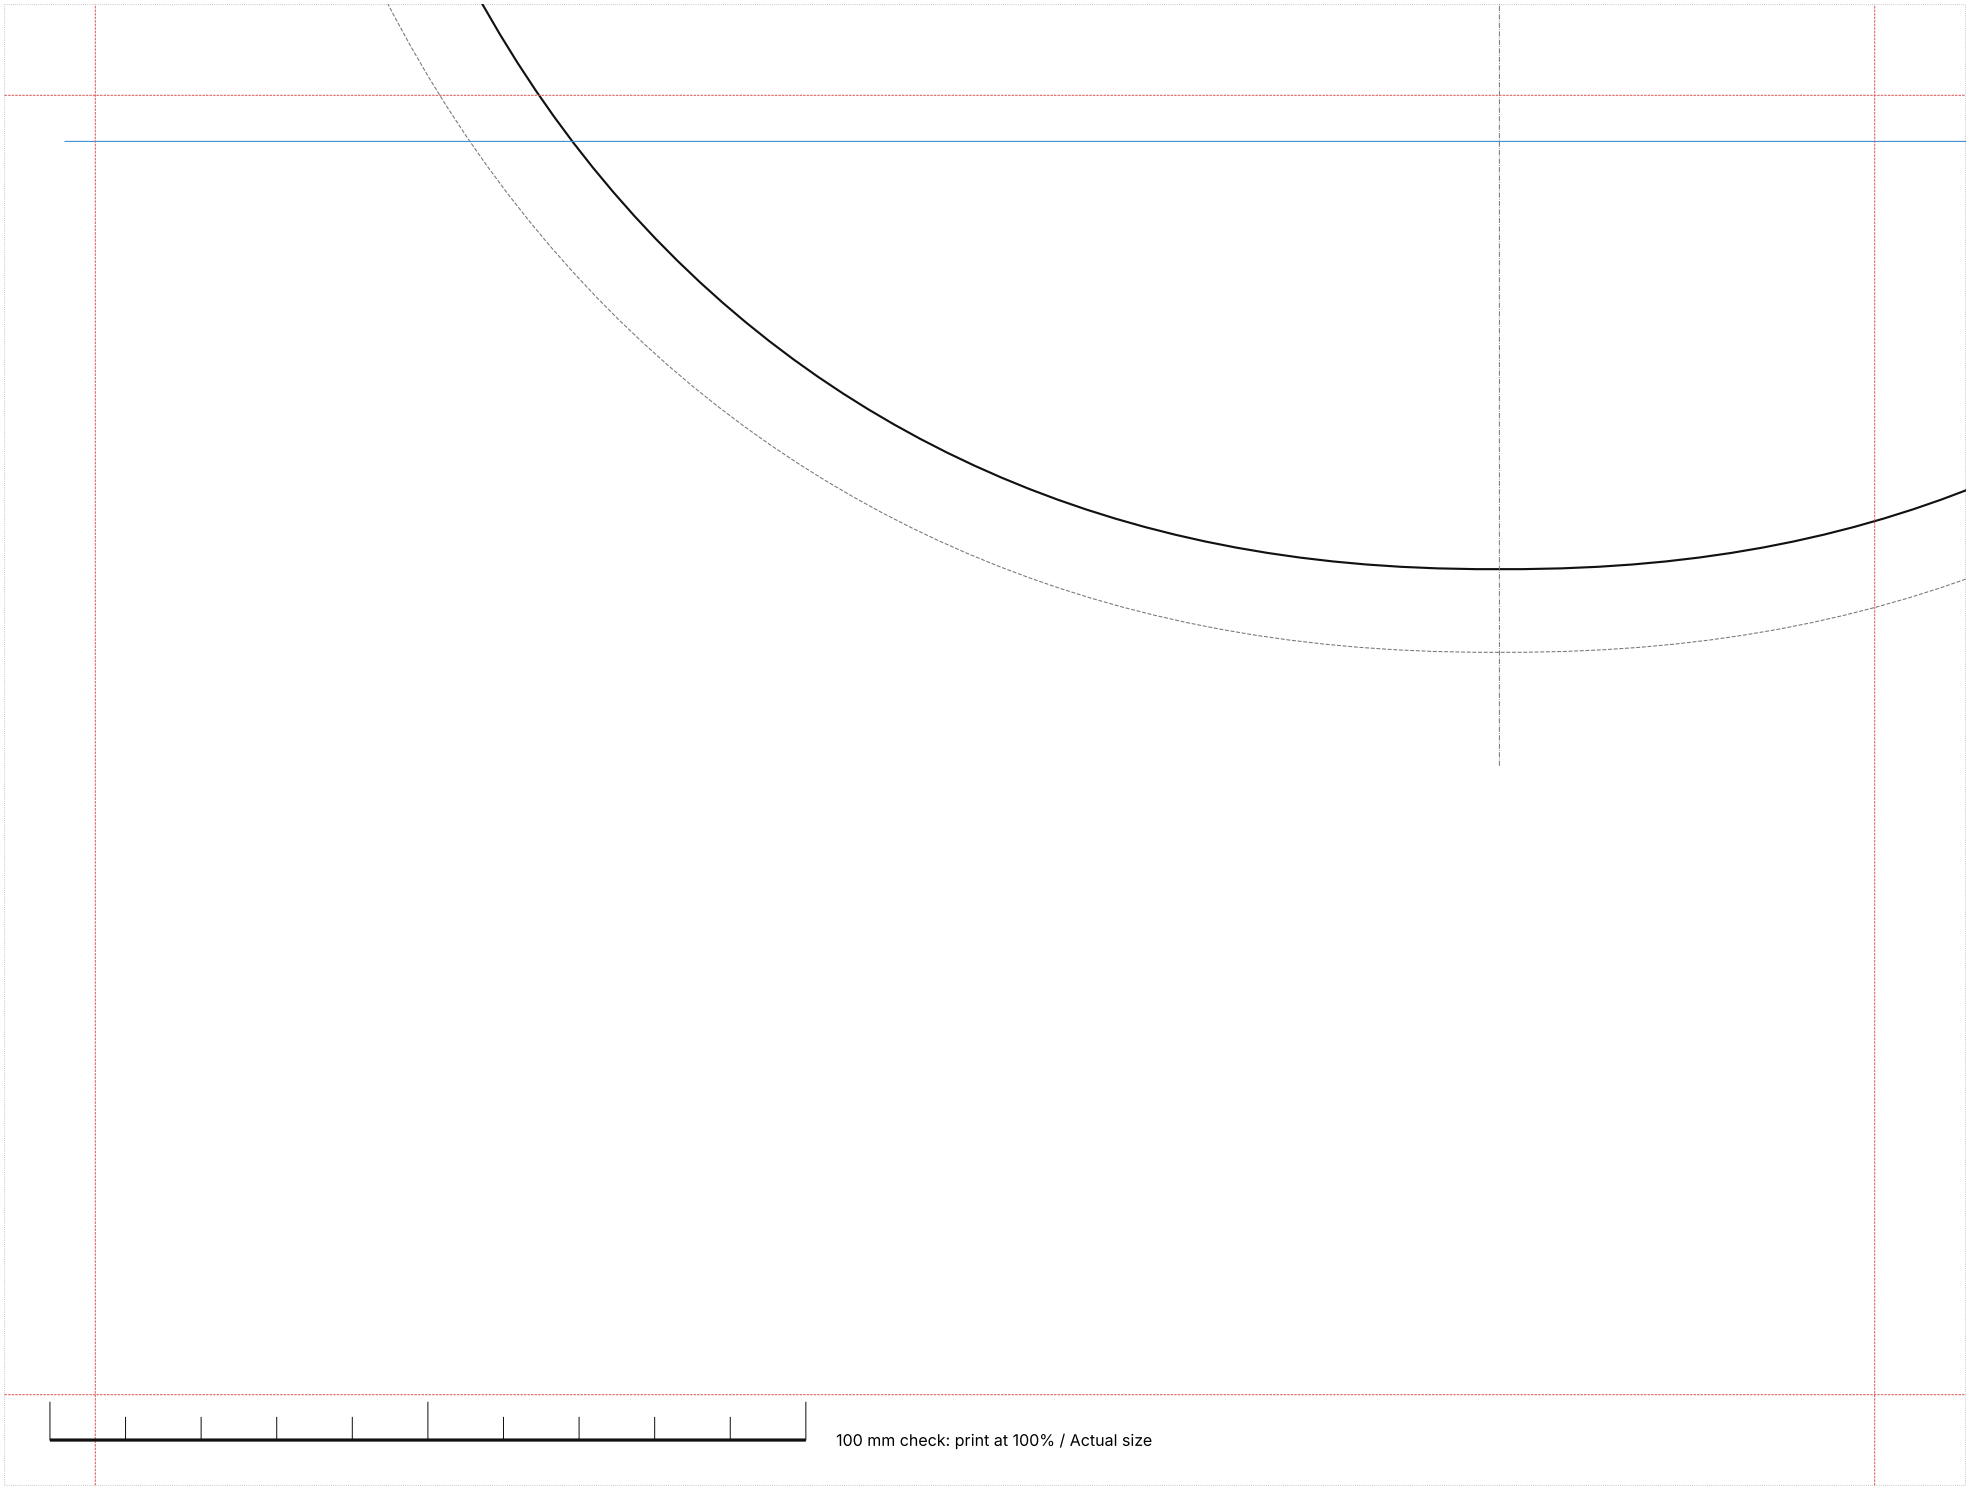

100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

T10 TRANSOM (outside shape)

Cut the foam transom to this line; bracket P06 bolts at z 160-260.



100 mm check: print at 100% / Actual size

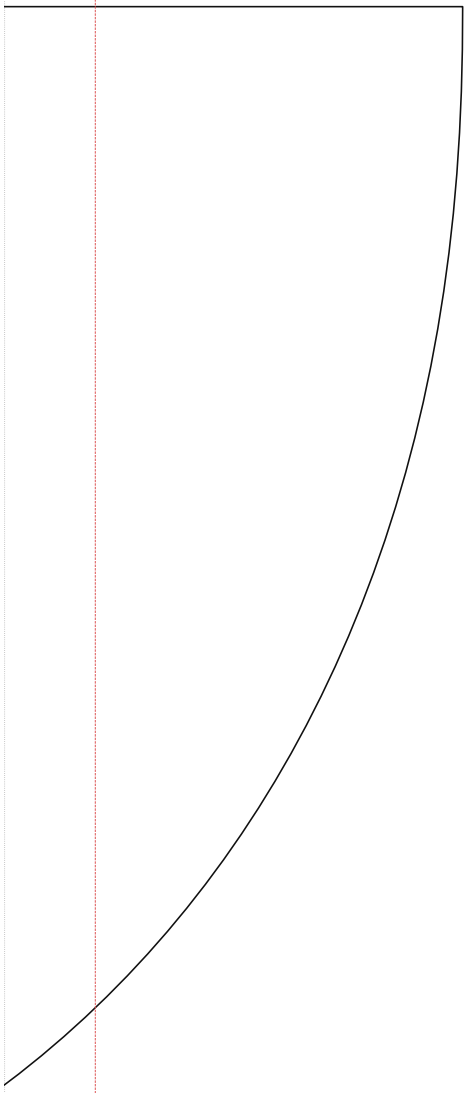




100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

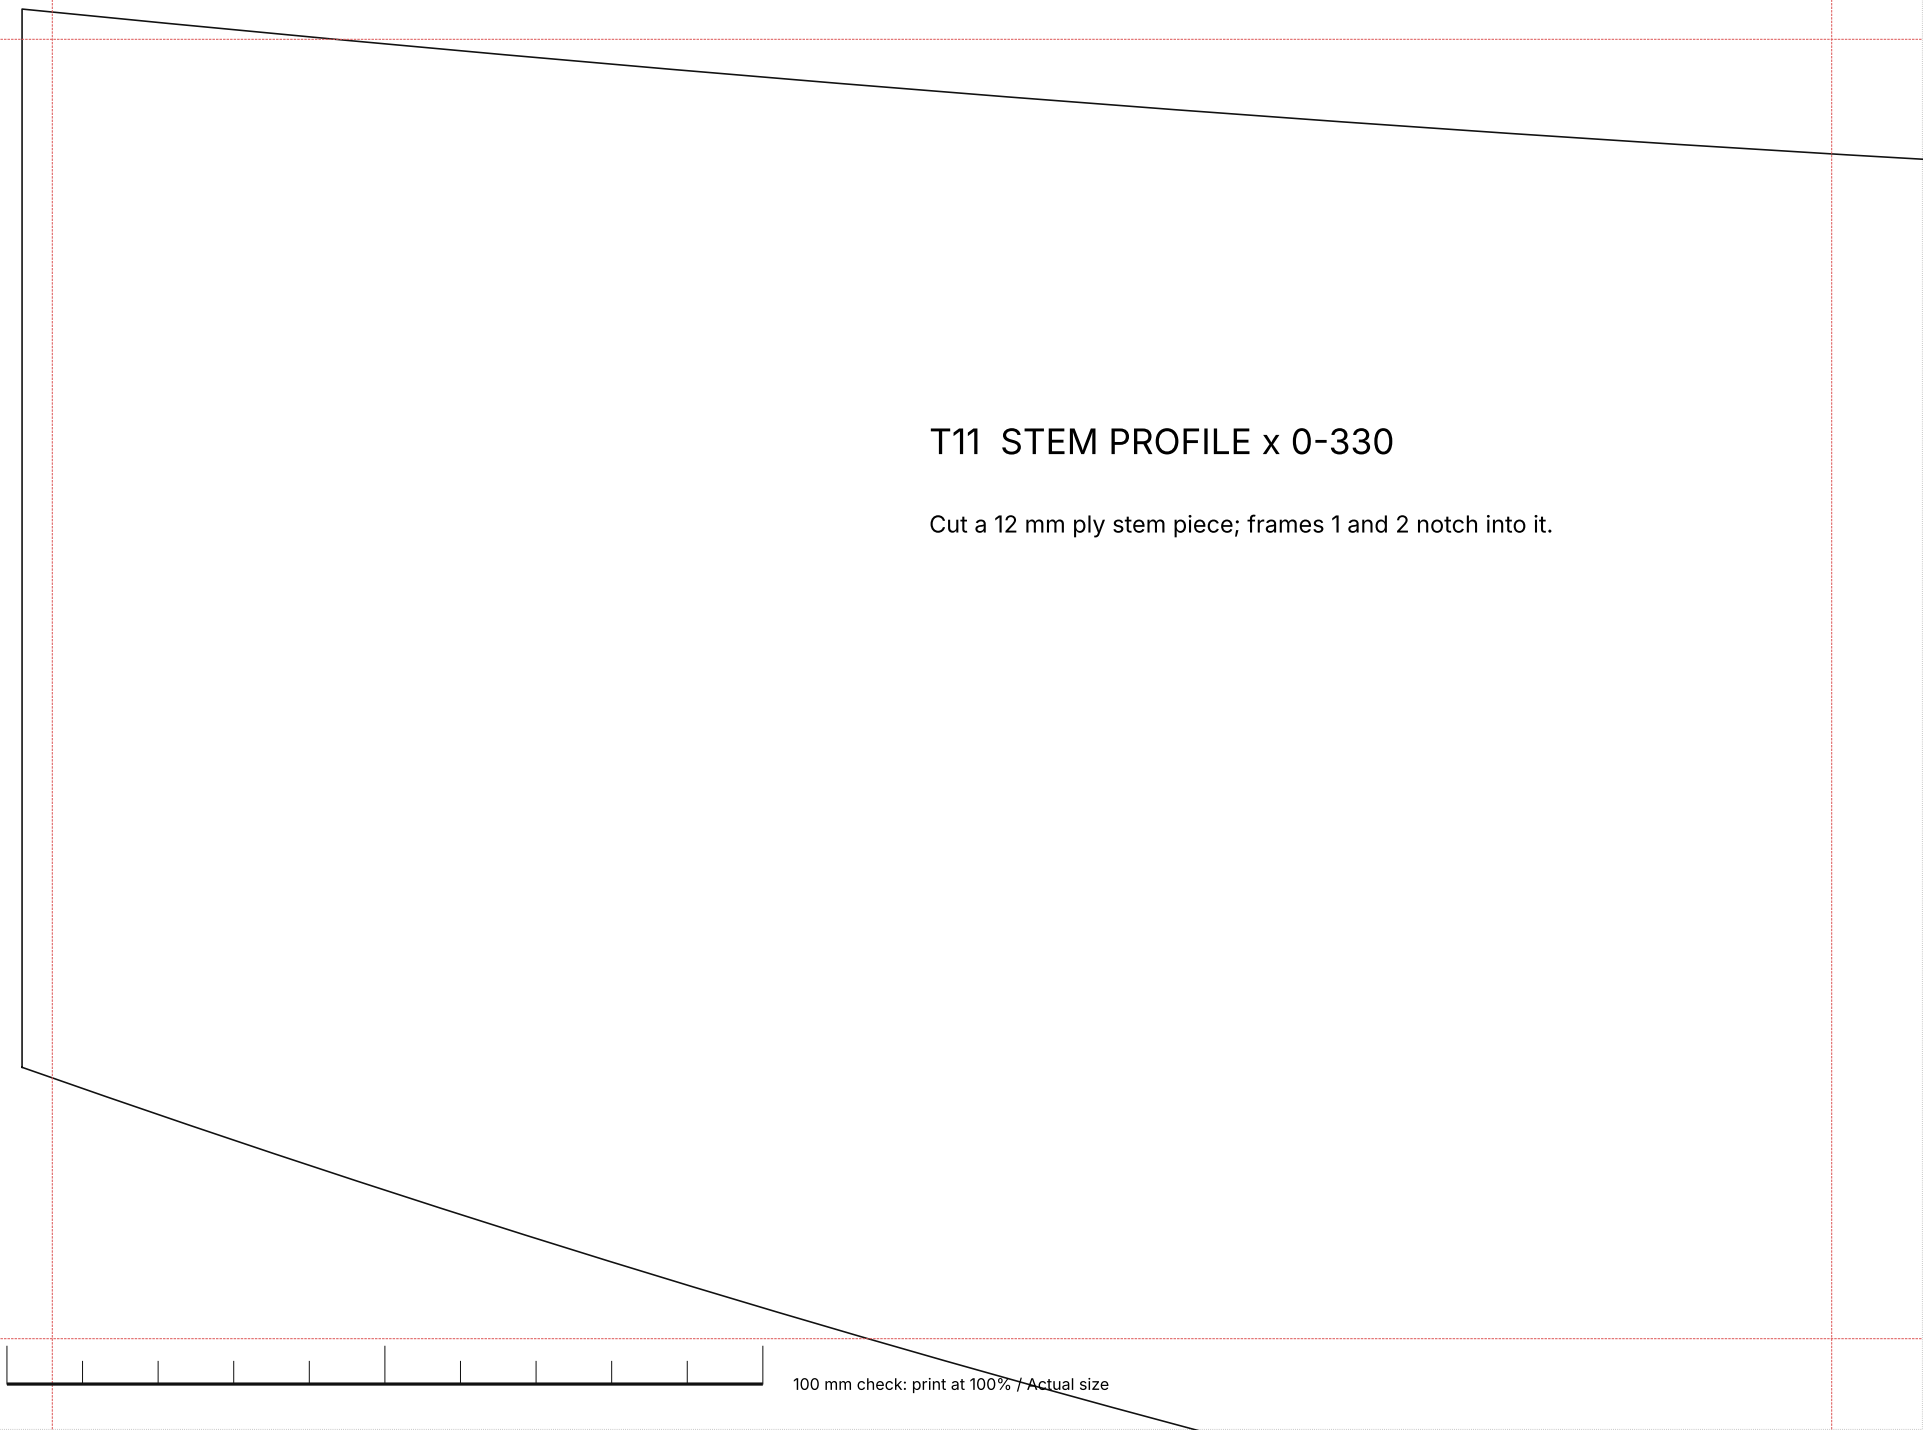

T11 STEM PROFILE x 0-330

Cut a 12 mm ply stem piece; frames 1 and 2 notch into it.

100 mm check: print at 100% / Actual size

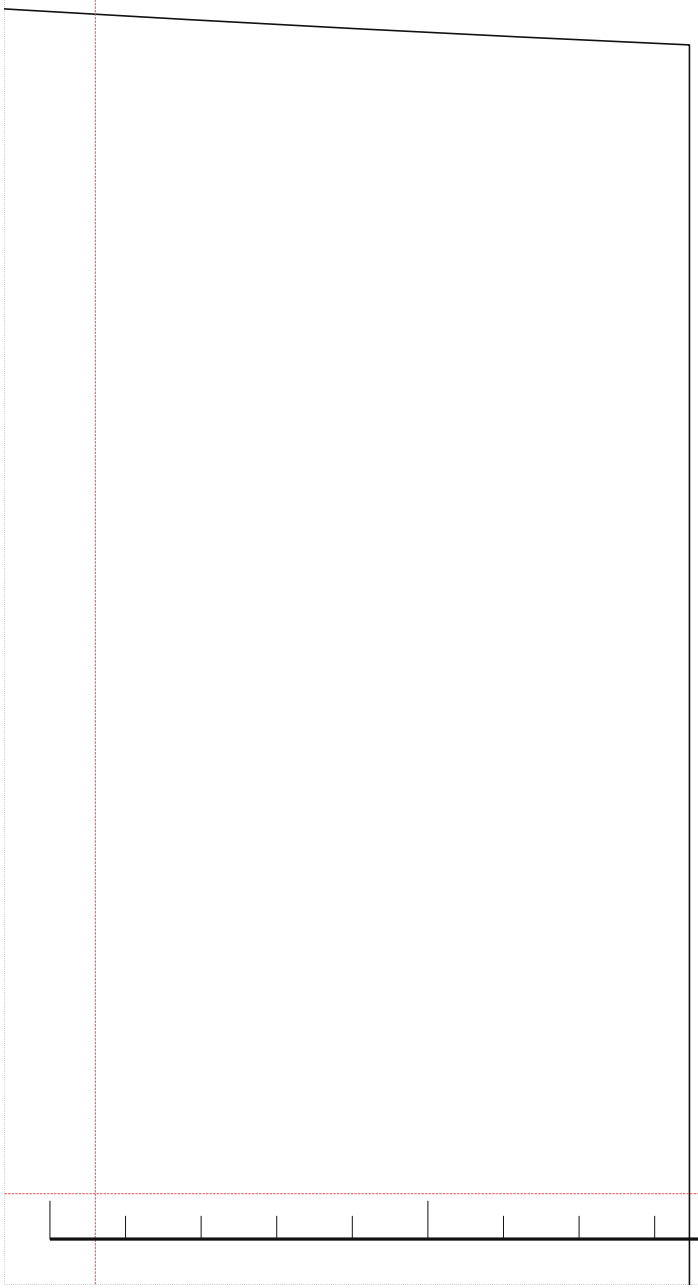




100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

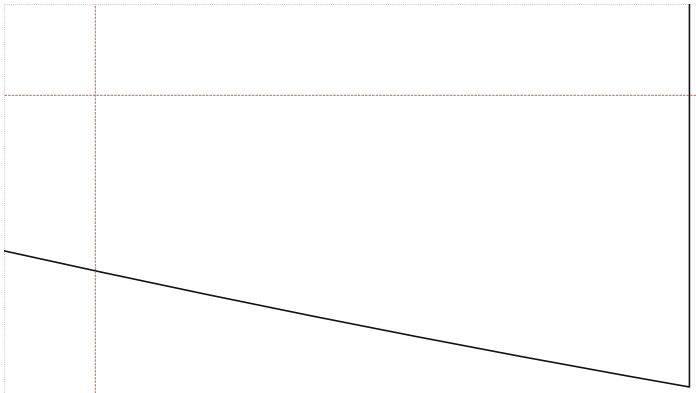



100 mm check: print at 100% / Actual size

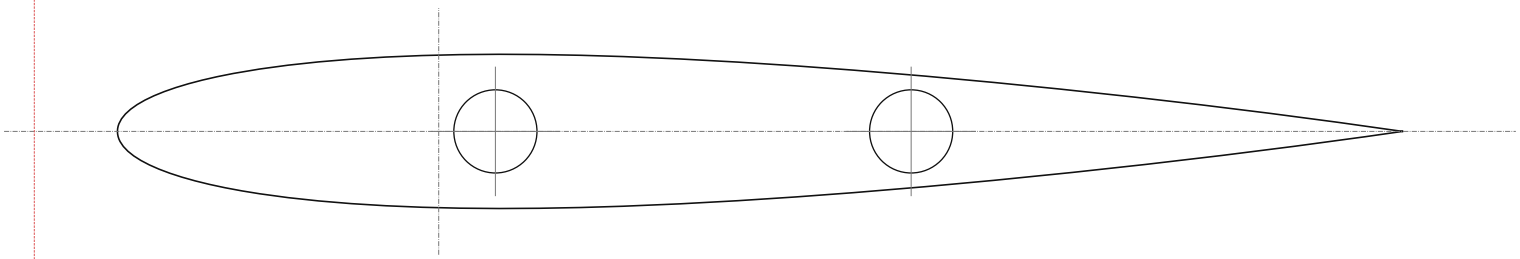

T12 FIN ROOT NACA 0012 chord 170 (Rev C2 hardwood core: rod grooves D11)

Planing gauge: cut this shape out of thin ply and plane the core until the gauge fits. Shape is the bare core:


glass adds about 1.2 mm a side. Carbon recess 60 × 1.5, from 25 to 85 behind the LE, both sides.



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

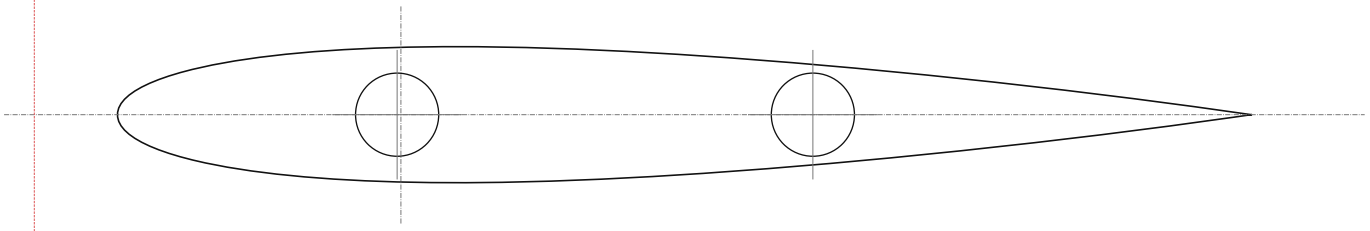

T13 FIN TIP NACA 0012 chord 150 (Rev C2 hardwood core: rod grooves D11)

Planing gauge: cut this shape out of thin ply and plane the core until the gauge fits. Shape is the bare core:


glass adds about 1.2 mm a side. Carbon recess 60 × 1.5, from 25 to 85 behind the LE, both sides.



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

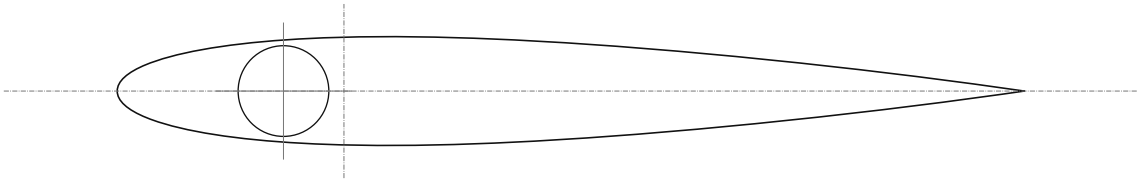


T14 RUDDER NACA 0012 chord 120 (stock D12) MAKE 2

Hot-wire: screw template to the block end; lead in and out at the trailing edge.



100 mm check: print at 100% / Actual size

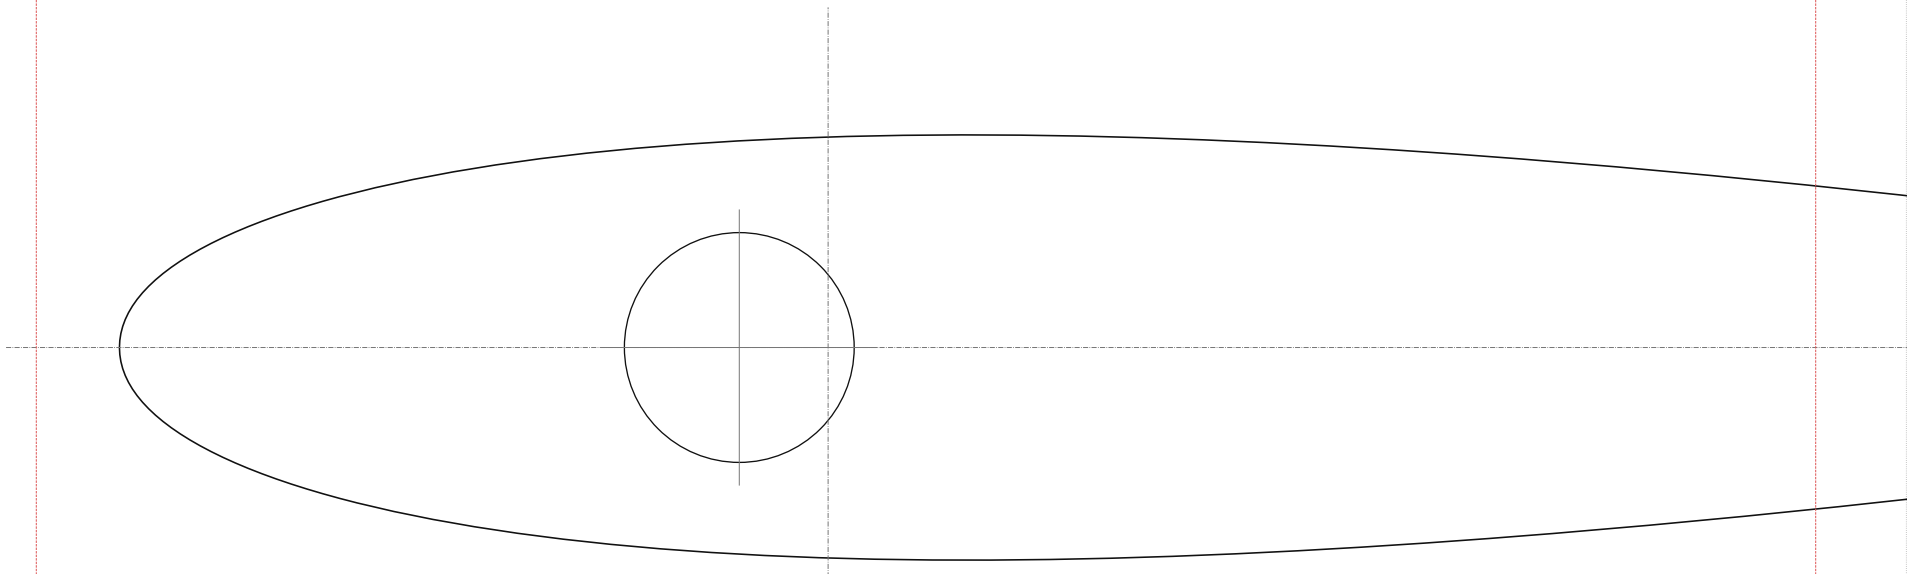


T15 WING NACA 0015 chord 375 (Rev C5; spar bore D30.4 at 82)

Hot-wire: screw template to the block end; lead in and out at the trailing edge.



100 mm check: print at 100% / Actual size

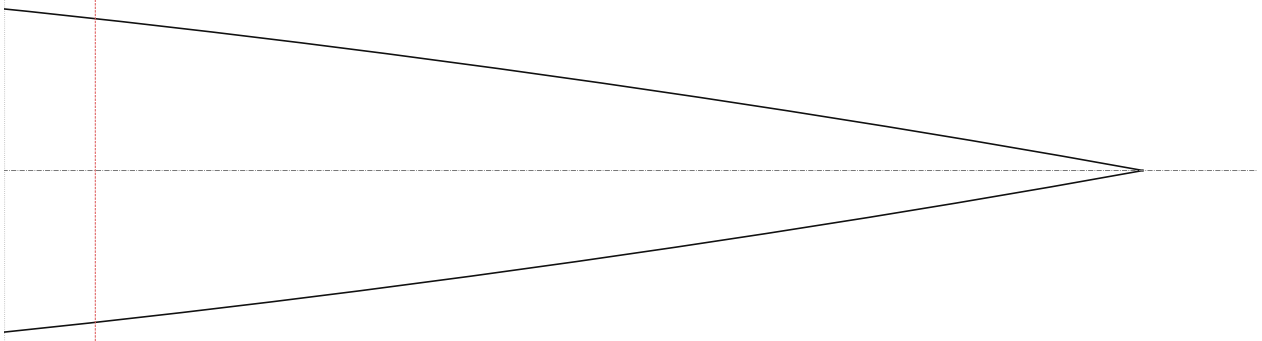




100 mm check: print at 100% / Actual size


T16 HATCH: lid, opening, O-ring, 12 x M5

x along the boat (bow to the left).

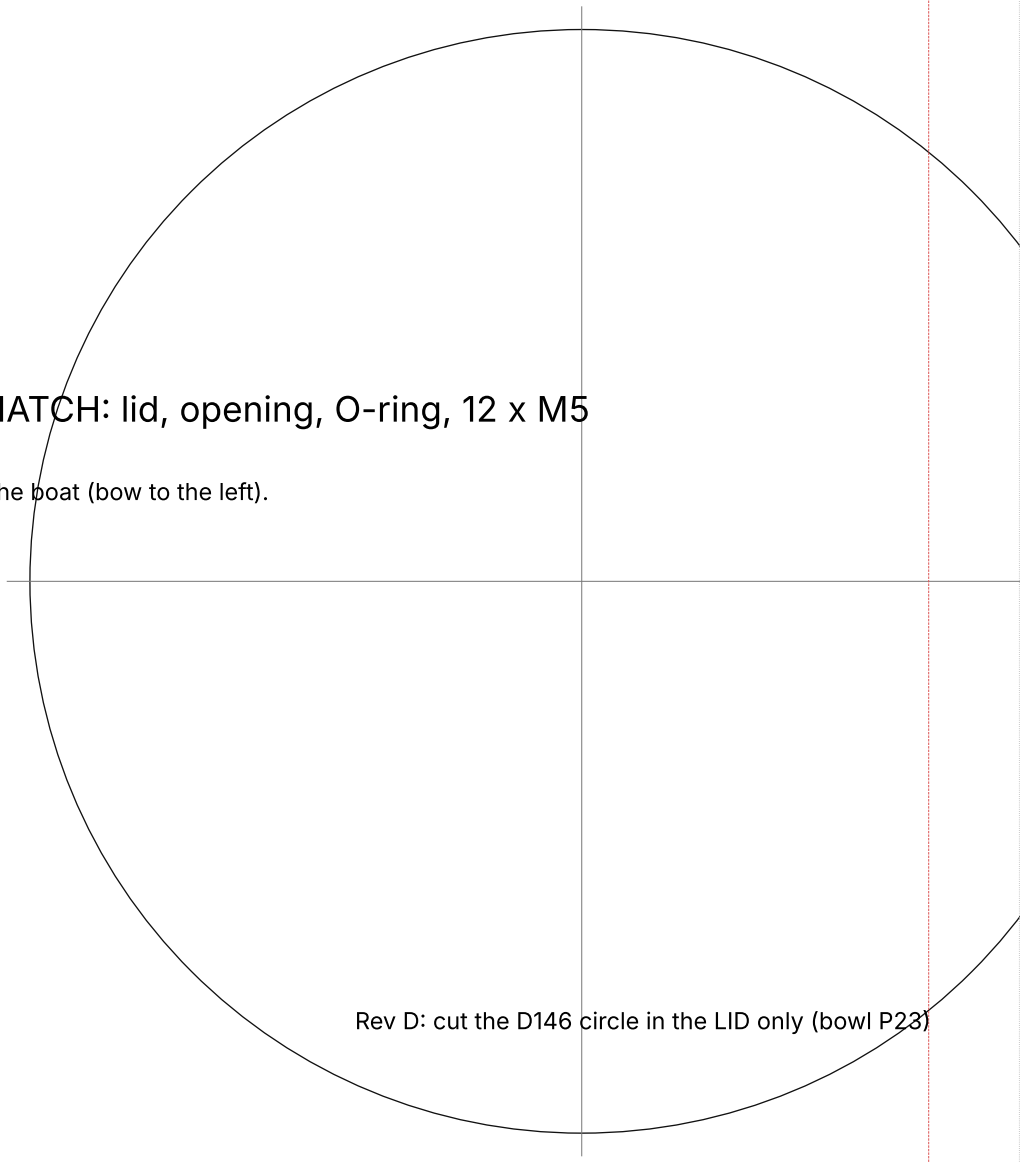


Rev D: cut the D146 circle in the LID only (bowl P23)

100 mm check: print at 100% / Actual size

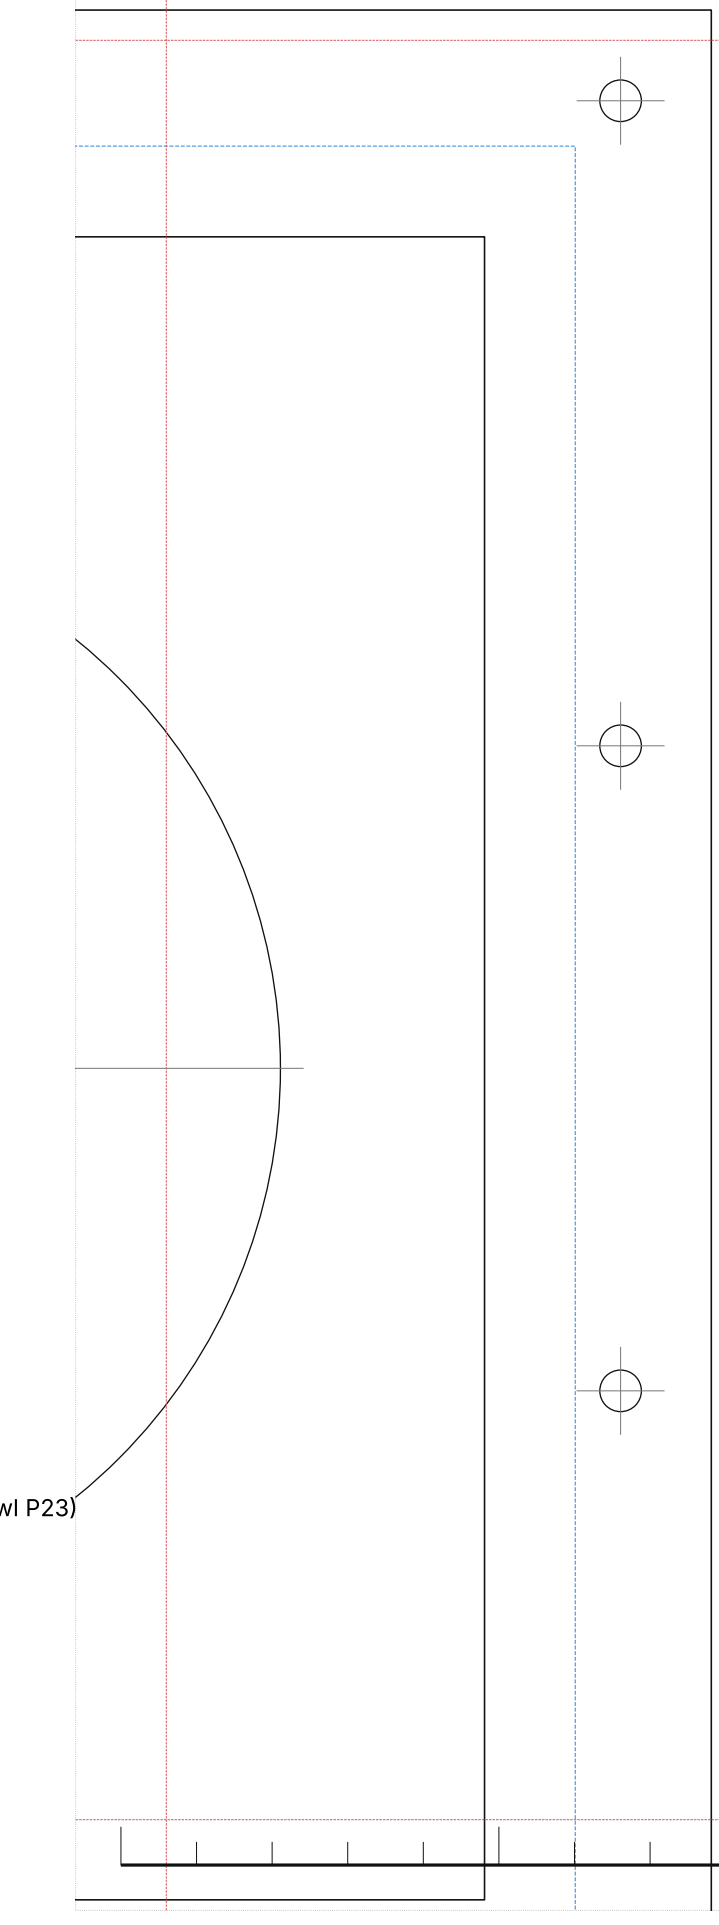


wl P23)

100 mm check: print at 100% / Actual size

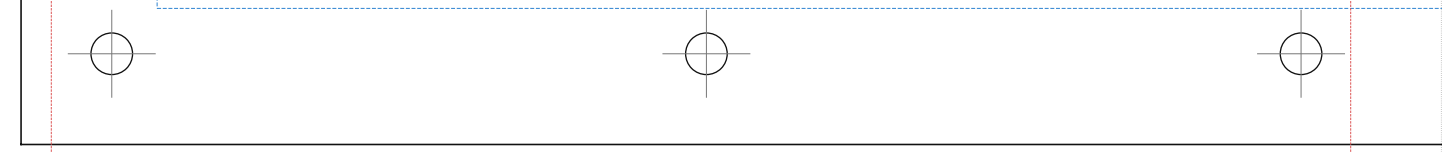

100 mm check: print at 100% / Actual size

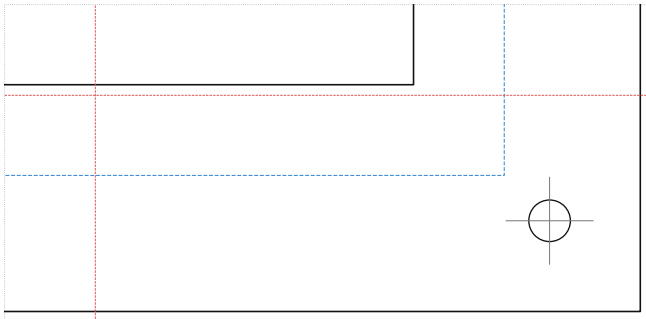




100 mm check: print at 100% / Actual size

T17 BULKHEAD x 300 (Rev C)

10 mm H80 foam + 2 × 6 oz glass each side. Cut on the solid line.



100 mm check: print at 100% / Actual size

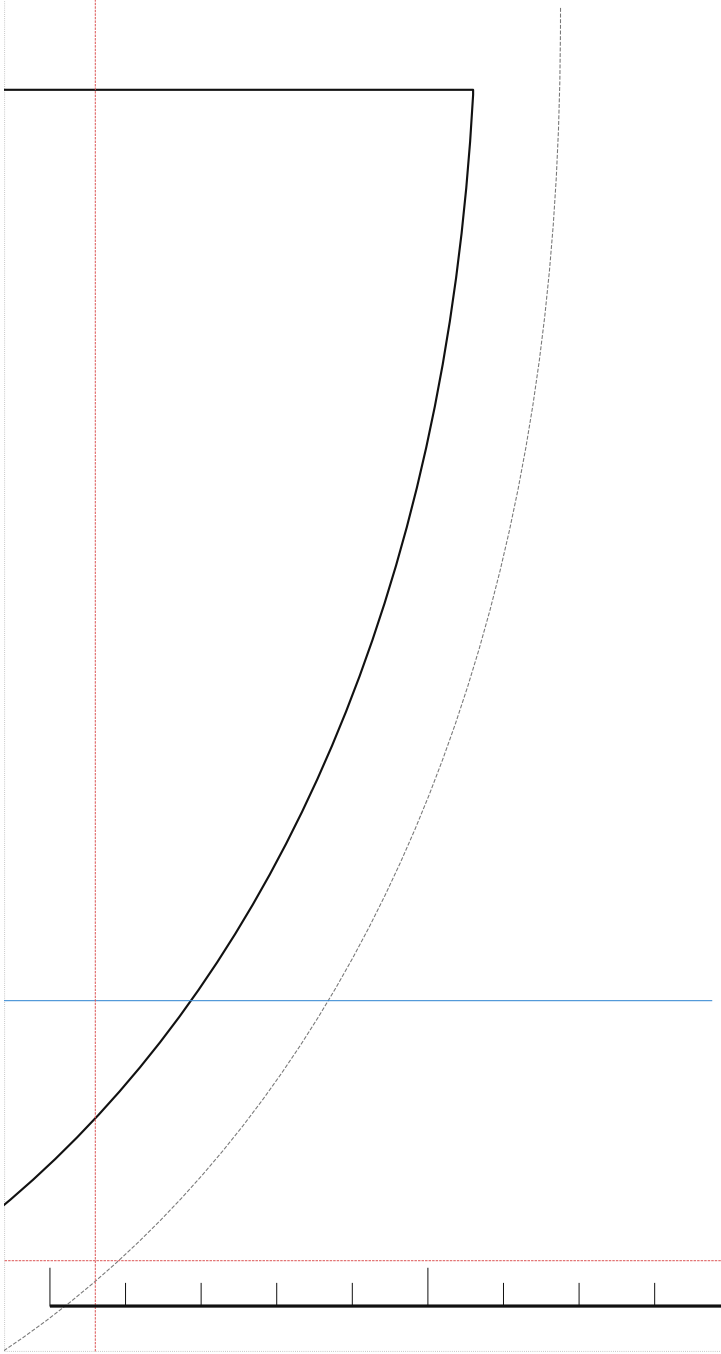


100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

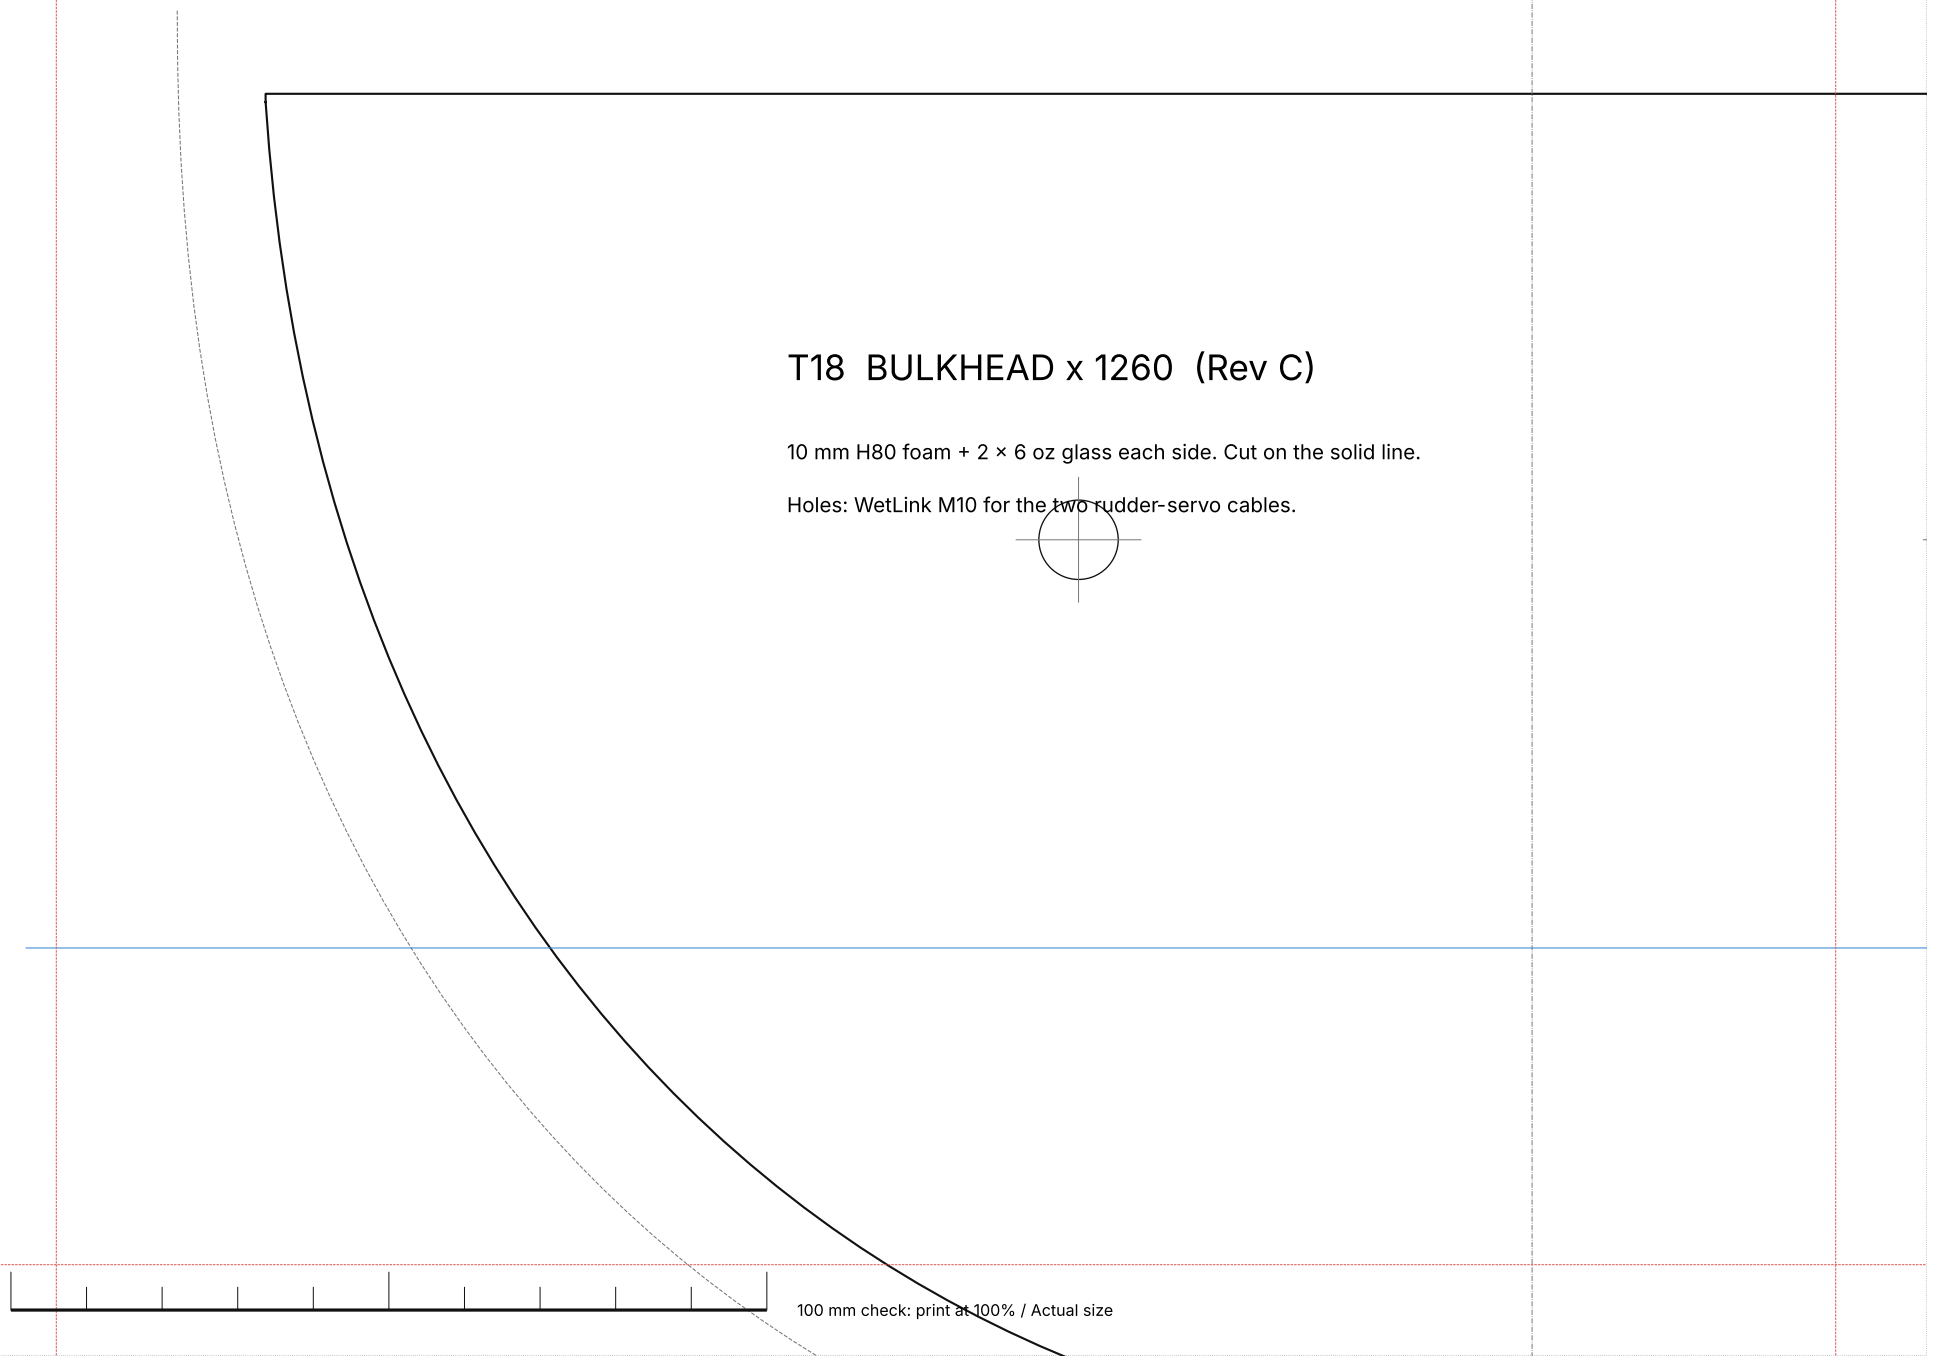


T18 BULKHEAD x 1260 (Rev C)

10 mm H80 foam + 2 × 6 oz glass each side. Cut on the solid line.

Holes: WetLink M10 for the two rudder-servo cables.

100 mm check: print at 100% / Actual size

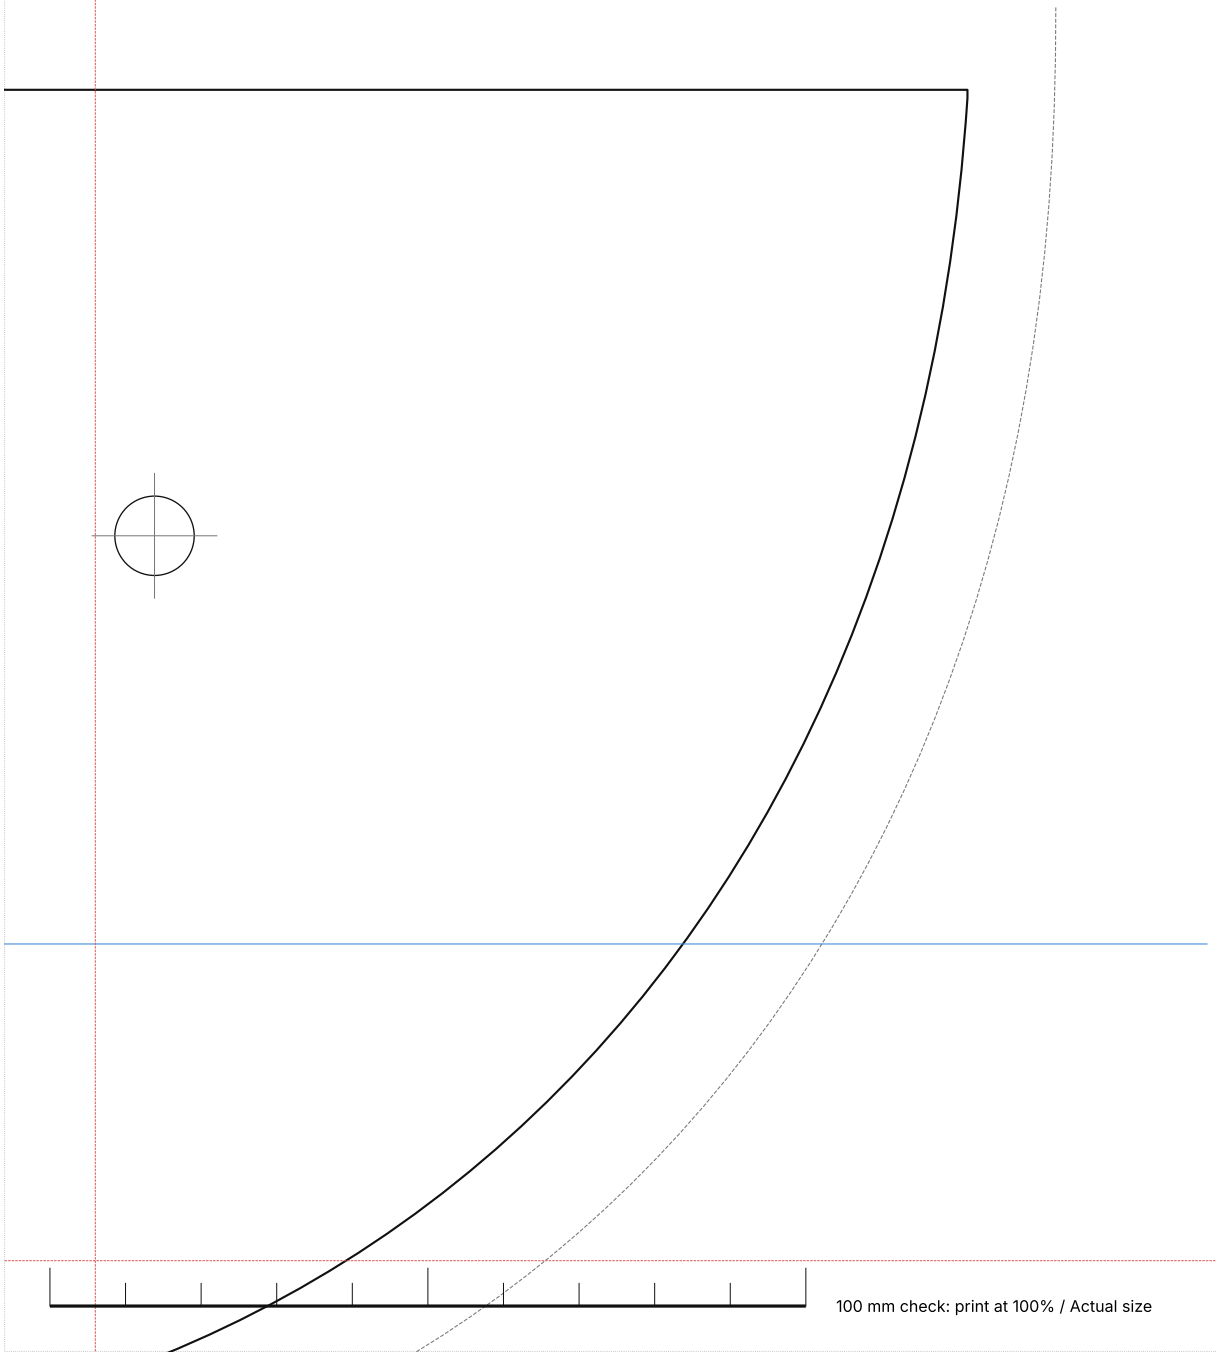

100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size




100 mm check: print at 100% / Actual size

T19 KEEL-BOX FLOOR x 650 (Rev C2)

9 mm marine ply + 2 × 6 oz each side. Cut on the solid line; trim to fit the hull. Limber holes D15.

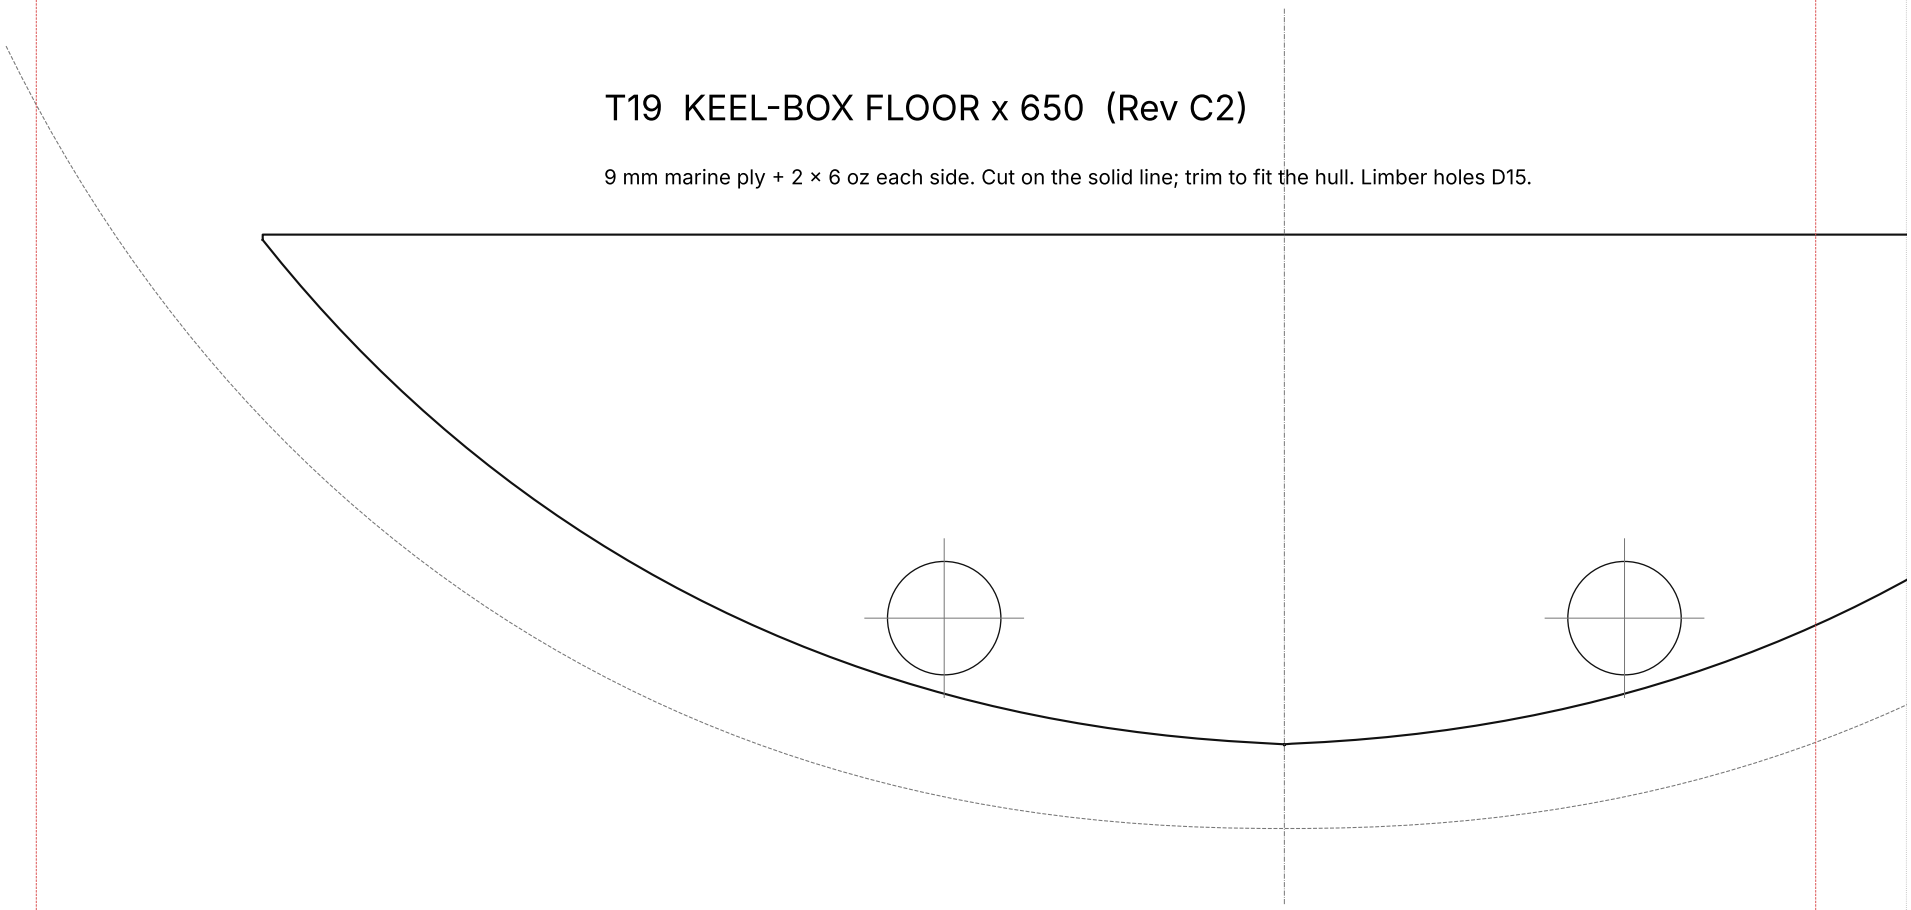

100 mm check: print at 100% / Actual size

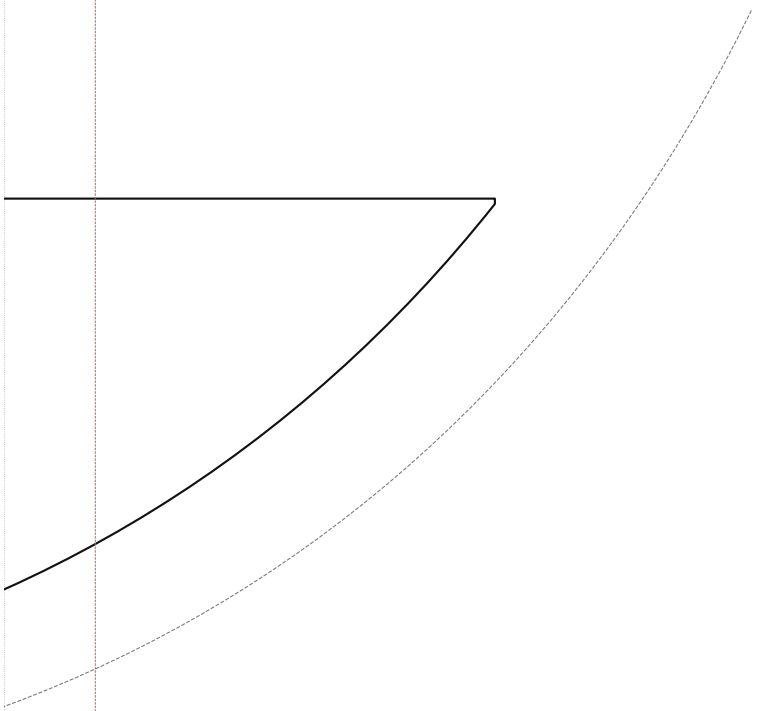




100 mm check: print at 100% / Actual size

T20 KEEL-BOX FLOOR x 800 (Rev C2)

9 mm marine ply + 2 × 6 oz each side. Cut on the solid line; trim to fit the hull.

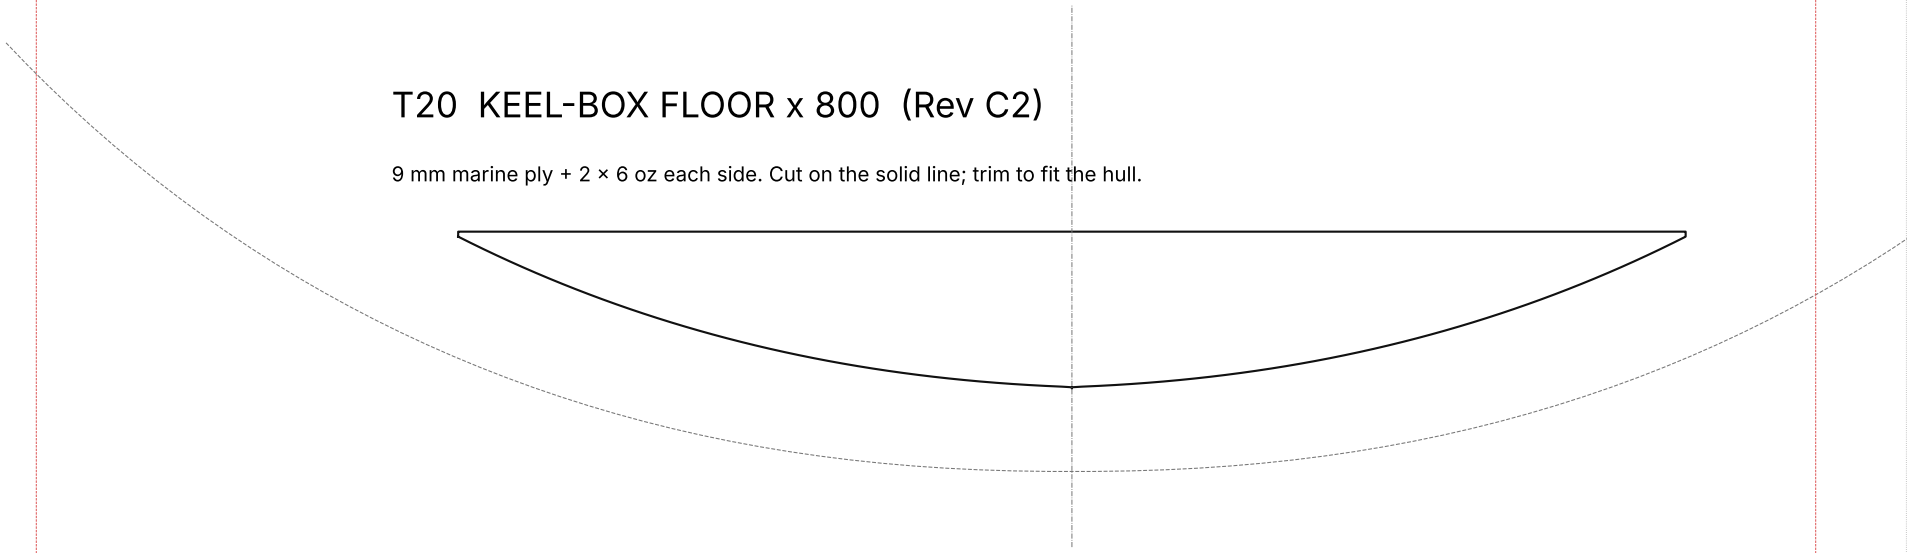


100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size

T21 WEED FAIRING side profile (Rev E)

XPS, 22 wide at the fin, tapered to 8 at the nose. Fit to the real fin and bulb; 2 × 6 oz over.

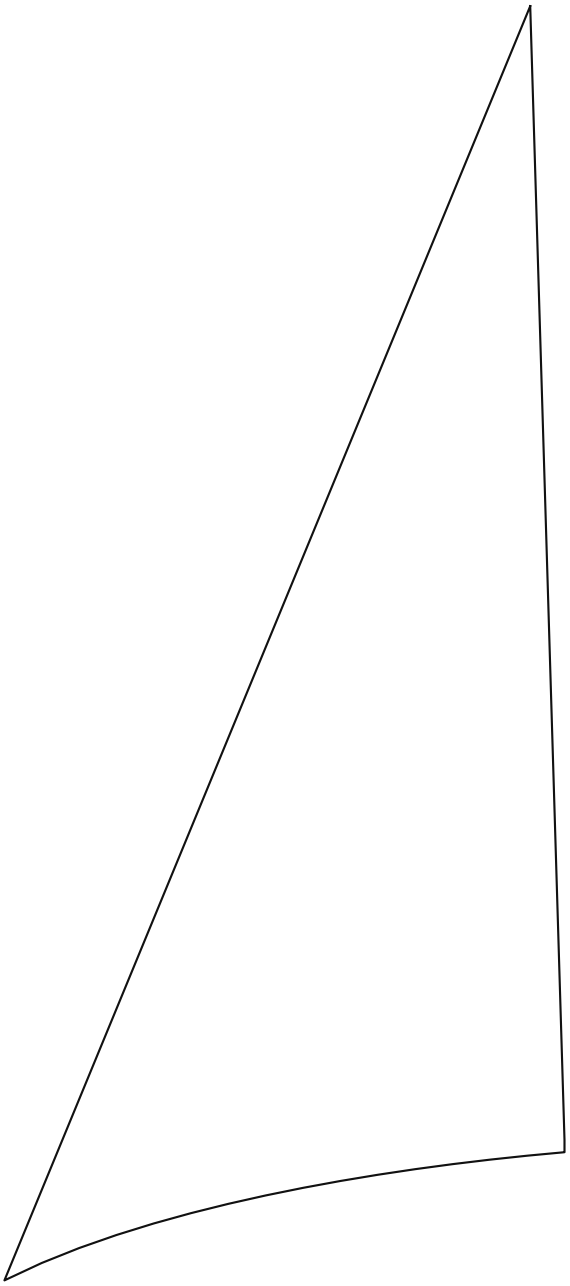



100 mm check: print at 100% / Actual size



100 mm check: print at 100% / Actual size