# Instruction Level Parallelism



E. Sanchez, M. Sonza Reorda Politecnico di Torino

Dipartimento di Automatica e Informatica (DAUIN)

Torino - Italy

This work is licensed under the Creative Commons (CC BY-SA) License. To view a copy of this license, visit http://creativecommons.org/licenses/by-sa/3.0/



## INSTRUCTION-LEVEL PARALLELISM

- Pipelines exploit the parallelism existing among instructions (*Instruction-Level Parallelism*, or ILP), which allows their execution in parallel
- The highest the amount of ILP that can be found and exploited, the better the performance of the pipeline.

## **Approaches**

- •There are two approaches to exploit ILP:
  - Dynamic, depending on the hardware to locate parallelism
  - Static, depending on the software (i.e., the compiler)
- The two approaches can be partly combined.

## Dynamic approach


- It dominates the desktop and server markets, but is also included in PMD (Personal Mobile Devices), with products such as
  - Intel Core Series
  - ARM Cortex-A9
  - Athlon
  - MIPS R10000/12000
  - Sun UltraSPARC III
  - PowerPC 603, G3, G4
  - Alpha 21264.

#### Static approach

- It can mainly be found in products for the embedded market (e.g., the ARM Cortex-A8)
- However, both the Intel IA-64 and Itanium also use this approach.

#### **Basic blocks**

- The first kind of ILP is the one among instructions belonging to the same basic block
- A basic block is a sequence of instructions with
  - No branches in, except to the entry
  - No branches out, except at the exit.

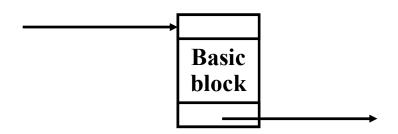

## Rescheduling

Within a basic block, the compiler may reschedule instructions to optimize the code.

#### **Example**

Consider the following high-level code

$$a = b + c;$$
  
 $d = e - f;$ 

Assume load instructions have a latency of one clock cycle.

## Example (I)

 The assembly code implementing the required computation is

```
LD Rb, b
LD Rc, c
ADD Ra, Rb, Rc
SD Ra, Va
LD Re, e
LD Rf, f
SUB Rd, Re, Rf
SD Rd, Vd
```

## Example (I)

```
5
LD
    Rb, b
               IF ID EX MEM WB
                                                                 1
LD
    Rc, c
                  IF ID EX
                           MEM WB
                                                                 2
ADD Ra, Rb, Rc
                     IF ID st EX
                                   MEM WB
                                                                 1
SD
    Ra, Va
                        ΙF
                            st
                               ΙD
                                   EΧ
                                       MEM WB
                                                                 1
LD
   Re, e
                               ΙF
                                       EΧ
                                          MEM WB
    Rf, f
LD
                                   ΙF
                                          EX MEM WB
SUB Rd, Re, Rf
                                              st EX MEM WB
                                       ΙF
    Rd, Vd
SD
                                           ΙF
                                                  ID EX
                                              st
                                                         MEM WB
```

14 clock cycles are required.

## Example (II)

The optimally scheduled code is

```
LD Rb, b

LD Rc, c

LD Re, e

ADD Ra, Rb, Rc

LD Rf, f

SD Ra, Va

SUB Rd, Re, Rf

SD Rd, Vd
```

No load stalls are required.

## **Example (II)**

```
IF ID EX MEM WB
LD
    Rb, b
LD
    Rc, c
                 IF ID EX
                          MEM WB
    Re, e
LD
                         EX MEM WB
   Ra, Rb, Rc
                       ΙF
                             EX
                          ID
                                 MEM WB
   Rf, f
LD
                          ΙF
                                 EΧ
                                    MEM WB
SD
    Ra, Va
                                 ID
                                    EΧ
                                        MEM WB
SUB Rd, Re, Rf
                                 ΙF
                                        EX MEM WB
    Rd, Vd
SD
                                     ΙF
                                        ID
                                           EX MEM WB
```

#### 12 clock cycles are required.

#### **ILP** in basic blocks

- For typical MIPS programs the typical size of a basic block is between 4 and 7 instructions
- Since these instructions are likely to be dependent one from the other, the amount of parallelism existing within a basic block is normally rather small
- To further increase the available parallelism, the parallelism among iterations of a loop is considered.

#### Loop-level parallelism

#### Example

```
for (i=0; i<1000; i++)

x[i] = x[i] + y[i];
```

- Any iteration of the loop is independent on the others, so that they can be overlapped
- There are two ways for exploiting the loop-level parallelism:
  - loop unrolling (either static or dynamic)
  - SIMD.

#### Loop unrolling

It is a technique that unrolls the loops, by explicitly replicating the loop body multiple times.

## Loop unrolling

It is a technique that unrolls the loops, by explicitly replicating the loop body multiple times.

```
for (i=0; i< N/4; i++)
for (i=0; i< N; i++)
     body
                                  body
                                  body
```

If the iteration body corresponds to a basic block, after loop unrolling the block is wider.

```
body
body
```

```
for (i=0;i<N;i++)
{
    x[i] = x[i]+ y[i];
}

x[i] = x[i]+ y[i];

x[i+1] = x[i+1]+ y[i+1];

x[i+2] = x[i+2]+ y[i+2];

x[i+3] = x[i+3]+ y[i+3];
}</pre>
```

## **Advantages**

#### In this way

- the relative overhead due to the control of iterations is reduced
- the loop body is made wider, thus increasing the chance for the compiler to exploit rescheduling to eliminate stalls.

## **Disadvantages**

Loop unrolling increases the size of the code.

#### SIMD

Single instruction stream, multiple data streams (SIMD) may be exploited in

- Vector processors
  - A vector instruction operates on a set of data, instead of on a scalar data (as a normal instruction)
- Graphics Processing Units (GPUs)
  - Different functional units perform similar tasks in parallel acting on multiple data.

 Let consider the following code fragment to be executed in a vector computer:

```
for ( i=0; i<1000, i++)

x[i] = x[i] + y[i];
```

- This could be transformed in the following sequence of vector instructions:
  - Load vector x from memory
  - Load vector y from memory
  - Add the two vectors
  - Store the resulting vector.

#### **DEPENDENCIES**

- If two instructions are independent, they can be executed in parallel without any stall
- If they are dependent, they have to be executed in order (although partly overlapped)
- Therefore, exploiting the parallelism among instructions requires identifying dependencies existing among them
- There are three kinds of dependencies:
  - data dependencies
  - name dependencies
  - control dependencies.

#### Data dependencies

- An instruction i is data dependent on instruction j if either of the following conditions holds:
  - instruction i produces a result that is used by instruction j, or
  - instruction j is data dependent on instruction k, and instruction k is data dependent on instruction i.

#### Example

```
Loop: L.D F0, 0(R1)
ADD.D F4, F0, F2
S.D F4, 0(R1)
```

## **Data dependencies**

 An instruction i is data dependent instruction j if either of the follow holds:

 instruction i produces a result that instruction j, or

 instruction j is data dependent on instruction k is data dependent on First dependence

Example

Loop: L.D (F0), 0 (R1)
ADD.D F4, (F0), F2
S.D F4, 0 (R1)

## **Data dependencies**

 An instruction i is data depende instruction j if either of the follow holds: Second dependence

- instruction i produces a result that instruction j, or
- instruction j is data dependent on in instruction k is data dependent on j

action k, and truction i.

Example

Loop: L.D F0 0 (R1)
ADD.D F4 F0, F2
S.D F4 0 (R1)

#### Dependencies and hazards

- Dependencies are properties of the program
- Hazards are properties of the pipeline organization
- Stalls depend on the program and the pipeline: a dependency can cause a hazard or not, and the hazard can cause a stall or not (e.g., forwarding can avoid the stall)
- Dependencies
  - create the possibility for a hazard
  - determine the order in which results must be calculated
  - set an upper bound on the amount of parallelism that can be exploited.

#### Memory dependencies

- Detecting dependencies involving registers is easy
- Detecting dependencies involving memory cells is much more difficult, because accesses to the same cell can look very different
- If static techniques are used, the compiler must adopt a conservative approach, assuming that any load instruction refers to the same cell of the previous store
- Dependencies involving memory cells can only be detected at run time, when the addresses are known.

#### Name dependencies

- A name dependency occurs when two instructions refer to the same register or memory location (name) but there is no flow of data associated to the name
- There are two kinds of name dependencies between an instruction i and an instruction j that follows:
  - antidependence: instruction j writes a register or memory location that instruction i reads, and instruction i is executed first
  - output dependence: both instruction i and instruction j write the same register or memory location.

```
Loop:
     L.D
             F0, 0(R1)
       ADD.D F4, F0, F2
       S.D
            F4, 0(R1)
             F0, -8 (R1)
       L.D
       ADD.D F4, F0, F2
             F4, -8 (R1)
       S.D
             F0, -16(R1)
       L.D
```

#### Antidependence

## **Example**

Loop: L.D F0, 0(R)

ADD.D F4, (F0), F2

S.D F4, O(R1)

L.D (F0) -8 (R1)

ADD.D F4, F0, F2

S.D F4, -8 (R1)

L.D F0, -16(R1)

• • •

**Output dependence** 

Loop: L.D

F0, 0(R1)

ADD.D

F4, F0, F2

S.D

F4, 0(R1)

L.D

F0, -8(R1)

ADD.D

F4, F0, F2

S.D

F4, -8 (R1)

L.D

F0, -16(R1)

• • •

## Register renaming

- Name dependencies do not prevent from reordering involved instructions, provided that we change the register used by one of the two instructions
- This operation can be performed
  - Statically, i.e., by the compiler
  - Dynamically, i.e., by the processor
- A similar method (although more difficult to implement) can be followed for name dependencies involving Memory locations.

DIV.D F0, F2, F4

ADD.D F6, F0, (F8)

S.D F6, 0(R1)

SUB.D (F8) F10, F14

MUL.D F6, F10, F8

- Antidependence
- Could lead to a hazard

DIV.D F0, F2, F4

ADD.D F6, F0, F8

S.D F6, 0(R1)

SUB.D T, F10, F14

MUL.D F6, F19, I

Using a temporary register T eliminates the antidependence

DIV.D F0, F2, F4

ADD.D (F6) F0, F8

S.D F6, 0(R1)

SUB.D F8, F10, F14

MUL.D (F6), F10, F8

- Output dependence
- Could lead to a hazard

DIV.D F0, F2, F4

ADD.D **S**, F0, F8

S.D S, 0(R1)

SUB.D F8, F10, F14

MUL.D F6, F10, F8

Using a temporary register S eliminates the output dependence

## Static register renaming

- Some compilers perform register renaming to reduce the number of hazards (i.e., stalls)
- Note that detecting all name dependencies requires carefully analyzing the code, taking also into account the effects of branches.

#### Hazards and data dependencies

- Each time an operand involved in a dependency is accessed in a different order than the original one, there could be a hazard
- This means that the program output may become wrong
- Data hazards can be classified in three categories:
  - RAW (Read After Write)
  - WAW (Write After Write)
  - WAR (Write After Read).

#### **Data Hazard Classification**

- Consider an instruction i followed by an instruction j
  - RAW (Read After Write): j tries to read a source before i writes it
  - WAW (Write After Write): j tries to write a destination before it is written by i
  - WAR (Write After Read): j tries to write a destination before it is read by i.
- RAR never corresponds to a hazard.

#### **RAW** hazards

- They are the most common
- They correspond to a true data dependence.

#### Example

```
DADD R1, R2, R3
DSUB R4, R5, R1
```

#### **WAW hazards**

- They stem from output dependences
- They are possible if
  - instructions may write in more than one stage, or
  - an instruction can proceed even if a previous instruction is stalled or processed by a stage for more than one clock cycle.

#### Example

Suppose that load/store instructions require three memory cycles. The following situation causes a WAW hazard:

```
LW R1, 0(R2) IF ID EX MEM1 MEM2 MEM3 WB
DADD R1, R2, R3 IF ID EX MEM WB
```

#### **WAR** hazards

- They stem from antidependence
- They are possible if there are instructions that write early in the pipeline, and others that read operands late
- The former case happen when implementing complex addressing modes, e.g., the autoincrement/autodecrement ones
- WAR hazards are quite rare.

#### **Control dependencies**

- A control dependency occurs when an instruction depends on a branch.
- Example

## Constraints from control dependencies

- An instruction that is control dependent on a branch cannot be moved before the branch (so that its execution is no more controlled by the branch)
- An instruction that is not control dependent on a branch cannot be moved after the branch (so that its execution become dependent on the branch).

## Control dependence and program correctness

- Preserving control dependencies is a sufficient condition for preserving the program correctness
- But there are cases in which the reverse is not true
- The critical properties for program correctness are
  - exception behavior
  - data flow.

#### **Exception behavior**

- Any change in the order of instruction execution must not change how exceptions are raised in the program
- Example

```
DADDU R2, R3, R4
BEQZ R2, L1
LD R1, O(R2)
```

L1: ...

- The LD instruction can cause an exception
- Therefore, moving the load instruction before the BEQZ is not allowed, because an exception caused by the load can then happen no matter whether the branch is taken or not.

#### **Data flow**

- Data flow is the actual flow of data among instructions that produce results and consume them
- Data flow must be preserved
- Example

```
DADDU R1, R2, R3
BEQZ R4, L
DSUBU R1, R5, R6
L: ...
OR R7, R1, R8
```

The value of R1 used by the OR instruction must be that produced by the DADDU if the branch is taken, or that produced by the DSUBU if it is not taken.

- There are cases in which it is possible to violate the control dependence without affecting the exception behavior or the data flow
- Example

```
DADDU R1, R2, R3
BEQZ R12, L
DSUBU R4, R5, R6
DADDU R5, R4, R9
L: OR R7, R8, R9
```

Let assume that R4 is not used any more after L.

- There are cases in violate the control of affecting the exception
- Example

The DSUBU instruction can be moved before the BEQZ instruction, since

- the DSUBU instruction cannot generate exceptions
- the program results are not changed anyway.

By doing this, the compiler speculates, i.e., bets on the branch not to be taken.

```
DADDU R1, R2, R3
BEQZ R12, L
DSUBU R4, R5, R6
DADDU R5, R4, R9
L: OR R7, R8, R9
```

Let assume that R4 is not used any more after L.