
# \*ALL INDIA 1st RANK 17 TIMES IN GATE\*

# \*ALL INDIA 2<sup>nd</sup> RANK 10 TIMES IN GATE\*

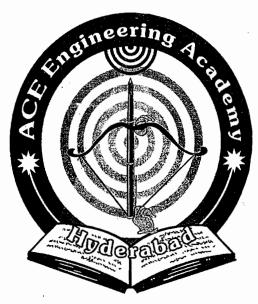

Offers excellent coaching for: GATE, IES, JTO, APGENCO, APTRANSCO, APPSC, CPWD etc.

For further details contact:

# \_ACE EDUCATIONAL ACADEMY

Head Office: 204, 2<sup>nd</sup> Floor, Rahman Plaza, Near Taj Mahal Hotel Opp. Methodist School New Gate; Fernandez Hospital lane, ABIDS, HYDERBAD – 500 001 Ph: 040 - 24752469, 24750437

Head Office:
Jahman Plaza,
Amhal Hotel
Jol New Gate;
Jospital lane,
JOB - 500 001

Branch Office:
Jord Floor, 201 A & B
Pancom Business Centre,
Ameerpet,
Hyderbad - 500 016
Ph: 040 - 65974465

www.aceenggacademy.com email: ace.gateguru@gmail.com

# **GATE - SYLLABUS**

Electronic Devices: Energy bands in silicon, intrinsic and extrinsic silicon. Carrier transport in silicon: diffusion current, drift current, mobility, and resistivity. Generation and recombination of carriers. p-n junction diode, Zener diode, tunnel diode, BJT, JFET, MOS capacitor, MOSFET, LED, p-I-n and avalanche photo diode, Basics of LASERs. Device technology: integrated circuits fabrication process, oxidation, diffusion, ion implantation, photolithography, n-tub, p-tub and twintub CMOS process.

# **ELECTRONIC DEVICES**

# CONTENTS

S.No.	Chapter	Page No.
01.	Semi Conductor Theory	01 – 31
02.	P – N Junction Theory and Characteristics	32 – 56
03.	Transistor Theory (BJT,FET)	57 – 90
04.	Basics of IC Bipolar, MOS and CMOS Types	91 – 104
05.	Basics of Opto Electronics	105 – 114
06.	Self Assessment_Questions	115 - 126

For

# GATE, DRDO, PSUs & IES

Managing Director
Y.V. Gopala Krishna Murthy

#### CHAPTER - I

SEMICONDUCTOR THOERY

(Electrons and holes in semiconductors, carriers statistics, mechanics of current flow in semiconductors, hall effect)

#### ATOMIC STRUCTURE

- · Every element has characteristic atoms.
- · Atoms of different elements contain electrons, which are completely identical.
- Atoms of every element have a positively charged nucleus. Almost entire mass of the atom is concentrated in the nucleus.
- The atom is composed of a positively charged nucleus surrounded by negatively charged electrons and the neutrons carry no charge.
- Mass of an atom is very small, mass of a carbon atom, 12<sub>C</sub>, is only 1.992678 ×10<sup>-26</sup> kg.
- Protons and neutrons are the constituents of a nucleus. The no. of protons (called the atomic number) and the no. of neutrons represented by the symbol Z and N respectively.
- The total no. of neutrons and protons in a nucleus is called its mass number A (=Z+N).
- Atom as a whole is electrically neutral and therefore contains equal amount of positive and negative charges.
- The radius of the electron has been estimated as 10<sup>-15</sup>m, and that of an atom as 10<sup>-10</sup>m.
- The electron surrounding the nucleus in an atom occupies different orbits.
- The mass of the electron is negligible compared to that of protons and neutrons, the mass
  of the atom depends mostly on the number of protons and neutrons in the nucleus.
- The basic unit of charge is the charge of the electron. The MKS unit of charge is the coulomb. The electron has a charge of 1.602 × 10<sup>-19</sup> coulomb and that of the electron rest mass is 9.109 × 10<sup>-31</sup> kg.
- The electron has a charge of  $1.602 \times 10^{-19}$  coulomb, it follows that a current of 1 ampere corresponds to the motion of  $1/(1.602 \times 10^{-19}) = 6.24 \times 10^{13}$  electrons past any cross section of a path in 1 second.
- The valence orbit can hold no more than eight electrons. When the valence orbit has
  eight electrons, it is saturated.
- If an atom loses an electron, it becomes a positive ion with a net charge of +1. If it gains an extra electron, it becomes a negative ion with a charge of -1.
- "Ionization potential" is the energy required to remove an electron from the outer orbit
  of an atom. The size of the atom decreases considerably, as more and more electrons are
  removed from the outer orbit.
- The work done by the system, when the extra electron is attracted form infinity to, the
  outer orbit of the neutral atom, is known as the "electron affinity" and correspondingly an
  increase in the size of the atom.
- The tendency of an atom to attract electrons to itself during the formation of bonds with other atoms is measured by the "electro negativity" of that atom.
- The magnitude of energy released, when two atoms come together from a large distance
  of separation to the equilibrium distance, is called the "bond energy".

- "Ionic bonding" forms between two oppositely charged ions, which are produced by the transfer of electrons from one atom to another.
- Sharing of electrons between neighboring atoms results in a "covalent bond", which is directional.
- Covalent bonding occurs by the sharing of electrons between neighboring atoms. This is in contrast to the transfer of electrons from one atom to another in the ionic bonding.
- The force on a unit positive charge at any point in an electric field is, by definition, the electric field intensity  $\varepsilon$  at that point.
- The force on a positive charge  $\mathbf{q}$  in an electric field of intensity  $\mathbf{\epsilon}$  is given by  $\mathbf{q}\mathbf{\epsilon}$ , the resulting force being in the direction of the electric field. Thus,  $\mathbf{f}_{\mathbf{q}} = \mathbf{q}\mathbf{\epsilon}$  where  $\mathbf{f}_{\mathbf{q}}$  is in newtons,  $\mathbf{q}$  is in coulombs and  $\mathbf{\epsilon}$  is in volts per meter.

The magnitude of the charge on the electron is e, the force on an electron in the field is f = -ee. The minus sign denotes that the force is in the direction opposite to the field.

- A unit of work or energy, called the electron volt (eV), is defined as follows:  $1 \text{ eV} = 1.602 \times 10^{-19} \text{ J}$
- The name electron volt arises from the fact, if an electron falls through a potential of one volt, its kinetic energy will increase by the decrease in potential energy, or by eV = (1.602 × 10<sup>-19</sup>c) (1V) = 1.602 × 10<sup>-19</sup> J = 1eV
- The force of attraction between the nucleus and the electron is  $e^2/(4\pi\epsilon_0 r^2)$  in newtons, where e = electron charge in coulombs r = separation between the two particles in meters  $\epsilon_0 =$  permittivity of free space.
- The potential energy of the electron at a distance r from the nucleus is  $-e^2/(4\pi\epsilon_0 r)$ , and its kinetic energy is  $(1/2)mv^2$ .
- The total energy of the electron in Joules is  $w = -e^2 / (8\pi\epsilon_0 r)$  [Rutherford atomic model]
- This expression shows that the energy of the electron becomes smaller (i.e., more negative) as it approaches closer to the nucleus.
- The minimum energy required for the electron to escape from the metal at absolute zero
  of temperature is called the "work function E<sub>w</sub>".
- The total energy of electron in stationary states in Joules and in electron volts is given by [Bohr atomic model].

$$W_{n} = \underbrace{(-me^{4})}_{(8\epsilon_{p}^{2}h^{2}n^{2})}$$
 Joules 
$$W_{n} = \underbrace{(-me^{3})}_{(8\epsilon_{0}^{2}h^{2}n^{2})}$$
 Where  $m =$  electronic mass in kilograms 
$$h = Planck's \text{ constant in Joules - seconds }$$
 
$$n = orbit \text{ number}$$
 
$$= \underbrace{-13.6}_{n^{2}} \text{ eV}$$

• It should be noted that the energy is negative and therefore, the energy of an electron in its orbit increases as 'n' increases.

To remove an electron from the first orbit (n = 1) of the hydrogen atom to outside of the atom, that is to ionize the atom, the energy required is 13.6 eV. This is known as the "ionization energy" or the "ionization potential" of the atom.

ACE Academy

- The lowest energy level E<sub>1</sub> is called the normal or the ground state of the atom and the higher energy levels E<sub>2</sub>, E<sub>3</sub>, E<sub>4</sub>, ..... are called the excited states.
- The emitted radiation by its wavelength λ in angstroms, when electron transition from one state to the other state is


Atomic concentration  $n = (A_0 d) / A$  atoms/cm<sup>2</sup>  $A = \text{atomic weight} \qquad d = \text{density} \qquad A_0 = \text{Avogadro number}$ 

<b>-</b>	_	
For Germanium	For Silicon	
A = 72.6	A = 28	
$d = 5.32 \text{ g/cm}^3$	20	
A = 6.022 ±0.23	$d = 2.33 \text{ g/cm}^3$	
$A_0 = 6.023 \times 10^{23}$ molecules/ mole	$A_0 = 6.023 :: 10^{23}$ molecu	100/1
Then, $n = 4.4 \times 10^{22} \text{ atoms/cm}^3$	Then n == 5 == 10 <sup>22</sup>	ites/ mote
- 1	Then, $n = 5 \times 10^{22}$ atoms	/cm <sup>3</sup>

 $n_{Si} > n_{Ge}$  , because atomic number of silicon is less than atomic number of Germanium.

# **Energy Band Theory of Crystals**

- The inter atomic spacing is gradually decreases, there will be a gradual increase in the
  interaction between the neighboring atoms. Due to this interaction, the atomic wave
  functions overlap, and the crystal becomes an electronic system which should obey the
  Pauli's exclusion principle.
- An energy gap exists between the two energy bands. This energy gap is called as forbidden energy gap  $E_G$ , as no electrons can occupy states in this gap.
- The band below energy gap Ec is called Valence band. The band above the energy gap
   Ec is called conduction band.
- The upper band, called the conduction band, consists of infinitely large number of closely spaced energy states. The lower band, called the valence band, consists of closely spaced completely filled energy states and only two electrons are allowed in each energy state according to Pauli's exclusion principle as shown in fig.



- The electrons in the valence band would not move under the action of applied voltage or field because of completely filled energy states. Therefore, the valence electrons do not
- The electrons in the upper (or conduction band) can, however, gain momentum and move since there are closely spaced empty available states in the band.
- At equilibrium spacing, the lowest conduction band energy is E<sub>c</sub> and highest valence band
- The gap between the top of the valence band and bottom of the conduction band is called 'energy band gap' (Energy gap). It may be large, small or zero, depending upon the material.
- The bottom of the conduction band corresponds to zero electron-velocity or kinetic energy and simply gives us the potential energy at that point in space.
- For holes, the top of the valence band corresponds to zero kinetic energy.

# Insulators, Semiconductors and Metals

A very poor conductor of electricity is called an insulator; an excellent conductor is a metal; and a substance whose conductivity lies between these extremes is semiconductor.

- For a diamond (Carbon) crystal the region containing no quantum states is several electron volts high. (E  $_{G} \approx 6 \mathrm{eV}$ ). This large forbidden band separates the filled valence region from the vacant conduction band, and therefore no electrical conduction is possible. Insulator is a negative temperature coefficient of resistance.
- The energy gap is so large that electrons cannot be easily excited from the valence band to the conduction band by any external stimuli (Electrical, thermal or optical). Metal: - This refers to a situation, where the conduction and valence bands are overlapping. This is the case of a metal where  $\mathbf{E}_{\mathbf{G}}=0$ . This situation makes a large number of electrons available for electrical conduction and, therefore the resistance of such materials is low or the conductivity is high.

Semiconductor: - A substance for which the width of the forbidden energy region is relatively small (~ leV) is called a semiconductor.

- The most important practical semiconductor materials are germanium and silicon, which have values of E<sub>G</sub> of 0.785 and 1.21 eV, respectively, at 0°K.
- Energies of this magnitude normally cannot be acquired from an applied field.
- Hence the/valence band remains full, the conduction band empty, and these materials are insulators at very low temperatures ( > 0°K).
- However, the conductivity increases with temperature as we explain below, and for this reason these substances are known as "intrinsic semiconductors".
- As the temperature is increased, some of these valence electrons acquire thermal energy greater than E<sub>G</sub> and hence move into the conduction band.
- These thermally excited electrons at T > 0K, partially occupy some states in the conduction band which have come from the valence band leaving equal number of holes
- The phrase "holes in a semiconductor" refers to the empty energy levels in an otherwise. filled valence band.

- The importance of the hole is that it may serve as a carrier of electricity, comparable in effectiveness with the free electron.
- As the temperature of a semiconductor is reduced to zero, all valence electrons remain in valence band.
- If a certain impurity atoms are introduced into the crystal, these result in allowable energy states which lie in the forbidden energy gap. These impurity levels also contribute to the conduction.
- A semiconductor material where this conduction mechanism predominates is called an "extrinsic (impurity) semi conductor".
- The energy gap  $E_G$  for silicon decreases with temperature at the rate of  $3.60 \times 10^{-4} \, \text{eV}/^{\circ} \text{K}$ . Hence, for silicon,

$$E_G(T) = 1.21 - 3.60 \times 10^4 \text{ T}$$
 and at room temperature (300°K),  $E_G = 1.1 \text{ eV}$ .


Similarly for germanium.

$$E_G(T) = 0.785 - 2.23 \times 10^{-4} \text{ T}$$

and at room temperature,  $E_G = 0.72 \text{ eV}$ 

The fundamental difference between a metal and a semiconductor is that the former is unipolar (conducts current by means of charges (electrons) of one sign only); where as a semiconductor is bipolar (contains two charge carrying "particles" of opposite sign(electrons and holes)).

Current Density:- If N electrons are contained in a length L of conductor (fig) and if it takes an electron a time T sec to travel a distance of L meter in the conductor, the total number of electrons passing through any cross section of wire in unit time is N/T.



Thus the total charge per second passing any point, which by definition is the current in Where  $q = 1.602 \times 10^{-19} \text{ C}$ amperes, is I = Nq / T .....(eq.1)

By definition, the current density, denoted by the symbol J, is the current per unit area of the conducting medium, i.e. assuming a uniform current distribution J = I/A .....(eq.2)

Where J is in amperes per meter square, and A is the cross - section area (in meters) of the conductor. This becomes, by eq.1 J = Nq / TA ....(eq.3)

But it has been pointed out that the average, or drift, speed v m/sec of the electrons, is

$$V = L/T$$
 i.e.,  $T = L/v$ 

Then, the eq.3 becomes  $J = Nqv / LA \dots (eq.4)$ 

From above fig. it is evident that LA is simply the volume containing the N electrons, and so (N/LA) is the electron concentration n (in electrons per cubic meter). Thus

$$n = N/LA$$
 And eq.4 reduces to  $J = n qV = \rho V$ 

Where  $\rho = nq$  is the charge density, in coulombs per cubic meter, and v is in meters per second. C 200

#### Mobility and Conductivity:

- If a constant electric field ε (Volts per meter) is applied to a substance, the electrons
  would be accelerated and a finite value of drift velocity v is attained.
- This drift velocity v is in the direction opposite to that of the electric field, and its magnitude is proportional to ε. Thus
   v = με

Where  $\mu$  (m<sup>2</sup> / V – s) is called the mobility of the electrons.

- The directed flow of electrons with a drift velocity v constitutes a current.
- If the concentration of free electrons is n (electrons per cubic meter), the current density J
  (amperes per square meter) is

• The conductivity is proportional to the concentration n of free electrons.

#### Mobilities of Electrons and Holes in Silicon and Germanium

Species	Mobility at roon	temperature, m <sup>2</sup> / V-sec
N 1	Silicon	Germanium
Electrons	0.14	.0.39
Holes	0.05	0.19

- · By observing the above table, the electron mobility is about three times the hole mobility.
- For a good conductor, n is very large (~ 10<sup>28</sup> electrons / m³); for an insulator, n is very small (~ 10<sup>7</sup>); and for a semiconductor, n lies between these two values.
- In a certain temperature range, the electrical conductivity of a semiconductor increases with increase in temperature. This is because the carrier concentration increases substantially, but the mobility of carriers decreases with increase in temperature.
- The parameter  $\mu$  varies as  $T^m$  over a temperature range of 100 to 400°K. For silicon, m=2.5 (2.7) for electrons (holes), and for germanium, m=1.66(2.33) for electrons(holes). The mobility is also found to be a function of electric field intensity  $\epsilon$  and remains constant only if  $\epsilon < 10^3$  V/cm in n type silicon. For  $10^3 < \epsilon < 10^4$  V/cm,  $\mu_n$  varies approximately as  $\epsilon^{-1/2}$ . For higher fields,  $\mu_n$  is inversely proportional to  $\epsilon$  and the carrier speed approaches the constant value of  $10^7$  cm/s.

### Electrons and Holes in an Intrinsic Semiconductor

- Germanium (Ge) and Silicon (Si) are the two most important semiconductors used in electronic devices.
- The crystal structure of these materials consists of a regular repetition in three dimensions
  of a unit cell having the form of a tetrahedron.
- Each atom in a Ge(Si) crystal contributes four valence electrons, so that the atom is tetravalent.

- Each of the valence electrons of a Ge(Si) atom is shared by one of its four nearest neighboring atoms.
- The bonding between this electron pair is a covalent bond.

**ACE Academy** 

- At a very low temperature (say 0°K), semiconductor behaves as an insulator, since no free carriers of electricity are available.
- At room temperature, some of the covalent bonds will be broken because of the thermal
  energy supplied to the crystal, and conduction is made possible.
- The energy E<sub>G</sub> required to break such a covalent bond is about 0.72 eV for germanium and 1.1 eV for silicon at room temperature.
- Hole in a lattice is designed as vacancy created by removal of electron from covalent bond.
- The absence of the electron in the covalent bond (incomplete) is called a hole.
- The importance of the hole is that it may serve as a carrier of electricity comparable in effectiveness to the free electron.
- The motion of the hole in one direction actually means the transport of a negative charge an equal distance in the opposite direction.
- So far as the flow of electric current is concerned, the hole behaves like a positive charge
  equal in magnitude to the electronic charge. We can consider that the holes are physical
  entities whose movement constitutes a flow of current.
- In a pure (intrinsic) semiconductor the number of holes in a valence band is equal to the number of free electrons in the conduction band.
- Thermal agitation continues to produce new hole electron pairs, whereas other hole electron pairs disappear as a result of recombination.
- Two types of carrier flow exist in an intrinsic semiconductor. First, there is the flow of
  free electrons through larger orbits (Conduction band). Second, there is the flow of holes
  through smaller orbits (Valence Band).

# Conductivity of a Semiconductor

- With each hole electron pair created, two charge carrying particles are formed.
- One is negative (free e ) of mobility  $\mu_n$ , and the other is positive (hole) of mobility  $\mu_p$ .
- The current density J is given by

$$J = (n \mu_n + p \mu_p) q \epsilon = \sigma \epsilon$$

Where n = magnitude of free - electron (negative) concentration

p = magnitude of hole(positive) concentration

 $\sigma$  = conductivit;  $\varepsilon$  = electric field and q = electron charge

Hence

$$\sigma = (n \mu_n + p \mu_p) q$$

The resistivity ρ is inversely proportional to the conductivity and is given by

$$\rho = 1/\sigma = 1/(n \mu_n + p \mu_p) q$$

For a pure (called intrinsic) semiconductor considered here.

 $n = p = n_i$ 

Where n; is the intrinsic concentration

- In pure germanium at room temperature there is about one hole electron pair for every  $2 \times 10^9$  germanium atoms.
- With increasing temperature, the density of hole electron pair increases and correspondingly, the conductivity increases.

The intrinsic concentration  $n_i$  varies with temperature in accordance with the relationship.

Where  $A_0$  = material constant

T = temperature in degree Kelvin

E<sub>GO</sub> = energy gap at 0°K in eV

K = Boltzmann constant in eV/°K

- The conductivity of germanium (Silicon) is increase approximately 6(8) percent per degree increase in temperature.
- The resistivity (reciprocal of conductivity) of a semi conductor decreases exponentially where in metals the resistivity increases almost linearly.
- Semiconductor has a negative temperature coefficient of resistance where as that of a metal is positive and of much smaller magnitude.
- For most metals the resistance increases about 0.4 percent / °C increase in temperature.
- The constants  $E_{GO}$ ,  $\mu_D$ ,  $\mu_D$  and many other important physical quantities for Germanium and

#### Properties of Germanium and Silicon

Ge	Si
32	14
72.6	28.1
5.32	2.33
16	12
$4.4 \times 10^{22}$	$5.0 \times 10^{22}$
0.785	1.21
0.72	1.1
$2.5 \times 10^{13}$	$1.5 \times 10^{10}$
45	230,000
3800	1300
1800	500
99	34
47 .	13
	32 72.6 5.32 16 4.4 × 10 <sup>22</sup> 0.785 0.72 2.5 × 10 <sup>13</sup> 45 3800 1800 99

Silicon are given in Table. Note that germanium has of the order of 10<sup>22</sup> atoms/cm<sup>3</sup>, whereas at room temperature (300°K),  $n_i = 10^{13}$ /cm<sup>3</sup>. Hence only 1 atom in about 10° contributes a free electron (and also a hole) to the crystal because of broken covalent bonds. For silicon this ratio is even smaller, about 1 atom in 10<sup>12</sup>

# Carrier Concentration in an Intrinsic Semiconductor:

- The free electrons occupy successive quantum states of increasing kinetic energy.
- The energy corresponding to the highest filled level at 0°K is called the 'Fermi energy
- At 0°K, the free electrons occupy all the levels up to the Fermi level, leaving all those above it empty.
- At temperature above 0°K, due to thermal excitation, there is a finite probability of some of the electrons from below the Fermi level moving to levels above E<sub>F</sub>.
- This probability is given by the Fermi Dirac statistics.
- The probability of occupation f(E) of an energy level E by an electron is given by

$$f(E) = \frac{1}{(1 + \exp(E - E_F)/KT)}$$

 The Fermi level can be defined as that level which has a 50% probability of occupation by an electron at any temperature.

Case (1): At 
$$T = 0^{\circ}K$$
  
 $f(E) = 1/(1 + e^{\circ\circ}) = 0$  when  $E > E_F$   
 $f(E) = 1/(1 + e^{\circ\circ}) = 1$  when  $E < E_F$ 

- Intrinsic semiconductor will acts as insulator for 0°K
- Case(2) : At T = 300°K

ACE Academy

f(E) = 0when  $E \gg E_c$ 

f(E) = 1when  $E \ll E_c$ 

As temperature increases conduction increases in intrinsic semiconductor.

$$KT = 0.026 \text{ eV} = 26 \text{ meV}$$

For E >> E<sub>c</sub>, E - E<sub>F</sub> >> KT and equation reduces to  $f(E) = e^{-(E - E - E)}$  $E_c = lowest$  energy level in the conduction band

The electron concentration n is proportional to f(E).

$$n \propto e^{-(E_C - E_f)/kT}$$

$$n = N_c e^{-(E_C - E_f)/kT}$$

where

$$N_c = 2 \left[ (2\pi m_n kT) / h^2 \right]^{3/2} (1.602 \times 10^{-19})^{3/2} = 2 \left[ (2\pi m_n \overline{k}T) / h^2 \right]^{3/2}$$

$$\overline{k} = ke$$

k is given in electron volts per degree kelvin (eV / °K)

k is expressed in Joules per degree kelvin (J / °K)

 $m_n$  = effective mass of electron m = Rest mass of electron

 $N_c = \text{Conduction constant} = 4.82 \times 10^{45} (m_n/m)^{3/2} \cdot T^{3/2} \text{ per cm}^3$ 

No= c T 3/2 No x T3/2

ACE Academy

$$p = N_v e^{-(E_f - E_V)/kT}$$

Where  $N_v$  = valence concentration =  $4.82 \times 10^{15} (m_p/m)^{3/2} T^{3/2}$  per cm<sup>3</sup>.  $m_p$  = effective mass of hole

m = rest mass of electron, because at rest hole does not exist.

- The above equations (for n and p) apply to both intrinsic and extrinsic or impure semiconductors.
- When an electron in a periodic potential is accelerated relative to the lattice in an electric field or magnetic field then the mass of that electron is called "effective mass".

reld or magnetic field their the mass of that electron magnetic field their the mass of that electron 
$$\rightarrow$$
 Ge (at room temperature)

1.5 × 10<sup>10</sup> carriers / cm<sup>3</sup>  $\rightarrow$  Si (at room temperature)

• Where  $\mathbf{n}_i$  is no. of carriers (or) no. of covalent bonds that are broken for the given temperature.

# The Fermi Level in an Intrinsic Semiconductor

• In the case of intrinsic material  $\mathbf{n} = \mathbf{p}$ 

$$N_c e^{-(E_c - E_f)/kT} = N_v e^{-(E_f - E_v)/kT}$$

Hence

$$E_f = \frac{(E_c + E_v)}{2} - \frac{kT}{2} \cdot \frac{\ln N_c}{N_v}$$

- If the effective masses of a hole and a free electron are the same(i.e.,  $N_c = N_v$ ), then the above equation reduces to  $E_f = (E_c + E_v)$
- Hence the Fermi level lies in the center of the forbidden energy band.

# The Intrinsic Concentration

Using above equations, the product of electron – hole concentrations

$$np = N_c N_v e^{-(E_c - E_v)/kT} = N_c N_v e^{-E_G/kT}$$

- Note that this product is independent of the Fermi level, but does depend upon the
  temperature and the energy gap E<sub>G</sub> = E<sub>c</sub> E<sub>v</sub>. The above equation is valid for either and
  extrinsic or intrinsic material.
- Hence, for intrinsic material n = p = n<sub>i</sub>, we have the important relationship (called the mass action law)
- Note that, regardless of the individual magnitudes of n and p, the product is always a
  constant at a fixed temperature.
- At room temperature, the current in an intrinsic semiconductor is due to both e and holes.
- In an intrinsic semiconductor the mobility of electrons in the conduction band is greater than the mobility of holes in the valence band.

### **Donor and Acceptor Impurities**

- If, to a pure germanium, a small amount of impurity is added in the form of a substance
  with five valence electrons, four of the five valence electrons will occupy covalent bonds,
  and the fifth will be nominally unbound and will be available as a carrier of current.
- The energy required to detach this fifth electron from the atom is of the order of only 0.01 eV for Ge and 0.05 eV for Si.
- Suitable pentavalent impurities are phosphorous, arsenic, antimony and bismuth (PAAB).
   Such impurities donate excess (negative) electron carriers and are therefore referred to as "donor, or n type" impurities.
- When donor impurities are added to a semiconductor, allowable discrete energy levels are
  introduced a very small distance below the conduction band, as shown in below fig. and
  therefore at room temperature almost all of the "fifth" electrons of the donor material are
  raised into the conduction band.
- If intrinsic semiconductor material is "doped" with n type impurities, not only does the number of electrons increase, but the number of holes decreases below that which would be available in the intrinsic semiconductor.
- The reason for the decrease in the number of holes is that the larger number of electrons
  present increases the rate of recombination of electrons with holes.
- If a trivalent impurity (Boron, Aluminium, Gallium and Indium(BAGI)) is added to an intrinsic semiconductor, only three of the covalent bonds can be filled and the vacancy that exists in the fourth bond constitutes a hole.
- Such impurities make available positive carriers because they create holes which can
  accept electrons.
- These impurities are consequently known as "acceptor, or p type" impurities.
- When acceptor, or p type impurities are added to the intrinsic semiconductor, they
  produce an allowable discrete energy levels which is just above the valence band.
- A very small amount of energy is required for an e<sup>-</sup> to leave the valence band and occupy
  the acceptor energy level E<sub>v</sub>, it follows that the holes generated in the valence band by
  these electrons constitute the largest number of carriers in the semiconductor material.
- The doping of intrinsic semiconductor not only increases the conductivity, but also serves to produce a conductor in which the electric carriers are either predominantly holes or e's.
- In an n type semiconductor, the electrons are called the majority carriers, and the holes
  are called the minority carriers.
- In a p type material, the holes are the majority carriers, and the electrons are the
  minority carriers.
- Intrinsic, p type and n type semiconductors are electrically neutral. i.e., the total negative charge is equal to that of total positive charge.

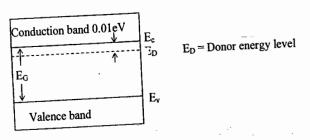


Fig: Energy band diagram of n - type semiconductor

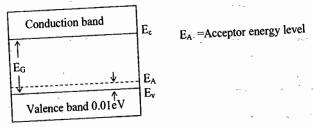


Fig: Energy band diagram of p - type semiconductor.

- The minority-carrier concentration injected into one end of a semiconductor bar decreases exponentially with distance into the specimen (as a result of diffusion and recombination)
- Semiconductor, p+ type: A p-type semiconductor in which the excess mobile hole concentration is very large (i.e. more doping).
- Semiconductor, n<sup>+</sup> type: An n-type semiconductor in which the excess conduction electron concentration is very large (i.e. more doping).

# Charge Densities in a Semiconductor:

gives the relationship between the electron  ${\bf n}$  and the hole  ${\bf p}$  concentrations.

- $\bullet$  \_Let  $N_D$  equal the concentration of donor atoms, these are practically all ionized,  $N_D$ positive charges per cubic meter are contributed by the donor ions.
- Hence the total positive charge density is N<sub>D</sub> + p
- $\bullet$  . Similarly, if  $\,N_A$  is the concentration of acceptor ions, these contribute  $N_A$  negative charges per cubic meter.
- The total negative charge density is  $N_A + n$ .
- Since the semiconductor is electrically neutral, the magnitude of the positive charge density must equal that of the negative concentration, or

$$N_D + p = N_A + n$$
 --- (1)

Consider an n – type material having  $N_A = 0$ . Since the number of electrons is much greater than the number of holes in an n - type semiconductor (n >> p) then equation (1) reduces to

"Semiconductor Theory"

$$n \succeq N_D \quad \text{or} \quad \underline{n_n \succeq N_D}$$

- In an n type material the free electron concentration  $n_n$  is approximately equal to the density of donor atoms.
- The concentration  $p_n$  of holes in the n type semiconductor is obtained from

Thus, 
$$n_n p_n = n_i^2$$

$$p_n = n_i^2 / N_D$$

Similarly, for a p – type semiconductor

$$n_p p_p = n_i^2$$
 ;  $p_p \simeq N_A$   $n_p = n_i^2/N_A$ 

According to the law of mass action, the product of the number of electrons in the conduction band and the number of holes in the valence band must be constant.

# Fermi level in a semiconductor having impurities

- The electrical characteristics of a semiconductor material depend on the concentration of free electrons and holes.
- In the case of no impurities (an intrinsic semiconductor), E<sub>F</sub> lies in the middle of the energy gap, indicating equal concentrations of free electrons and holes in conduction band and valence band respectively.
- n type semiconductor

In n - type semiconductor

$$\begin{split} &n\approx N_D\\ &n=N_D=N_c\,e^{-(E_{_{\tiny \tiny C}}\,-\,E_{_{_{\tiny \tiny F}}}\,)/kT}\\ &Solving\;for\;E_F\;,\\ &E_{C}-E_F=kT \end{split}$$

$$E_C - E_F = kT \ln (N_C/N_D)$$

where  $N_D = Donor concentration$ 

= atomic concentration × Doping rate

For example Germanium, doping rate =  $1:10^8$ 

$$N_D = (4.4 \times 10^{22}) \times 1/10^8$$

Case: 1 Doping increases, ND increases and then  $N_D > N_C$  $E_C - E_F = kT \ln(N_C / N_D) < 0$  $E_C < E_F$ 

As doping concentration increases Fermi level moves towards conduction band from center of the forbidden gap and hence conduction increases.

Case(2): If temperature increases,  $N_C$  increases and then  $N_C > N_D$ 

$$E_C - E_F > 0$$

$$E_C > E_F$$

As temperature increases Fermi level moves towards the center of the forbidden energy gap and hence conduction decreases in extrinsic semiconductor.

For p - type semiconductor:

14

$$p \approx N_A$$

$$= N_A = N_V e^{-(E_F - E_V)/kT}$$

$$E_F - E_V = kT \ln(N_V/N_A)$$

$$N_A = \text{acceptor concentration}$$

Case(1): Doping increases, NA increases and then,  $N_A > N_V$ 

 $E_F - E_V = kT \ln(N_V / N_A) < 0$  $E_F - E_V < 0$ 

 $E_F < E_V$ 

As doping increases Fermi level moves towards valence band from center of forbidden gap and hence conduction increases.

Case(2): If temperature increases, N<sub>V</sub> increases and then  $N_V > N_A$ 

 $E_F \rightarrow E_V > 0$ 

 $E_F > E_V$ Fermi level moves towards the center of the forbidden energy gap and hence conduction decreases in extrinsic semiconductor.

lecreases in extinisic scimeondary					
	n – type	p - type	conduction		
Doping increases	E <sub>F</sub> goes up	E <sub>F</sub> goes down	Increases		
Temperature	E <sub>F</sub> goes down	E <sub>F</sub> goes up	Decreases		
Increases					

# TEMPERATURE EFFECT ON EXTRINSIC SEMICONDUCTOR

At very low temperature range the conductivity is an exponential function of temperature. The electron excited from the donor level to the conduction band (or the holes created by excitation to the acceptor level) becomes available in increasing numbers with increasing temperature. So, the conductivity increases as the temperature increases upto certain level that depends on doping concentration.

Increasing temperature, the density of carriers will increases results in decreasing mean free path of the conduction electrons or holes. So, the conduction decreases with

At extraordinary high temperatures extrinsic will behave as intrinsic semiconductor.

# **Drift and Diffusion Currents:**

• The conductivity associated with the conduction electrons could be written in the form

Similarly for hole conduction

Similarly for note conduction
$$\sigma_p = p \mu_p q \qquad \text{where } \mu_p = \text{mobility of holes}$$

The current density associated with the drift of the electrons due to the applied field would be given by

$$J_n = n \mu_n q \epsilon$$

Similarly,

$$J_p = p \mu_p q\epsilon$$

- However, an electron current may flow in a semiconductor even in the absence of an electric field, i.e., if there exists a gradient of the electron density.
- Consequently, one deals in semiconductors frequently with two kinds of current: a drift current (due to the electric field) and diffusion current (due to a gradient of the carrier concentration).
- These concepts apply, of course, to electrons as well as to holes.
- The diffusion current density for electrons is  $J_n = q D_n dn$

 $D_n = Diffusion constant of the electrons in m<sup>2</sup>/sec.$ 

· Similarly, diffusion current density for holes is

$$J_p = -q D_p \underline{dp}$$
  $D_p = \text{diffusion constant of the holes in m}^2/\text{sec.}$ 

The hole current in any point x may be written as the sum of two contributions, one from the field and one from the diffusion process:

$$\mathbf{J}_{p} = \mathbf{p} \; \mu_{p} \; \mathbf{q} \, \mathbf{\epsilon} - \mathbf{q} \; \frac{\mathbf{D}_{p}}{\mathbf{d} \mathbf{x}} \; \mathbf{d} \mathbf{p}$$

• Similarly, the total electron current density:

$$J_n = n \, \mu_n \, q\varepsilon + q \, \underline{D}_n \, dn$$

There exists an important relationship between the diffusion coefficient and the mobility of the carriers, which is known as the Einstein relation:

For holes 
$$D_p = (kT/q) \mu_p$$
For electrons 
$$D_n = (kT/q) \mu_n$$

Hence, the diffusion constant is proportional to the mobility

$$\frac{D_p}{\mu_p} = \frac{Dn}{\mu_n} = V_T$$
Where  $V_T = kT/q = T/11,600$  where  $V_T = volt$  equivalent of temperature

At room temperature (300°K),  $\mu = 39$  D

$$= 26 \text{ mV}$$
 at room temperature

$$\bar{k} = 1.602 \times 10^{-19} \, k$$

#### Carrier Life Time

- Thermal agitation continues to produce new hole electron pairs while other hole electron pairs disappear as a result of recombination.
- On an average, a hole (an electron) will exist for  $\tau_n(\tau_n)$  seconds before recombination. This time is called the "mean life time" of the hole and electron, respectively.
- Carrier life times range from nanoseconds to hundreds of microseconds.
- $\tau_p(\tau_n)$  is the time it takes the injected concentration to fall to  $1/\epsilon$  of its initial value.

- Recombination is effected not only by volume impurities, but also by surface imperfections in the crystal.
- · Gold is extensively used as a recombination agent.

16

 Thus the device designer can obtain desired carrier life times by introducing gold into silicon under controlled conditions.

### The continuity equation

- It is also called law of conservation of energy in semiconductor.
- The continuity equation, or the equation of conservation of charge for holes is  $dp/dt = -(p p_0)/\tau_p + D_p (d^2p/dx^2) \mu_p \cdot d(p\epsilon)/dx$
- If  $\tau_p$  is the average carrier lifetime of holes, the  $(p/\tau_p)$  equals the holes per second lost by recombination per unit volume.
- p<sub>0</sub>(n<sub>0</sub>) is the equilibrium concentration of holes(electrons). Hole (electron) concentration p(n) is a function of both time t and distance x.
- Similarly the continuity equation for electrons is p replaced by n in the above equation.
- The diffusion length for holes is given by  $L_p = \sqrt{(D_p \tau_p)}$
- Similarly for electrons  $L_n = \sqrt{(D_n \tau_n)}$

#### The Hall Effect

- If a specimen (metal or semiconductor) carrying a current I is placed in a transverse magnetic field B, an electric field ε is induced in the direction perpendicular to both I and B. This phenomenon, known as the "Hall Effect".
- The Hall voltage  $V_H = \varepsilon d = Bvd = (BJd) / \rho = (BI) + (\rho w)$

Where d = distance between two surfaces;

J = current density;

w = width of the specimen \_

v = drift velocity

 $\rho$  = charge density.

 $\rho = nq \text{ or } pq$ 

q = charge of electron

• The Hall coefficient RH is defined by

$$R_H = 1/\rho = (V_H w)/(BI)$$

$$R_H = 1/\rho = 1/(N_D q) = 1/(N_A q)$$

• If conduction is due primarily to charges of one sign, the conductivity  $\sigma$  is related to the mobility  $\mu$  by  $\sigma = \rho \mu$ 

- If the conductivity is measured together with the Hall coefficient  $R_H$ , the mobility can be determined from  $\mu = \sigma R_H$
- The Hall coefficient R<sub>II</sub> of an intrinsic semiconductor is negative under all conditions.
- In an extrinsic semiconductor, the Hall coefficient R<sub>H</sub> increases with increase of temperature.

# Applications of Hall Effect:

- The Hall effect is used to determine the following
  - (i) type of semiconductor
  - (ii) carrier concentration
  - (iii) mobility and
  - (iv) magnetic flux density
- Why carbon is not used as semiconductor?
   The carbon (C), Silicon(Si) and Germanium (Ge) all have the same number of valence electrons (4), but their resistivities widely differ.

The energy required to take out an electron from these atoms (i.e., ionization energy  $E_{\rm G}$ ) will be least for Ge, followed by Si and highest for C.

Hence, number of free electrons for conduction in Ge and Si are significant but negligibly small for C.

	Temperature range	Energy gap at 0°K
Carbon	-65°C to 225°C	> 5 eV
Silicon	-65°C to 175°C	1.21 eV
Germanium	-65°C to 75°C	0.78 eV

# **OBJECTIVES - 1**

- 01. Energy required to break a covalent in semiconductor is
  - (a) always equal to 1.6 e V
  - (b) greater in Ge than in Si
  - (c) equal to the width of the forbidden energy gap
  - (d) is the same in Ge as in Si
- 02. The diffusion length of a carrier depends on
  - (a) the shape of the semiconductor
  - (b) the life time of the carriers alone
  - (c) the mobility and life time of the carriers
  - (d) the mobility of the carriers alone.

- 03. Pure semiconductors are poor conductor because
  - (a) they have no valence electrons
  - (b) all valence electrons are in e-pairs
  - (c) they have a number of holes
  - (d) there are fewer e s than protons
- 04. At room temperature, the current in an intrinsic semiconductor is due to
  - (a) holes (b) electrons
  - (c) ions (d) holes and electrons

- **Electronic Devices**
- 05. At room temperature intrinsic carrier concentration is higher in germanium than in silicon because
  - (a) carrier mobilities are higher Ge than in Si
  - (b) energy gap in Ge is smaller than that in Si
  - (c) Atomic no. of Ge is larger than in
  - (d)Atomic weight of Ge is larger than in Si
- 06. Current flow in a semiconductor depends on the phenomenon of
  - (a) drift
- (b) diffusion
- (c) recombination (d)all of the above
- 07. The effect of doping in intrinsic semiconductor is to
  - (a) move the Fermi level away from the centre of the forbidden band
  - (b) move the Fermi level towards the centre of the forbidden band
  - (c) change the crystal structure of the semiconductor
  - (d) keep the Fermi level at the middle of the forbidden band
- 08. n-type semiconductors
  - (a) are negatively charged
  - (b) are produced when indium is added as an impurity to germanium
  - (c) are produced when phosphorus is added as an impurity to silicon
  - (d) none of the above
- 09. If a sample of germanium and a sample of silicon have the same impurity density and are kept at room temperature
  - (a) both will have equal value of resistivity
  - (b) both will have equal negative resistivity
  - (c) resistivity of germanium will be higher than that of silicon
  - (d) resistivity of silicon will be higher than that of germanium

- 10.Semiconductor A has a higher band gap than semiconductor B. If both A and B have the same dimensions, the same number of electrons at a given temperature and the same electron and hole mobilities, then
  - (a) A has the same number of holes as 13
  - (b) A has larger number of holes than B
  - (c) A has lesser number of holes than B
  - (d) any of the above statements at a, b or c, could be true
- 11. If the temperature of an extrinsic semiconductor is increased so that the intrinsic carrier concentration is double, then
  - (a) the majority carrier density doubles
  - (b) the minority carrier density doubles
  - (c) the minority carrier density becomes times the original value
  - (d) both majority and minority carrier densities doubles
- 12. In a semiconductor, rate of diffusion of charge carriers ...
  - (a) depends on the concentration gradient and the mobility
  - (b) depends on the concentration gradient alone.
  - (c) depends on the mobility alone
  - (d) is independent of concentration gradient and the mobility
- 13. Donor impurity atom in asemiconductor result in new
  - (a) wide energy band
  - (b) narrow energy band
  - (c) discrete energy level just below conduction level
  - (d) discrete energy level just above valence level.
- 14. Mobility of electron in a semiconductor
  - (a) decreases as the temperature increases
  - (b) increases as the temperature increases
  - (c) has no effect on conductivity
  - (d) is independent of temperature

- 15. If donor concentration  $N_D$  equals acceptor concentration N<sub>d</sub> resulting semiconductor is
  - (a) n-type (b) p-type (c) intrinsic
  - (d) may be p or n type depending on temperature
- 16. A semiconductor is damaged by a strong current, because
  - (la) Excess of electrons
  - (b) Decrease in electrons
  - (c) Lack of free electrons (d) None
- 17. When a semiconductor bar is heated at one end, a voltage across the bar is developed. If the heated end is positive, the semiconductor is
  - (a) p-type
- (b) n-type
- (c) intrinsic
- (d) highly degenerate
- 18. Hall effect device can be used to
  - (a) Add two signals
  - (b) Multiply two signals
  - (c) Subtract one signai from another
  - (d) Divide one signal by another on an instantaneous basis

- 19. A semiconductor is uniformly doped with N<sub>A</sub> acceptors and N<sub>D</sub> donors. Let free electron and concentrations be n and p respectively. Assume that the semiconductor is at thermal equilibrium and that 100% ionization has taken place. which of the following is true?
  - (a)  $N_A + N_D p + n$ (b)  $N_A - N_D = n - p$

"Semiconductor Theory"

- (c)  $N_A N_D = pn$
- (d)  $N_D N_A = n p$
- 20. Which of the following statements is true?
  - (a) Silicon doped with either phosphorous only or boron only is p-type semiconductor
  - (b) Silicon doped with either phosphorous only or boron only is n-type semiconductor.
  - (c) Silicon doped with phosphorous is n-type semiconductor.
  - (d) Silicon doped with boron is n-type semiconductor.

#### ANSWERS:

10.B 1. C 2.C 3.B 20. C 15.C 17.B 18.B 19.Đ 11. D 12.A 13.C. 14.A 16.A

#### **OBJECTIVES - 2**

- 01. Diffusion of impurities in a semiconductor is carried out in a furnace through which a steady stream of impurity atoms is passed during the entire diffusion process. What would be the type of profile of the impurity atoms inside the semiconductor?
  - (A) Linear
  - (B) Gaussian
  - (C) complementary error function
  - (D) exponential
- 02. Excess carriers are generated in a sample of N-type semiconductors by shining light at one end. The current flow in the sample will be made up of
  - (a) diffusion flow of carriers
  - (b) drift flow of carriers
  - (c) both diffusion and drift flow of carriers
  - (d) neither diffusion nor drift flow of carriers
- 03. A semiconductor is irradiated with light such that carries are uniformly generated throughout its volume. The semiconductor is n-type with  $N_D = 10^{19}$  per cm<sup>3</sup>. If the access electron concentration in the steady state is  $\Delta n = 10^{15}$  per cm<sup>3</sup> and if  $Z_D = 10\mu$  sec (minority carrier life time) the generation rate due to irradiation
  - (a) is  $10^{20}$  e-h pairs/cm<sup>3</sup>/sec
  - (b) is  $10^{24}$  e-h pairs/cm<sup>3</sup>/sec
  - (c) is  $10^{10}$  e-h pairs/cm<sup>3</sup>/sec
  - (d) cannot be determined as the given data is insufficient
- 04. A long specimen of p-type semiconductor material
  - (a) is positively charged
  - (b) is electrically neutral
  - (c) has an electrical field directed along its length
  - (d) acts as a dipole

- 05. If an intrinsic semiconductor is doped with a very small amount of boron. then in the extrinsic semiconductor set formed. number of electrons and holes will
  - (a) decrease
  - (b) increase and decrease respectively
  - (c) increase
  - (d) decrease and increase respectively
- 06. Under high electric field, in a semiconductor with increasing electric field
  - (a) The mobility of charge carriers decreases.
  - (b) The mobility of charge carriers
  - (c) The velocity of the charge carriers saturates.
  - (d) The velocity of charge carriers increases.
- 07. A silicon sample is uniformly doped with 10<sup>16</sup> phosphorous atoms/cm<sup>3</sup> and 2 x 10<sup>16</sup> boron atom /cm<sup>3</sup>. If all the dopants are fully ionized, the material
  - (a) n-type with carrier concentration of  $10^{16}/\text{cm}^3$
  - (b) p-type with carrier concentration of 10<sup>16</sup>/cm<sup>3</sup>
  - (c) p-type with carrier concentration of  $2 \times 10^{16} / \text{cm}^3$
  - (d) n-type with carrier concentration of 2x1 0<sup>16</sup>/cm<sup>3</sup>
- 08. The probability that an electron in a metal occupies the fermi level at any temperature (>0°K).
  - (b) 1 (c) 0.5 (d) 0.1 (a) 0
- 09.Pure Si is experimentally determined to exhibit a carrier (electron or hole ) density of 1.48X 10<sup>10</sup> electrons (holes) cm<sup>3</sup> at 300 <sup>0</sup>k.If the electron mobility and hole mobility is 1300cm<sup>2</sup>/Vs and 500 cm<sup>2</sup>/Vs,the resistivity of an intrinsic Si specimen at 3000k is..
  - (a)  $2.35 \times 10^5 \Omega m$  (b)  $1.18 \times 10^5 \Omega m$
  - (c)  $2.35 \times 10^5 \Omega \text{cm}$
  - (d) cannot be determined

10. Mobility μ varies as T<sup>n1</sup> over a temperature range of 100 to 4000 k. For silicon,  $m = \dots$  for holes.

(a) 2.5

ACE Academy

(b) 2.7

(c) 1.66. (d) 2.33

11. In an n-type silicon, mobility is found to be a function of electric field intensity. If electric field intensity (E) applied is in the range:

R<sub>1</sub>: 500 V/cm - 883 V/cm &

- R2: 500 V/cm - 8830 V/cm, then for the above ranges R<sub>1</sub> & R<sub>2</sub>, the mobility varies as

- (a) constant, constant
- (b)  $\varepsilon^{-1/2}$ ,  $\varepsilon^{-1}$ (c)  $\varepsilon^{-1}$ ,  $\varepsilon^{-1/2}$
- (d) constant,  $\varepsilon^{-1/2}$
- 12. Match List-I (Material) with List-II (Energy Level) and select the correct answer using the code given below the lists:

#### List-I

- A. p-type semiconductor at 00 K
- B Intrinsic semiconductors at 0° K
- C. n-type semiconductor at room temperature
- D. p-type semiconductor at room temperature \_

#### List-II

- 1. Donor energy level is closed to the conduction band
- 2. Acceptor energy level is closed to the valence band
- 3. Fermi-level is very closed to valence band
- 4. Fermi-level is half-way between the valence band and the conduction band

#### Codes:

	A	В	C	I
 (a)	1	2	3	-4
(b)	3	4	1 .	2
(c)	1	4	3	_2
(d)	3	2	1	4

13. Match List-I (Current) with List-II (Variation) and select the correct answer using the code given below the lists:

List-I

List-II 1. n.E

2. p.E.

A. Hole diffusion current

B. Electron drift current C. Hole drift current

3 - dp/dx

D. Electron diffusion current 4. dn/dx

Codes:

A B C

2 4

14. Match List -1 (Device) with List -II (Application) and select the correct answer using the code given below the lists:

List-I

List-II

A. Hall element 1. Power control B. Varactor diode 2.microwave mirror

C. SCR

3. Tuning element in tank circuit

D. Schottky

4. Sensor

Codes:

D (a) 1 (b) 4

2 (c) (d) 4

15. The free electron density in a

conductor is  $(1/1.6) \times 10^{22} \text{ cm}^{-3}$ . The electron mobility is 10 cm<sup>2</sup>/Vs. What is the value of its resistivity?

- (a)  $10^{-4} \Omega m$
- (b)  $1.6 \times 10^{-2} \Omega m$
- (c)  $10^{-4} \Omega cm$
- (d) 10<sup>4</sup> mho.cm<sup>-1</sup>

16 Match List-I (Type of conductor) with List-II (Position of Fermi Level) and select the correct answer using the code given below the lists:

**Electronic Devices** 

#### List-I

- A. n-type semiconductor
- B. P-type semiconductor
- C. Intrinsic semiconductor
- D. Degenerate n-type semiconductor

#### List - II

- 1. Middle of band gap
- 2. Above conduction band
- 3. Near but below conduction band
- 4. Near but above valence band

#### Codes:

	Α	В	C	D
(a) ·	-1	2 -	3	4
(b)	3	4	1	2
(c)	ŀ	4	3	2
(d)	3	2	1	4

17. Match List-I with List-II and select the correct answer using the code given below the lists:

#### List-I

- A. Drift current
- B. Einstein's equation
- C. Diffusion current
- D. Continuity equation

#### List- II

- = 1. Law of conservation of charge
  - 2. Electric field
- 3. Thermal Voltage
- 4.Concerntration Gradient

#### Codes:

Α	В	C	D
(a) 2	1	4	3
(b) 4	3	2	1
(c) 4	l	2	3
(d) 2	3	4	1

18. If in intrinsic semiconductor
Germanium at 300K (27°C) the
charge concentration and mobilities
of free electrons and holes are 2.5 x
10<sup>13</sup> per CC, 3.8 x 10<sup>3</sup> cm<sup>2</sup> / v-sec
and 1.8 x 10<sup>3</sup> cm<sup>3</sup>/v- see
respectively, then its resistivity at
300K is

(a) 230 x 10<sup>3</sup> cm (b) 100 cm (c) 44.6 cm (d) 22.3 cm

19. A small concentration of minority carries is injected into a homogeneous semiconductor crystal at one point. An electric field of 10 V/cm is applied across the crystal and this moves the minority carriers a distance of 1 cm in 20 μ sec. The mobility (in cm²/voltsec) of the minority carriers is

(a) 1,000 (b) 2,000

(a) 1,000 (c) 5,000 (d) 500,000

20. In a Hall effect experiment, a p type semiconductor sample with hole concentration p<sub>1</sub> is used. The Measured value of the hall voltage is V<sub>H1</sub>. If the p - type sample is now replaced by another p - type sample with hole concentration p<sub>2</sub> where p<sub>2</sub> = 2p<sub>1</sub>, what is the new Hall voltage V<sub>H2</sub>?

(a) 2V<sub>H1</sub> (b)-4 V<sub>H1</sub>

(c) (1/2) V<sub>H1</sub> (d) (1/4) V<sub>H1</sub>

#### KEYS:

01. c	02.a	03.a	04.5	05.d	06.a
07.b	08.b	09.c	10.b	11.d	12.b
13.d	14.d	15.c	16.b	17.b	18.c
19.c	20.c				

#### PREVIOUS IES QUESTIONS:

- 01. A Hall effect transducer can be used to measure
  - (a) displacement, temperature and magnetic flux.
  - (b) displacement, position and velocity
  - (c) position, magnetic flux and pressure
  - (d) displacement, position and magnetic flux.
- The Ohm's law for conduction in metals is

(a)  $J = \sigma E$ 

(b) J = E/σ

(c) J∝σE

(d) J∝E/σ

03. The unit of a thermal resistance of a semiconductor device is

(a) Ohms

(b) Ohms/OC

(c) <sup>0</sup>C/Ohm

(d) OC/Watt

- 04. For n-type semiconductor with n = N<sub>D</sub> and p = n<sub>i</sub><sup>2</sup>/N<sub>D</sub>, the hole concentration will fall below the intrinsic value because some of the holes
  - (a) drop back to acceptor impurity states
  - (b) drop to donor impurity states
  - (c) virtually leave the crystal
    - (d) recombine with the electrons
- 05. Match List-I with List-II and select the correct answer using the codes given below the lists:

#### List-I

- A. Drift current
- B. Einstein's equation
- C. Diffusion current
- D. Continuity equation

#### List-II

- 1. Law of conservation of charge
- 2. Electric field
- 3. Thermal voltage
- 4. Concentration gradient

#### Codes:

"Semiconductor Theory"

A B C D
(a) 2 1 4 3

**(b)** 4 3 2 1

(c) 4 1 2 3

(d) 2 3 4 1

06. Consider the following statements:

If an electric field is applied to an ntype semiconductor bar, the electrons and holes move in opposite directions due-to their opposite charges. The net current is

- due to both electrons and holes with electrons as majority carriers.
- 2. the sum of electron and hole currents.
- 3. the difference between electron and hole current.

Which of these statements is/are correct?

(a) I alone

(b) 1 and 2

(c) 2 alone

(d) 2 alone

07. **Assertion(A):** Hall crystal can be used as a multiplier of two signals.

Reason(R): Hall voltage is proportional to the current or voltages applied in perpendicular directions across the Hall crystal.

- (a) Both A and R are true and R is the correct explanation of A.
- (b) Both A and R are true but R is NOT the correct explanation of A.
- (c) A is true but R is false.
- (d) A is false but R is true.
- 08. As the Fermi energy of silver is 8.8×10<sup>-19</sup> joule, the velocity of the fastest electron in silver at 0<sup>0</sup>K (Given: Rest mass of electron = 9.1 x 10<sup>-31</sup> kg) is
  - (a)  $3.33 \times 10^5 \text{ m/s}$  (b)  $1.39 \times 10^6 \text{ m/s}$
  - (c)  $4.40 \times 10^7$  m/s (d)  $3 \times 10^8$  m/s



- 09. Electron mobility and life time in a semiconductor at room temperature are respectively 0.36 m<sup>2</sup>/ (Vs) and 340μs. The diffusion length is
  - (a) 3.13 mm

24

- (b) 1,77 mm
- (c) 3.55 mm
- (d) 3.13 cm
- 10. Which of the following statements relate to the Hall effect?
  - 1. A potential difference is developed across a current carrying metal strip when the strip is placed in a transverse magnetie-field.
  - 2. The Hall effect is very weak in metals but is large in semiconductors.
  - 3. The Hall effect is very weak in semiconductors but is large in metals.
  - 4. It is applied in the measurement of the magnetic field intensity.
  - (a) 1, 2 and 3
- (b) 2 and 4
- (c) 1, 3 and 4
- (d) 1, 2 and 4
- 11. Assertion (A): The intrinsic Fermi level of a semiconductor does not lie exactly at the middle of the energy band gap.

Reason(R): The densities of the available states in valance and conduction bands of a semiconductor are equal.

- (a) Both A and R are true and R is the correct explanation of A.
- (b) Both A and R are true but R is NOT the correct explanation of A.
- (c) A is true but R is false.
- (d) A is false but R is true.
- 12. The conductivity of a semiconductor crystal due to any current is NOT proportional to
  - (a) mobility of the carrier
  - (b) effective density of states in the conduction band.
  - (c) electronic charge
  - (d) surface states in the semiconductor

- 13. The unit of mobility is
  - (a)  $m^2V^{-1}s^{-1}$
- (b)  $mV^{-1}s^{-1}$
- (c) Vsm<sup>-1</sup>
- (d) Vms<sup>-1</sup>
- 14. In an extrinsic semiconductor, the Hall \* coefficient RH
  - (a) increases with increase of temperature
  - (b) decreases with increase of temperature
  - (c) is independent of the change of temperature.
  - (d) changes with the change of magnetic field.
- 15. Consider a semiconductor bar having square cross - section. Assume that holes drift in the positive x direction and magnetic field is applied perpendicular to the direction in which holes drift. The sample will show
  - (a) a negative resistance in positive ydirection.
  - (b) a positive voltage in positive ydirection.
  - (c) a negative voltage in positive ydirection.
  - (d) a magnetic field in positive ydirection.
- 16. Consider the following statements for an n-type semiconductor:
  - 1. Donor level ionization decreases with temperature.
  - 2. Donor level ionization increases with temperature.
  - 3. Donor level ionization is independent of temperature.
  - 4. Donor level ionization increases as En (donor energy level) moves towards the conduction band at a given temperature.

Which of these statements is/are correct?

- (a) 1 only
- (b) 2 only
- (c) 2 and 4
- (d) 3 only

- 17. Consider the following statements for 21. Consider the following statements an n-type semiconductor:
  - 1. E<sub>F</sub> lies below E<sub>D</sub> at a room temperature(T).
  - 2.  $E_F$  lies above  $E_D$  as  $T \rightarrow 0$
  - 3.  $E_F = E_D$  at some intermediate temperature.
  - 4. E<sub>F</sub> is invariant with temperature. Where E<sub>F</sub> is Fermi energy and E<sub>D</sub> is donor level energy. Which of these statement(s) is/are correct?
  - (a) 1 and 2
- (b) 2 and 3
- (c) 4 only
- (d) 1, 2 and 3
- 18. Assume  $n_i = 1.45 \times 10^{10} / \text{cm}^3$  for silicon. In an n-type silicon sample, the donor concentrated at 300 K is 5 x 22. Consider the following statements: 10<sup>14</sup>/cm<sup>3</sup> and corresponds to 1 impurity atom for 108 silicon atoms. The electron and hole concentrations in the sample will be

(a)  $n = 5 \times 10^{14} / \text{cm}^3 \text{ p} = 4.2 \times 10^5 / \text{cm}^3$ (b)  $n < 5 \times 10^{14}/cm^3 p > 4.2 \times 10^5/cm^3$ 

- (c)  $n > 5 \times 10^{14} / \text{cm}^3 \text{ p} < 4.2 \times 10^5 / \text{cm}^3$
- (d)  $n < 5 \times 10^{14} / \text{cm}^3 \text{ p} < 4.2 \times 10^5 / \text{cm}^3$
- 19. A semiconductor specimen of breadth d, width w and carrying current I is placed in a magnetic field B to develop Hall voltage v<sub>H</sub> in a direction perpendicular to 1 and B. VH is NOT proportional to (a) B (b) I (c) 1/w (d) 1/d <
- 20. Assertion (A): The conductivity of a semiconductor is decided by the level of its doping and is almost independent of its band gap value irrespective of temperature.

Reason(R): The carrier concentration due to doping is independent of temperature, if it is not too low.

- (a) Both A and R are true and R is the correct explanation of A.
- (b) Both A and R are true but R is NOT the correct explanation of A.
- (c) A is true but R is false.
- (d) A is false but R is true.

- The intrinsic concentration of semiconductor
- depends on doping
- increases exponentially with decrease of band gap of the semiconductor
- increases non-linearly with increase of temperature
- increases linearly with increase of temperature
  - Which of the statements given above are correct?
  - (a) 1, 2 and 3
- (b) I and 3
- (c) 2 and 3
- (d) 2 and 4
- During an electron transition the energy gap in an indirect energy gap material like silicon
  - 1. the momentum of the electron changes
- 2. the direction of motion of the electron changes
- 3. the potential energy of the electron changes ·
- 4. the kinetic energy of the electron
- Which of the statements given above are correct?
- (a) 1, 2 and 3 (b) 2, 3 and 4
- (c) 1, 3 and 4 (d) 1, 2 and 4
- 23. Assertion (A): The concentration measured by Hall effect does not have much significance if the semiconductor is non-homogeneously doped.

Reason (R): The current density is uniform throughout the thickness of the semiconductor.

- (a) Both A and R are true and R is the correct explanation of A
- (b) Both A and R are true but R is NOT the correct explanation of A
- (c) A is true but R is false
- (d) A is false but R is true

- 24. The mobility of electrons in a semiconductor is defined as the
  - (a) Diffusion velocity per unit electric field

26

- (b) Diffusion velocity per unit magnetic field
- (c) Drift velocity per unit magnetic field
- (d) Drift velocity per unit electric filed
- 25. The free electron density in a conductor is  $(1/1.6) \times (10^{22} \text{ cm}^{-3})$  The electron mobility is  $10 \text{ cm}^2/\text{Vs}$ . What is the value of its resistivity? 2 0.00 = 0.00

(c)  $10^{-4}\Omega \text{cm}$  (a)  $10^{4}\text{mho cm}^{-1}$ 

- 26. The intrinsic concentration in a semiconductor at 300K is 10<sup>13</sup> cm<sup>-3</sup>. When it is doped with donor type impurities, the majority carrier concentration becomes 10<sup>17</sup> cm<sup>-3</sup>. What is the value of its minority carrier density?
  - (a)  $0.999 \times 10^{17} \text{cm}^{-3}$  (b)  $10^{17} \text{cm}^{-3}$ (c)  $10^4 \text{cm}^{-3}$  (d)  $10^9 \text{ cm}^{-3}$
- 27. Two pure specimen of a semiconductor material are taken. One is doped with 10<sup>18</sup> cm<sup>-3</sup> number of donors and the other is doped with 10<sup>16</sup> cm<sup>-3</sup> number of acceptors. The minority carrier density in the first specimen is 10<sup>7</sup> cm<sup>-3</sup>. What is the minority carrier density in the other specimen/
  - (a) 10<sup>16</sup> cm<sup>-3</sup>. (c) 10<sup>18</sup> cm<sup>-3</sup>
- (b) 10<sup>27</sup> cm<sup>-3</sup>

(d) 10° cm<sup>-3</sup>

28. Match List-I (Type of Conductor)
with List-II (Position of Fermi Level)
and select the correct answer using
the codes given below the lists:

#### List-I

- A. n-type semiconductor
- B. p-type semiconductor
- C. intrinsic semiconductor
- D. Degenerate n-type semiconductor List-II
- 1. Middle of band gap
- 2. Above conduction band
- 3. Near but below conduction band
- 4. Near but above valence band

#### Codes:

	Λ	В	C	Ð
(a)	i	2	3	4
<b>(b)</b>	3	4	l	2
(c)	1	4	3	2
(d)	3	2	I	4

29. Match List -1 (Material) with
List -11 (Carrier Concentration / m³)
an select the correct answer using the
codes given below the lists:

#### List - l

- A. Intrinsic semiconductor
- B. Insulator
- C. Extrinsic semiconductor
- D. Conductor

#### List -II

- 1. 10<sup>28</sup> 2. 10<sup>22</sup>
- $3.10^{18}$
- $4. 10^{14}$

#### Codés:

	Α	В	C	Ð
(a)	3	4	2	1
(b)	2	1	3	4
(c)	3	1	2	4
(d)	. 2	4	3	1

- 30. Mobility is defined as
  - (a) diffusion velocity per unit field
  - (b) drift velocity per unit field
  - (c) displacement per unit field
  - (d) number of free electrons/ number of bound electrons
- 31. Assertion (A): An n type semiconductor behaves as an intrinsic semiconductor at very high temperatures.
  - **Reason** (R): The breaking of the covalent bonds becomes a significant phenomenon at high temperatures.
  - (a) Both A and R are true and R is the correct explanation of A
  - (b) Both A and R are true but R is NOT the correct explanation of A
  - (c) A is true but R is false
  - (d) A is false but R is true
- Assertion (A): Electron mobility in metals decreases with increasing temperature.

Reason (R): In metals electron concentration in high.

- (a) Both A and R are true and R is the correct explanation of A
- (b) Both A and R are true but R is NOT the correct explanation of A
- (c) A is true but R is false
- (d) A is false but R is true

- 33. Which of the following can be determined by using a Hall crystal?
  - 1. Concentration of holes in a
    - p type semiconductor
  - Concentration of electrons in an n-type semiconductor
  - 3. Temperature of the set up with any type of semiconductor,
  - Diffusion constant and life time of minority carriers of any type of semiconductor

Select the correct answer using the code given below:

- (a) Only I and 2
- (b) 1, 2 and 4
- (c) Only 3 and 4
- (d) Only 2 and 4
- 34. Match List I (Current ) with

List – II (Variation) and select the correct answer using the code given below the lists:

List – I			Lis	t - II
A. Hole dif	1. n	. E		
B. Electron	2. p	. E		
C. Hole dri	3	dp/dx		
D. Electron	diffusio	n curre	ent 4. d	n/dx
Codes:	Α .	В	С	D

es:	, A ·	·B	С	D
(a)	2 -	1	^ 3	4
<b>(</b> b)	3	4	2	1
(c)	2 .	4	3	1
(d)	3	1	2	4

35. Match List – I (Material) with List – II (Energy Level) and select the correct answer using the code given below the lists

#### List - I

- A. p type semiconductor at 0 K temperature
- B. Intrinsic semiconductor at 0 K temperature
- C. n type semiconductor at room temperature
- D. p type semiconductor at room temperature

#### List - II

- Donor energy level is close to the conduction band
- 2. Acceptor energy level is close to the valence band
- 3. Fermi level is half way between the valence band and the conduction band:

#### Codes:

	Α	В	С	D
(a)	1	2	3	4
(b)	3	4	1	2
(c)	1	4	3	2
(d)	3	2	1	4

- 36. An intrinsic semiconductor (intrinsic electron density = 10<sup>16</sup> m<sup>-3</sup>) is doped with donors to a level of 10<sup>22</sup> m<sup>-3</sup>. What is the hole density assuming all donors to be ionized?
  - (a)  $10^7 \,\mathrm{m}^{-3}$
- (b)  $10^8 \,\mathrm{m}^{-3}$
- (c)  $10^{10} \,\mathrm{m}^{-3}$
- (d)  $10^6 \text{ m}^{-3}$
- 37. Why does the mobility o electrons in a semiconductor decrease with increasing donor density?
  - (a) Doping increases the effective mass of electrons
  - (b) Doping increases the relaxation time of electrons
  - (c) Electrons are trapped by the donors
  - (d) More holes are generated so that the effective mobility decreases
- 38. Match List 1 (Item) with
  List Il (Position) and select the
  correct answer using the code given
  helow the lists:

#### List - I

- A. Donor energy band
- B. Fermi level of p type semiconductor at room
- C. Acceptor energy band
- D. Fermi level in intrinsic semi conductor

#### List - II

 At the middle of the forbidden energy gap

**ACE Academy** 

- 2. Close to the conduction band temperature
- 3. Very close to the valence band
- 4. Close to the valance band

#### Codes:

	Α	В	$\mathbf{C}_{\parallel}$	D
(a)	4	3	2	1
(b)	2		4	3
(c)	4	1	2	3
(d)	2	3	4	1

- 39. The electron and hole concentrations, n and p respectively obey the relation np = n<sub>1</sub><sup>2</sup> where n<sub>1</sub> is the intrinsic carrier density. This expression is valid for which of the following?
  - (a) For all semiconductors under any condition
  - (b) For direct band gap semiconductor only
  - (c) For non degenerate semiconductor under thermal equilibrium condition
  - (d) For degenerate semiconductors having excess electrons and holes
- 40. An intrinsic semiconductor is doped lightly with p type impurity. It is found that the conductivity actually decreases till a certain doping level is reached. Why does this occur?
  - (a) The mobility of holes decreases
  - (b) The mobility of both electrons and holes decreases
  - (c) The hole density actually reduces
  - (d) Effect of reduction in electron due to increase in holes compensates more than the effect of increases in holes on conductivity

41: Assuming that the electron mobility in
intrinsic silicon is 1500 cm <sup>2</sup> / Vs at
room temperature (T = 300K) and the
corresponding volt equivalent of
temperature $V_T = 25.9$ mV, what is
the approximate value of the electron
diffusion constant?

- (a)  $40 \text{ cm}^2/\text{ s}$
- (b)  $4 \text{ cm}^2/\text{ s}$
- (c)  $400 \text{ cm}^2/\text{ s}$
- (d)  $4000 \text{ cm}^2/\text{ s}$
- 42.An intrinsic semiconductor with energy gap 1 eV has a carrier concentration N at temperature 200 K. Another intrinsic semiconductor has the same value of carrier concentration N at temperature 600 K. What is the energy gap value for the second semiconductor?
  - (a) (1/3) eV
- (b) (3/2) eV
- (c) 3 eV
- (d) 9 eV
- 43. Consider the following statements:
  - n-type of silicon can be
  - formed by adding impurity of phosphorous
  - Formed by adding impurity of arsenic
  - 3. Formed by adding impurity of boron
  - 4. Formed by adding impurity of aluminum
  - Which of the statements given above are correct?
  - (a) 1 and 3 only (b) 3 and 4 only
  - (c) 1 and 2 only (d) 1,2,3 and 4

#### KEY:

1.a	2.a	3.d	4.d	5.d	6.c
7.b	8.b	9.b	10.d	11.d	12.d
13.a	14.b	15.c_	l6.b	17.d	
18.c	19.d	20.d	21.c	22.c	23.b
24.d	25.c	26.d	27.d	28.b	29.a
30.a	31.a	32.b	33.a	34.d	35.b
36.c	37.b	38.d	39.c	40.b	41.a
42.a	43.c				

### **PREVIOUS GATE QUESTIONS:**

- 1. n-type silicon is obtained by doping silicon with GATE 2003

  (a) Germanium (b) Aluminium
  - (c) Boron
- (d) Phosphorus
- 2. The bandgap of silicon at 300 K is GATE 2003
  - (a) 1.369 eV
- (b) 1.10 eV
- (c) 0.80 eV
- (d) 0.67 eV
- The intrinsic carrier concentration of silicon sample at 300 K is 1.5 X 10<sup>16</sup>/m³. If after doping, the number of majority carriers is 5 X 10<sup>20</sup>/m³, the minority carrier density is G 2003

   (a) 4.50 X 10<sup>11</sup>/m³
   (b) 3.33 X 10<sup>14</sup>/m³
   (c) 5.00 X 10<sup>20</sup>/m³
   (d) 3.00 X 10<sup>-5</sup>/m³
- 4. The bandgap of Silicon at room temperature is GATE - 2005 (a) 1.3 eV (b) 0.7 eV
  - (a) 1.3 eV (c) 1.1 eV
- (d) 1.4-eV
- 5. The concentration of minority carriers in an extrinsic semiconductor under equilibrium is GATE 2006
  - (a) directly proportional to the doping concentration
  - (b) inversely proportional to the doping concentration
  - (c) directly proportional to the intrinsic concentration
  - (d) inversely proportional to the intrinsic concentration
- The electron and hole concentrations in an intrinsic semiconductor are n<sub>i</sub> percm<sup>3</sup> at 300 K. Now, if acceptor impurities are introduced with a concentration of N<sub>A</sub> per cm<sup>3</sup> (where N<sub>A</sub> >> n<sub>i</sub>) the electron concentration per com<sup>3</sup> at 300 K will be G 2007
   (a) n<sub>i</sub> (b) n<sub>i</sub> ± N<sub>A</sub>
  - (c)  $N_A n_i$
- $(d) n_i^2 / N_A$

- 7. An n-type silicon bar 0.1 cm long and 100 μm<sup>2</sup> in cross-sectional area has a majority carrier concentration of 5 x 10<sup>20</sup>/m<sup>3</sup> and the carrier mobility is 0.13 m<sup>2</sup>/V-s at 300K. If the charge of an electron is 1.6 x 10<sup>-19</sup> coulomb, the resistance of the bar is G = 2003
  - (a) 10<sup>6</sup> ohm
- (b) 10<sup>1</sup> ohm
- (c) 10<sup>-1</sup> ohm
- (d) 10<sup>-4</sup> ohm
- 8. The electron concentration in a sample of uniformly doped n-type silicon at 300K varies linearly from 10<sup>17</sup>/cm<sup>3</sup> at x = 0 to 6 x  $10^{16}$ /cm<sup>3</sup> at x = 2 µm. Assume a situation that electrons are supplied to keep this concentration gradient constant with time. If electronic charge is 1.6 x 10<sup>-19</sup> Coulomb and the diffusion constant D<sub>n</sub> = 35cm<sup>2</sup>/s, the current density in the silicon, if no electric field is present, is

- (a) zero
- GATE 2003 (b)  $-1120 \text{ A/cm}^2$
- (c)  $-560 \text{ A/cm}^2$
- (d)  $+1120 \text{ A/cm}^2$
- 9. The resistivity of a uniformly doped ntype silicon sample is  $0.5\Omega$ -cm. If the electron mobility ( $\mu_n$ ) is 1250 cm<sup>2</sup>/Vsec and the charge of an electron is 1.6 x 10<sup>-19</sup> Coulomb, the donor impurity concentration (N<sub>D</sub>) in the sample is

**GATE - 2004** 

- (a)  $2 \times 10^{16} \text{/cm}^3$  (b)  $1 \times 10^{16} \text{/cm}^3$
- (c)  $2.5 \times 10^{15}$ /cm<sup>3</sup> (d)  $2 \times 10^{15}$ /cm<sup>3</sup>
- 10. A Silicon sample A is doped with 10<sup>18</sup> atoms/cm<sup>3</sup> of Boron. Another sample B of identical dimensions is doped with 10<sup>18</sup> atoms/cm<sup>3</sup> of Phosphorus. The ratio of electron to hole mobility is 3. The ratio of conductivity of the sample A to B is GATE - 2005
  - (a) 3
- (b) 1/3
- (c) 2/3
- (d) 3/2

11. The majority carriers in an n-type, semiconductor have an average drift velocity v in a direction perpendicular to a uniform magnetic field B. The electric field E induced due to Hall effect acts in the direction

GATE - 2006

- (a) v x B
- (b) B x v
- (c) along v
- (d) opposite to v
- 12. A heavily doped n-typed semiconductor has the following data: Hole-electron mobility ratio: 0.4 Doping concentration: 4.2 x 10<sup>8</sup> atoms/m3

Intrinsic concentration: 1.5 x 10<sup>4</sup> atoms/m3

The ration of conductance of the ntype semiconductor to that of the intrinsic semiconductor of same material and at the same temperature is given by **GATE - 2006** 

- (a) 0.00005
- (b) 2,000
- (c) 10,000
- (d) 20,000
- 13. Silicon is doped with boron to a concentration of 4 x 10<sup>17</sup> atoms/cm<sup>3</sup>. Assume the intrinsic carrier concentration of silicon to be 1.5 x 10<sup>10</sup>/cm<sup>3</sup> and the value of kT/q to be 25mV at 300K. Compared to undoped silicon, the Fermi level of doped silicon GATE - 2008
  - (a) goes sown by 0.13 eV
  - (b) goes up by 0.13 eV
  - (c) goes down by 0.427 eV
  - (d) goes up by 0.427 eV

- 14. In a n- type silicon crystal at room temperature, which of the following can have a concentration of  $4 \times 10^{19} \text{ cm}^{-3}$ ? G-2009

  - a) Silicon atoms
  - b) Holes

**ACE Academy** 

- c) Dopant atoms
- d) Valence electrons
- 15. The ratio of the mobility to the diffusion coefficient in a semiconductor has the units G-2009
  - a) V<sup>-1</sup>
- b) cm . V-1
- c) V . cm<sup>-1</sup>
- d) V.s

KEY:

- 6.d
- 9.b 12.d 7.a 10.b 11.b
- 15. 13.c 14.

# CHAPTER - 2 P -N JUNCTION THEORY AND CHARACTERISTICS (JUNCTION theory, different types of diodes and their characteristics)

# SEMICONDUCTOR DIODE CHARACTERISTICS

- The p- and n-type silicon or germanium can be obtained by adding appropriate acceptor
  or donor impurity into Si or Ge-melt while growing a crystal.
- These crystals are cut into thin slices called 'Wafers'. Semiconductor devices are usually
  made on these wafers.
- These are many methods of making a p-n junction as given below.
   (a) 'Alloying' technique
   (b) Diffusion technique
   (c) Vapour deposition (cpitaxial growth) and
   (d) Rate growth junction.
- The donor ion is indicated schematically by a plus sign (+) because, after this impurity
  atom "donates" an electron it becomes a positive ion. The acceptor ion is indicated by a
  minus sign
- (-) because, after this atom "accepts" an electron, it becomes a negative ion.
- Initially, there are nominally only p-type carriers to the left of the junction and only n-type carriers to the right.
- Because, there is a density gradient across the junction holes will diffuse to the right across the junction and electrons to the left.
- As a result of the displacement of these carriers, an electric field will appear across the
  junction. Equilibrium will be established when the field becomes large enough to restrain
  the process of diffusion.
- The un neutralized ions in the neighborhood of the junction are referred to as "uncovered charges". Since the region of the junction is depleted of mobile charges, it is called the "depletion region, the space-charge region, or the transition region"
- The thickness of this region is of the order of  $10^{-4}$  cm =  $10^{-6}$  m = 1 micron
- The general shape of the charge distribution may be as shown in figure 1.1b.
- The electric field intensity in the neighborhood of the junction is indicated in fig 1.1c.
- The electrostatic-potential variation in the depletion region is shown in fig 1.1d.
- This variation constitutes a potential energy barrier against the further diffusion of holes across the barrier.
- The form of the potential energy barrier against the flow of electrons from the n-side across the junction as shown in fig 1.1e.
- The potential barrier (or field across the junction) and the depletion layer width (or junction width) depends upon the doping concentration on the two sides.

- At equilibrium, there is no net current flowing across the p-n junction.
- The current due to the drift of carriers in the electric field must exactly cancel the
  diffusion current. J<sub>p</sub>(drift) + J<sub>p</sub>(diffusion) = 0

$$J_n(drift) + J_n(diffusion) = 0$$

Since the net hole current density is zero, the negative of the hole diffusion current must equal the hole drift current.  $eD_p \frac{dp}{dx} = e \mu_p p\epsilon$ 

The potential barrier V<sub>0</sub> called the contact, or diffusion, potential is of the order of magnitude of a few tenths of a volt.

- $\nabla^2 V = d^2 V / dx^2 = -\rho/\epsilon$   $\Rightarrow$  Poisson equation is satisfied inside the junction.
- $\nabla^2 V = d^2 V/dx^2 = 0 \qquad \Rightarrow \text{Laplace equation is satisfied outside the junction.}$

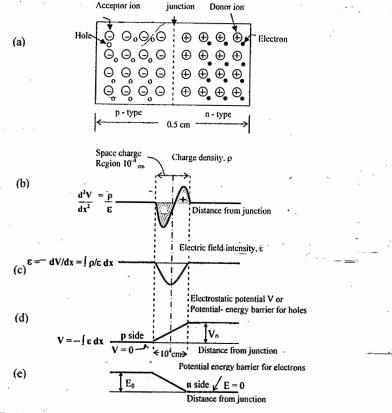


Fig - 1: A schematic diagram of a p-n junction, including the charge density, electric field intensity, and potential – energy barriers at the junctions. (not drawn to scale.)

#### THE P-N JUNCTION AS A DIODE

 Diode permits the easy flow of current in one direction but restrains the flow in the opposite direction.

#### **Forward Bias:**

- Suppose we apply a voltage V such that n-side is negative and p-side is positive.
- The applied voltage V (or bias V) is opposite to the junction barrier potential V
- The consequences of this are:
  - (i) The effective barrier potential becomes  $(V_0 V)$  and hence the energy barrier across the junction decreases.
  - (ii) more majority carriers will be allowed to flow across the junction.
  - (iii) the junction width decreases.

The current flow is principally due to majority charge carriers and is large (mA).

#### Reverse Bias:

- The applied voltage V on the n-side is positive and is negative on the p-side.
- The applied bias V and the barrier potential V<sub>0</sub> are in the same direction making the
  effective junction potential as V + V<sub>0</sub>. As a result, the junction width will increase.
- The higher junction potential would restrict the flow of majority carriers to a much greater extent.
- However, such a field will favour the flow of minority carriers (as they have opposite charges).
- So, the reverse bias current will be due to the minority carriers only.
- Since, the number of minority carriers is very small as compared to the majority carriers.
  the reverse bias current is small (≈ μA).

# THE SHORT-CIRCUITED AND OPEN-CIRCUITED P-N JUNCTION:

- If the voltage V applied to the p-n junction is set equal to zero, the p-n junction would be short-circuited.
- Under this condition, no current can flow (I = 0) and the electrostatic potential  $V_0$  remains uncharged and equal to the value under open circuit conditions.
- The sum of the voltages around the closed loop must be zero, the junction potential V<sub>0</sub>
  must be exactly compensated by the metal to semiconductor contact potentials at the
  ohmic contacts.
- It is not possible to measure contact difference of potential directly with a voltmeter across an open-circuited p-n junction diode and the voltmeter would read zero voltage.

# BAND STRUCTURE OF AN OPEN CIRCUITED P-N JUNCTION:

- The Fermi level must be constant throughout the specimen at equilibrium.
- The Fermi level  $E_F$  is closer to the conduction band edge  $E_{cn}$  in the n-type material and closer to the valence band edge  $E_{vp}$  in the p-side.
- The conduction band edge E<sub>cp</sub> in the p material cannot be at the same level as E<sub>cn</sub>, nor
  can the valence band edge E<sub>vn</sub> in the n-side line up with E<sub>vp</sub>. Hence the energy band
  diagram for a p-n junction appears as shown in fig. 2 Where a shift in energy levels E<sub>0</sub> is
  indicated. Note that

$$E_0 = E_{cp} - E_{cn} = E_{vp} - E_{vp} = E_1 + E_2$$

This energy E<sub>0</sub> represents the potential energy of the electrons at junction.

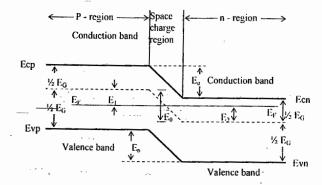


Fig - 2: Band diagram for a p-n junction under open-circuit conditions. This sketch corresponds to fig (1e) and represents potential energy for electrons. The width of the forbidden gap is E<sub>G</sub> in electron volts.

From figure,

 $E_F-E_{Vp}=1/2\ E_G-E_1\ and\ E_{Cn}-E_F=1/2\ E_G-E_2\quad E_G=forbidden\ energy\ gap$  By adding the above equations

$$E_{0} = E_{1} + E_{2} = E_{G} - (E_{Cn} - E_{F}) - (E_{F} - E_{Vp})$$

$$E_{G} = kT \ln [(N_{C}N_{V}) / n_{i}^{2}] \qquad \cdots \qquad (1)$$

$$E_{Cn} - E_{F} = kT \ln (N_{C} / N_{D}) \qquad \cdots \qquad (2) \qquad \therefore kT = 26 \text{ meV}$$

$$E_{F} - \overline{E_{Vp}} = kT \ln (N_{V} / N_{A}) \qquad \cdots \qquad (3)$$

The E's are expressed in electron volts and k has the dimensions of electron volts per degree Kelvin. The Contact difference in potential  $V_0$  is expressed in volts and is numerically equal to  $E_0$  and it is depends only upon the equilibrium concentrations, and not at all upon the charge density in the transition region(space charge region).

Other expressions for  $E_0$  are

$$E_0 = kT \ln \frac{N_D N_A}{n_i^2} = kT \ln \frac{p_{po}}{p_{no}} = kT \ln \frac{n_{no}}{n_{po}}$$
 --- (4)


n material

injected or excess charge

Rewriting the above equation (4) in another form

Since  $V_0 / V_T = E_0/kT$ 

Fig - 3: The hole and electron-current components vs, distance in a p-n junction diode. The space-charge region at the junction is assumed to be negligibly small.

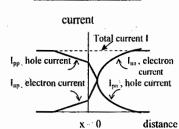

### THE CURRENT COMPONENTS IN A P-N DIODE

- When a forward bias is applied to a diode, holes are injected into the n-side and electrons into the p-side.
- The number of these injected minority carriers falls off exponentially with distance from the junction as shown in fig.(3)
- The symbol  $I_{pn}(x)$  represents the hole current in the n material, and  $I_{np}(x)$  indicates the electron current in the p-side as a function of x.
- Electrons crossing the junction at x = 0 from right to left constitute a current in the same direction as holes crossing the junction from left to right.

Hence the total current I at x = 0 is

$$\mathbf{I} = \mathbf{I}_{pn}(0) + \mathbf{I}_{np}(0)$$

 Consequently, in the p-side, there must be a second component of current I<sub>pp</sub> which, when added to I<sub>up</sub>, gives the total current I. Hence this hole current in the p-side I<sub>pp</sub>(a majority carrier current) is given by

$$\mathbf{I}_{\mathsf{pp}(\mathsf{x})} = \mathbf{I} - \mathbf{I}_{\mathsf{np}(\mathsf{x})}$$

- This current is plotted as a function of distance as shown in fig.(3) as is also the corresponding electron current T<sub>nn</sub> in the n material.
- For an un symmetrically doped diode,  $I_{pn} \neq I_{np}$ .
- The current in a p-n diode is bipolar in character since it is made up of both positive and negative carriers of electricity.
- The total current is constant throughout the device, but the proportion due to holes and that due to electrons varies with distance.

# **QUANTITATIVE THEORY OF THE P-N DIODE CURRENTS**

P-N Junction And Characteristics

If the forward bias is applied to the diode, holes are injected from the p side into the n material. The concentration  $\underline{p}_n$  of holes in the n-side is increased above its thermal equilibrium value  $\underline{p}_{no}$  and, is given by

$$p_n(x) = p_{no} + P_n(0) e^{-x/L p}$$
 ---- (6)

Where the parameter  $L_p$  is called the diffusion length for holes in the n material.

And the injected or excess concentration at x = 0 is

$$P_n(0) = p_n(0) - p_{n0}$$

ACE Academy

The diffusion hole current in the n-side is given by

$$I_{pn} = -Aq D_p \frac{dp_n}{dx} \qquad (7)$$

Fig – 4: Defining the several components of hole concentration in the n side of a forward – biased diode.

 $p_n(0)$ 

Taking the derivative of equation (6) and substituting in equation (7) we obtain

$$I_{pn}(x) = \underbrace{Aq D_p P_n(0)}_{Lp} \quad e^{-x/Lp} \qquad ---- \quad (8)$$

This equation verifies that the hole current decreases exponentially with distance.

Where q-charge of an electron

# THE LAW OF THE JUNCTION

• If the barrier potential across the depletion layer is V<sub>B</sub>, then

$$p_p = p_n e^{V_B^n/V_T} \qquad --- \qquad (9)$$

This is the Boltzmann relationship of kinetic gas theory.

• If we apply above equation to the case of an open-circuited p-n junction, then  $p_p = p_{p0}$ ,  $p_n = p_{n0}$  and  $V_B = V_0$ .

- Consider now a junction biased in the forward direction by an applied voltage V.
- Then the barrier voltage V<sub>B</sub> is decreased from its equilibrium value V<sub>0</sub> by the amount V

$$V_{B} = V_{0} - V$$

 $V_0$  = equilibrium value

At the edge of the depletion layer, x = 0,  $p_n = p_n(0)$ , then the above equation (9) is

$$p_{p\theta} = p_n(0) e^{(V_{\theta} - V)/V_T}$$
 --- (10)

0.2 V. V

Combining this equation with the above said equation(5), i.e.,  $p_{p0} = p_{n0} e^{V_0 N} T$ We obtain,

$$\mathbf{p}_{n}(0) = \mathbf{p}_{n0} \, \mathbf{e}^{V/V}_{T}$$
 -- (11)

This boundary condition is called the "law of the junction". It indicates that, for a forward bias (V > 0), the hole concentration  $p_n(0)$  at the junction is greater than the thermalequilibrium value pno.

A similar equation, valid for electrons, is obtained by interchanging  $\boldsymbol{p}$  and  $\boldsymbol{n}$  in above equation(11).

The hole concentration  $P_n(0)$  injected into the n side at the junction is given by

$$P_n(0) = p_{n0} (e^{V/V} - 1)$$
 ....(12)

# THE FORWARD CURRENTS:

• The hole current  $I_{pn}(0)$  crossing the junction into the n-side at x=0 is given by

$$I_{pn}(\underline{0) = \Lambda q D_p p_{n0}} \quad (e^{V/V}_T - 1)$$

• The electron current  $I_{np}(\theta)$  crossing the junction into the p-side is obtained from above equation by interchanging n and p, or

$$I_{np}(0) = \frac{\mathbf{AqD_n n_{p0}}}{\mathbf{I}_{m}} \quad (e^{\mathbf{V}/\mathbf{V}_T} - 1)$$

The total diode current I is the sum of  $I_{pn}(0)$  and  $I_{np}(0)$ , or

$$I = I_0 (e^{V/V} - 1)$$

$$\label{eq:where} where \quad \ I_0 = \frac{\Lambda q D_p p_{n0}}{L_p} \quad + \quad \frac{\Lambda q D_n n_{p0}}{L_n}$$

Hence  $I_0$  is called the "reverse saturation current" and depends on doping concentration.

$$I_0 = Aq \left( \frac{D_p}{L_p N_D} + \frac{D_n}{L_n N_A} \right) n_i^2$$

$$p_{no} = \frac{n_i^2}{N_D}$$

$$p_{no} = \frac{n_i^2}{N_D}$$

Where  $n_i^2 = A_0 T^3 e^{-E}_{GO} / kT = A_0 T^3 e^{-V}_{GO} / kT$ 

$$n_{po} = n_i^2 / N$$

In other form,

$$I_0 = Aq n_i^2 V_T \left( \frac{\mu_p}{L_p N_D} + \frac{\mu_n}{L_n N_A} \right)$$

From Einstein equation,

$$D_p/\mu_p = D_n/\mu_n = V_1$$

In Einstein equation, 
$$I_0 = \mathbf{A}\mathbf{q}^2 \mathbf{n}_i^2 \mathbf{V}_T \mu_n \mu_p \left( \frac{1}{\mathbf{L}_p \sigma_n} + \frac{1}{\mathbf{L}_n \sigma_p} \right)$$

where,  $\sigma_n = N_D \mu_n q$  and  $\sigma_p = N_A \mu_p q$ 

 $V_{CO}$  is a voltage which is numerically equal to the forbidden gap energy in electron volts. If we consider the recombination of carriers, then the total current I

$$I = I_0(e^{V/\eta V} - 1) \qquad \dots (13)$$

Where  $^{\eta} \approx 2$  for small (rated) currents and  $^{\eta} \approx 1$  for large currents.

ACE Academy

 $\eta \sim 2$  for silicon

 $\eta \sim 1$  for germanium

• Io depends on material and it is fixed for a given device. But varies with temperature

$$I_{o2} = I_{o1} \times 2^{|(T_2 - T_1)/10|}$$
 ....(14)

- Where  $I_{01}(I_{02})$  is the reverse saturation current at a temperature  $T_1(T_2)$ .
- In doubles for every 10°C rise in temperature. That is, it increases 7% / °C.
- In is in the range of microamperes for a germanium diode and nano amperes for a silicon
- Since n = 2 for small currents in silicon, the current increases as  $e^{V/2V}$  for the first several tenths of a volt and increases as  $e^{V/V}$  only at higher voltages.

# THE VOLT-AMPERE CHARACTERISTIC:

For a p-n junction, the current I is related to the voltage V by the equation

$$I = I_0(e^{V/\eta V}_T - 1)$$
 --- (13)  $\eta \simeq 1$  for Ge  $\simeq 2$  for Si

 $V_T = T / 11,600 = 26 \text{ mV}$  at  $T = 300^{\circ}\text{K}$ . At room temperature,

(a) When the voltage V is positive and several times  $V_T$ , the unity in the paranthesis of equation (13) may be neglected. i.e.,  $e^{V/\eta V}_{T} >> 1$ ,

$$\therefore I = I_0 e^{V/\eta V} T$$

Accordingly except for a small range in the neighborhood of the origin, the current increases exponentially with voltage.

(b) When the diode is reverse-biased and |V| is several times  $V_T$ ,  $I \approx -I_0$ . The "reverse current" is therefore constant, independent of the applied reverse bias. Consequently, Ia is referred to as the "reverse saturation current"

At a reverse biasing voltage  $V_{Z_2}$  the diode characteristic exhibits an abrupt and marked departure from equation (13).-At this critical voltage a large reverse current flows, and the diode is said to be in the "break down region".

Fig – 5: The volt-ampere characteristic for a germanium diode.

The Cutin Voltage, Offset, break-point, or threshold voltage (Vγ):

Below V $\gamma$  the current is very small (say, less than 1 per cent of max. rated voltage). Beyond V $\gamma$  the current rises very rapidly. V $\gamma$  = 0.2 V for Ge, 0.6V for Si.

The reverse saturation current I0 in a Ge is normally larger by a factor of about 1000 than the I0 in a silicon diode of comparable ratings. Since n=2 for small currents in Si, the l increases as  $e^{V/2V}$ <sub>T</sub> only at higher voltages.

The resistance R, cutin voltage Vγ, power dissipation and noise margin of Germanium is less—than the silicon. But Germanium is not used in switching characteristics.

The temperature dependence of p-n diode characteristics:

The dependence of I0 on temperature T is given approximately by  $I_0 = k T^m e^{-V}_{GO} / \eta V T$ 

Where k is constant and  $qV_{GO}$  (q is the magnitude of the electron charge) is the forbidden gap energy in Joules:

For Ge: 
$$n = 1$$
  $m = 2$   $V_{GO} = 0.785V$   
For Si:  $n = 2$   $m = 1.5$   $V_{GO} = 1.21V$ 

Taking the derivative of the logarithm of above equation, we find

$$\frac{1}{10} \quad \frac{dI_0}{dT} = \frac{d}{dT} (\ln I_0) = \frac{m}{T} + \frac{V_{GO}}{\eta T V_T}$$

At room temperature,  $d(lnI_0)/dT = 0.08$  /°C for Silicon and 0.11 / °C for Germanium.

The I0 increases approximately 7 percent / °C for both Si and Ge. Since  $(1.07)10 \approx 2.0$ , we conclude that the "reverse saturation current(Io)" approximately doubles for every 10°C rise in temperature.

Consider a diode operating at room temperature (300°K) and just beyond the Vγ.

Then we find,

$$\frac{dV}{dT} = \begin{cases} -2.1 \text{ mV/°C for Ge} \\ -2.3 \text{ mV/°C for Si} \end{cases}$$

Since these data are based on "average characteristics", it might be well for conservative design to assume a value of

$$dV / dT = -2.5 \text{ mV/°C}.$$
 .....(14)

for either Ge or Si at room temperature.

For Germanium, an increase in temperature from room temperature (25°C) to 90°C, increases the I0 to hundreds of microamperes, although in Silicon at 100°C the I0 has increased only to some tenths of a micro ampere.

#### **DIODE RESISTANCE**


The static resistance R of a diode is defined as the ratio V/I of the voltage to the current. Typical values for a silicon planar epitaxial diode are  $V_F = 0.8V$  at  $I_F = 10 \text{mA}$  (corresponding to  $R_F = 80\Omega$ ) and  $I_R = 0.1 \mu A$  at  $V_R = 50V$  (corresponding to  $R_R = 500M$ ).

For small signal operation the dynamic, or incremental, resistance  $\mathbf{r}$  is an important parameter and is defined as the reciprocal of the slope of the volt-ampere characteristic,  $\mathbf{r} = \mathbf{dV/dI}$ . The dynamic resistance is not a constant, but depends upon the operating voltage.

The dynamic conductance g = 1/r is

$$G = \underline{dI}_{dV} = \underline{I_0} e^{V/\eta V_T} = \underline{I + I_0}$$

for  $|V/\eta V_T| >> 1$ , g is small and r is very large. For forward bias,  $I >> I_0$ , and r is given by



$$r \approx (\eta V_T) / I$$
 .....(15)

Fig – 6: The piecewise linear characterization of a semiconductor diode.

For an avalanche diode,  $V_{\gamma} = V_{Z}$ , and  $R_{f}$  is the dynamic resistance in the breakdown region.

Type	Model	Characteristics
Ideal device	ldeal diode	V <sub>D</sub>
Simplified model	o	$\begin{array}{c c} I_D & & & \\ \hline & I_D & & & \\ \hline & 0 & & V_T & & V_D \\ \end{array}$
Piece wise linear model	o l W Ideal diode	I <sub>D</sub> r av V <sub>D</sub>

# TRANSITION OR SPACE CHARGE (OR DEPLETION REGION) CAPACITANCE ( $C_T$ )

The parallel layers of oppositely charged immobile ions on the two sides of the junction-form the transition capacitance,  $C_T$ , which is given by

Where  $\varepsilon(=\varepsilon_0\varepsilon_r)$  is the permittivity of the material, A is the cross-sectional area of the junction and W is the width of the depletion layer over which the ions are uncovered. The net charge must be zero across the depletion region will satisfy the condition

$$N_A W_p = N_D W_u$$
 .....(16)

Where

 $N_A = acceptor concentration; N_D = donor concentration;$ 

W<sub>p</sub> width of the depletion region in p-side;

W<sub>n</sub>= width of the depletion region in n-side;

The effective barrier potential across the junction is

$$V_B = (qN_A W^2) / 2\epsilon$$
 ....(17) if  $N_A << N_D$ , then  $W_p >> W_n$ .

The total depletion width, W is given by

$$W = \left(\frac{2\varepsilon V_R}{q} \left(\frac{N_A + N_{\overline{D}}}{N_A N_D}\right)\right)^{\frac{1}{2}} \dots \dots (18)$$

where.

 $V_B = (V_0 - V)$ , V is the applied voltage and  $V_0$  is the barrier potential, or the contact potential.

- When no external voltage is applied, i.e., V = 0, the width of the depletion region of a p n junction diode is of the order of 0.5 microns. The movement of majority carriers across the junction causes opposite charges to be stored at this distance W apart. This depletion region acts as a dielectric between the two conducting p- and n-regions. Therefore, these regions act as a parallel plate capacitor whose transition capacitance C<sub>T</sub> is approximately 20 pF with no external bias.
- When forward bias +V is applied, the effective barrier potential,  $V_B = [V_0 (+V)]$ , is lowered and hence the width of the depletion region W decreases and C<sub>T</sub> increases. Under reverse bias condition, the majority carriers move away from the junction, thereby uncovering more immobile charges. Now the effective barrier potential,  $V_B = [V_0 - (-V)]$ , is increased and hence, W increase with reverse voltage and  $C_T$ decreases correspondingly.
- The values of C<sub>T</sub> range from 5 to 200 pF, the larger values being for the high power diodes. This property of voltage variable capacitance with the reverse bias appears in varactors, Vari-caps or volta-caps.

# DIFFUSION (OR STORAGE) CAPACITANCE (C<sub>D</sub>)

The capacitance that exists in a forward biased junction is called a diffusion or storage capacitance (C<sub>D</sub>), whose value is usually much larger than C<sub>T</sub>, which exists in a reversebiased junction. This is also defined as the rate of change of injected charge with applied voltage, i.e.,  $C_D = (dQ/dV)$ , where dQ represents the change in the number of minority carriers stored outside the depletion region when a change in voltage across the diode, dV is applied. Diffusion capacitance C<sub>D</sub> is proportional to diode forward current, I. Therefore,  $C_D = \tau I / (\eta V_T)$ , where  $\tau$  is the mean life time for holes and electrons. The values of  $C_D$  range from 10 to 1000 pF, the larger values being associated with the diode carrying a larger anode current.I.

The effect of  $C_D$  is negligible for a reverse-biased p-n junction. As the value of  $C_D$  is inversely proportional to frequency, it is high at low frequencies and it decreases with the increase in frequency.

$$\begin{array}{lll} C_D = (L_p^{\ 2}g) \, / \, D_p & g = dI \, / \, dV & g = {\rm conductance} \\ \tau = L_p^{\ 2} \, / \, D_p & g = I \, / \, (\eta \, V_T) & \tau = {\rm mean \ life \ time \ of \ carriers.} \\ C_D = \tau g & C_D = \tau I \, / \, (\eta \, V_T) & , \end{array}$$

For a reverse bias 'g' is very small and  $C_D$  may be neglected compared with  $C_T$ . For a forward current, CD is usually much larger than CT. Despite the large value of Cn, the time constant  $rC_D$  may not be excessive because the dynamic forward resistance r = 1/g is small.

$$rC_D = \tau$$

Hence the diode time constant equals the mean lifetime of minority carriers, which lies in range of nanoseconds to hundreds of microseconds.

# Charge-Control Description of a Diode:

$$I = (Q D_p) / L_p^2 = Q/\tau$$

This is very important equation states that the diode current is proportional to the stored charge of excess minority carriers.

Thus, in the steady state, the current I supplies minority carriers at the rate at which these carriers are disappearing because of the process of recombination.

# DIODE APPLICATIONS

An ideal p-n junction diode is a two terminal polarity sensitive device that has zero resistance (diode conducts) when it is forward biased and infinite resistance (diode does not conduct) when reverse biased. Due to this characteristic the diode finds number of applications as given below.

- (i) rectifiers in d.c power supplies
- (ii) switch in digital logic circuits used in computers
- (iii) clamping network used as d.c restorer in TV receivers and voltage multipliers
- (iv) clipping circuits used as wave shaping circuits used in computers, radars, radio and TV receivers.
- (v) demodulation (detector) circuits.

The same PN junction with different doping concentration finds special applications as

- (i) detectors (APD, PIN photo diode) in optical communication circuits
- (ii) Zener diodes in voltage regulators
- (iii) varactor diodes in tuning sections of radio and TV receivers
- (iv) light emitting diodes in digital displays
- (v) LASER diodes in optical communications
- (vi) Tunnel diodes as a relaxation oscillator at microwave frequencies.

# **BREAKDOWN DIODES**

Diodes which are designed with adequate power dissipation capabilities to operate in the breakdown region may be employed as voltage-reference or constant voltage devices. Such diodes are known as avalanche, breakdown, or Zener diodes.

The reverse voltage characteristic of a semiconductor diode, including the breakdown region is shown in fig.7 (a). By reverse biasing, the diode is operating in the breakdown region as shown in fig.7 (b)

The diode will regulate the load voltage against variations in load current and against variations in supply voltage V because, in the break down region, large changes in diode current produce only small changes in diode voltage.

The upper limit on diode current is determined by the power dissipation rating of the diode. The thermally generated electrons and holes acquire sufficient energy from the applied potential to produce new carriers by removing valence electrons from their bonds. These new carriers, in turn, produce additional carriers again through the process of disrupting bonds. This cumulative process is referred to as "avalanche multiplication". It results in the flow of large reverse currents, and the diode finds itself in the region of "avalanche breakdown".

Even if the initially available carriers do not acquire sufficient energy to disrupt bonds, it is possible to initiate breakdown through a direct rupture of the bonds because of the existing of the strong electric field. Under these circumstances the break down is referred to as the "zener breakdown". This zener effect is now known to play with breakdown voltages below about 6V.

If the reference voltage is above 6V, where the physical mechanism involved is avalanche multiplication, the temperature coefficient is positive. However, below 6V, where true zener breakdown is involved, the temperature coefficient is negative.

The zener breakdown voltage decreases with temperature. The value of the avalanche voltage must increase with increased temperature.

The capacitance across a breakdown diode is the transition capacitance. High power avalanche diodes have very large capacitances.  $C_T$  is from 10 to 10,000 pf are common.




Fig – 7: (a) The volt-ampere characteristic of an avalanche, or Zener, diode.

(b) A circuit in which such a diode is used to regulate the voltage across R<sub>L</sub> against changes due to variations in load current and supply voltage.

### **TUNNEL DIODE**

A p-n junction diode has an impurity concentration of about 1 part in  $10^8$ . With this amount of doping, the width of the depletion layer, which constitutes a potential barrier at the junction, is of the order of 5 microns ( $5 \times 10^{-6}$  m). If the concentration of impurity atoms is greatly increased, say, to 1 part in  $10^3$  (corresponding to a density in excess of  $10^{19}$  /cm<sup>3</sup>), the device characteristics are completely changed. This new diode was announced in 1958 by

Esaki.

Tunneling phenomenon: The width of the junction barrier varies inversely as the square root of impurity concentration and therefore is reduced from 5 microns to less than 100A

(10<sup>-6</sup> cm). This thickness is only about one-fifth the wavelength of visible light.

Classically, a particle must have energy at least equal to the height of a potential barrier if it is to move from one side of the barrier to the other. However, for barriers as thin as those estimated above in Esaki diode, the Schrodinger equation indicates that there is a large probability that an electron will penetrate through the barrier. This quantum mechanical behavior is referred to as "tunneling", and hence these high-impurity density p-n junction devices are called "tunnel diodes".

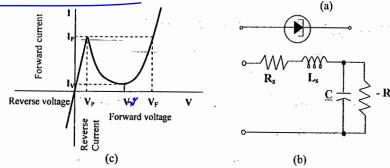


Fig - 8: (a) symbol for a tunnel diode

ACE Academy

- (b) small-signal model of a tunnel diode in the negative resistance region
- (c) the volt-ampere characteristic of a tunnel diode.

#### Characteristics of a Tunnel Diode:

The tunnel diode exhibits a negative resistance characteristic between the peak current  $I_p$  and the minimum value  $I_v$ , called the valley current. The tunnel diode useful in pulse and digital circuitry. The small-signal model for operation in negative resistance region is indicated in fig.8.(b)

Tunnel diode is used as very high speed switch. Switching times of the order of a nanosecond are reasonable and times as low as 50 p sec have been obtained. A second application is as a high frequency (microwave) oscillator. The voltages  $V_{\nu}$  and  $V_{F}$  have negative temperature coefficients of about 1.0 mV/°C.

### **Tunnel diode Applications:**

- 1. Tunnel diode is used as an ultra-high speed switch, switching speed of the order of ns or ps
- 2. As logic memory storage device
- As microwave oscillator
- 4. In relaxation oscillator circuit
- As an amplifier.

#### Advantages

1. Low noise 2. Ease of operation 3. High speed 4. Low power

#### Disadvantages

- 1. Voltage range over which it can be operated is 1 V or less.
- 2. Being a two terminal device, there is no isolation between the input and output circuit.

#### **OBJECTIVES**


- 01. Reverse recovery current in a diode depends on
  - (a) forward field current
  - (b) storage charge
  - (c) temperature
  - (d) PIV
- 02. Choose proper substitutes for X and Y to make the following statement correct Tunner diode and Avalanche photodiode are operated in X bias and Y bias respectively.
  - (a) X:reverse, Y:reverse
  - (b) X:reverse, Y:forward
  - (c) X:forward, Y:reverse
  - (d) X:forward, Y:forward
- 03. The values of voltage (V<sub>D</sub>) across a tunnel diode corresponding to peak and valley currents are V<sub>p</sub> and V<sub>v</sub> respectively. The range of tunnel diode voltage V<sub>D</sub> for which the slope of its I V<sub>D</sub> characteristics is negative would be
  - (a)  $V_D < 0$
- (b)  $0 \le V_D \le V_p$
- (c)  $V_p \leq V_D < V$
- (d)  $V_D \ge V_v$
- 04. A tunnel diode is
  - (a) High resistivity p -n junction diode
  - (b) A slow switching device
  - (c) An amplifying device
  - (d) A very heavily doped p-n diode
- 05. In a p<sup>+</sup>n junction diode under reverse bias, the magnitude of electric field is maximum at
  - (a) the edge of the depletion region on the p-side
  - (b) the edge of the depletion region on the n- side
  - (c) the p<sup>†</sup>n junction
  - (d) the centre of the depletion region on the n-side

- 06. The junction capacitance of a p-n junction depends on
  - (a) Doping concentration only
  - (b) Applied voltage only
  - (c) Both Doping concentration Applied voltage only
  - (d) Barrier potential only
- 07. Under small signal operation of a diode
  - (a) its bulk resistance increases
  - (b) its junction resistance predominates
  - (c) it acts like a closed switch
  - (d) it behaves as a clipper
- 08. The reverse current of a silicon diode is
  - (a) Highly bias voltage sensitive
  - (b) Highly temperature sensitive
  - (c) Both bias voltage and temperature sensitive
  - (d) Independent of bias voltage and temperature
- 09. In switching diode fabrication, a dopant is introduced into silicon which introduces additional trap levels in the material thereby reducing the mean life time of carriers This dopant is
  - (a) Aluminium (b) Platinum
    - C-14 (4) C-
  - (c) Gold
- (d) Copper
- 10. The diffusion potential across a p-n junction
  - (a) decreases with increasing doping concentration
  - (b) increases with decreasing doping concentration
  - (c) does not depend on doping concentration
  - (d) increases with increasing in doping concentration
- 11. The transition region in an open circuited p-n junction contains
  - (a) free electrons only
  - (b) holes only
  - (c) both free electrons and holes
  - (d) uncovered immobile impurity ions

12. In a p-n diode, hole diffuse from pregion to n-region because

ACE Academy

- (a) there is higher concentration of holes in p-region /
- (b) holes are positively charged
- (c) holes are urged to move by the barrier potential
- (d) the free electrons in the n-region attract the holes
- 13. In an unbiased p-n junction, the junction current at equilibrium is
  - (a) due to diffusion of majority carrier
  - (b) due to diffusion of minority carrier
  - (c) zero due to equal and opposite currents crossing the junction
  - (d) zero because no charges cross the junction
- In an unbiased p-n junction, zero current implies that
  - (a) the potential barrier has disappeared.
  - (b) number of holes diffusing from n-side equals the number of electrons diffusing from n-side to p-side
  - (c) no carrier across the junction.
  - (d) total current crossing the junction from p-side to n-side equals the total current crossing the junction from n - side to p-side.
- 15. The 6 V zener diode shown in figure has zero zener resistance and a knee current of 5 mA. The minimum value of R so that the voltage across it does not fall below 6 V is



- (a) 1.2 KΩ
- (b) 80  $\Omega$
- (c) 50  $\Omega$
- $\Omega$  0 (b)-

- 16. The built in potential (diffusion potential) in a p-n junction
  - (a) is equal to the difference in the fermi level of the two sides, expressed in volts.
  - (b) increases with the increase in the doping levels of the two sides.
  - (c) increases with the increase in temperature.
  - (d) all of above
- 17. A zener diode works on the principle of
  - (a) tunneling of charge carriers across the junction
  - (b) thermionic emission
  - (c) diffusion of charge carriers across the junction
  - (d) hopping of charge carriers across the Junction
- 18. The depletion capacitance C<sub>J</sub> of an abrupt p n junction with constant doping on either side varies with reverse bias V<sub>S</sub> as
  - (a)  $C_J \propto V_R$ (c)  $C_J \propto V_R^{-1/2}$
- (b)  $C_j \propto V_R^{-1}$ (d)  $C_J \propto V_R^{-1/3}$
- 19. The static characteristic of an adequately forward biased p-n junction is a straight line, if the plot is of
  - (a) log I Vs log V (b) log I Vs V
  - (c) I Vs log V (d) I Vs V
- 20. Silicon diode is less suited for low voltage rectifier operation because
  - (a) It can withstand high temperatures
  - (b) Its reverse saturation current is low
  - (c) Its cut-in voltage is high
  - (d) Its breakdown voltage is high

- 21. In a junction diode
  - (a) The deflection capacitance increases with increases in reverse bias.
  - (b) The deflection capacitance decrease with increase in reverse bias.
  - (c) The diffusion capacitance increases with increase in the forward bias.
  - (d) The diffusion capacitance is much higher than the deflection capacitance when it is forward biased.
- 22. The depletion region in semiconductor p-n junction diode has
  - (a) electrons and holes
  - (b) positive and negative ions on Either side
  - (c) neither electron nor ion
  - (d) no holes
- 23. A p-n junction diode's dynamic conductance is directly proportional to?
  - (a) the applied voltage
  - (b) the temperature
  - (c) its current
  - (d) the thermal voltage
- 24. For diode current of 1 mA, at 27°C, a
  Ge diode requires a forward bias of
  0.2165 V where a Si diode requires a
  FB of 0.872 V. The ratio of reverse
  saturation current in Ge diode to that in
  Si diode to the closest approximation is
  - (a)\_L
- $(b)3x10^5$
- (c)  $4.7 \times 10^3$
- (d)  $6 \times 10^5$
- 25. The diffusion capacitance of a forward biased p+ n junction diode with a steady current I depends on
  - (a) width of the depletion region.
  - (b) mean lifetime of the holes.
  - (c) mean lifetime of the electrons.
  - (d) junction area.

- 26. Why is an external pass resistor used in a voltage regulator?
  - (a) For short circuit protection.
  - (b) For increas ng the current that regulator can andle
  - (c) For increasing the ou put voltage
  - (d) For improving the regulation.
- 27. Two p-n junction diodes are connected back to back to make a transistor Which one of the following is correct?
  - (a) The current gain of such a transistor will be high
  - (b) The current gain of such a transistor wil be moderate.
  - (c) It cannot be used as a transistor due to large base width.
  - (d) It can be used only for p-n-p transistor
- 28. What is the reverse recovery t me of a diode when switched from forward bias V<sub>F</sub> to reverse b as V<sub>R</sub>?
  - (a) Time taken to remove the stored m nority carriers
  - (b) Time taken by the diode voltage to attain zero value
  - (c) Time to remove stored minority carriers plus the time to bring the diode voltage to reverse bias V<sub>R</sub>
  - (d) Time taken by the diodc current to reverse
- 29. Match List-I (p-n junction diodes) with List-II (Bias condition) and select the correct answer using the code given below the lists:

List-I

List-II

A. Zener Diode

- 1. Forward bias
- B. Solar cell
- 2. Reverse bias
- C. LASER diode
- D. Avalanche Photodiode

	Α	В	C	D
(a)	1	2	l	2
<b>(</b> b)	2	1	1	2
	_	_	_	

(c) 2 2 2 <del>1</del> (d) 2 1 2 2

30. Match List-I (Diode) with List-II
(Application) and select the correct
answer using the code given below the
lists.

#### List-I

- A. Varactor diode
- B. Tunnel diode
- C. Photodiode

ACE Academy

D. Zener diode

#### List-II

- To charge auxiliary storage batteries
- 2. Best choice for silicon ICs
- 3. Suitable for ICs of III-V
- 4. High frequency switching circuit

Α	В	С	Ð
(a) 2	ł	4	3
(b) 3	1	4	2
(c) 3	4	1	2
(d) 2	4	1	3

31.Match List-I (Diode type) with List-II (important properties) and select the correct answer using the code given below the lists:

#### List - 1

- A. Zener Diode
- B. Gunn Diode
- C. Schottky Diode
- D. Tunnel Diode

#### List -- II

- 1. Negative resistance device fabricated using semiconductor like Si, Ga, As, Ge etc. can be operated at a frequency of 10GHz
- 2.Quantum mechanical tunneling with very thin depletion layers under reverse bias operated as a reference voltage sources
- 3.Negative conductance device, operates on the principle of transfer of electron from one region of conduction band to another
- 4. Metal semiconductor diode, have rectification properties

#### Codes:

	Α	В	C	D
(a)	2	4	3	i
(b)	1	3	4	2
(c)	2	3	4	1
(d)	ľ	4	3	2

32. Match List-I (Devices) with List-II (Property) and select the correct answer using the codé given below the lists:

#### List-I

- A. Silicon diode
- B. Germanium diode
- C. LED
- D. PIN diode

#### List-II


- 1. High frequency applications
- 2. Very low reverse bias saturation current
- 3. Low forward bias voltage drop
- 4. Cut-off wavelength

#### Codes:


	Α	В	Ċ	$\mathbf{D}$
(a)	I	3	4	2
(b)		.1	3	1
(c)	1	.4	3	2
(d)	2	3	4	1

- 33. In the energy band diagram of an open circuited pn junction, the energy band of n-region has shifted relative to that of p-region.
  - (a) downward by Eo
  - (b) upward by Eo
  - (c) downward by  $E_0/2$
  - (d) upward by  $E_0/2$
- 34. A p-n junction in series with a 100Ω resistors, is forward biased so that a current of 100 mA flows. If the voltage across this combination is instantaneously reversed to 10V at t = 0, the reverse current that flows through the diode at t = 0 is approximately given by
  - (a) 0 mA
- (b) 100 mA
- (c) 200mA
- (d) 50 mA

- 35. The change in barrier potential of a silicon p n junction with temperature is
  - (a) 0.025 volts per degree C
  - (b) 0.250 volts per degree C
  - (c) 0.030 volts per degree C
  - (d) 0.014 volts per degree C
- 36. Consider the following circuit




Zener diode has zener voltage  $V_Z = 16 \, \text{V}$  at a minimum  $i_Z$  of 15 mA.




If  $V_b = 24 \pm 3 \text{ V}$  and  $R_L$  varies from 250  $\Omega$  to 2 k  $\Omega$ , Find the value of  $R_S$  to maintain regulation

- (a)  $R_S > 55.92$
- (b)  $R_S < 123.04$
- (c)  $R_S$  <63. 29
- (d)  $R_S > 23.8$
- 37. For the circuit shown below  $V_4$  is given by  $(2 + 0.1 \text{ sin } \omega t)$  volts. Assuming  $V_D = 0.7 \text{ V}$  and diode as linear device the output voltage  $V_0$  is given by




- (a) 0.59 sin ωt V
- (b)  $0.36 + 0.59 \sin \omega t V$
- $(c) \cdot 0.94 + 0.04 \sin \omega t V$
- (d)  $1.2 + 0.63 \sin \omega t V$

38. Each diode in figure can be described by a cut—in voltage and zero resistance. If the cut—in voltage of diode D1 is 0.2 V and of diode D2 is 0.6 V, the magnitude of current l<sub>1</sub> through D1 is \_\_\_\_\_ mA and magnitude of current through D2 is

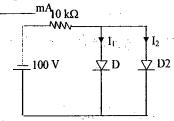


- (a) 20 mA, 0 mA (b) 10 mA, 0 mA
- (c) 15 mA, 0 mA (d) 25 mA, 0mA
- 39. In figure, PTV required for the diode is
  - (a) 300 V
- (b) 100 V
- (c) 200 V
- (d) 400 V
- 40. A voltage v = 4 sin ot is applied to the terminals A and B of the circuit shown in figure. The diodes are assumed to be ideal. The impedance offered by the circuit across the terminals A and B in kilo ohms is



- (a) 5
- (b) 20
- (c) 10
- (d) None of these


41. The peak current through the resistor of circuit of figure, assuming the diodes to be ideal, is




(a) 12 mA

ACE Academy

- (b) 4 mA
- (c) 16 mA
- (d) 8 mA
- 42. The circuit in figure shows zener regulated dc power supply. The zener diode is ideal. The minimum value of R<sub>L</sub> down to which the output voltage remains constant is

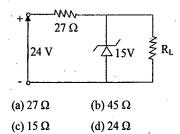


43\ In the circuit of figure, the 5 V zener diode requires a minimum current of 10 mA. For obtaining a regulated output of 5 V, the maximum permissible load current I<sub>L</sub> is \_\_\_\_ mA and the minimum power rating of zener diode is \_\_\_ W.




- (a) 40 mA and 0.05 W
- (b) 10 mA and 0.20 W
- (c) 25 mA and 0.10 W
- (d) 5 mA and 0.15 W

44. Figure shows an electronic voltage regulator. The Zener diode may be assumed to require a minimum current of 25 mA for satisfactory operation. The value of R required for satisfactory operation is

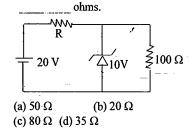

45. A zener diode in the circuit shown in the figure below, has knee current of 5mA and a maximum allowed power dissipation of 300mw. What are the minimum and maximum load currents that can be drawn safely from the circuit, keeping the output voltage V<sub>0</sub> at 6 V?



(a) 0 mA, 180 mA (b) 5 mA, 110 mA (c) 10 mA, 55 mA (d) 60 mA, 180mA KEYS:

01 a	02. c	03.c	04.d	05.c	06.c
07.b	08.b	09.a	10.d	11.d	12.a
13.c	14.d	15.b	16.d	17.a	18.c
19.b	20.d	21.b	22.b	23.c	24.c
25 h	26.0	27.0	28 0	20 h	30 c

- 31.c 32.d 33.a 34.b 35.a 36.c
- 7.c 38.b 39.b 40.c 41.d 42.b
- 43.a 44.c 45.c

# PREVIOUS IES QUESTIONS:

**Electronic Devices** 

- 01. A p-n junction diode's dynamic conductance is directly proportional to
  - (a) the applied voltage
  - (b) the temperature
  - (c) its current
  - (d) the thermal voltage
- 02. The AC resistance of a forward-biased p-n junction diode operating at a bias voltage 'V' and carrying current 'l' is
  - (a) zero
  - (b) a constant value independent of V and l
  - (c) V/l
  - (d)  $\Delta V/\Delta I$
- 03. Match List-I (Devices) with List-II (Property) and select the correct answer using the codes given below the lists:

#### List-I

- A. Silicon diode
- B. Germanium diode
- C. LED
- D. PIN diode

#### List-II

- 1. High frequency applications
- 2. Very low reverse bias saturation current
- 3. Low forward bias voltage drop
- 4. Cut-off wavelength

#### Codes:

#### A B C D

- (a) 1 3 4 2
- **(b)** 2 4 3 1
- (c) 1 4 3 2
- (d) 2 3 4 1
- )4. The depletion layer across a p -n iunction lies
  - (a) mostly in the p<sup>+</sup> region
  - (b) mostly in the n -- region
  - (c) equally in both the p<sup>+</sup> and n regions
  - (d) entirely in the p<sup>+</sup> regions

05. Assertion (A): The diode current is controlled by minority carrier injection over a potential barrier. In the forward bias condition, the minority carriers are increased exponentially.

Reason(R): At high forward bias, the electric field in the neutral regions is no longer negligible as the minority charge density approaches the majority charge density. The diodc starts to behave like an ohmic device.

- (a) Both A and R are true and R is the correct explanation of A.
- (b) Both A and R are true but R is NOT the correct explanation of A.
- (c) A is true but R is falsc.
- (d) A is false but R is true.
- 06. Match List-I with List-II and select the correct answer using the codes given below the lists:

#### List-I

- A. Zener Diodc
- B. Gunn Diode
- C. Schottky Diode
- D. Tunnel Diode

#### List-II

- resistance 1. Negative device fabricated using semiconductors like Si, GaAs, Ge etc. can be operated at a frequency of 10 GHz.
- 2. Quantum mechanical tunneling with very thin depletion layers under reverse bias operated as a reference voltage sources.
- 3. Negative conductance device, operates on the principle of transfer of electron from one refion of conduction band to another.
- 4. Metal -- semiconductor diode, have rectification properties.

#### Codes:

#### ABCD

- (a) 2 4 3 1
- (b) 1 3 4 2
- (c) 2 3 4 1
- (d) 1 4 3 2

07. The change in barrier potential of a silicion P-N junction with temperature is

ACE Academy

- (a) 0.0025 Volts per degree C
- (b) 0.0250 Volts per degree C
- (c) 0.0030 Volts per degree C
- (d) 0.0014 Volts per degree C
- 08. The diffusion capacitance of a p-n junction diode
  - (a) increases exponentially with forward bias voltage.
  - (b) Decreases exponentially with forward bias voltage.
  - (c) Decreases linearly with forward bias voltage.
  - (d) Increases linearly with forward bias voltage.
- 09. The reverse current of a silicon diode
  - (a) Highly bias voltage sensitive.
  - (b) Highly temperature sensitive.
  - (c) Both bias voltage and temperature sensitive
  - (d) Independent of bias voltage and temperature.
- 10. Depletion capacitance in a diode depends on
  - 1. Applied junction voltage
  - 2. Junction built-in potential
  - 3. Current through junction
- 4. Doping profile across the junction Select the correct answer using the codes given below
- (a) 1 and 2.
- (b) I and 3
- (c) 1, 2 and 4
- (d) 2, 3 and 4
- 11. The depletion region in a semiconductor p-n junction diode has
  - (a) Electrons and holes
  - (b) Positive and negative ions on either side
  - (c) Neither electrons nor ions.
  - (d) No holes.

- 12. When a junction diode is used in switching applications, the forward recovery time is
  - (a) of the order of the reverse recovery

53

- (b) negligible in comparison to the reverse recovery time.
- (c) greater than the reverse recovery time
- (d) equal to the mean carrier life time  $\tau$ for the excess minority carriers.
- 13. Which one of the following statement is correct? A tunnel diode is always biased
  - (a) by a d. c source
  - (b) in the middle of its negative resistance region
  - (c) in the positive resistance region nearest to zero
  - (d) in the reverse direction
- 14. A tunnel diode is
  - (a)-High resistivity p-n junction diode ·
  - (b) A slow switching device
  - (c) an amplifying device
  - (d) A very heavily doped p-n junction diode
- 15. The junction capacitance of a p -n junction depends on
  - (a) Doping concentration only
  - (b) Applied voltage only
  - (c) Both doping concentration and applied voltage
  - (d) Barrier potential only

#### -List - I

- A. Tunnel diode
- B. PlN diode
- C. Zener diode
- D. Photo diode

#### List - II

- 1. Reading of film sound track
- 2. High frequency oscillator circuits
- 3. Very high frequency switching circuits
- 4. Reference voltage.

#### Codes:

	A	В	C	D
(a)	4	3	2	1
(a) (b)	2	1	4	3
(c)	4	1	2	3
(4)	2	2	4	1

- 17. The doping concentration on the n - side of a p - n junction diode isenhanced. Which one of the following will get affected?
  - (a) Width of the depletion region on n - side
  - (b) Width of the depletion region on p - side
  - (c) Width of the depletion region on both side
  - (d) No change in width of depletion region
- 18. In step graded p n junction diode, what is the ratio of depletion - region penetration depths into p and n regions (if the ratio of acceptor to donor (if the ratio of acceptor to donor impurity atoms' densities is 1:2)?
  - (a) 2: I
- (b) 4:1
- (c) 1:2
- (d) 1:4

- 19. What is the typical value for the ratio of current in a p - n junction diode in the forward bias and that in the reverse bias?
  - (a) l
- (b)10
- (c) 100
- (d) 1000
- 20. Consider the following statements for a p - n junction diode:
  - 1. It is an active component.
  - 2. Depletion layer width decreases with forward biasing
  - 3. In the reverse biasing case, saturation current increases with increasing temperature. Which of the statements given above are correct?
  - (a) 1, 2 and 3 (b) 1 and 2 only
  - (c) 2 and 3 only (d) 1 and 3 only
- 21. Consider the following statements pertaining to tunnel diodes:
  - 1. Impurity concentration is high
  - 2. Carrier velocities are low
  - 3. They have current controlled V - 1 characteristic..

Which of the statements (s) given above is/ are correct?

- (a) I only
- (b) 2 and 3 only
- (c) 1 and 3 only (d) 1 and 2 only


KEY:

	_1.c	2.d	3.d	4.b	5.c	6.c
	7.a	8.a	9.b	10.c	11.b	12.b
	13.b	14.d	15.c	16.d	17.a	18.a
•	19.d	20a	21.a			

# PREVIOUS GATE QUESTIONS:

1. In the figure, silicon diode is carrying a constant current of 1 mA. When the temperature of the diode is 20°C, V<sub>D</sub> is found to be 700 mA. If the temperature riscs to 40°C, V<sub>D</sub> becomes approximately equal to

#### **GATE - 2002**



(a) 740 mV

ACE Academy

- (b) 660 mV
- (c) 680 mV
- (d) 700 mV
- 2. Choose proper substitutes for X and Y to make the following statement correct Tunnel diode and Avalanche photodiode are operated in X bias and Y bias respectively.

#### **GATE - 2003**

- (a) X: reverse, Y: reverse
- (b) X: reverse, Y: forward
- (c) X: forward, Y: reverse
- (d) X: forward, Y: forward
- 3. A Silicon PN junction at a temperature of 20°C has a reverse saturation current of 10 pico-Amperes(pA). The reverse saturation current at 40°C for the same bias is approximately. GATE - 2005
  - (a) 30 pA
- (b) 40 pA
- (c) 50 pA
- (d) 60 pA
- 4. The primary reason for the widespread use of Silicon in semiconductor device technology is **GATE - 2005** 
  - (a) abundance of Silicon on the surface of the Earth.
  - (b) larger bandgap of Silicon in comparison to Germanium.
  - (c) favorable properties of Silicondioxide (SiO<sub>2</sub>).
  - (d) lower melting point.

5. The values of voltage (V<sub>D</sub>) across a tunnel-diode corresponding to peak and valley currents are V<sub>p</sub> and V<sub>v</sub> respectively. The range of tunnel-diode voltage V<sub>D</sub> for which the slope of its I-V<sub>D</sub> characteristics is negative would be **GATE - 2006** 

55

- (a)  $V_D < 0$ (b)  $0 \le V_{13} \le V_{p}$
- (c)  $V_D \le V_D \le V_V$  (d)  $V_D \ge V_V$
- 6. In a p<sup>†</sup>n junction diode under reverse bias, the magnitude of electric field is maximum at GATE - 2007
  - (a) the edge of the depletion region on the p-side
  - (b) the edge of the depletion region on the n-side
  - (c) the p<sup>+</sup>n junction
  - (d) the centre of the depletion region on the n-side.
- 7. Which of the following is NOT associated with a p-n junction? **GATE - 2008** 
  - (a) Junction Capacitance
  - (b) Charge Storage Capacitance
  - (e) Depletion Capacitance
  - (d) Channel Length Modulation
- 8. At 300 K, for a diode current of 1 mA, a certain germanium diode requires a forward bias if 0.1435 V, whereas a certain silicon diode requires a forward bias of 0.718V. Under the conditions stated above, the closest approximation of the ratio of reverse saturation current in germanium diode to that in silicon diode is GATE - 2003
  - (a) l (b) 5
  - (c)  $4 \times 10^3$  (d)  $8 \times 10^3$

# 9. In an abrupt p-n junction, the doping concentrations on the p-side and n-side are $N_A = 9 \times 10^{16} / \text{cm}^3$ and $N_D = 1 \times 10^{16} / \text{cm}^3$ respectively. The

p-n junction is reverse biased and the total depletion width is 3um. The depletion width on the p-side is GATE - 2004

**GATE - 2005** 

(a)  $2.7 \mu m$ (c) 2.25µm (b)  $0.3 \mu m$ (d) 0.75 µm

10. A Silicon PN junction diode under reverse bias has depletion region of width 10µm. The relative permittivity of Silicon,  $\varepsilon_r = 11.7$  and permittivity of free space  $\epsilon_0 = 8.85 \times 10^{-12} \text{ F/m}$ . depletion capacitance of the diode per square meter is

(a)  $100 \mu F$ 

(b)  $10\mu F$ 

(c) 1µF

(d) 20µF

11. A p<sup>+</sup>n junction has built-in potential of 0.8V. The depletion layer width at a reverse bias of 1.2 V is 2um. For a reverse bias of 7.32 V, the depletion layer width will be

**GATE - 2007** 

 $(a) 4 \mu m$ 

(b) 4.9 µm

(c) 8 µm

(d) 12 μm

- 12. Consider the following assertions.
  - S1: For Zener effect to occur, a very abrupt junction is required
  - S2: For quantum tunneling to occur, a very narrow energy barrier is required.

Which of the following is correct? **GATE - 2008** 

(a) Only S2 is true

- (b) S1 and S2 are both true but S2 is not a reason for S1
- (c) S1 and S2 are both true and S2 is a reason for S1
- (d) Both S1 and S2 are false.

### Common Data for Questions 13 and 14:

Consider a silicon p-n junction at room temperature having the following parameters:

Doping on the n-side  $-1 \times 10^{17}$  cm<sup>-3</sup> Depletion width on the n-side 0.1 μm Depletion width on the p-side 1.0 ym Intrinsic carrier concentration

 $1.4 \times 10^{10} \, \text{cm}^{-3}$ 

Thermal voltage 26 mV Permittivity of free space

 $\cdot 8.85 \times 10^{-14} \text{ F}.$ 

cm-i

Dielectric constant of silicon 12

- 13. The built- in potential of the junction
  - a) is 0.70 V
  - b) is 0.76 V
  - c) is 0.82 V
  - d) cannot be estimated from the data given.
- 14. The peak electric field in the device is 0a) 0.15 MV . cm<sup>-1</sup>, directed from p - region to n- region.
  - b) 0.15 MV . cm<sup>-1</sup> directed from n - region to p- region.
  - c) 1.80 MV . cm<sup>-1</sup> directed from p - region to n- region.
  - d) 1.80 MV . cm<sup>-1</sup> directed from n - region to p- region.

#### KEY:

3.d

9.b 10.b 11.a 12.a

13. 14.

#### TRANSISTOR

CHAPTER - 3

Transistor was first invented in 1948 by J. Bardeen and W.H. Brattain of Bell Telephone Laboratories, U.S.A.

It consists of two p-n junctions back-to-back and is obtained by sandwiching either ptype or n-type semiconductor between a pair of opposite type of semiconductors. Obviously, there are two types of transistors.

- (a) p-n-p transistor: Here two blocks of p-type semiconductor termed as emitter and collector are separated by a thin block of n-type semiconductor (termed as base).
- (b) n-p-n transistor: Here two blocks of n-type semiconductor (termed as emitter and collector) are separated by a thin block of p-type semiconductor (termed as base). You will note that all the three blocks of a transistor shown in below fig are not equal. Further, for getting transistor action, the doping levels in the different blocks are kept different as under:
- Emitter: This is the left hand block of the transistor. It is of moderate size and heavily doped semiconductor. This supplies a large number of majority carriers for the current flow through the transistor.
- · Base: This is the central block. It is very thin and lightly doped.
- Collector: This collects a major portion of the majority carriers supplied by the emitter. The collector side is moderately doped and larger in size(to withstand the temperature generated at the collector) as compared to the emitter.





Fig1: Symbols for n-p-n and p-n-p transistor

If the arrow mark is towards the base, it is PNP transistor if it is away then it is NPN transistor.

The arrow mark on the emitter specifies the direction of current when the emitter base junction is forward biased. When the PNP transistor is forward biased; holes are into the base. So the holes move from emitter to base.

The conventional current flows in the same direction as holes. So arrow mark is towards the base for PNP transistor. Similarly for NPN transistor, it is away.

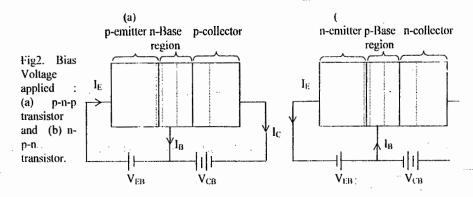

For understand the action of a transistor, we have to consider the nature of depletion layers formed at the emitter-base p-n junction and base-collector p-n junction.

In general, the emitter-base junction of a transistor is forward biased while collector base iunction is reverse biased as shown in fig2.

This figure also shows the two depletion layers formed at the emitter-base junction and collector-base junction. Since the emitter base junction is forward biased (as well as due to heavy doping of the emitter), this depletion layer will be narrow while the collector-base junction being reverse biased will be relatively wider.

The forward bias voltage V<sub>EB</sub> is small (0.5 to 1 V) while the reverse bias voltage V<sub>CB</sub> is considerably high (5 to 15 V).

Consider the case of a biased p-n-p transistor shown in fig2. As the emitter base junction is forward biased, a large number of holes (majority carriers) from p-type emitter block flow towards the base. These constitute the current through the emitter, I<sub>F</sub>. These holes have a tendency to combine with the electrons in the base-region (giving only a very small base current, IB) because the base is lightly doped and very thin (this constructional feature is the key of transistor action).

Most of the holes coming from the emitter are able to diffuse through the base region, these holes see the favourable negative potential at the collector and hence they easily reach the collector terminal to constitute the collector current, I<sub>C</sub>. It is obvious from the above argument that the emitter current is the sum of collector current and base current.

$$I_E = I_C + I_B \quad (I_C >> I_B)$$

Similar description can be made for a biased n-p-n transistor as shown in fig2. Here the electrons (instead of holes as in p-n-p transistor) are the majority carriers supplied by the ntype emitter region which cross the thin p-base region and are able to reach the collector to give the collector current, Ic.

#### Transistor Circuit configurations

Transistor Theory (BJT, FET)

Basically, there are three types of circuit connections (called configurations) for operating a transistor.

1. Common-base (CB), 2. Common-emitter (CE), 3. Common-collector (CC).

The term common is used to denote the electrode that is common to the input and output circuits. Because the common electrode is generally grounded, these modes of operation are frequently referred to as grounded-base, grounded-emitter and groundedcollector configurations as shown in below figure for a PNP- transistor.

Since a transistor is a 3-terminal device, one of its terminals has to be common to the input and output circuits.

#### **CB** Configuration

In this configuration, emitter current  $I_E$  is the input current and collector  $I_C$  is the output current.

The input signal is applied between the emitter and base whereas output is taken out from the collector and base as shown in below figure.

The ratio of the collector current to the emitter current is called de alpha  $(\alpha_{dc})$  or just α of a transistor

$$\alpha_{dc} = \alpha I_C / I_E$$

It is also called forward current transfer ratio ( $h_{FB}$ ). In  $h_{FB}$ , subcript F stands for forward and B for common-base.




Fig.4.

The  $\alpha$  of a transistor is a measure of the quality of a transistor; higher the value of  $\alpha$ , better the transistor in the sense that collector current more closely equals the emitter current.

Its value ranges from 0.95 to 0.999. Obviously, it applies only to CB configuration of a transistor.

$$l_C = \alpha l_E \qquad \underline{Now}, \ l_B = -l_E - \alpha l_F = (1 - \alpha) l_E \qquad (\Box l_F - l_C + l_B)$$

Incidentally, there is also an a.c. a for a transistor. It refers to the ratio of change in collector current to the change in cutter current.

$$\alpha_{dc} = \Delta I_C/\Delta I_E$$

It is also, known as short-circuit gain of a transistor and is written as ho-It may be noted that upper case subscript 'FB' indicates de value whereas lower case subscript 'b' indicates ac value. For all practical purposes,  $\alpha_{de} = \alpha_{ae} = \alpha$ 

#### **CE Configuration**

Here, input signal is applied between the base and emitter and output signal is taken out from the collector and emitter circuit. As seen from above figure 4(b), I<sub>B</sub> is the input current and Ic is the output current.

The ratio of the d.c. collector current to d.c base current is called de heta ( $\beta_{dc}$ ) or just  $\beta$  of the transistor.

$$\beta = I_C / I_B$$
 or  $I_C = \beta I_B$ 

It is also called common-emitter d.c. forward transfer ratio and is written as here. It is possible for  $\beta$  to have as high a value as 500.

While analyzing ac operation of a transistor, we use a.c  $\beta$  which is given by

$$\beta_{ac} = \Delta I_C / \Delta I_B$$
.

It is also written as he

Relation Between a and B

$$\beta = I_C/I_B$$
 and  $\alpha = I_C/I_E$   $\therefore \beta/\alpha = I_E/I_B$ 

$$\alpha = \beta / (1 + \beta)$$
  $\therefore \beta = \alpha / (1 - \alpha)$ 

$$(1 - \alpha) = 1 / (1 + \beta)$$

#### **CC** Configuration

In this case, input signal is applied between base and collector and output signal is taken out from emitter-collector circuit. Conventionally speaking, here IB is the input current and IE is the output current as shown in above figure.4(c). The current gain of the circuit is

$$\frac{I_{E}}{I_{B}} = \frac{I_{E}}{I_{C}} \cdot \frac{I_{C}}{I_{B}} = \frac{\beta}{\alpha} = \frac{\beta}{\beta/(1+\beta)} = (1+\beta) = \gamma$$

#### Relationship Between Transistor Currents

While deriving various equations, following definitions should be kept in mind.

$$\alpha = (I_C/I_E), \quad \beta = (I_C/I_B), \quad \alpha = \frac{\beta}{1+\beta} \quad \text{and } \beta = \frac{\alpha}{1-\alpha}$$
(i)  $I_C = \beta I_B = \alpha I_F = \frac{\beta}{1+\beta}$ 

(i) 
$$I_C = \beta I_B = \alpha I_E = \frac{\beta}{1+\beta} I_E$$

(ii) 
$$I_B = I_C/\beta = \frac{I_E}{1+\beta} = (1-\alpha) I_E$$

(iii) 
$$I_E = I_C / \alpha = \frac{1 + \beta}{\beta} \beta I_B = (1 + \beta) I_B = \frac{I_B}{1 - \alpha}$$

(iv) The three transistor d.c. currents always bear the following relation

$$I_E: I_8: I_C:: 1: (1-\alpha): \alpha$$

Incidentally, it may be noted that for ac currents, small letters  $i_e$ ,  $i_b$  and  $i_c$  are used.

#### Leakage Currents in a Transistor

#### (a) CB Configuration

The leakage current ICBO where the subscripts CBO stand for Collector to Base with emitter Open.' Very often, it is simply written as  $I_{CO}$ . It should be noted that

- (i)  $I_{CBO}$  is exactly like the reverse saturation current  $I_S$  or  $I_B$  of a reverse-biased diode discussed.
- (ii) I<sub>CBO</sub> is extremely temperature-depends because it is made up of thermally-generated minority

carriers.  $I_{CBO}$  doubles for every 10° C rise in temperature for Ge and 6°C for Si

Total collector current is actually the sum of two components:

- (i) current produced by normal transistor action i.e. component controlled by emitter current. Its value is a IE and is due to majority carriers.
  - (ii) temperature-dependent leakage current Ico due to minority earriers.

$$\therefore I_C = \alpha I_E + I_{CO}$$

Since  $I_{CO} \ll I_{C}$ 

hence  $\alpha \approx I_C / I_E$ 

$$\therefore I_C = \beta I_B + (1+\beta)I_{CO}$$

#### CE Configuration

For a common-emitter circuit of an NPN transistor whose base lead is open. It is found that despite  $l_B = 0$ , there is a leakage current from collector to emitter. It is called  $I_{CEO}$ , the subscripts CEO standing for 'Collector to Emitter with base Open'.

Taking this leakage current into account, the current distribution through a CE circuit becomes

$$I_C = \beta I_B + I_{CEO} = \beta I_B + (1 + \beta)I_{CO} = \beta I_B - I_{CO} / (1 - \alpha)$$

(i) : 
$$I_C = \alpha I_B/(1-\alpha) + I_{CO}/(1-\alpha)$$

Now  $\beta I_B = \alpha I_E$ , Substituting this value above, we get, .

$$\mathbf{I}_{\mathbf{C}} = \alpha \mathbf{I}_{\mathbf{E}} + \mathbf{I}_{\mathbf{CEO}}$$

Also, 
$$I_B = I_E - I_C$$

Substituting the value of Ic from above, we have

(ii) 
$$I_B = I_E - \alpha I_E - I_{CEO} = (1 - \alpha) I_E - I_{CEO}$$

# Thermal Runaway

The leakage current is extremely temperature-dependent. It almost doubles for every 10°C rise in temperature in Ge and for every 6°C rise in Si.

Any increase in  $I_{CO}$  is magnified (1 +  $\beta$ ) times i.e. 300 to 500 times. Even a slight increase in I<sub>CO</sub> will affect I<sub>C</sub> considerably.

As Ic increases, collector power dissipation increases which raises the operating temperature that leads to further increase in Ic.

If this succession of increases is allowed to continue, soon Ic will increase beyond safe operating value thereby damaging the transistor itself -- a condition known as thermal runaway.

#### Importance of V<sub>CE</sub>

The voltage  $V_{CE}$  is very important in checking whether the transistor is

(a) defective.

(b) working in cut-off

(c) in saturation or well into saturation


When  $V_{CE} = V_{CC}$ , the transistor is in cut-off i.e. it is turned OFF

When  $V_{CE} = 0$ , the transistor is in saturation i.e. it is turned fully ON.

When V<sub>CE</sub> is less than zero i.e. negative, the transistor is said to be well into saturation. In practice, both these conditions are avoided.

For amplifier operation.  $V_{CE} = \frac{1}{2} V_{CC}$ .

Normal operation of a transistor lies between the above two extreme conditions of cut-off and saturation.

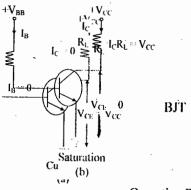

11g.5

ACE Academy

# **Operating Regions**

A BJT has two junctions i.e. base-emitter and base-collector junctions either of which could be forward-biased or reverse-biased. With two junctions, there are four possible combinations of bias condition.

- (i) both junctions reverse-biased.
- (ii) both junctions forward-biased.
- (iii) BE(Base-Emitter) junction forward-biased. BC(Base-Collector) junction reverse-blased.
- (iv) BE junction reverse-biased, BC junction forward-biased.

Since condition (iv) is generally not used, we will tabulate the remaining three conditions below.

# Transistor Operation Regions

BE Junction	BC Junction	Region
RB*	RB	Cut-off
FB**	FB	Saturation
FB	RB	Active

\*Reverse-biased, \*\*forward-biased

#### (a) Cut-off

This condition corresponds to reverse-bias for both base-emitter and base-collector junctions. In fact, both diodes act like open circuits under these conditions, which is true for an ideal transistor. In cut-off,  $V_{CE} = V_{CC}$ 

#### (b) Saturation

This condition corresponds to forward-bias for both base-emitter and base-collector junctions. The transistor becomes saturated i.e. there is perfect short-circuit for both base-emitter and base-collector diodes. In this case,  $V_{\rm CE}=0$ .

#### (c) Active Region

This condition corresponds to forward-bias-for base-emitter junction and reverse bias for base-collector junction. In this case,  $V_{CE} > 0$ .

#### **BJT Switches**

Very often, bipolar junction transistors are used as electronic switches. With the help of such a switch, a given load can be turned ON or OFF by a small control signal. This control signal might be the one appearing at the output of a digital logic or a microprocessor.

When using BJT as a switch, usually two levels of control signal are employed. With one level, the transistor operates in the cut-off region (open) whereas with the other level, it operates in the saturation region and acts as a short-circuit.

#### Typical n-p-n transistor-junction voltages at 25°C

	V <sub>CE.sat</sub>	V <sub>BE.saturation</sub>	V <sub>BE.active</sub>	$V_{BE.cutin} \equiv Vr$	V <sub>BE.cutoff</sub>
Si	0.2	0.8	0.7	0.5	0.0
Ge	0.1	0.3	0.2	0.1	-0.1

The entries in the table are appropriate for an n-p-n transistor. For a p-n-p transistor the signs of all entries should be reversed.

#### MAXIMUM VOLTAGE RATING

Even if the rated dissipation of transistor is not exceeded, there is an upper limit to the maximum allowable collector-junction voltage since, at high voltages, there is the possibility of voltage breakdown in the transistor.

Two types of breakdown are possible, avalanche breakdown and reach-through discussed below.

#### Avalanche Multiplication:

The maximum reverse-biasing voltage—which may be applied before breakdown between the collector and base terminals of the transistor, under the condition that the emitter lead be open-circuited, is represented by the symbol BV<sub>CBO</sub>.

Breakdown may occur because of avalanche multiplication of the current  $I_{CO}$  that crosses the collector junction.

As a result of this multiplication, the current becomes  $MI_{CO}$ , in which M is the factor by which the original current  $I_{CO}$  is multiplied by the avalance effect.

At a high enough voltage, namely, BV<sub>CBO</sub>, the multiplication factor M becomes nominally infinite, and the region of breakdown is then attained. Here the current rises abruptly, and large changes in current accompany small changes in applied voltage.

The avalanche multiplication factor depends on the voltage  $V_{CB}$  between collector and base. We shall consider that

$$\mathbf{M} \equiv \frac{1}{1 - (\mathbf{V}_{\mathbf{CB}} / \mathbf{B} \mathbf{V}_{\mathbf{CBO}})^{\mathbf{n}}}$$

The parameter n is found to be in the range of about 2 to 10, and controls the sharpness of the onset of breakdown.

An analysis of avalanche breakdown for the CE configuration indicates that the collector-to-emitter breakdown voltage with open-circuited base, designated  $BV_{CEO}$ , is

$$BV_{CEO} = BV_{CBO} \sqrt[n]{1/h_{FE}}$$

For an n-p-n germanium transistor, a reasonable value for n, determined experimentally, is n = 6. If we now take  $h_{FE} = 50$ , we find that  $BV_{CEO} = 0.52BV_{CBO}$ .

#### Reach-through:

The second mechanism by which a transistor's usefulness may be terminated as the collector voltage is increased is called **punch-through**, or **reach-through**, and results from the increased width of the collector-junction transition region with increased collector-junction voltage (the Early effect).

As the voltage applied across the collector junction increases, the transition region penetrates deeper into the collector and base. Because neutrality of charge must be maintained, the number of uncovered charges on each side remains equal. Since the doping in the base is ordinarily substantially smaller than that of the collector, the penetration of the transition region into the base is much larger than into the collector. This process is known as Early Effect, or Base-width Modulation.

PARAMETERS	_CB	CE	CC
I. Ri	10Ω	1 k Ω	100kΩ
2. Ro	100kΩ	10kΩ	10Ω
3. DC current gain	$\alpha = I_{C}/I_{E}$ (0.95 to 0.99)	$\beta = I_{C}/I_{B}$ (50 to 500)	$\gamma = I_E/I_B$ (51 to 501)
4. Voltage gain	Very High	Medium	≈ I
5. Application	Radio frequency voltage amplifier	Audio frequency voltage amplifier	Buffer_

#### FIELD EFFECT TRANSISTORS

The acronym 'FET' stands for **field effect transistor**. It is a three-terminal unipolar solid-state device in which current is controlled by an electric field as is done in vacuum tubes.

Broadly speaking, there are two types of FETs:

- (a) junction field effect transistor (JFET)
- (b) metal-oxide semiconductor FET (MOSFET)

It is also called insulated-gate FET (IGFET).


It may be further subdivided into:

ACE Academy

- (i) depletion-enhancement MOSFET i.e. DE-MOSFET
- (ii) enhancement-only MOSFET i.e. E-only MOSFET

Both of these can be either P-channel or N-channel devices.

The FET family tree is shown below:

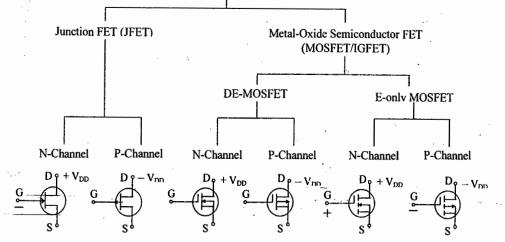

FET

#### Junction FET (JFET)


#### (a) Basic Construction

FET can be fabricated with either an N-channel or P-channel though N-channel is generally preferred. For fabricating an N-channel JFET, first a narrow bar of N-type semiconductor material is taken and then two P-type junctions are diffused on opposite sides of its middle part. These junctions form two P-N diodes or gates and the area between these gates is called *channel*.

The two P-regions are internally connected and a single lead is brought out which is <u>called</u> gate terminal. Ohmic contacts (direct electrical connections) are made at the two ends of the bar-one lead is called source terminal S and the other drain terminal D.

When potential difference is established between drain and source, current flows along the length of the 'bar' through the channel located between the two P-regions.

The current consists of only majority carriers which, in the present case, are electrons.

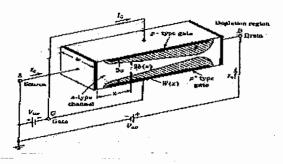

P-channel JFET is similar in construction except that it uses P-type bar and two N-type junctions. The majority carriers are holes which flow through the channel located between the two N-regions or gates.

Fig. shows, the basic structure of an n-channel field-effect transistor. The normal polarities

of the drain-to-source and gate-to-source supply voltages are shown. In a p-channel FET the voltages would be reversed.

Following FET notation is worth remembering:

- 01. **Source.** It is the terminal through which majority carriers enter the bar. Since carriers come from it, it is called the source.
- 02. **Drain.** It is the terminal through which majority carriers leave the bar i.e. they are drained out from this terminal. The drain-to-source voltage V<sub>DS</sub> drives the drain current I<sub>D</sub>.
- 03. Gate. These are two internally-connected heavily-doped impurity regions which form two P-N junctions. The gate-source voltage V<sub>GS</sub> reverse-biases the gates.
- 04. Channel. It is the space between two gates through which majority carriers pass from source-to-drain when  $V_{DS}$  is applied.

Schematic symbols for N-channel and P-channel JFET are shown in the above Figures. It must be kept in mind that gate arrow always points to N-type material(channel).

#### (b) Theory of Operation

While discussing the theory of operation of a JFET, it should be kept in mind that


- 1. Gates are always reversed-biased. Hence, gate current  $I_G$  is practically zero.
- 2. The sourced terminal is always connected to that end of the drain supply which provides the necessary charge carriers.

In an N-channel JFET, source terminal S is connected to the negative end of the drain voltage supply (for obtaining electrons).

In a P-channel JFET, S is connected to the positive end of the drain voltage supply for getting holes which flow through the channel.

Let us now consider an N-channel JFET and discuss its working when either V<sub>GS</sub> or V<sub>DS</sub> or both are changed.

Fig.7. Circuit symbol for an n-channel FET. (For a p-channel FET the arrow at the gate junction points in the opposite direction.) For an n-channel FET,  $I_D$  and  $V_{DS}$  are positive and  $V_{GS}$  is negative. For a p-channel FET,  $I_D$  and  $V_{DS}$  are negative and  $V_{GS}$   $V_{GG}$  is positive.



#### (i) When $V_{GS} = 0$ and $V_{DS} = 0$

ACE Academy

In this case, drain current  $I_D$  = 0, because  $V_{DS}$  = 0. The depletion regions around the P-N junctions are of equal thickness and symmetrical .

#### (ii) When $V_{GS} = 0$ and $V_{DS}$ is increased from zero

For this purpose, the JFET is connected to the  $V_{DD}$  supply as shown in Figure. The electrons (which are the majority carriers) flow from S to D whereas conventional drain current  $I_D$  flows through the channel from D to S.

As  $V_{DS}$  is gradually increased from zero,  $I_D$  increases proportionally as per Ohm's law. It is found that for small initial values of  $V_{DS}$ , the N-type channel material acts like a resistor of constant value. It is so because  $V_{DS}$  being small, the depletion regions are not large enough to have any significant effect on channel cross-section and, hence, its resistance. Consequently,  $I_D$  increases linearly as  $V_{DS}$  is increased from zero onwards.

The ohmic relationship between  $V_{DS}$  and  $I_D$  continues till  $V_{DS}$  reaches a certain critical value called *pinch-off voltage*  $V_{PO}$  when drain current becomes constant at its maximum value called  $I_{DSS}$ .

The SS in  $I_{DSS}$  indicates that the gate is shorted to source to make sure that  $V_{GS}=0$ . This current is also known as zero-gate-voltage drain current. Under pinch-off conditions, separation between the deplction regions near the drain end reaches a minimum value. It should, however, be carefully noted that pinch-off does not mean 'current-off'. In fact,  $I_D$  is maximum at pinch-off.

When  $V_{DS}$  is increased beyond  $V_{PO}$ ,  $I_D$  remains constant at its maximum value  $I_{DSS}$  upto a certain point. It is due to the fact that further increase in  $V_{DS}$  (beyond  $V_{PO}$ ) causes more of the channel on the source end to reach the minimum width.

As more of the channel reaches the minimum width, the resistance of the channel increases at the same rate at which  $V_{DS}$  increases. In other words, increase in  $V_{DS}$  is neutralized by increases in  $R_{DS}$ .

Consequently,  $I_D = (V_{DS} / R_{DS})$  remains unchanged even though  $V_{DS}$  is increased. Ultimately, a certain value of  $V_{DS}$  (called  $V_{DSO}$ ) is reached when JFET breaks down and  $I_D$  increases to an excessive value.

# (iii) When $V_{DS} = 0$ and $V_{GS}$ is decreased from zero

In this case, as  $V_{CS}$  is made more and more negative, the gate reverse bias increases which increases the thickness of the depletion regions.

As negative value of  $V_{GS}$  is increased, a stage comes when the two depletion regions touch each other. In this condition, the channel is said to be cut-off. This value of  $V_{GS}$  which cuts off the channel and hence the drain current is called  $V_{GS(off)}$ .

It may be noted that  $V_{GS(off)} = -V_{PO}$  or  $|V_{PO}| = |V_{GS(off)}|$ .

#### (iv) When VGS is negative and VDS is increased

As V<sub>GS</sub> is made more and more negative, values of V<sub>P</sub> as well as breakdown voltage are decreased.

Summary. Summarizing the above, we have that

- (i) keeping V<sub>GS</sub> at a fixed value (either zero or negative), as V<sub>DS</sub> is increased, I<sub>D</sub> initially increases till channel pinch-off when it becomes almost constant and finally increases excessively when JFET breaks down under high value of V<sub>DS</sub>. As V<sub>GS</sub> is kept fixed at progressively higher negative values, the values of V<sub>P</sub> as well as breakdown voltage decrease.
- (ii) keeping V<sub>DS</sub> at a fixed value, as V<sub>GS</sub> is made more and more negative, l<sub>D</sub> decreases till it is reduced to zero for a certain value of V<sub>GS</sub> called V<sub>GS(off)</sub>.

Since gate voltage controls the drain current, JFET is called a voltage-controlled device.

A P-channel JFET operates exactly in the same manner as an N-channel JFET except that current carriers are holes and polarities of both V<sub>DD</sub> and V<sub>GS</sub> are reversed.

Since only one type of majority carrier (either electrons or holes) is used in JFETs, they are called unipolar devices unlike bipolar junction transistors (BJTs) which use both electrons and holes as carriers.

#### Static Characteristics of a JFET

We will consider the following two characteristics:

#### (i) Drain characteristic

It gives relation between I<sub>D</sub> and V<sub>DS</sub> for different values of V<sub>GS</sub> (which is called running variable).

#### (ii) transfer characteristic

It gives relation between ID and VGS for different values of VDS.

#### JFET Drain Characteristics With $V_{GS} = 0$

Such a characteristic is shown in Fig.8. and has been already discussed briefly in Art. It can be sub-divided into following four regions:

#### 1.Ohmic Region OA

This part of the characteristic is linear indicating that for low values of V<sub>DS</sub>, current varies directly with voltage following Ohm's Law. It means that JFET behaves like an ordinary resistor till point A (called knee) is reached.

# Ohmic Pinch off Region (Saturation) Region 'Breakdown C egion IDSS $V_{GS} = 0$ $V_{P}$ Fig.8.

#### 2.Curve AB

In this region,  $I_D$  increases at reverse square-law rate upto point B which is called pinch-off point. The drain-to-source voltage V<sub>DS</sub> corresponding to point B is called pinch-off-voltage VP. But it essential

to remember that pinch-off does not mean current-off.

#### 3. Pinch-off Region BC

It is also known as saturation region or amplified region. Here, JFET operates as a constant-current device because In is relatively independent of Vns.

It is due to the fact that as V<sub>DS</sub> increases, channel resistance also increases proportionally thereby keeping I<sub>D</sub> practically constant at I<sub>DSS</sub>.

It should also be noted that the reverse bias required by the gate-channel junction is supplied entirely by the voltage drop across the channel resistance due to flow of Ipss and none by external bias because  $V_{GS} = 0$ .

Drain current in this region is given by Shockley's equation.

$$I_{D} = I_{DSS} \left( 1 - \frac{V_{GS}}{V_{P}} \right)^{2} = I_{DSS} \left( 1 - \frac{V_{GS}}{V_{GS(off)}} \right)^{2}$$

It is the normal operating region of the JFET when used as an amplifier.

#### 4. Breakdown Region

If V<sub>DS</sub> is increased beyond its value corresponding to point C (called avalanche breakdown voltage), JFET enters the breakdown region where ID increases to an excessive value.

This happens because the reverse-biased gate-channel P-N junction undergoes avalanche breakdown when small change in V<sub>DS</sub> produce very large changes in I<sub>D</sub>.

It is interesting to note that increasing values of V<sub>DS</sub> make a JFET behave first as a resistor (ohmic region), then as a constant-current source (pinch-off region) and finally, as a constant-voltage source (breakdown region).

#### Transfer Characteristic:

It is a plot of I<sub>D</sub> versus V<sub>GS</sub> for a constant value of V<sub>DS</sub> and as shown in fig.9. It is similar to the transconductance characteristics of a vacuum tube or a transistor.

It is seen that when  $V_{GS} = 0$ ,


 $I_D = I_{DSS}$  and when  $I_D = 0$ ,  $V_{GS} = V_P$ .

The transfer characteristics approximately follows the equation.

$$\mathbf{I_D} = \mathbf{I_{DSS}} \left( 1 - \frac{\mathbf{V_{GS}}}{\mathbf{V_P}} \right)^2 = \mathbf{I_{DSS}} \left( 1 - \frac{\mathbf{V_{GS}}}{\mathbf{V_{GS(off)}}} \right)^2$$

The above equation can be written as

$$V_{GS} = V_{GS(of)} I - \sqrt{\frac{I_D}{I_{DSS}}}$$

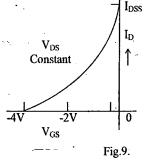

This characteristics can be obtained from the drain characteristics by reading of V<sub>GS</sub> and Inss values for different values of Vns.

Small Signal JFET Parameters

The main parameters of a JFET when connected in common-source mode are as under:

### (i) AC Drain Resistance rd

It is the ac resistance between drain and source terminals when JFET is operating in the pinch-off region. It is given by

$$\begin{array}{c|c} r_d = \underline{change\ in\ V_{DS}} \\ \hline change\ in\ I_D \end{array} \quad \text{at} \quad V_{GS} = \underline{constant\ or} \quad r_d = \underline{\Lambda V_{DS}} \quad \text{at} \quad V_{GS} = \underline{constant} \\ \hline \Lambda I_D \end{array}$$

An alternative name is *dynamic drain resistance*. It is given by the slope of the drain characteristics in the *pinch-off region*. It is sometimes written as  $\mathbf{r}_{ds}$  emphasizing the fact that it is the resistance from drain to source.

Since  $r_d$  is usually the output resistance of a JFET, it may also be expressed as on output admittance  $y_{os}$ . Obsiously,  $y_{os} = 1 / r_d$ . It has a very high value.

### (ii) Transconductance, gm

It is simply the slope of transfer characteristics.

$$g_m = \underline{\text{change in } I_D} \quad \text{at} \quad V_{DS} = \text{constant} \quad \text{or} \quad g_m = \underline{\Delta I_D} \quad \text{at} \quad V_{DS} = \text{constant}$$
 change in  $V_{GS}$  
$$\Delta V_{GS}$$

Its unit is Siemens (S) earlier called mho. It is also called forward transconductance  $(g_{fs})$  or forward transadmittance  $y_{fs}$ 

The transconductance measured at I<sub>DSS</sub> is written as g<sub>mo</sub>.

### Mathematical Expression for gm

The Shockely equation is 
$$I_D = I_{DSS} \left[ I - \frac{V_{GS}}{V_P} \right]$$

$$\mathbf{g}_{m} = -\frac{2I_{\text{DSS}}}{\mathbf{V}_{\text{P}}} \left[ 1 - \frac{\mathbf{V}_{\text{GS}}}{\mathbf{V}_{\text{P}}} \right]$$

when 
$$V_{GS} = 0$$
,  $g_{mo} = g_{mo}$   $\therefore g_{mo} = -\underbrace{2I_{DSS}}_{V_P}$ 

From the above equations, we have  $g_m = g_{mo} \left[ 1 - \frac{V_{DSS}}{V_P} \right] = g_{mo} \sqrt{\frac{I_D}{I_{DSS}}}$ 

### (iii) Amplification Factor, μ

It is given by 
$$\mu = \frac{\text{change in } V_{DS}}{\text{change in } V_{CS}}$$
 at  $I_D = \text{constant}$  or  $\mu = \frac{\Delta V_{DS}}{\Delta V_{CS}}$  at  $I_D = \text{constant}$ 

It can be proved from above that

$$\mu = g_m \times r_d$$

### (iv) DC Drain Resistance, Rps

It is also called the static or ohmic resistance of the channel. It is given by  $\mathbf{R}_{DS} = \mathbf{V}_{DS}/I_D$ 

### Advantages of FETs

ACE Academy

FETs combine the many advantages of both BJTs and vacuum tubes. Some of their main advantages are:

- 1. high input impedance,
- small size.
- 3. ruggedness,
- 4. long life,
- 5. high frequency response,
- 6. fow noise,
- 7. negative temperature coefficient, hence better thermal stability,
- 8. high power gain,
- 9. a high immunity to radiations,
- 10. no offset voltage when used as a switch (or chopper),
- 11. square law characteristics.

The only disadvantages are:

Lsmall gain-bandwidth product.

2. greater susceptibility to damage in handling them.

## **MOSFET or IGFET**

It could be further subdivided as follows:

### (i) Depletion-enhancement MOSFET OR DE-MOSFET-

This MOSFET is so called because it can be operated in both *depletion* mode and *enhancement* mode by changing the polarity of  $V_{GS}$ .

When negative gate-to-source voltage V<sub>GS</sub> is applied, the N-channel DE-MOSFET operates in the *depletion* mode.

However, with positive gate voltage, it operates in the enhancement mode.

Since a channel exists between drain and source, I<sub>D</sub> flows even when V<sub>GS</sub> 0.

That is why DE-MOSFET is known as normally-ON MOSFET.

### (ii) Enhacement-only MOSFET

As its name indicates, this MOSFET operates only in the enhancement mode and has no depletion mode.

It works with large positive gate voltages only. It differs in construction from the DE-MOSFET in that structurally there exists no channel between drain and source. Summary:

Hence, it does not conduct when  $V_{GS}=0$ . That is why it is called **normally OFF** MOSFET.

In a DE-MOSFET,  $I_D$  flows even when  $V_{GS} = 0$ .

It operates in depletion mode with negative values of VGS.

As  $V_{GS}$  is made more negative,  $I_D$  decreases till it ceases when  $V_{GS} = V_{GS(off)} = V_T(Threshold)$ .

It works in enhancement mode when  $V_{GS}$  is positive.

In the case of E-only MOSFET, Ip flows only when V<sub>GS</sub> exceeds V<sub>GS</sub>=V<sub>T</sub>.

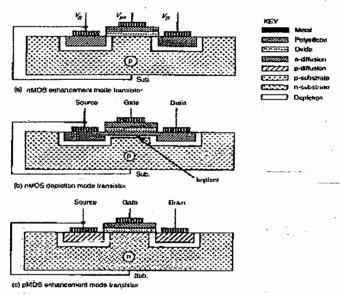


Figure 1–4 MOS transistors ( $V_D = 0V$ . Source gate and substrate to ()V)

### **DE-MOSFET**

### (a) Construction

Like JFET, it has source, gate and drain. However, as shown in aboveFigure.10., its gate is insulated from its conducting channel by an ultra-thin metal-oxide insulating film (usually of silicon dioxide SiO<sub>2</sub>). Because of this insulating property, MOSFET is alternatively known as insulated-gate field-effect transistor (IGFET). Here also, gate voltage controls drain current but main difference between JFET and MOSFET is that, in the latter case, we can apply both positive and negative voltages to the gate because it is insulated from the channel. Moreover, the gate, SiO<sub>2</sub> insulator and channel form a parallel-plate capacitor. Unlike JFET, a DE-MOSFET has only one P-region or N-region called substrate. Normally, substrate is shorted the source internally.

### (b) working

### (i) Depletion Mode of N-channel DEMOSFET

when  $V_{GS} = 0$ , electrons can flow freely from source to drain through the conducting channel which exists between them. When gate is given negative voltage, it depletes the N-channel of its electrons by including positive charge in it.

Greater the negative voltage on the gate, greater is the reduction in the number of electrons in the channel and, consequently, lesser its conductivity. In fact, too much negative gate voltage called  $V_{GS(off)}=V_T$  can-off the channel.

For obvious reasons, negative-gate operation of a DE-MOSFET is called its depletion mode operation.

### (ii) Enhancement Mode of N-channel DE-MOSFET

The circuit connections are shown in above Figure 10. Again drain current flows from source to drain even with zero gate bias. When positive voltage is applied to the gate, the input gate capacitor is able to create free electrons in the channel, which increases I<sub>D</sub>.

As positive gate voltage is increased, the number of induced electrons is increased, so conductivity of the source-to-drain channel is increased and, consequently, increasing amount of current flows between the terminals. That is why, positive gate operation of a DE-MOSFET is known as its **enhancement mode** operation.

Since gate current in both modes is negligibly small, input resistance of a MOSFET is incredibly high varying from  $10^{10}\,\Omega$  to  $10^{14}\Omega$ . In fact, MOSFET input current is the leakage current of the capacitor unlike the input current for JFET which is the leakage current of a reverse-biased P-N junction

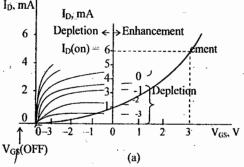


Fig.11: (a) The transfer curve (for V<sub>DS</sub> 10 V) & (b) The drain characteristics for an n-channel MOSIET which may be used in either the enhancement or the depletion mode.

### Static Characteristics of a DE-MOSFET

It acts in the enhancement mode when gate is positive with respect to source and in the depletion mode

when gate is negative. As usual,  $V_{GS(aff)} = V_T$  represents the gate-source voltage (threshold voltage) which cuts off the source-to-drain current. The transfer characteristic is shown in above Figure 11.

For a given  $V_{DS}$ ,  $I_D$  flows even when  $V_{GS} = 0$ . However, keeping  $V_{DS}$  constant, as  $V_{GS}$  is made more negative,  $I_D$  keeps decreasing till it becomes zero at  $V_{GS} = V_{GS(eff)} = V_T$ . When used in the enhancement mode,  $I_D$  increases as  $V_{DS}$  is increased positively.

### Enhancement-only N-Channel MOSFET

This N-channel MOSFET (also called NMOS) finds wide application in digital circuitry. As shown in above Figure in the NMOS, the P-type substrate extends all the way to the metal-oxide layer.

Structurally, there exists no channel between the source and drain. Hence, an NMOS can never operate with a negative gate voltage because it will induce positive charge in the space between the drain and source, which will not allow the passage of electrons between the source S and drain D.

Hence, it operates with positive gate voltages only.

With  $V_{GS} = 0$ ,  $I_D$  is non-existent even when some positive  $V_{DS}$  is applied. It is found that for getting significant amount of drain current  $I_D$ , we have to apply sufficiently high positive gate voltage  $V_{GS}$ . This voltage is found to produce a thin layer of free electrons very close to the metal oxide film which provides channel for electrons (and hence acts like N-type inversion layer or virtual N-channel).

The minimum gate-source voltage which produces this N-type inversion layer(channel) and hence drain current is called *threshold voltage*  $V_{GS(th)}=V_T$ . When  $V_{GS} < V_{GS(th)}(=V_T)$ ,  $I_D = 0$ . Drain current start only when  $V_{GS} > V_{GS(th)}(=V_T)$ . For a given  $V_{DS}$ , as  $V_{GS}$  is increased, virtual channel deeps and  $I_D$  increases.

A P-channel E-only MOSEET (PMOS) is constructed like NMOS except that all the P- and N-regions are interchanged. It operates with negative gate voltage  $V_{GS}$  only.

### COMPARISON OF JEET AND BJT

- FET operation depends only on the flow of majority carriers-holes for P-channel FETs and electrons for N-channel FETs. Therefore, they are called Unipolar devices. Bipolar transistor (BJT) operation depends on both minority and majority current carriers.
- As FET has no junctions and the conduction is through an N-type or P-type semiconductor material(channel), FET is less noisy than BJT.
- 3. As the input circuit of FET is reverse biased, FET exhibits a much higher input impedance— (in the order of  $100 \text{ M}\Omega$ ) and lower output impedance and there will be a high degree of isolation between input and output. So, FET can act as an excellent buffer amplifier but the BJT has low input impedance because its input circuit is forward biased.
- 4. FET is a voltage controlled device, i.e. voltage at the input terminal controls the output current, whereas BJT is a current controlled device, i.e. the input current controls the output current.
- 5. FETs are much easier to fabricate and are particularly suitable for ICs because they occupy less space than BJTs.
- 6. The performance of BJT is degraded by neutron radiation because of the reduction in minority- carrier lifetime, whereas FET can tolerate a much higher level of radiation since they do not rely on minority carriers for their operation.
- 7. The performance of FET is relatively unaffected by ambient temperature changes. As it has a negative temperature coefficient at high current levels, it prevents the FET from thermal breakdown. The BJT has a positive temperature coefficient at high current levels which leads to thermal breakdown.
- 8. Since FET does not suffer from minority carrier storage effects, it has higher switching speeds and cut-off frequencies. BJT suffers from minority carrier storage effects and therefore has lower switching speed and cut-off frequencies.
- FET amplifiers have low gain bandwidth product due to the junction capacitive effects and produce more signal distortion except for small signal operation.
- 10. BJTs are cheaper to produce than FETs.

### APPLICATIONS OF JFET

- 1. FET is used as a buffer in measuring instruments, receivers since it has high input impedance and low output impedance.
- FETs are used in RF amplifiers in FM tuners and communication equipment for the low noise level.
- Since the input capacitance is low, FETs are used in cascade amplifiers in measuring and test equipments.
- Since the device is voltage controlled, it is used as a voltage variable resistor in operational amplifiers and tone controls.
- FETs are used in mixer circuits in FM and TV receivers, and communication equipment because inter modulation distortion is low.
- 6. It is used in oscillator circuits because frequency drift is low.

- As the coupling capacitor is small, FETs are used in low frequency amplifiers in hearing aids and inductive transducers.
- 8. FETs are used in digital circuits in computers, LSD and memory circuits because of its small size.
- 9. As voltage-variable resistor (VVR) in operational amplifiers and tone controls etc.
- 10. Large-scale intergration (LSI) and computer memories because of very small size.

### COMPARISON OF MOSFET WITH JFET

**ACE Academy** 

- In enhancement and depletion types of MOSFET, the transverse electric field induced across an insulating layer deposited on the semiconductor material controls the conductivity of the channel.
   In the JFET the transverse electric field across the reverse biased PN junction controls the
  - In the JFET the transverse electric field across the reverse biased PN junction controls the conductivity of the channel.
- 2. The gate leakage current in a MOSFET is of the order of  $10^{12}$  Amp. Hence the input resistance of a MOSFET is very high in the order of  $10^{10}$  to  $10^{15}$   $\Omega$ . The gate leakage current of a JFET is of the order of  $10^{9}$  Amp and its input resistance is of the order of  $10^{8}$   $\Omega$ .
- 3. The output characteristics of the JFET are flatter than those of the MOSFET and hence, the drain resistance of a JFET (0.1 to 1 M $\Omega$ ) is much higher than that of a MOSFET (1 to 50 k $\Omega$ ).
- 4. JFETs are operated only in the depletion mode. The depletion type MOSFET may be operated in both depletiofun and enchancement mode.
- 5. Comparing to JFET, MOSFETs are easier to fabricate.
- 6. MOSFET is very susceptible to overload voltage and needs special handling during installation. It gets damaged easily if it is not properly handled.
- 7. MOSFET has zero offset voltage. As it is a symmetrical device, the source and drain can be interchanged. These two properties are very useful in analog signal switching.
- 8. Special digital CMOS circuits are available which involve near-zero power dissipation and very low voltage and current requirements. This makes them most suitable for portable systems. MOSFETs are widely used in digital VLSI circuits than JFETs because of their advantages.

### COMPARISON OF N-WITH P-CHANNEL MOSFETS

- 1. The P-channel enhancement MOSFET is very popular because it is much easier and cheaper to produce than the N-channel device.
- 2. The hole mobility is nearly 2.5 times lower than the electron mobility. Thus, a P-channel MOSFET occupies a larger area than an N-channel MOSFET having the same I<sub>D</sub> rating.
- 3. The drain resistance of P-channel MOSFET is three times higher than that for an identical N-channel MOSFET.
- 4. The N-channel MOSFET has the higher packing density which makes it faster in switching applications due to the smaller junction areas and lower inherent capacitances.
- 5. The N-channel MOSFET is smaller for the same-complexity than P-channel device.
- Due to the positively charged contaminants, the N-channel MOSFET may turn ON prematurely, whereas the P-channel device will not be affected.

#### COMPARISON OF N-WITH P-CHANNEL FETS

- 1. In an N-channel JFET the current carriers are electrons, whereas the current carriers are holes in a P-channel JFET.
- Mobility of electrons is large in N-channel JFET; mobility of holes is poor in P-channel JFET.
- 3. The input noise is less in N-channel JFET than that of P-channel JFET.
- 4. The transconductance is larger in N-channel JFET than that of P-channel JFET.

#### SUMMARY

- The relation between-Collector current amplification factor  $\gamma$ , Emitter current amplification factor  $\beta$  and Base current amplification factor  $\alpha$  is,  $\alpha = \beta / \gamma$
- Transistor is an acronym for the words Transfer Resistor. As the input side in forward biased and output side is reverse biased, there is transfer of resistance from a lower on input side to a higher value on the output side.
- Transistor can be used as an amplifiers, when operated in the Active Region. It is also used as a Switch, when operated in the cut-off and saturation regions.
- The three configurations of Transistor are Common Emitter, Common Base and Common Collector.
- ◆ JFET is UNIPOLAR Device (only one type of carriers either holes or electrons)
- JFET device has Higher input resistance compared to BJT and Lower input resistance compared to MOSFET.
- The disadvantage of JFET amplifier circuits is Smaller Gain Bandwidth product compared to BJT amplifier circuits.
- $\bullet \ r_{ds} (ON) = \frac{\partial V_{DS}}{\partial I_{D}} | V_{GS} = constant$
- $\mu$  = Amplification factor =  $\frac{\partial V_{DS}}{\partial V_{GS}}$   $I_D$  = constant
- Relation between  $\mu$ ,  $r_d$  and  $g_m$  for a JFET is  $\mu = r_d \times g_m$
- Width of the depletion region Wn for n-channel JFET, in terms of pinch off voltage

$$V_P$$
 is  $W = \left\{ \frac{2\epsilon V_p}{q N_D} \right\}^{1/2}$ 

- Expression for  $I_{DS}$  in terms of  $I_{DSS}$ ,  $V_{GS}$  and  $V_P$  is  $I_D = I_{DSS} \left\{ 1 \frac{V_{GS}}{V_P} \right\}^2$
- ♦ I<sub>DSS</sub> = Saturation valu8e of Drain current when gate is shorted to source.
- For zero drift current, in the case of JFETs,  $|V_p| |V_{GS}| = 0.623 \text{V}$

### **OBJECTIVE - 1**

OBJEC	11VE-1
For identical construction,  types of bipolar junction transistors (BJTs) have faster switching times.	20.The l with emit
2. Expression for I <sub>CEO</sub> in terms of I <sub>CBO</sub> and α is	(A) I (B) I (C) I
3. β' of a BJT is defined as	(D) i
4. β' of a transistor (BJT) is	21. DIn
5. Relation between $\beta$ ' and $\beta$ is	temp doub
6. β' is synonymous to	base (A)
7. β is ( for DC Currents).	(C) I (D)
8. β' is (for AC Currents).	22 Tho
9. In a BJT the arrow on the emitter lead specifies the direction of where the emitter-base junction is	22. The cau (A)
biased.  10. IGFET is the other name for	(C)-1 (D)
device.  11. In JFET recombination noise is less	23. Base
because it is device.	forw with
12. The disadvantage of JFET amplifier	the i
circuit is	(A) (C)
BJT respectively.  14. The voltage V <sub>DS</sub> at which I <sub>D</sub> tends to	24. If a its j
level off, in JFET is called	the
15. The voltage V <sub>GS</sub> at which I <sub>D</sub> becomes	grea
zero in the transfer characteristic of JFET is called	(A)
	(B)
16. JFET can be used asresistor.	.(C) (D)
17. The square law device is	
18. The MOSFET that can be used in both enhancement mode and depletion mode is	25. In a tem dou emi
4 4 7777 1 4 1	CIII

19. The operation of a FET depends upon

the flow of .... carriers only. It is

therefore a ...... device.

- 20.The break down voltage of a transistor with its base open is BV<sub>CEO</sub> and with emitter open is BV<sub>CBO</sub>, then
  - (A) B  $V_{CEO} = B V_{CBO}$
  - (B) B  $V_{CEO} > B V_{CBO}$
  - (C) B  $V_{CEO} < B V_{CBO}$
  - (D) is not related to B V<sub>CBO</sub>
- 21. DIn a bipolar transistor at room temperature, if the emitter current is doubled, the voltage across its base-emitter junction.
  - A) Doubles (B) halves
  - (C) Increases by about 20 mv
  - (D) decrease by about 20v
- 22. The early-effect in bipolar transistor is caused by
  - (A) Fast turn-on (B) fast turn-off
  - (C) large collector-base reverse
  - (D) large emitter-base forward bias
- 23. Base-to-emitter voltage V<sub>BE</sub> in a forward biased transistor decreases with increase of temperature at the following rate:
  - (A) 25 mv/deg c (B) 0.25 mv/deg c
  - (C) 2.5 mv/deg c (D) 0.6 mv/deg c
- 24. If a transistor is operating with both of its junctions forward biased, but with the collector-base forward bias greater than the emitter-base forward bias, then it is operating in the
  - (A) forward active mode
  - (B) reverse saturation mode
  - (C) reverse active mode
  - (D) forward saturation mode
- 25. In a bipolar transistor at room temperature, if the emitter current is doubled, the voltage across its baseemitter junction
  - (A) doubles
  - (B) halves
  - (C) increases by about 20 mV
  - (D) decreases by about 20 m V

- 26. In a transistor having finite B, the forward bias across the base-emitter iunction is kept constant and the reverse bias across the collector-base junction is increased. Neglecting the leakage across the collector-base junction and the depletion generation current, the base current will
  - (A) increase
  - (C) remain constant (D) none.

(B) decrease

- 27. An n-channel JFET has a pinch-off voltage of  $V_P = -5V$ ,  $V_{DS}$  (max) = 20 V, and  $g_m = 2 \text{ mA} / V$ . The minimum 'ON' resistance is achieved in the JFET for (A)  $V_{GS} = -7V$  and  $V_{DS} = 0V$ 

  - (B)  $V_{GS} = 0 V$  and  $V_{DS} = 0 V$
  - (C)  $V_{GS} = 0 \text{ V}$  and  $V_{DS} = 20 \text{ V}$
  - (D)  $V_{GS} = -7V$  and  $V_{DS} = 20 \text{ V}$
- 28. Consider the following four common type of transistors.
  - 1. Point Contact Tansistor
  - 2. Bipolar Junction Transistor
  - 3. MOS Field Effect Transistor
  - 4. Junction Field Effect Transistor

The correct arrangement of these transistors in the increasing order of input impedance is

- (A) 1, 2, 4, 3 (B) 1, 2, 3, 4
- (C) 2, 1, 3, 4 (D) 2, 1, 4, 3
- 29. In a transistor amplifier, the reverse saturation current I<sub>CO</sub>
  - (A) doubles for every 10° C rise in temperature
  - (B) doubles for every 1° C rise in temperature
  - (C) increases linearly with temperature
  - (D) doubles for every 5° C rise in temperature
- 30. If  $\alpha = 0.981$ ,  $I_{CO} = 6 \mu A$  and  $I_{R} =$ 100 uA for a transistor, then the value of Ic will be
  - (A) 2.3 mA
- (B) 3.I
- $(C)^4.6 \,\mathrm{mA}$
- (D) 5.2 mA

- 31. In a transistor having finite B, the forward bias across the base emitter iunction is kept constant and the reverse bias across the collector-base iunction is increased. Neglecting the leakage across the collector-base iunction and the depletion region generation current, the base current will
  - (A) increase
- (B) decrease
- (C) remain constant (D)none
- 32. The threshold voltage of an n-channel MOSFET can be increased by
  - (A) increasing the channel dopant concentration
  - (B) reducing the channel dopant concentration
  - (C) reducing the gate oxide thickness
  - (D) reducing the channel length
- 33. Match each of the items A, B and C with and appropriate item from 1, 2, 3, 4 and 5.
  - (A) The current gain of a BJT will be increased if
  - (B) The current gain of a BJT will be reduced if
  - (C) The break-down voltage of a BJT will be reduced if
  - 1. The collector doping concentration is increased
  - 2. The base width is reduce
  - 3. The emitter doping concentration to base doping concentration ratio is reduced
  - 4. The base doping concentration is increased keeping the ratio of the emitter doping concentration to base doping concentration constant
  - 5. The collector doping concentration is reduced
  - (A) A 2, B 3, C 1
  - (B) A-2, B-1, C-3
  - (C) A = 3, B = 1, C = 2
  - (D) A-1, B-2, C-3

- 34. The Ebers-Moll model is applicable to
  - (A) bipolar junction transistors
  - (B) NMOS transistors

**ACE Academy** 

- (C) unipolar junction transistors
- (D) junction field-effect transistors
- 35. Match each of the items A, B and C with and appropriate item from 1, 2, 3, 4 and 5

### List - I

- (A) Common collector amplifier
- (B) Common emitter amplifier
- (C) Common base amplifier

### List - II

- 1. Provides voltage gain but no current
- 2. Provides current gain but no voltage
- 3. Provides neither voltage nor power
- 4. Provides neither current nor power gain
- 5. Provides both voltage and current gain
- (a) A-5, B-3, C-1
- (b) A-2, B-5, C-2
- (c) A-4, B-1, C-2
- (d) A = 2, B = 5, C = 1

Answers

01. NPN 02.  $I_{CEO} = I_{CBO}/(1 - \alpha)$ 

03. 
$$\beta = \frac{\partial l_C}{\partial l_B} \Big|_{V_{CE} = \text{constant}}$$

04. Small Signal Common Emitter Forward Current Gain

$$05. \beta' = \frac{\beta}{\left[1 - (l_{CB0} + I_B) \frac{\partial h_{FE}}{\partial l_C}\right]}$$

- 07. Large Signal Current Gain
- 08. Small Signal Current Gain
- 09. Hole or conventional current, forward
- 10. MOSFET 11. UNIPOLAR
- 12. gain band width product is less.
- 13. C, B, E
- 14. Pinch off Voltage
- 15. Pinch off Voltage 16. voltage variable
- 17. JFET
- (DMOSFET) 18. Depletion MOSFET
- 19. Majority, Unipolar

22.C 23.C 24.B 25.B 20.C 21.B

30.D 26.B 27.C 28.D 29.A

34.A 31.B 32.B 33.A

35.D

### OBJECTIVE - 2

- 01. The early effect in a bipolar junction transistor is caused by
  - (A) fast turn on
  - (B) fast turn off
  - (C) large collector base reverse bias
  - (D) large emitter base forward bias
- 02. The widths of the base in a GaAs transistor and in a Si transistor (both n p n type) are equal.
  GaAs transistor works at higher frequency
  - (A) the band gap of GaAs is higher than that of Si
  - (B) the base transit time is lower in GaAs.
  - (C) the negative differential mobility in GaAs favours operational very high frequency
  - (D) Si transistor works at higher frequency compared to GaAs transistor.
- 03. Which one of the following is the exact expression for I<sub>CEO</sub> (i.e., collector to emitter current with base open) in a junction transistor?
  - (A)  $\alpha$ . $I_{CBO}$
- (B)  $\frac{\alpha}{1-\alpha}I_{CBO}$
- (C)  $\frac{I_{CBO}}{1-\alpha}$
- (D)  $(1 \alpha) I_{CBO}$
- 04. If for a silicon n-p-n transistor, the base-to- emitter voltage (V<sub>BE</sub>) is 0.7V and the collector-to-base voltage (V<sub>CB</sub>) is 0.2V, then the transistor operating in the
  - (A) normal active mode
  - (B) saturation mode
  - (C) inverse active mode
  - (D) cut off mode
- 05. How can the channel width in a junction field effect transistor be controlled?
  - (A) By two back-biased p-n junctions
  - (B) By the length of the source
  - (C) By the length of the drain
  - (D) By the length of both the source and the drain

- 06. The voltage gain of a given common source JEFT amplifier depends on its
  - (A) input impedance
  - (B) amplification factor
  - (C) dynamic drain resistance
  - (D) drain load resistance
- 07. The set of transistor characteristics that enables α to be directly determined from the slope is
  - -(a) The common emitter output characteristics
  - (b) The common emitter transfer characteristics
  - (c) The common base input characteristics
  - (d) The common base transfer characteristics
- 08. The effective channel length of a MOSFET in saturation decreases with increase in
  - (a) gate voltage
  - (b)drain voltage (c) source voltage
  - (d) body voltage
- 09. The internal resistance of a current source used in the model of a BJT while analyzing a circuit using BJT
  - (a) Very high
  - (b) Very low
  - (c) Zero
  - (d) Of the order of a few mega-ohms
- 10 In a transistor, the forward bias across the base emitter junction is kept constant and the reverse bias across the collector base junction is increased. Neglecting the leakage across the collector. base junction and the depletion region generation current. The base current will
  - (a) increase
  - (b) decrease
  - (c) remain constant
  - (d) none of these

- 11.In a common emitter amplifier, the un bypassed emitter resistance provides
  - (a) voltage shunt feedback

ACE Academy

- (b) current series feedback
- (c) negative voltage feedback
- (d) positive current feedback
- α-cut off frequency of a bipolar junction transistor
  - (a) increase with the increase in base width.
  - (b) increase with increase in the collector width.
  - (c) increase with the increase in temperature.
  - (d) increase with decrease in the base width.
- The breakdown voltage of a transistor with its base open is BV<sub>CEO</sub> and that with the emitter open is BV<sub>CBO</sub> then
  - (a)  $BV_{CEO} = BV_{CBO}$
  - (b)  $BV_{CEO} > BV_{CBO}$
  - (c)  $BV_{CEO} < BV_{CBO}$
  - (d) BV<sub>CEO</sub> is not related to BV<sub>CEO</sub>
- 14. Two identical FETs, each by characterized by the parameters g<sub>m</sub> and r<sub>d</sub> are connected in parallel. The composite FET is then characterized by the parameters
  - (a)  $g_m/2$  and  $2r_d$  (b)  $g_m/2$  and  $r_d/2$
  - (c)  $2g_m$  and  $r_d/2$  (d)  $2g_m$  and  $2r_d$
- 15 Thermal runaway in a transistor biased in the active region is due to
  - (a) heating of the transistor
  - (b) changes in β which increases with temperature
  - (c) base emitter voltage V<sub>BE</sub> which decreases with rise in temperature
  - (d) Change in reverse collector saturation current due to rise in temperature

- 16 In a transistor amplifier, the reverse saturation current I<sub>0</sub> is.
  - (a) doubled for every 10<sup>o</sup>C rise in temperature
  - (b) doubled for every 1° C rise in temperature
  - (c) increased linearly with temperature
  - (d) doubled for every 50 C rise in temperature
- 17. If a transistor is operation with both of its junctions forward biased, but with the collector base forward bias greater than the emitter base forward bias than, it is operating in the
  - (a) forward active mode
  - (b) reverse saturation mode
- (c) reverse active mode
- (d) forward saturation mode
- 18. The common emitter short circuit current gain β of a transistor
  - (a) is monotonically increasing function of the collector current I<sub>c</sub>'
  - (b) is a monotonically decreasing function of I<sub>c</sub>.
  - (c) Increases with I<sub>c</sub>' for low I<sub>c</sub> reaches a maximum and then decreases with further increases in I<sub>c</sub>'
  - (d) is a not function of Ic'
- 19. The 'Pinch-off' voltage of a JFET is 5 V. Its "Cut-off" voltage is (a) (5.0) 1/2 V (b) 2.5 V
  - (c) 5.0 V
- (d)  $(5.0)^{3/2}$  V
- 20 Which of the following effects can be caused by a rise in temperature?
  - (a) Increase in MOSFET Current (IDS)
  - (b) Increase in BJT current (Ic)
  - (c) Decreases in MOSFET Current (IDS)
  - (d) Decreases in BJT current (Ic)

- 21. Consider the following statements:
  - 1. The B of a bipolar transistor reduces if base width is increased
  - 2. The ß of a bipolar transistor increases if the doping concentration in the base is increased Which one of the following is correct?
  - (a) 1 is FALSE and 2 is TRUE
  - (b) Both 1 and 2 are TRUE.
  - (c) Both 1 and 2 are FALSE
  - (d) 1 isTRUE and 2 is FALSE
- 22. Which one of the following statements is correct in respect of BJT?
  - (a) Avalanche multiplication starts when the reverse biased collectorbase voltage V<sub>CB</sub> equals the avalanche breakdown voltage  $BV_{CBO}$
  - (b) The early effect starts as soon as punch-through occurs in a transistor.
  - (c) The small signal current gain h<sub>fe</sub> = large signal current gain  $h_{\rm FE}$  when  $\partial h_{\rm FE}/\partial I_{\rm c} = 0$ .
  - (d) In the CE mode, a transistor can be cut off by reducing I<sub>B</sub> to zero.
- 23. The gain of a bipolar transistor drops at high frequencies. This is because of the
  - (a) Coupling and bypass capacitors.
  - (b) Early effect.
  - (c) Inter-electrode transistor capacitances.
  - (d) Coupling and bypass capacitors, and inter-electrode transistor capacitances.
- 24. When the gate-to-source voltage(V<sub>GS</sub>) of a MOSFET with threshold voltage of 400 mV, working in saturation is 900 mV, the drain current is observed to be 1 mA. Neglecting the channel width modulation effect and assuming that the MOSFET is operating at saturation, the drain current for an applied V<sub>GS</sub> of 1400 mV is
  - (a) 0.5 mA
- (b) 2.0 mA
- (c) 3.5 mA
- (d) 4.0 mA

25.Match List-I (Device) with List-II (Associated Term) and select the correct answer using the code given below the lists:

List-l		List –II			
A. Diod	e	1. Pino	1. Pinch - off voltage		
B. S.C.I	3	2. Holding curre			
C. B.J.T	•	3. Forward resistar			
D. F.E.7	r	4. Active region			
	Α	В	C	D	
(a)	3	4	2	1	
(b)	1	2	4	3	
(c)	3	2	4	1	

- 26. A bipolar junction transistor is in saturation region. Given Vcc = 10 V. RC = 1 k $\Omega$ ,  $h_{EF}$  = 100 and  $V_{Clisat}$  = 0.3 V. What is the collector current in saturation?
- (a) 10 mA

(d)

- (b) 9.7 mA
- (c) 0 mA
- (d) I mA
- 27. An emitter in a bipolar junction transistor is doped much more heavily than the base as it increases the
  - (a) cmitter efficiency
  - (b) base transport factor
  - (c) forward current gain
  - (d) all the three given above
- 28. Match List-I (Devices) with List-II (Characteristic) and select the correct answer using the code given below the lists.

List-I

List- II

A. BJT

1. Volatage controlled negative resistance

B. MOSFET

2. High current gain

C. Tunnel diode 3. Voltage regulation

D. Zener diode

4. High input Impedance

Α	В	C	D
(a) l	4	2	3
(b) 2	4	1	3
(c) 2	3	1	4
(d) 1	3	2	4

- 29. A junction transistor operating at room temperature with  $I_c = 2mA$ ; where KT/q = 25mV has  $\beta = 100$ . The value of parameters gm in Mhos and r<sub>s</sub> in ohms will be respectively (a) 0.04 and 2500 (b) 0.08 and 1250 (c) 0.5 and 800 (d) 0.08 and 5000
- 30. In n- channel JFET has a pinch off voltage of  $V_0 = -5V$ ,  $V_{DS}(max) = 20V$ and g<sub>m</sub>=20mA/V. The minimum 'ON' resistance is achieved in the JFET for
  - (a)  $V_{GS} = -7V$  and  $V_{DS} = -0V$
  - (b)  $V_{GS} = 0V$  and  $V_{DS} = 0V$
  - (c)  $V_{GS} = 0V$  and  $V_{DS} = 20V$
  - (d)  $V_{GS} = -7V$  and  $V_{DS} = 20V$
- 31. If  $\alpha = 0.995$ ,  $l_E = 10$ mA and  $Ico = 0.5\mu A$ , then  $I_{CEO}$  will be (a) 25 μA (b) 100µA
  - (c)  $10.1 \mu A$
- (d)  $10.5 \mu A$
- 32. If an amplifier with gain of 1000 and feedback of  $\beta = -0.1$  had a gain change of 20% due to temperature, the change in gain of the feedback amplifier would be
  - (a)-10%
- (b) 5%
- (c) 0.2%
- (d) 0.01 %
- 33, If  $\alpha = 0.98$ ,  $I_{co} = 6 \mu A$  and  $I_{B} = 100 \mu A$ for a transistor, then the value of I<sub>c</sub> will
  - (a) 2.3 mA
- (b) 3.1 mA
- (c) 4.6 mA
- (d)  $5.2 \, \text{mA}$
- 34. For a PNP transistor,  $\alpha = \alpha_R = 0.9$  and  $I_{co}$ = 10  $\mu$ A, the value of  $I_{CS}$  will be (a)  $15.2\mu A$
- (b)  $52.6 \mu A$
- (c) 72.5 µA

(c)110W

(d)  $1.2 \, \mu A$ 

(d)85W

35. A Si transistor has a thermal ratings,  $T_{\text{max}} = 150^{\circ} \text{C} \text{ and } Q_{\text{ic}} = 0.7 \,^{\circ} \text{C/W}$ . The power which transistor could dissipate if the case could be at 50<sup>0</sup>C is maintained (a) 143W (b) 59W

- 36. In a transistor  $h_{fe} = 50$ ,  $h_{ie} = 830\Omega$ .  $h_{oe} = 10^{-4}$ . Its out put resistance when used in CB configuration is about (b) 700KΩ
  - (a)  $2M\Omega$ (c)  $2.5M\Omega$
- (d) None

KEYS:

01.c	02. b	03.c	04.a	05.a	06.
07.d	08.b	09.a	10.b	11.b	12.t
13.c	14.c	15.d	16.a	17.b	18.c
19.c	20.b	21.d	22.a	23.c	24.d
25.c	26.b	27.c	28.b	29.b	30.c
31 h	32 c	33 Y	3/1 h-	25 h	26.4

## PREVIOUS IES QUESTIONS:

- 01. A transistor with emitter base voltage (V<sub>EB</sub>) of 20mV has a collector current  $(I_C)$  of 5mA. For  $V_{EB}$  of 30mV,  $I_C$  is 30mA. If V<sub>EB</sub> is 40mV, then the I<sub>C</sub> will be
  - (a) 55mA
- (b) 160mA (d) 270mA
- (c) 180mA
- 02. Match List-I (Devices) with List-II(characteristics) and select the correct answer using the codes given below the lists:

### List-I

- A. BJT
- B. MOSFET
- C. Tunnel diode
- D. Zener diode

### List-II

- 1. Voltage controlled -ve resistance
- 2. High current gain
- 3. Voltage regulation
- 4. High input impedence


### Codes:

- ABCD
- 2 3
- 2 4 1 3 2 3 1 4
- 1 3 2 4
- 03. In a junction transistor, the collector 'l<sub>CBO</sub>' cutoff current reduces considerably by doping the
  - (a) emitter with high level of impurity
  - (b) emitter with low level of impurity
  - (c) collector with high level of impurity
  - (d) collector with low level of impurity
- 04. In a junction transistor biased for operation at emitter current 'IF' and collector current 'Ic' the transconductance 'gm' is
  - (a) kT/qI<sub>E</sub>
- (b) qI<sub>E</sub>/kT
- (c)  $I_C/I_E$
- (d)  $I_E/I_C$

- 05. To avoid thermal runway in the design of an analog circuit, the operating point of the BJT should be such that it satisfies the condition
  - (a)  $V_{CE} = V_{CC}/2$  (b)  $V_{CE} \le V_{CC}/2$
  - (c)  $V_{CE} > V_{CC}/2$  (d)  $V_{CF} \le 0.78 V_{CC}$
- 06. Consider the following devices:
  - 1. BJT in CB mode
  - 2. BJT in CE mode
  - 3. JFET 4. MOSFET

The correct sequence of these devices in increasing order of their input impedance is

- (a) 1, 2, 3, 4
- (b) 2, 1, 3, 4
- (c) 2, 1, 4, 3
- (d) 1, 3, 2, 4
- 07. Assertion(A): FETs are more suitable at the input stages of millivoltmeter and CROs than BJTs.
  - Reason(R): A FET has lower output impedance than a BJT.
  - (a) Both A and R are true and R is the correct explanation of A.
  - (b) Both A and R are true but R is NOT the correct explanation of A.
  - (c) A is true but R is false.
  - (d) A is false but R is true.
- 08. In a biased JFET, the shape of the channel is an shown in the given figure. - \_\_



#### because

- (a) it is the property of the material
- (b) the drain end is more reverse biased than source end.
- (c) the drain end is more forward biased than source end
- (d) the impurity profile varies with the distance from source

- 09. A transistor has a current again of 0.99 in the CB mode. Its current gain in the CC mode is
  - (a) 100 (b) 99 (c) 1.01 (d) 0.99
- 10. Match List-I (Biasing of the junctions) with List-II (Functions) and select the correct answer using the codes given below the lists:

### List-I

- A. E-B junction forward bias and C-B junction reverse bias
- B. Both E-B and C-B junctions forward bias
- C. E-B junction reverse bias and C-B junction forward bias
- D. Both E-B and C-B junctions reverse bias

### List-II

- 1. Very low gain amplifier
- 2. Saturation C-B junctions
- 3. High gain and amplifier
- 4. Cut-off condition

### Codes:

- ABCD
- (a) 2 3 1 4
- **(b)** 3 2 1 4
- (c) 3 2 4 1
- (d) 2 3 4 1
- 11. Match List-I (Structures / characteristics) with List-II (Reasons) in respect of JFET and select the correct answer using the codes given below the lists:

### --- - List-I

- A. n-channel JFET is better than pchannel JFET
- B. Channel is wedge shaped
- C. Channel is not completely closed at pinch-off
- D. Input impedance is high List-II

- 1. -Reverse bias increases along the channel
- 2. High electric field near the drain and directed towards source
- 3. Low leakage current at the gate terminal
- 4. Better fréquency performance since terminal  $\mu_0 >> \mu_D$

#### Codes:

- A B C D
- (a) 4 1 2 3
- **(b)** 4 2 1 3
- (c) 3 1 2 4
- (d) 3 2 1 4
- 12. The output current versus input voltage transfer characteristic of an n-channel JFET in such that there is
  - (a) zero current flow at zero input voltage bias
  - (b) current flow only-when a positive input threshold voltage is crossed.
  - (c) current flow only when a negative input cut - off voltage bias is crossed.
  - (d) no cut off input voltage.
- 13. In a MOS transistor, the gate source input impedance is
  - 1. lower than the impedance of a BJT
  - 2. higher than the input impedance of a
  - 3. lower than the input impedance of a
  - 4. higher than the input impedance of a JFET.
  - (a) l alone
- (b) 2 and 3
- (c) 4 alone
- (d) 2 and 4
- 14. At 25°C, the collector -- emitter voltage drop of a silicon transistor at saturation is approximately
  - (a) 0.1 V (b) 0.3 V (c) 0.5 V (d) 0.7 V
- 15. Assertion (A): The semiconductor devices like BJTs have a maximum temperature of operation, beyond which they do no function.
  - Reason(R): Extrinsic, p-type and ntype\_\_semiconductors behave as intrinsic beyond that temperature and the effect of doping is lost.
  - (a) Both A and R are true and R is the correct explanation of A.
  - (b) Both A and R are true but R is NOT the correct explanation of A.
  - (c) A is true but R is false.
  - (d) A is false but R is true.

16. Assertion (A): A bipolar junction transistor has high gain, high emitter efficiency and high speed.

Reason(R): The transistor has heavy emitter doping and narrow base width.

- (a) Both A and R are true and R is the correct explanation of A.
- (b) Both A and R are true but R is NOT the correct explanation of A.
- (c) A is true but R is false.
- (d) A is false but R is true.
- -17. Match List-I with List-II and select the correct answer using the codes given below the lists:

### List-I

- A. Gunn Diode
- B. Solar Cell
- C. MOSFET
- D. SCR

### List-II

- 1. Junction less device
- 2. Single junction device
- 3. double junction device
- 4. Triple junction device
- Codes:

### A B C D

- (a) 1 2 3 4
- **(b)** 3 4 1 2
- 1 4 3 2
- (d) 3 2 1 4
- 18. A bipolar junction transistor has a common base\_forward short circuit current gain of 0.99. Its common emitter forward short circuit current gain will be
  - (a) 50
- (b) 99
- (c) 100
- (d) 200
- 19. Assertion (A): In a transistor the thickness of the base region is kept as small as possible.

Reason(R): By keeping the base thickness small, a large electric field is produced between the emitter and the collector which makes the transistor fast-acting.

(a) Both A and R are true and R is the correct explanation of A.

- (b) Both A and R are true but R is NOT the correct explanation of A.
- (c) A is true but R is false.
- (d) A is false but R is true.
- 20. Match List-I (Equation) with List-II (Relation between/Description) and select the correct answer using the codes given below the lists.

### List-I

- A. Continuity equation
- B. Einstein's equation
- C. Poisson's equation
- D. Diffusion equation

### List-II


- 1. Relates diffusion constant with mobility
- 2. Relates charge density with electric
- 3. Relates flow with rate of change of concentration in space.
- 4. Rate of change of minority carrier density with time


### Codes:

- ABCD
- (a) 4 1 3 2
- 2 3 **(b)** 4 1
- 1 4 2 3
- (d) 1 4 3
- 21. How can the channel width in a iunction field effect transistor be eontrolled?
  - (a) By two back-biased p-n junctions
  - (b) By the length of the source
  - (c) By the length of the drain
  - -(d) By the length of both the source and the drain
- 22. Which one of the following is the correct relation ship between the band gap of a material used in a photo detector and the energy of the incident photon?
- (a)  $E_g > hc/\lambda$  (b)  $hv^2/\lambda > E_g$
- (c)  $h\nu > E_g$  (d)  $1/2h\nu \le E_g$

23. Match List-I (Semiconductor Device) with List-II (Symbol Used) and select the correct answer using the codes given below the lists:

ACE Academy

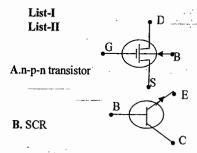







C2:				
	$\cdot \mathbf{A}$	В	C	
(a)	2	3	4	
(L)			^	

- 24. Which one of the following is the exact expression for I<sub>CEO</sub> (i.e. collector to emitter current with base open) in a junction transistor?

  - (a)  $\alpha$ .  $I_{CBO}$  (b)  $\frac{\alpha}{1-\alpha}$ .  $I_{CBO}$
  - (c)  $\frac{I_{CBO}}{1-\alpha}$  (d)  $(1-\alpha)I_{CBO}$

(where I<sub>CBO</sub> is the collector to base current with emitter open, and  $\alpha$  is the common base current gain)

- 25. Consider the following statements: FETs when compared to BJTs have
  - 1. high input impedance
  - 2. current flow due to majority carriers
  - 3. low input impedance
  - 4. current flow due to minority

Which of the statements given above are correct?

- (a) 1 and 4
- (b) 2 and 3
- (c) 3 and 4
- (d) 1 and 2
- 26. How is an N channel Junction Field Effect Transistor operated as an amplifier?
  - (a) With a forward bias gate source
  - (b) With a reverse bias gate -- source iunction
  - (c) With an open gate -- source junction
  - (d) With a shorted gate -- source iunction
- 27. For a npn bipolar transistor, what is the main stream of current in the base region?.
  - (a) Drift of holes
  - (b) diffusion of holes
  - (c) Drift of electrons
  - (d) Diffusion of electrons
- 28. What is the most noticeable effect of a small increase in temperature in the common emitter connected B3T?
  - (a) Increase in I<sub>CBO</sub>
  - (b) Increase in output resistance
  - (c) Decrease in forward current gain
  - (d) Increase in forward current gain.

- 29. For BJT, early voltage  $V_A$  is 100 V. In common emitter configuration, quiescent  $V_{CE}$  is 10 V. What percentage change in quiescent  $I_C$  would occur, if early voltage  $V_A$  is made  $\infty$ ?
  - (a) 10 %....
- (b) 20%
- (c) 5 %
- (d) 0%
- 30. While using a bipolar junction transistor as an amplifier, the collector and emitter terminals got interchanged mistakenly. Assuming that the amplifier is a common emitter amplifier and the biasing is suitably adjusted, the interchange of terminals will result into which one of the following?
  - (a) Zero gain
  - (b) Infinite gain
  - (c) Reduced gain
  - (d) No change in gain at all
- 31. In n channel enhancement MOSFET at a fixed drain voltage
  - (a) the drain current is maximum at zero gate voltage and it decreases with applied negative gate voltage
  - (b) the drain current has a finite values at zero gate voltage and it increases or decreases with the applied voltage of proper polarity
  - (c) the drain current is zero at zero gate voltage and it increases with the positive applied gate voltage
  - (d) the drain current is zero for negative bias voltage to gate and it increases as the negative gate bias is decreased in magnitude

- 32. The data sheet for a certain JFET (Junction Field Effect Transistor) indicates that  $l_{DSS}$  (drain to source current with gate shorted) 15 mA and  $V_{GS}$  (off) (Cut off value of gate to source voltage) = -5V. What is the drain current for  $V_{GS}$  2 V?
  - (a) 58. 8 mA
- (b) 29.4 mA
- (c) 9.6 mA
- (d) 5.4 mA

KEY:


l.a	2.b	3.a	4.b	5.b .	6. <b>a</b>
7.a	8.b	9.a	10.b	ll.a	12.c
13.d	14.b	15.a	16.a	17.a	18.b
.19.ç	20.b	21.a	22.c	23.a	24.c
25.d	26.d	27.d	28.a	29.c	30.c
31.c	32.d				

## **PREVIOUS GATE QUESTIONS:**

- The Early effect in a bipolar junction transistor is caused by GATE - 1999
  - (a) fast turn-on

**ACE Academy** 

- (b) fast turn-off
- (c) large collector-base reverse bias
- (d) large emitter-base forward bias
- 2. MOSFET can be used as a GATE 2001
  - (a) current controlled capacitor
  - (b) voltage controlled capacitor-
  - (c) current controlled inductor
- (d) voltage controlled inductor
- 3. If the transistor in the figure is in saturation, then GATE 2002

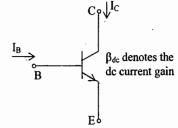

- (a)  $I_C$  is always equal to  $\beta_{dc}I_B$
- (b)  $I_C$  is always equal to  $-\beta_{dc}I_B$
- (c)  $I_C$  is greater than or equal to  $\beta_{dc}I_B$
- (d)  $I_C$  is less than or equal to  $\beta_{dc}I_B$
- 4. For an n-channel enhancement type MOSFET, if the source is connected at a higher potential than that of the bulk(i.e. V<sub>SB</sub>>0), the threshold voltage V<sub>T</sub> of the MOSFET will

### **GATE - 2003**

- (a) remain unchanged
- (b) decrease
- (c) Change polarity
- (d) increase
- 5. The impurity commonly used for realizing the base region of a silicon n-p-n transistor is GATE 2004
- (a) Gallium
- (b) Indium
- (c) Boron
- (d) Phosphorus

- 6. If for a silicon n-p-n transistor, the base-to-emitter voltage (V<sub>BE</sub>) is 0.7 V and the collector-to-base voltage (V<sub>CB</sub>) is 0.2V, then transistor is operating in the GATE - 2004
  - (a) normal active mode
  - (b) saturation mode
- (c) inverse active mode
  - (d) cutoff mode
- 7. Consider the following statements S1 and S2.
  - S1: The β of a bipolar transistor reduces if the base width is increased.
  - S2: The β bipolar transistor increases If the doping concentration in the base is increased.

Which one of the following is correct?

GATE - 2004

- (a) S1 is FALSE and S2 is TRUE
- (b) Both S1 and S2 are TRUE
- (c) Both S1 and S2 are FALSE
- (d) S1 is TRUE and S2 is FALSE
- 8. The phenomenon known as "Early Effect" in a bipolar transistor refers to a reduction of the effective base-width caused by. GATE - 2006
  - (a) electron-hole recombination at the base
  - (b) the reverse biasing of the basecollector junction
  - (c) the forward biasing of emitter-base junction
  - (d) the early removal of stored base charge during saturation-to-cutoff switching.

大きな できる かんしん こう

9. An n-channel JEFT has Ipss = 2mA and  $V_P = -4V$ . Its transconductance  $g_m$  (in mA/V) for an applied gate to source voltage V<sub>GS</sub> of -2V is

**GATE - 1999** 

(a) 0.25

(b) 0.5

(c) 0.75

(d) 1.0

10. When the gate-to-source voltage  $(V_{GS})$ of a MOSFET with threshold voltage of 400 mV, working in saturation is 900 mV, the drain current is observed to be 1 mA. Neglecting the channel width modulation effect and assuming that the MOSFET is operating at saturation, the drain current for an applied V<sub>GS</sub> of 1400 mV is

**GATE - 2003** 

(a) 0.5 mA

(b) 2.0 Ma

(c) 3.5 mA

(d) 4.0 mA

- 11. Consider the following statements S1 and S2.
  - S1: The threshold voltage (V<sub>T</sub>) of a MOS capacitor decreases with increase in gate oxide thickness
  - S2: The threshold voltage (V<sub>T</sub>) of a MOS capacitor decreases with increase in substrate doping concentration

### **GATE - 2004**

- (a) SI is FALSE and S2 is TRUE
- (b) Both S1 and S2 are TRUE
- (c) Both S1 and S2 are FALSE
- (d) S1 is TRUE and S2 is FALSE
- 12. The drain of an n-channel MOSFET is shorted to the gate so that  $V_{GS} = V_{DS}$ . The threshold voltage (V<sub>T</sub>) of MOSFET is 1 V. If the drain current  $(I_D)$  is 1 mA for  $V_{GS} = 2V$ , then for  $V_{GS} = 3V$ ,  $I_D$  is

### **GATE - 2004**

(a) 2 mA

(b) 3 mA

(c) 9 mA

(d) 4 mA

- 13. The neutral base width of a bipolar transistor, biased in the active region, is 0.5 um. The maximum electron concentration and the diffusion constant in the base are 10<sup>14</sup>/cm<sup>3</sup> and  $D_n = 25 \text{ cm}^2/\text{sec}$  respectively. Assuming negligible recombination in the base, the collector curre lensity is (the electron charge is 1.6 x 10-19 Coulomb) **GATE - 2004** (b) 8 A/cm<sup>2</sup>
  - (a) 800 A/cm<sup>2</sup>
  - (c)  $200 \text{ A/cm}^2$
- (d)  $2 \text{ A/cm}^2$
- 14. A MOS capacitor made using p type substrate is in the accumulation mode. The dominant charge in the channel is due to the presence of GATE-2005
  - (a) holes
  - (b) electrons
  - (c) positively charged ions
  - (d) negatively charged ions
- 15. Consider the following two statements about the internal conditions in an n-channel MOSFIET operating in the active region
  - S1: The inversion charge decreases from source to drain.
  - S2: The channel potential increases from source to drain Which of the following is correct?
  - a) Only S2 is true
  - b) Both S1 and S2 are false
  - c) Both S1 and S2 are true, but S2 is not a reason for S1
  - d) Both S1 and S2 are true, and S2 is a reason for S1:

### KEY: \_


1.c 2.b 3.d 4.d 5.c 6.a

7.d 8.b 9.b 10.d · 11.d 12.d

13.b 14.a 15.

### **MOS Transistors as Switches**

CHAPTER-4



nMOS transistor. Closed (conducting) when Gate =  $1 (V_{no})$ 


Open (non-conducting) when Gate = 0 (ground, 0V)




pMOS transistor: Closed (conducting) when Gate = 0 (ground, 0V)

Open (non-conducting) when  $Gate = 1 (V_{po})$ 

For nMOS switch, source is typically tied to ground and is used to pull-down signals:



For pMOS switch, source is typically tied to V<sub>DD</sub>, used to pull signals up:



Note: The MOS transistor is a symmetric device. This means that the drain and source terminals are interchangeable. For a conducting nMOS transistor, VDS > 0V; for the pMOS transistor,  $V_{DS} < 0V$  (or  $V_{SD} > 0V$ ).

## **Basic MOS Device Equations**



The nMOS device is a four terminal device: Gate, Drain, Source, Bulk.

Bulk (substrate) terminal is normally ignored at schematic level, usually tied to ground for the nMOS case. In analog applications, however, the bulk terminal may not be ignored.

Gate controls channel formation for conduction between Drain and Source. Drain at higher potential than Source — Source usually tied to GND to act as pull-down (nMOS).

Three regions of operations --- first-order (ideal) equations:

Cutoff region

$$I_D = 0A$$
  $V_{GS} \le V_{Tn}$  (nMOS threshold voltage)

Linear region

$$I_{D} = \Re \left( (V_{gs} - V_{re}) V_{re} - \frac{{V_{re}}^2}{2} \right)$$


$$0 < V_{DS} < V_{QS} - V_{TB}$$

Note:  $I_D$  is linear with respect to  $(V_{GS} - V_{TB})$  only when  $(V_{trs}^2/2)$  is \_\_\_\_\_ small.


Saturation region

$$I_{D} = \frac{\beta}{2} (V_{QS} - V_{Ts})^{2} \qquad 0 < V_{QS} - V_{Ts} < V_{DS}$$

### **Ideal Inverter**

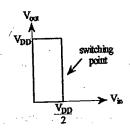

## Actual Inverter Characteristics, some definitions

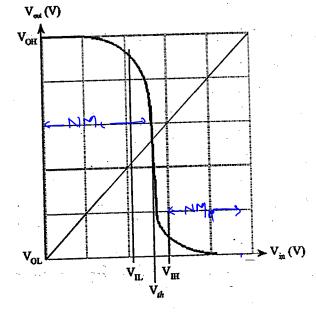


T Von

- V<sub>II</sub> represents the maximum logic 0 (LOW) input voltage that will guarantee a logic 1 (HIGH) at the output
- V<sub>III</sub> represents the minimum logic 1 (HKGH) input voltage that will guarantee a logic 0 (LOW) at the output

Note: (WIL) P for HM & & NM -

## **CMOS Inverter Regions of Operation**

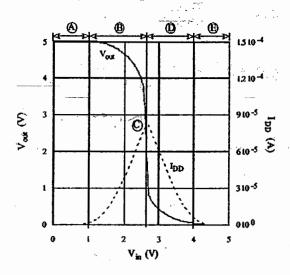

### Region A:

$$0 \le V_{in} < V_{Tn}$$
  $\Rightarrow$  pMOS nonsaturated (cutoff); nMOS cutoff


nMOS is cutoff because V<sub>in</sub> < V<sub>Ta</sub>

Why is the pMOS device in the linear region?

Linear region 
$$\equiv V_{SOp} < V_{SOp} - |V_{Tp}|$$
  
 $(5-5)V < (5-0)V - |-0.7|V$   
[for  $V_{DD} = 5V$  and  $V_{Tp} = -0.7V$ ]  
 $0V < 4.3V$ 

Note that the pMOS device can be in linear region even if  $I_{D_p} \cong 0A!$ 

## MOSFET Structure versus Bias

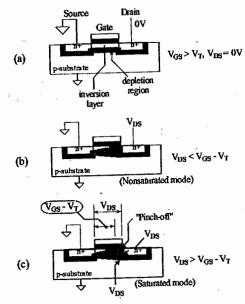

Cross-section (a): potential in channel same everywhere because  $V_{\rm GS} = V_{\rm GD}$ , channel "depth" same everywhere since  $V_{GS} > V_T$  and  $V_{GD} > V_T$ 

Cross-section (b): Depth of channel varies somewhat linearly with  $V_{\text{GS}}$  and  $V_{\text{DS}}.$ As V<sub>DS</sub> is increased, the drain-side of channel (just beneath the gate) becomes "pinched" because V<sub>Gi</sub> becomes less and less.

Cross-section (c): Here the current depends only on  $V_{GS}$  and not  $V_{DS}$  (if we neglect channel-length modulation) and the channel becomes completely pinched-off near the drain. With  $V_{DS} > V_{CS} - V_T$  but  $V_S = 0V_T$ then  $V_D > V_G - V_T$  and hence,  $V_T > V_{GD}$ , i.e.,  $V_{gato-to-drain}$  is less than the threshold voltage.

How does conduction occur after "pinch-off"? Electrons enter channel from source, then are swept across depletion region near drain by the positive drain voltage with respect to source (Vns).

## **MOSFET Threshold Voltage**

 $V_T = V_{T-MOS} + V_{FR}$ 

 $(V_{T-MOS})$  is positive for nMOS, negative for pMOS)

 $V_{\text{T-MOS}}$  — ideal threshold voltage for a MOS capacitor (the capacitor formed between the gate and substrate)

 $V_{\text{FB}}$  — Flatband voltage

 $V_{T-MOS} = 2\emptyset_b + \frac{Q_b}{C_{ox}}$ 

(Note: "Qb" sometimes referred to as "Qbo")

$$\emptyset_b = \frac{kT}{q} \ln \left( \frac{N_A}{n_i} \right) \Leftarrow \text{bulk Fermi potential}$$

 $C_{ox}$  = oxide capacitance, inversely proportional to oxide thickness  $\left(C_{ox} = \frac{e_{ox}}{t_{ox}}\right)$ 

 $Q_b = \sqrt{2e_{si} q \cdot N_A \cdot 2\emptyset_b}$ 

bulk charge term (total charge stored in depletion layer), p-substrate in this case

Bulk potential — potential difference between Fermi level in intrinsic semiconductor and Fermi level in doped semiconductor

Fermi level is the average energy level in a material. For intrinsic materials, it is halfway between the valence band and conduction band.

p-type  $\Rightarrow$  Fermi level closer to valence band

n-type ==> Fermi level closer to conduction band

Other Constants (see text for values):

k = Boltzmann's constant (eV/K, J/K)

q = Electronic charge (coulombs)

T = temperature (K)


N<sub>A</sub> = carrier density in doped semiconductor

 $n_i$  = intrinsic carrier concentration in Silicon

 $\epsilon_{si}$  = permittivity of Silicon =  $\epsilon_r \cdot \epsilon_{o}$ 

 $c_r = 11.7$  (relative Silicon permittivity)

 $\varepsilon_{\bullet}$  (permittivity of free space)

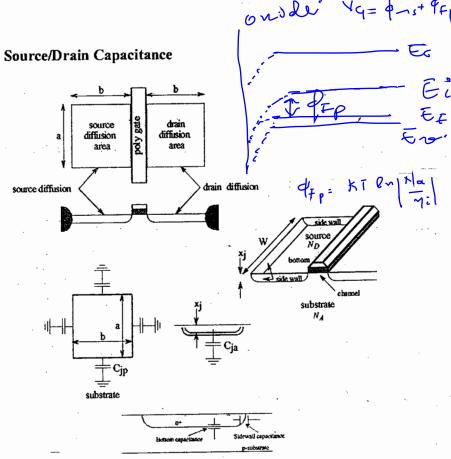

Two components:

 $C_{\text{bottom}} \Rightarrow \text{diffusion area to substrate}$ 

 $C_{sidewall} \Rightarrow diffusion depth \times peripheral area$ 

C<sub>in</sub> = junction capacitance per μm<sup>2</sup>


 $C_{ip}$  = periphery capacitance per  $\mu m$ 

 $C_{\text{diff}} = C_{\text{bottom}} + C_{\text{sw}}$ 

 $= C_{ia} \times area + C_{ip} \times perimeter$ 

 $= C_{ia} \times a \times b + C_{ip} \times (2a + 2b)$ 

## MOS Device Capacitance Estimation

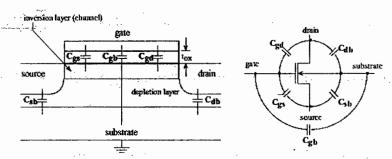

In cutoff region, gate-to-channel capacitance composed entirely of Cob where

$$C_{eb} = C_{ox}WL_{eff}$$

$$C_{ox} = \frac{e_o e_{SiO}}{t_{ox}}$$

where  $\varepsilon_0$  is free space permittivity and  $e_{so}$ , relative permittivity for SiO<sub>2</sub>

When channel is formed, depletion layers blocks Ceb-

In <u>linear region</u>,  $C_{gb}$  blocked by formation of channel and gate-to-channel capacitance split evenly between  $C_{gs}$  and  $C_{gd}$  where

$$C_{gs} = C_{gd} = \frac{1}{2} C_{ox} W L_{eff}$$

In <u>saturation</u>, channel is pinched off at drain, so  $C_{gi} \approx 0$ ,  $C_{gs} \approx \frac{2}{3}C_{ox}WL_{eff}$ 

Average channel capacitances of MOSFETs for different operation regions:

Region of operation	C <sub>pb</sub>	C <sub>ps</sub>	C <sub>pd</sub>
Cutoff	CoxWLeff	~0	~0
Linear	~0	(1/2)CoxWLeff	(1/2)CoxWLeff
Saturation	~0	(2/3)CoxWLeff	~0

$$C_g = C_{gb} + C_{gs} + C_{gd}$$

Typical diffusion capacitance values for a 1 µm n-well process:

	n-device (or wire)	p-device (or wire)
C.	$3 \times 10^{-4} \text{ pF/}\mu\text{m}^2$	$5 \times 10^4 \text{ pF/}\mu\text{m}^2$
Cip	$4 \times 10^4 \text{ pF/}\mu\text{m}$	$4 \times 10^4 \text{ pF/}\mu\text{m}$

The source/drain areas from p/n junctions with substrate or well. The junction voltage will affect the capacitance, both  $C_{j_0}$  and  $C_{j_0}$ 

General expression:

$$C_{j} = \frac{C_{j_{0}}}{\left(1 - \frac{V_{i}}{V_{b}}\right)^{m}}$$

where

V<sub>i</sub> = junction voltage, negative for reverse bias

Cio = zero bias capacitance

 $V_b = built-in junction potential (= 0.6V)$ 

m = grading coefficient (typical values between 0.3 and 0.5)

## **OBJECTIVE**

- 101. In integrated circuits, the design of electronic circuits is based on the approach of use of
  - (a) maximum number of resistors in the circuits
  - (b) large sized capacitor

100

- (c) minimum chip area irrespective of the type of components in the design
- (d) use of only bipolar transistors
- 02. The basic function of buried n<sup>+</sup> layer in an n-p-n transistor fabricated in IC is
  - (a) Reduce the magnitude of the base spreading resistance
  - (b) Reduce the collector series resistance
  - (c) Reduce the base width of the transistor
  - (d) Increase the gain of the transistor
- 03. The p-type substrate in a conventional p-n junction isolated integrated circuit should be connected to
  - (a) no where i.e. left floating
  - (b) a d.c. ground potential
  - (c) the most positive potential available in the circuit
  - (d) the most negative potential available in the circuit
- 04. For a MOS capacitor fabricated on a ptype semiconductor, strong inversion occurs when
  - (a) Surface potential is equal to fermi potential.
  - (b) Surface potential is negative fermi potential.
  - (c) Surface potential is positive and equal to twice the fermi potential
  - (d) Surface potential is negative and equal to fermi potential in magnitude.

- 05. Almost all resistors are made in a monolithic integrated circuit
  - (a) during the emitter diffusion
  - (b) while growing the epitaxial layer
  - (c) during the base diffusion
  - (d) during the collector diffusion
- 06. An I.C. operational amplifier has a typical open loop gain-of 1200 and the common mode rejection of 55 dB. What is the common mode rejection of Ratio (CMRR)? (a) 550 (b) 560 (c) 570 (d) 580
- 07. Match List-I (Isolation Technique in IC) with List-II (Related Characteristic) and select the correct answer using the code given below the lists:

#### List-

- A. Reverse bias p-n junction isolation
- B. Resistive isolation using the bulk resistivity of the layer
- C. Native oxide isolation
- D. Oxide (other than native)

#### List-II

- 1. Requires large area of the water, thereby increasing the IC size
- 2. Best choice for silicon ICs with low parasitic capacitance
- 3. Suitable for ICs of III-V semiconductors
- 4. Introduces bias-dependent parasitic capacitance

Code:	Α	В	C	D
(a)	4	1	2	3
(b)	2	3	4	1
(c)	4	3	2	1
(d)	2	1	4	3
KEYS:				

01, c-02,b 03, d 04, d 05, a 06. b 07. a

## **PREVIOUS IES QUESTIONS:**

- 01. In an integrated circuit, the SiO<sub>2</sub> layer provides
  - (a) electrical connection to external circuit
  - (b) physical strength.
  - (c) isolation

**ACE Academy** 

- (d) conducting path
- 02. In the fabrication of a buried layer n-p-n transistor, the processes involved are
  - 1. diffusion
  - 2. oxidation -
  - 3. epitaxy
  - 4. lithography The correct sequence in which these processes are to be carried out, is
  - (a) 2, 4, 3, 1
- (b) 4, 2, 1, 3
- (c) 2, 4, 1, 3 ·
- (d) 4, 2, 3, 1
- 03. In switching diode fabrication, dopant is introduced into silicon which introduces additional trap levels in the material thereby reducing the mean life time of carriers. This dopant is

  - (a) Aluminium (b) Platinum
  - (c) Gold
- (d) Copper-
- 04. The scaling factor of a MOS device is  $\alpha$ . Using constant voltage scaling model, - the gate area of the device will be scaled
  - as (a)  $1/\alpha$
- (b)  $1/\alpha^2$
- (c)  $1/\alpha^3$
- (d)  $1/\alpha^4$
- 05. A CMOS amplifier when compared to an N-channel MOSFET, has advantage of
  - (a) Higher cut-off frequency
  - (b) Higher voltage gain
  - (c) Higher current gain
  - (d) Lower current drain from the power supply, therby less dissipation.
- 05. In fabricating silicon BJT in ICs by the epitaxial process, the number of diffusions used is usually
  - (a) 2 (b) 3 (c) 4 (d) 6

- 07. In the fabrication of n-p-n transistor in an IC, the buried layer on the p-type substrate is
  - (a) p<sup>+</sup> doped
  - (b) n<sup>+</sup> doped
  - (c) Used to reduce the parasitic capacitance
  - (d) Located in the emitter region.
- 08. Which one of the following statements is correct? In the context of IC fabrication, metallization means
  - (a) connecting metallic wires
  - (b) formation of interconnecting conduction pattern and bonding pads
  - (c) doping SiO<sub>2</sub> layer
  - (d) covering with a metallic cap
- 09. Which one of the following statements is correct? For an MOS capacitor fabricated on a p- type semiconductor, strong inversion occurs when surface potential is
  - (a) equal to Fermi potential
  - (b) zero
  - (e) negative and equal to Fermi potential in magnitude
  - (d) positive and equal to Fermi potential in magnitude
- 10. Diffusion of impurities in a semiconductor is carried out in a furnace through which a steady stream of impurity atoms is passed during the entire diffusion process. What would be the type of profile of the impurity atom inside the semiconductor?
  - (a) Linear
  - (b) Gaussian
  - (c) Complementary error function
  - (d) Exponential

11. Match List-I (Isolation Technique in IC) with List-II (Related characteristic) and select the correct answer using the codes given below the lists:

### List-I

- A. Reverse bias p-n junction isolation
- B. Resistive isolation using the bulk resistivity of the layer
- C. Native oxide isolation
- D. Oxide(other than native isolation)

### List-II

- 1. Requires large area of the wafer, thereby increasing the IC size
- 2. Best choice for silicon ICs with low parasitic capacitance
- 3. Suitable for IC of III-V semiconductors
- 4. Introduces bias-dependent parasitic capacitance

### Codes:

	A	В	C	Ð
(a)	4	1	2	3
(b)	2 .	3	4	1
<b>(c)</b>	4	3	2	1
(d)	2	1	4	3

- 12. Consider the following statements Related to a CMOS (Complementary metal oxide semiconductor) inverter:
  - 1. It combines an n channel and a p-channel MOS transistor
  - 2. For binary 1 input, both transistors are OFF
  - 3. For binary 0 input, both transistors are ON
  - 4. Whatever is the state of input, one transistor is ON while the other is OFF. Which of the statements given above are correct?
    - (a) 1, 2, 3 and 4
    - (b) 1 and 4
    - (c) 1, 2 and 3
    - (d) 3 and 4.

- 13. The basic function buried n' layer in an n-p-n transistor in IC is to
  - (a) Reduce the magnitude of the base spreading resistance

**ACE Academy** 

- (b) Reduce the collector series resistance
- (c) Reduce the base width of the transistor
- (d) Increase the gain of the transistor
- 14. Which one of the statements concerning IC fabrication is not correct?
  - (a) A typical wafer of doped Si may be 400 µm thick, of diameter 5 - 15 cm. The purity of the wafer does not matter and can be even polycrystalline in nature.
  - (b) Resistors are obtained utilizing the bulk resistivity of one of the regions; for example, the DS channel of MOSFET can serve as a resistor.
  - (c) Semiconductors lack magnetic properties, so they cannot exhibit inductance. However, the inductors can be realized by combinationof active and passive components.
  - (d) in a reverse biased p -n junction, the positive and negative ions exist on opposite sides of the p - n junction; because of that p-n junction behaves like a parallel plate capacitor

15. Assertion (A): The resistors and capacitors fabricated using IC technology have poor tolerances with respect to their absolute values.

> Reason (R): As all the components of the IC are fabricated simultaneously, their ratio of tolerances is very low.

- (a) Both A and R are true and R is the correct explanation of A
- (b) Both A and R are true but R is NOT the correct explanation of A
- (c) A is true but R is false
- (d) A is false but R is true
- 16. Which of the following capacitors are made use of widely for a capacitance application in monolithic ICs.
  - 1. MOS capacitor
  - 2. Collector Substrate capacitor
  - 3. Collector Base capacitor
  - 4. Base Emitter capacitor

Select the correct answer using the code given below.

- (a) 1 and 2 only (b) 2 and 3 only
- (c) 3 and 4 only (d) 1 and 4 only
- 17. why is silicon dioxide(SiO<sub>2</sub>) layer used in ICs?
  - (a) To protect the surface of the chip from external contaminants and to allow for selective formation of the n and p regions by diffusion
  - (b) Because it facilitates the ...penetration of the desired impurity by diffusion
  - (c) To control the concentration of the diffused impurities
  - (d) Because of its high heat conduction

- 18. Why is the term 'plainer technology' for fabrication of devices in ICs used?
  - (a) The variety of manufacturing processes by which devices are fabricated, takes place through a single plane
  - (b) The aluminum contacts to the collector, base and emitter regions of the transistors in the ICs are laid in the same plane
  - (c) The collector, base and emitter regions of the transistors in ICs are laid in the same plane
  - (d) The device looks like a thin plane wafer

### KEY:

Basics of IC bipolar, MOS and CMOS types


1.c	2.d	3.c	4.b	5.d	6.b
7.b	8.b	9.d	10.c	11.a	12.b
13 d	14 a	15 a	16 a	17 a	18 a

## **PREVIOUS GATE QUESTIONS:**

1. Given figure is the voltage transfer characteristic of GATE - 2004

KEY: 2.a

3.b



- (a) an NMOS inverter with enhancement mode transistor as
- (b) an NMOS inverter with depletion mode transistor as load.
- (c) a CMOS inverter
- (d) a BIT inverter
- 2. Which of the following is true?
  - (a) A silicon wafer heavily doped with boron is a p<sup>+</sup> substrate.
  - (b) A silicon wafer lightly doped with boron is a p<sup>+</sup> substrate.
  - (c) A silicon wafer heavily doped with arsenic is a p<sup>+</sup> substrate.
  - (d) A silicon wafer lightly doped with arsenic is a p<sup>+</sup> substrate.
- 3. If P is passivation, O is n-well implant, R is metallization and S is source/drain diffusion, then the order in which they are carried out-in a standard n-well CMOS fabrication process, is

**GATE - 2003** 

(a) 
$$P - Q - R - S$$
 (b)  $Q - S - R - P$ 

$$-(c)-R-P-S-Q$$
 (d)  $S-R-Q-p$ 

### CHAPTER - 5

### **BASICS OF OPTO ELECTRONICS**

### **FUNDAMENTALS OF LIGHT**

According to the Quantum Theory, light consists of discrete packets of energy called photons. The energy contained in a photon depends on the frequency of the light and is given by the relation E=hf where h is Plank's constant (6.625 x 10<sup>-34</sup> Joule-second). In this equation, energy E is in Joules and frequency f is in hertz (Hz).

As seen, photon energy is directly proportional to frequency: higher the frequency, greater the energy. Now, velocity of light is given by  $c=f\lambda$  where c is the velocity of the light  $(3 \times 10^8 \text{ m/s})$  and  $\lambda$  is the wavelength of light in meters. The wavelength of light determines its colour in the visible range and whether it is ultraviolet or infrared outside the visible

Now,  $E = hf = hc/\lambda$  or  $\lambda = hc/E$  meters  $\lambda = 6.625 \times 10^{-34} \times 3 \times 10^{8}/E = 19.875 \times 10^{-26}/E$ --E in joules If E is in electron-volt (eV), then since 1 eV::1.6 x 10<sup>19</sup>/E  $\lambda = 19.875 \times 10^{-26}/E \times 1.6 \times 10^{-19} = 12.42 \times 10^{-7}/E \text{ meter}$ --E in eV or  $\lambda = 1.242 \, \mu \text{m}$ 

In a forward-biased p-n junction, electrons and holes both cross the junction. In the process, some electrons and holes recombine with the result that electrons lose energy. The amount of energy lost is equal to the difference in energy between the conduction and valence bands, this being known as the semiconductor energy band gap E<sub>0</sub>. The value of E<sub>0</sub> for silicon is 1.1eV, for GaAs is 1.43 eV and for INAs is 0.36 eV.

For example, the wavelength of light emitted by silicon p-n junction is

$$\lambda = 1.242/E_p = 1.242/1.1 = 1.13 \mu m.$$

### **PHOTODIODES**

Photodiode is a special type of photo-detector. The general principle of all semiconductor-based photo detectors is the electron-excitation from the valence band to the conduction band by photons.

Suppose an optical photon of frequency  $\nu$  is incident on a semiconductor, such that its energy is greater than the band gap of the semiconductor (i.e.,  $h\nu > E_{\alpha}$ ).

This photon will excite an electron from the valence band to the conduction band leaving a vacancy or hole in the valence band. Thus, an electron-hole pair is generated. These are additional charge carriers termed as photo generated charge carriers which obviously increase the conductivity of the semiconductor.

Larger the number of incident photons (incident intensity of light), larger-would be the change in the conductivity of the semiconductor, one can measure the intensity of the optical signal. Such photo detectors are known as photoconductive cells. However, more commonly used photo detecting devices are "photodiodes".

You already know that at the p-n junction there exists a junction field which, at equilibrium, does not permit the flow of charge carriers across the junction. The current can only flow with applied bias.

The diodes are generally reverse biased when used as photodiode. Suppose such a p-n diode is illuminated with light photons having energy hv > E2. The electron and hole pairs generated in the depletion layer (or near the junction) will be separated by the junction field and made to flow across the junction.

A measurement of the change in the reverse saturation current on illumination can give the values of the light intensity.

The dark current refers to the current that flows when no light is incident. By changing the illumination level, reverse current can be changed. In this way, reverse resistance of the diode can be changed by a factor of nearly 20.

A photodiode can turn its current ON and OFF in nanoseconds. Hence, it is one of the faster photo detectors. It is used where it is required to switch light ON and OFF at a maximum rate.

### APPLICATIONS:

- 1. Detection, both visible and invisible;
- 2. Demodulation:
- 3. Switching;
- 4. Logic circuit that require stability and high speed:
- 5. Character recognition;
- 6. Optical communication equipment;
- 7. Encoders etc.

### PIN Photo detector:

When a light intensity of wavelength  $\lambda$  is incident on the photo diode, if energy  $E_{\lambda} > E_{G}$  of PIN Diode then a output current ' $I_{p}$ 'in response to the incident light is produced.

Quantum efficiency of PIN diode is given by  $\eta = \frac{\text{No of electron hole pairs generated}}{\text{No of photons incidented}}$ 

$$\eta = \frac{(I_p/q)}{(P_0/hf)}$$

Responsivity  $R = I_p / P_0 = (\eta q) / (hf)$  A / watt  $\frac{\gamma}{\lambda}$ 

Maximum wavelength  $\lambda_{\text{max}}(\mu \text{m}) = \frac{1.24}{E_g(\text{ev})} = \frac{\lambda_{\text{max}}^2 (A^0)}{\lambda_{\text{max}}^2 (A^0)}$ 

f =frequency of incident photon

 $P_0$  = incident optical power

I<sub>p</sub> = Photocurrent generated in PIN diode

Disadvantage of photo diode is low output current.

### Avalanche Photo Diode:

Avalanche photo diode is also a photo detector. A photo diode will produce less amount of current, which is not sufficient to drive some circuits. An Avalanche photodiode gives more output current when compared to a photo diode. The output current in an Avalanche photo diode is equal to M times the output current of a photo diode that is produced due to "impact ionization".

### LIGHT EMITTING DIODE (LED)

ACE Academy ·

These are forward-biased p-n junctions which emit spontaneous radiation. You know that radiation is emitted whenever an exited electron falls from higher excited energy state to a lower energy state.

You know that there are two distinct energy bands in a semiconductor, the conduction (higher energy) and the valence (lower energy) bands. There may also be energy bands due to donor impurities ( $E_D$ ) near the conduction band or acceptor impurities ( $E_A$ ) near the valence band. When electron falls from the higher to lower energy level containing holes, the energy in the form of light radiation is released. Generally, radiations transitions occur (sometimes non-radiative transition may also occur).

The energy of radiation emitted by LED is equal to or less than the band gap of the semiconductor used.

The semiconductor used in LED is chosen according to the required wavelength of cmitted radiation. Visible LED's are available for red, green and orange. The visible wavelength is from 0.45  $\mu$ m to 0.7  $\mu$ m (Energy 2.8 eV to 1.8 eV). Therefore, the least band gap of the semiconductor for use in the visible region is 1.8 eV. Phosphorous doped (GaAs P) and GaP are the preferred materials. Obviously, Si (Eg  $\sim$  1.1eV) or Gc(Eg  $\sim$  0.7eV) are not suitable, since Eg is less than the minimum required Eg of  $\sim$  1.8eV.

GaAs (with  $E_g \sim 1.5$  eV) alone or in conjunction with aluminum doped GaAs (AlGaAs) are commonly used for infrared LED's.

The color of the emitted light depends on the type of material used is given below:

- 1. GaAS infrared radiation (invisible)
- 2. GaP red or green light.
- 3. GaAsP red or yellow(amber) light.

LEDs emit no light when reverse-biased. In fact, operating LEDs in reverse direction will quickly destroy them.

A metal (gold) film is applied to the bottom of the substrate for reflecting as much light as possible to the surface of the device and also to provide cathode connection. LEDs are always encased in order to protect their delicate wires.

### Applications:

To choose emitting diodes for a particular application, one or more of the following points have to be considered: wavelength of light emitted, input power required, output power, efficiency, turn-on and turn-off time, mounting arrangement, light intensity and brightness etc.

Since LEDs operate a voltage levels from 1.5 V to 3.3 V, they are highly compatible with solid-state circuitry.

### Their uses include the following:

- 1. LEDs are used in burglar-alarm systems
- 2. for solid-state video displays which are rapidly replacing cathode-ray tubes(CRT);
- 3. In image sensing circuits used for 'picturephone';

- in the field of optical communication where high-radiance GaAs diodes are matched into the silica-fiber optical cable;
- in arrays of different types for displaying alphanumeric (Letters and numbers) or supplying input power to lasers or for entering information into optical computer memories;
- 6. for numeric display in hand-held or pocket calculators.

### LASER DIODE

The word LASER is an aeronym and stands for light amplification by stimulated emission and radiation, which sums up the operation of an important optical and electronic device. The laser is a source of highly directional, monochromatic, and coherent light.

It is an interesting variant of LED in which its special construction helps to produce stimulated radiation as in laser. In conventional solid state or gas laser, discrete atomic energy levels are involved while in semiconductor lasers, the transitions are associated with the energy bands of the semiconductor.

The primary requirement is the population inversion, i.e., the higher energy level is more populated than the lower energy level. The situation for the forward biased p-n junction of LED is similar. Due to the dc bias, the electrons go to the higher energy level (i.e., conduction band).

When a photon of energy  $h\nu = E_g$  impinges the device, while it is still in the excited state due to the applied bias, the system is immediately stimulated to make its transition to the valence band and gives an additional photon of energy  $h\nu$  which is in phase with the incident photon.

When a forward bias is applied, a current flows. Initially at low current, there is "spontaneous emission" (as in LED) in all the directions. Further, as the bias is increased, a threshold current is reached at which the "stimulated emission" occurs. Diode lasers are low power lasers used as optical light source in optical communication.

### Unique Characteristics of Laser Light:

The beam of laser light produced by the diode has the following unique characteristics:

- 1. it is coherent i.e. there is no path difference between the waves comprising the beam.
- 2. it is monochromatic i.e. it consists of one wavelength and hence one color only;
- 3. it is collimated i.e. emitted light waves travel parallel to each other.

Laser diodes have a threshold level of current above which the laser action occurs but below which the laser diode behaves like a LED emitting coherent light. Incidentally, a filter or lens is necessary to view the laser beam.

### **OBJECTIVE - 1**

01. When a p-n junction is formed, diffusion current causes

**ACE Academy** 

- a) mixing of current carriers
- b) forward bias
- c) reverse bias
- d) barrier potential
- 02. The leakage current of a p-n diode is caused by
  - a) heat energy
- b) chemical energy
- c) barrier potential d) majority carriers
- 03. Electronic components which are made of a semiconductor material are often called ....... devices
  - a) solid -- state
- b) silicon
- c) germanium
- d) intrinsic
- 04. The area within a semiconductor diode where no mobile current carriers exist when it is formed is called ... region.
  - a) depletion
- b) saturation
- c) potential barrier
  - d) space charge
- 05. The depletion region of a semiconductor diode is due to
  - a) reverse biasing
  - b) forward biasing
  - c) crystal\_doping
  - d) migration of mobile charge carriers
- 06. The width of depletion layer of a p-n Junction
  - a) decreases with light doping
  - b) increases with heavy doping
  - c) is independent of applied voltage
  - d) is increased under reverse bias
- 07. LEDs are commonly fabricated from gallium compounds like gallium arsenide and gallium phosphide because they
  - a) are cheap
  - b) are easily available
  - c) emit more heat
  - d) emit more light

- 08. A LED is basically a ..... p-n junction
  - a) forward biased
  - b) reverse biased
  - c) lightly doped
  - d) heavily doped
- As compared to a LED display, the distinct advantage of an LCD display is that it requires
  - a) no illumination
  - b) extremely low power
  - c) no forward bias
  - d) a solid crystal
- 10. Before illuminating a p-n junction photodiode, it has to be
  - a) reverse biased
  - b) forward · biased
  - c) switched ON
  - d) switched OFF
- 11. Λ phototransistor excels a photodiode in the matter of
  - a) faster switching
  - b) greater sensitivity
  - c) higher current capacity
  - d) both (a) and (b)
  - e) both (b) and (c)
- 12. The unique characteristics of LASER light are that it is
  - a) coherent
  - b) monochromatic
  - c) collimated
  - d) all of the above
- Silicon is preferred for manufacturing Zénér diodes because it
  - a) is relatively cheap
  - b) needs lower doping level
  - c) has higher temperature and current capacity
  - d) has lower break -- down voltage

- 14. A PIN diode is frequently used as a
  - a) peak clipper

110

- b) voltage regulator
- c) harmonic generator
- d) switching diode for frequencies upto GHz range
- 15. A diode that has no depletion layers and operates with hot carriers is called ..... Diode
  - a) Schottky
- b) Gunn
- c) step recovery d) PIN
- 16. The junction capacitance of a p-n junction depends on
  - a) Doping concentration only
  - b) Applied voltage only
  - c) Both doping concentration and applied voltage
  - d) Barrier potential only
- 17. When a junction diode is used in switching applications, the forward recovery time is:
  - a) Of the order of the reverse recovery
  - b) Negligible in comparison to reverse recovery time
  - c) Greater than the reverse recovery time
  - d) Equal to the mean carrier life time τ for the excess minority carriers
- 18. In a degenerate semiconductor, the majority carriers are controlled by
  - a) Fermi dirac statistics
  - b) Maxwell -- Boltzmann statistics --
  - c) Bose Einstein (B E) statistics
- -d) Pauli's exclusion principle
- 19. In a forward biased photo diode, an increase in incident light intensity causes the diode-current to
  - a) Increases
  - b) Remains constant
  - c) Decreases
  - d) Remaining constant, the voltage drop across the diode increases

- 20. For a junction diode, which one of the following statement is false
  - a) the depletion capacitance increases with increase in the reverse bias
  - b) the depletion capacitance decreases with increase in the reverse bias
  - c) the diffusion capacitance increases with increase in the forward bias
  - d) the diffusion capacitance is much higher than the depletion capacitance when it is forward biased.
- 21. In an unbiased p-n junction, the junction current at equilibrium is
  - a) due to diffusion of minority carriers
  - b) due to diffusion of majority carriers
  - c) zero, because equal but opposite carriers are crossing the junction
  - d) zero, because no charges are crossing the junction
- 22. Semiconductor diode time constant is equal to
  - a) the value of majority carrier life time
  - b) the life time of minority carrier
  - c) the diffusion capacitance time constant
  - d) zero
- 23. The reverse current of a silicon diode
  - a) Highly bias voltage sensitive
  - b) Highly temperature sensitive
  - c) Both bias voltage and temperature sensitive
  - d) Independent of bias voltage and temperature

24. A combination of two diodes connected in parallel when compared to a single diode can withstand

ACE Academy

- a) Twice the value of peak inverse voltage
- b) Twice the value of maximum forward current
- c) A larger leakage current
- d) Twice the value of cut-in voltage
- 25. When a p-type semi conductor material is bonded to an n-type semi conductor material and terminals are added, the resulting structure does not have the property that
  - a) Ideally, the forward bias resistance is zero
  - b) As temperature is increased above room temperature, the material resistance decreases because the doping material charges are " freed "
  - c) Both holes and electrons contribute to the current flow
  - d) The resistance increases with increasing doping
- 26. Depletion capacitance in a diode depends on
  - 1 Applied junction voltage
  - 2. Junction built-in potential
  - 3 Current through junction
  - 4. Doping profile across the junction Select the correct answer using codes given below:
  - a) 1 and 2
- b) 1 and 3
- c) 1,2 and 4
- d) 2,3 and 4

- 27. The diffusion capacitance of a p-n iunction diode
  - a) Increases exponentially with forward bias voltage
  - b) Decreases exponentially with forward bias voltage
  - c) Decreases linearly with forward bias
  - d) Increases linearly with forward bias voltage
- 28. A zener diode works on the principle
  - a) tunneling of charge carriers across the junction
  - b) thermionic emission
  - c) diffusion of charge carriers across the junction
  - d) hopping of charge carriers across the junction
- 29. The sensitivity of a photo diode depends upon
  - a) light intensity and depletion region width
  - b) depletion region width and excess carrier life time
  - c) excess carrier life time and forward bias current
  - d) forward bias current and light intensity
- 30. Avalanche photo diodes are preferred over PIN diodes in optical communication systems because of
  - a) speed of operation
  - b) higher sensitivity
  - c) larger bandwidth
  - d) larger power handling capacity

### ANSWERS

(1)d (2)a (3)a (4)a (5)d (6)d (7) d (8) a (9) b (10)a (11) c (12)d 13)c (14) d (15)b (16)c (17)b (18)a (19)d (20)a (21) c (22) b (23) b (24) c (25) d (26) c (27) (28) c (29) a (30) d

4.a

(a) Low cost

112

- (b) Long wavelength emission
- (c) Low threshold current
- (d) Non-linear operation
- 02. Given that the band gap of cadmium sulphide is 2 5 eV, the maximum photon wavelength for electron hole pair generation will be
  - (a)  $5400 \mu m$
- (b)  $540 \mu m$
- (c)  $5400A^0$
- (d)  $540A^0$

03. Avalanche photodiodes are preferred over PIN diodes in optical communication system because of

- (a) Speed of operation
- (b) higher sensitivity
- (c) larger bandwidth
- (d) larger powe handling capacity
- 04.. In forward biased photo diode with increase in incident light intensity, the diode current
  - (a) increase
  - (b) remain constant
  - (c) decrease
  - (d) remaining constant, the voltage drop across the diode increases
- 05. Photons of energy 1.53X10<sup>-19</sup> Joules are incident on a photodiode which has a responsivity of 0.65 A/W. If the optical power level is 10μW, what is the photo current generated?
  - (a) 64µA
- (b) 1.5μA
- (c) 2.1µA
- (d) 6.5 µA

KEYS:

01. c 02. c 03. d 04. a 05. d

- PREVIOUS IES QUESTIONS:
- Almost all resistors are made in a monolithic integrated circuit.
  - (a) during the emitter diffusion.
  - (b) while growing the epitaxial layer
  - (c) during the base diffusion
  - (d) during the collector diffusion.
- 02. Consider the following statements:
  Impurity diffusion is need in semiconductor to control the conductivity. The nature of the impurity profile should be such that the
  - impurity concentration decreases with diffusion depth.
  - profile results in an internal electric field.
  - impurity concentration is homogeneous with no internal electric field.

Which of these statements are correct?

- (a) 1, 2 and 3
- (c) 2 and 3
- (b) I and 3 (d) I and 2

in

- 03. Which one of the following statements is correct in respect of the use of Direct Gap (DG) and Indirect Gap
  - (IG) semiconductors fabrication of Light Emitting diode?
  - (a) Both DG and IG semiconductors are suitable
  - (b) Only DG semiconductor is suitable
  - (c) DG semiconductor is suitable and some IG materials having proper dopants are also used
  - (d) only IG semiconductors are suitable

04. Consider the following statements in	ļ
relation to a semiconductor laser	
diode:	

- The material should be a direct gap semiconductor
- Some form of wavelength selective structure or resonator must be present.
- 3. Light output increases linearly with bias current.
- Light output increase significantly when bias current exceeds a threshold value

Which of the statements given above are correct?

- a) 1,2 and 4
- b) 1 and 3
- c) 2 and 4
- d) 2 and 3
- 05. Photons of energy  $1.53 \times 10^{-19}$  Joule are incident on a photodiode which has a responsivity of 0.65 A/W. If the optical power level is 10  $\mu$ W, what is the photocurrent generated?
  - (a) 64 μA
- (b) 1.5 μA
- (c)  $2.1 \mu A$
- (d) 6.5µA
- 06. Consider the following statements used in respect of the phenomenon Population Inversion:
  - It means population in a higher state is higher than that in a lower state
  - 2. It is observed under thermal equilibrium
  - 3. It increases the rate of spontaneous emission
  - 4. It increases the rate of stimulated emission
    Which of the statements given above are correct?
    - (a) 1, 2, 3 and 4 (b) Only 2 and 3
    - (c) Only 1 and 3 (d) Only 1 and 4

KEY: 1.c 2.d 3.b

6.d

## PREVIOUS GATE QUESTIONS:

1. Match items in Group 1 with items in Group 2, most suitably.

### Group 1

P. LED.

5.d

- Q. Avalanche Photodiode
- R. Tunnel diode
- S. LASER

### Group 2

- 1. Heavy doping
- 2. Coherent radiation
- 3. Spontaneous emission
- Current gain

### GATE - 2003

- (a) P 1; Q 2; R 4; S 3
- (b) P-2; Q-3; R-1; S-4
- (c) P-3; O-4; R-1; S-2
- (d) P-2; Q-1; R-4; S-3
- A particular green LED cmits light of wavelength 5490 A. The energy\_ handgap of the semiconductor material used there is (Planck's constant = 6.626 x 10<sup>-34</sup> J-s)

## GATE - 2003

- (a) 2.26 eV (b) 1.98 eV
- (c) 1.17 eV
- (d) 0.74 eV
- 3. The longest wavelength that can be absorbed by silicon, which has the bandgap of 1.12 eV, is 1.1 µm. If the longest wavelength that can be absorbed by another material is 0.87 µm, then the bandgap of this material is GATE 2004
  - (a) 1.416 eV
- (b) 0.886 eV (d) 0.706 eV
- (c) 0.854 eV (d) 0

- 4. Find the correct match between Group 1 and Group 2 GATE - 2006
  - Group 1
  - E. Varactor diode
  - F. PIN diode
  - G. Zener diode
  - H. Schottky diode

### Group 2

- 1. Voltage reference
- 2. High-frequency switch
- 3. Tuned circuits
- 4. Current controlled attenuator
- (a) E-4, F-2, G-1, H-3
- (b) E-2, F-4, G-1, H-3
- (c) E-3, F-4, G-1, H-2
- (d) E-1, F-3, G-2, H-4
- 5. Group I lists four types of p-n junction diodes. Match each device in Group I with one of the options in Group II to indicate the bias condition of that device in its normal mode of operation.

### **GATE - 2007**

### Group I

- P. Zener Diode
- O. Solar cell
- R. LASER diode
- S. Avalanche Photodiode

### Group II

- 1. Forward bias
- 2. Reverse bias
- (a) P-1, Q-2, R-1, S-2
- (b) P-2, Q-1, R-1, S-2
- (c) P-2, Q-2, R-2, S-1
- (d) P-2, Q-1, R-2, S-2

6. Group I lists four different semiconductor devices. Match each device in Group 1 with its characteristic property in Group II. GATE - 2007.

### Group - I

- P. BIT
- Q. MOS capacitor
- R. LASER diode
- S. JFET

### Group - II

- 1. Population inversion
- 2. Pinch-off voltage
- 3. early effect
- 4. Flat-band voltage
- (a) P-3, Q-1, R-4, S-2
- (b) P-1, Q-4 R-3, S-2
- (c) P-3, Q-4, R-1, S-2
- (d) P-3, Q-2, R-1, S-4

## Key

1.c 2.a 3.a

5.b 6.c

### SELF ASSESMENT QUESTIONS

### **TOPIC 1: SEMI CONDUCTORS**

- 1. N type silicon is obtained by doping silicon with
  - (A) germanium
- (B) aluminum
- (C) boron
- (D) phosphorous
- 2. The intrinsic carrier concentration of silicon sample at  $300^{\circ}$ K is  $1.5 \times 10^{16}$  /m<sup>3</sup>. If after doping the number of majority carriers is  $5 \times 10^{20}$ /m<sup>3</sup>, the minority carrier density is (C)  $5 \times 10^{20} / \text{m}^3$  (D)  $3 \times 10^{-5} / \text{m}^3$ 
  - (A)  $4.5 \times 10^{11} / \text{m}^3$
- (B)  $3.33 \times 10^4 / \text{m}^3$

- 3. The band gap of silicon at 300°K is
  - (A) 1.36 ev
- (B) 1.10 ev
- (C) 0.80 ev
- (D) 0.67 ev
- 4. An n type silicon bar has L = 0.1cm, A =  $100\mu m^2$ ,  $N_D = 5 \times 10^{20} \text{ m}^{-3}$ ,  $\mu_n = 0.13 \text{ m}^2/\text{v}$  sec, T = 300°K. Find R.
  - (A)  $10^6 \Omega$
- (B)  $10^4 \Omega$
- (C)  $10^{-1} \Omega$
- (D)  $10^{-4} \Omega$
- 5. The Resistivity of a uniformly doped n type silicon sample is  $0.5 \Omega$  cm. Given  $\mu_n = 1250$  $\text{cm}^2/\text{v}$  sec,  $q = 1.6 \times 10^{-19}$ C. Find donor impurity concentration in the sample
  - $(A) 2 = 10^{16} / \text{cm}^3$
- $(B)1 \times 10^{16} / cm^3$
- (C)  $2.5 \times 10^{15} / \text{cm}^3$  (D)  $5 \times 10^{15} / \text{cm}^3$
- 6. The concentration of minority carriers in an extrinsic semiconductor under equilibrium is
  - (a) directly proportional to the doping concentration
  - (b) inversely proportional to the doping concentration
  - (c) directly proportional to the intrinsic concentration
  - (d) inversely proportional to the intrinsic concentration
- 7. A heavily doped n-type semiconductor has the following data:

Hole-electron mobility ratio : 0.4

Doping concentration

 $: 4.2 \times 10^8 \text{ atoms/m}^3$ 

Intrinsic concentration

:  $1.5 \times 10^4 \text{ atoms/m}^3$ 

The ratio of conductance of the n-type semiconductor to that of the intrinsic semiconductor of same material and at the same temperature is given by

(a) 0.00005

(b) 2,000

(c) 10,000

(d) 20,000

- 8. The conductivity of a semi conductor crystal due to any current carrier is NOT proportional to
  - (A) mobility of the carrier
- (B) effective densities of states

(C) electronic charge

- (D) surface states in semiconductor
- 9. A silicon sample A is doped with 10<sup>18</sup> atoms/cm<sup>3</sup> of Boron. Another sample B of identical dimensions is doped with 10<sup>18</sup> atoms/cm<sup>3</sup> of phosphorous. The ratio of electron to hole mobility is 3. the ratio of conductivity of sample A to B is
- (A) 3

- (B) 1/3
- (C) 2/3
- (D) 3/2
- 10. For a n type semiconductors with  $n = N_D$  and  $p = n_i^2/N_D$ . The hole concentration will fall below the intrinsic value because some of the holes
  - (A) drop back to acceptor impurity states
- (B) drop to donor impurity states

(C) virtually leave the crystal

(D) recombine with electrons

116 **Electronic Devices** ACE Academy 11. Match List I with List II and select the correct answer using the codes given below the lists. List I List II W. Drift current 1. Law of conservation of charge X. Einstein's equation 2. Electric field Y. Diffusion current 3. thermal voltage Z. Continuity equation 4. Concentration gradient (A) W X Y Z(B) W X Y Z (C) W X Y Z4 3 2 1 4 1 2 3 2 3 4 1 2 1 4 3 12. If an electric field is applied to an n - type semi conductor bar. The net current is 1. Due to both electrons & holes with electrons as majority carriers 2. The sum of electron & hole currents 3. The difference between electron and hole current Which of the above statements (s) is true (A) l alone (B) 1 & 2 (C) 2 alone (D) 3 alone 13. Drift current in a semi conductor is proportional to (A) concentration gradient of charge carriers (B) concentration of charge carriers (C) Inverse of cross sectional area of specimen (D) none 14. Which one of the following pairs of semi conductors and current carriers is correctly matched (A) Intrinsic → Number of electrons = number of holes → number of electrons > number of holes (B) p - type (C) n - type → Number of electrons < number of holes (D) metal → holes >> electrons 15. Match List I (crystal type) with List II(name of solid(D) and select the correct answer using the codes given below the lists. List - I List -- II W. Ionic 1. solid organ X. Covalent 2. Copper Y. Metallic 3. Silicon Z. Vander wall's 4. Sodium chloride(Nael) (A) W-3, X-4, Y-2, Z-1 (B) W-4, X-3, Y-1, Z-2 (C) W-3, X-4, Y-1, Z-2 (D) W-4, X-3, Y-2, Z-1 16. The carrier mobility in a semi conductor is 0.4 m<sup>2</sup>/v - sec. Its diffusion constant at 300°K will be (in m<sup>2</sup>/sec) (A) 0.43(B) 0.16(C) 0.04(D) 0.0117. At very high temperatures, extrinsic semi conductors become intrinsic because (A) of drive in diffusion of dopants & carriers (B) band to band transition dominates impurity ionization (C) Impurity ionization dominates band to band transition (D) band to band transition is balanced by impurity ionization

18. Which of the following elements acts as donor impurities

(B) 1, 2, 4 & 6

(A) 1, 2 & 3

1. Gold 2. Phosphorous 3. Boron 4. Antimony 5. Arsenic

(C) 3,4, 5 & 6

6. Indium

(D) 2,4, & 5

19. Measurement of hall coefficient in a semiconductor provides information on (B) sign of charge carriers alone (A) sign and mass of charge carriers (C) mass and concentration of charge carriers (D) sign and concentration of charge carriers 20. The hall constant in a p type – si bar is given by  $5 \times 10^3$  cm<sup>3</sup>/ coulomb. The hole concentration in bar is (A)  $1 \times 10^{15}$  cm<sup>-3</sup> (B)  $1.25 \times 10^{15}$  cm<sup>-3</sup> (C)  $1.5 \times 10^{15}$  cm<sup>-3</sup> (D)  $1.6 \times 10^{15}$  cm<sup>-3</sup> 21. Consider a semi conductor bar having square cross - section. Assume that the holes drift in the +ve x - direction and a magnetic field is applied perpendicular to the direction in which holes drift. The sample will show (B) A +ve voltage in +ve y - direction (A) A -ve resistance in +ve y -direction (D) A magnetic field in +ve y -- direction (C) A -ve voltage in +ve y - direction 22. Electron mobility & life - time in a semiconductor at room temperature are respectively  $0.36 \text{ m}^2/\text{v-sec} \& 340 \text{ us}$ . The diffusion length is (C) 3.55 mm (D) 3.13 mm (B) 1.77 mm (A) 3.13 mm 23. The electron and hole concentrations in an intrinsic semiconductor are  $n_i$  per cm<sup>3</sup> at 300k. Now, if acceptor impurities are introduced with a concentration of  $N_{\lambda}$  per cm<sup>3</sup> (where N  $_A >> n_i$ ), the electron concentration per cm<sup>3</sup> at 300k will be  $(D)n_i^2/N_A$ (A)  $n_i$  (B)  $n_i + N_A$ (C)  $N_A - n_i$ 24. Consider the following statements related to a semiconductor 1. Acceptor level lies close to valence bond 2. Donor level lies close to valence bond 3. n -- type semi conductor behaves as a conductor at 0°K 4. p-type semi conductor behaves as an insulator at 0°K (A) 2 & 3 are correct (B) 1 & 3 are correct (C) 1 & 4 are correct (D) 3 & 4 are correct 25. Silicon is doped with boron to a concentration of  $4 \times 10^{17}$  Atoms/cm<sup>3</sup>. Assume intrinsic concentration of silicon as 1.5 x 10<sup>10</sup> cm<sup>-3</sup>. Compared to undoped silicon, the fermi level of doped silicon (B) goes down by 0.427 ev (A) goes down by 0.13 ev (D) goes up by 0.427 ev (C) goes up by 0.13 ev Codes to be used for the following questions a) Both A & R are true and R is correct explanation of A b) Both A & R are true but R is not a correct explanation of A (D) A is false but R is true c) A is true but R is false

ACE Academy

26. Assertion (A): Net charge with in a conductor is always zero Reason (R) : The conductor has a very large number of free electrons

27. Assertion (A): In hall effect, the open - circuit transverse voltage developed has opposite signs for n-type & p-type semiconductors.

Reason (R) : The magnetic field pushes both holes & electrons in the same direction.

28. Assertion (A): At room temperature Fermi-level in p-type semiconductor lies nearer the valence band, whereas in n - type semiconductor lies nearer the conduction-band.

Reason (R): At room temperature the p – type semiconductor is rich in holes whereas n type is rich in electrons

### Key:

15. d

27. c 28: a

### **TOPIC 2: DIODES**

1. At 300°K, for a diode current of 1mA, a certain germanium diode requires a forward bias of 0.1435V, whereas a certain silicon diode requires a forward bias of 0.718V, under the conditions stated above the closest approximation of the ratio of reverse saturation current in Ge diode to that in silicon diode is

(A) 1

(B) 5

(C)  $4 \times 10^3$ 

(D)  $8 \times 10^3$ 

2. In an abrupt PN junction the doping concentrations on the p-side and n-side are  $N_A = 9 \times 10^{16} / \text{m}^3$ ,  $N_D = 1 \times 10^{16} / \text{cm}^3$  respectively. The PN junction is reverse biased and total depletion width is 3µm. The depletion width on p side is

(A)  $2.7 \, \mu m$ 

(B)  $0.3 \, \mu m$ 

(C) 2.25 µm

(D) 0.75 µm

3. Consider an abrupt p - n junction. Let  $V_{hi}$  be the built in potential of this junction and  $V_{IR}$ be the applied reverse bias. If the junction capacitance ( $C_i$ ) is 1pF for  $V_{bi} + V_R = 1v$ , then for  $V_{bi} + V_r = 4 \text{ v C}_i$  will be

(A) 4 pF

(B) 2 pF

(C) 0.25 pF

(D) 0.5 pF

4. The change is barrier potential of a si p - n junction diode with temperature is

(A) 0.0025 V/°C (B) 0.250 V/°C

(C) 0.030 V/°C

(D) 0.014 V/°C

5. A Si diode is carrying a constant current of 1mA. When the temperature of the diode is 20°C, V<sub>D</sub> is found to be 700mV. If the temperature rises to 40°C V<sub>D</sub> becomes approximately equal to


(A) 740 mV

(B) 660 mV

(C) 680 mV

(D) 700 mV

6. The current I in a forward biased P<sup>+</sup>N junction. Shown in figure-A is entirely due to diffusion of holes from x=0 to x=L. The injected hole concentration distribution in n-region is linear as shown in figure-B with  $p(0) = 10^{12} \text{cm}^{-3} \&$  $L = 10^{-3}$  cm. The current density in the diode assuming that the difussion coefficient of holes is 12cm<sup>2</sup>/sec will be

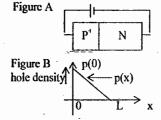

(A)  $1.92 \text{ mA/cm}^2$ 

(B)  $2.19 \text{ mA/cm}^2$ 

(C)  $19.2 \text{ mA/cm}^2$ 

(D) 1.29 mA/cm<sup>2</sup>

7. In the above problem velocity of holes in n-region at x = 0 will be

(A) 1200 cm/sec (B)  $12 \times 10^3 \text{ cm/sec}$ 

(C) 12 cm/sec

(D) 21 cm/sec

8. An one-sided abrupt junction has  $10^{21}$  per m<sup>3</sup> of dopants on the lightly doped side. Builtin potential is 0.2V at zero bias. Depletion width of abrupt junction is (q 1.6 x 10<sup>-19</sup>C.

 $\epsilon_s = 16, \ \epsilon_0 = 8.875 \times 10^{-12} \, \text{F/m}$ 

A) 6µm

(B) 1µm

(C) 0.6um

(D) 0.1um

9. The ac resistance of a forward biased p-n junction diode operating at a bias voltage V and carrying current l is

(A) zero

(B) a constant value independent of V & I (C) V/I

(D)  $\Delta V/\Delta I$ 

10. The deplection layer across a p+ n junction lies

(A) mostly in the p<sup>+</sup>region

(B) mostly in the n region

(C) equally in both the p+& n region

(D) entirely in the p<sup>+</sup> region

11.A p-n diodes dynamic conductance is directly proportional to

(A) the applied voltage (B) the temperature (C) its current (D) the thermal voltage


12. In the circuit shown in figure. If  $e_1 = 2V$ ,  $e_2 = 5V$ ,  $e_3 = 1V$ , & E = 2V, then which of the diodes will be conducting and what will be e0

a) D<sub>3</sub>; 1V

b) D<sub>1</sub>; 2V

c) D<sub>2</sub>; 5V

d) D<sub>1</sub>; 5V



13. In a P-N junction diode space charge capacitance is proportional to V n where V is the applied bias voltage and 'n' is a constant. The value of n for step, linearly graded and diffused junctions would be respectively.

(A) 1/2, 1/3 & 1/2.5 (B) 1/3, 1/2 & 1/2.5 (C) 1/2, 1/2.5 & 1/3 (D) 1/3, 1/2.5 & 1/2

14. The current through a PN diode with V volts applied to P region relative to N region ( where lo is the reverse saturation current of the diode, m the ideality factor, K boltzmann constant, T absolute temperature and q the magnitude of charge of electron) is (C)  $l_0 (1 - e^{-qv/mkT})$  (D)  $l_0 (e^{qv/mkT} - 1)$ 

(A)  $I_0$  (e<sup>-qv/mkT</sup>-1) (B)  $I_0$  (c<sup>-qv/mkT</sup>)

15. For the circuit given in figure assuming ideal diode o/p waveform  $V_{\theta}$  is V.=10Sinwt 10V

16. A silicon PN diode at a temperature of 20° C has a reverse saturation current of 10pA. The reverse saturation current at 40° C for the same bias is approximately.

A) 30 pA

(B) 40 pA

(C) 50 pA

(D) 60 pA

17. The primary reason for the wide spread use of silicon in semiconductor device technology

A) Abundance of silicon on the surface of the earth

(B) Large bandgap of silicon in compassion with germanium (C) Favorable properties of silicon dioxide (Si02)

(D) Lower meeting point

l<sub>1</sub> = 10mΛ

18. A silicon PN junction diode under reverse bias has depletion region of width  $10\mu m$ . The relative permittivity of silicon  $\epsilon r = 11.7$  and the permittivity of free space  $\epsilon_0 = 8.85 \times 10^{-12} \text{ F/m}$ . The depletion capacitance of diode per square meter is

A) 100μF

(B)  $10\mu F$ 

(C) 1µF

(D) 20µF

- 19. In a P<sup>+</sup>n junction diode under reverse bias, the magnitude of electric field is maximum at
  - (A) the edge of the depletion region on the P-side
  - (B) the edge of the depletion region on the n-side
  - (C) the P<sup>+</sup>n junction
  - (D) the centre of the depletion region on the n-side
- 20. A P\*n junction has a built-in potential of 0.8 V. The depletion layer width at a reverse bias of 1.2 V is 2μm For a reverse bias of 7.2 V, the depletion layer width will be (A) 4 μm (B) 4.9μm

(c) 8 µm

(D) 12 μm

21. Which of the following is NOT associated with a P-N junction?

(A) junction capacitance

(B) charge storage capacitance

(C) depletion capacitance


- (D) channel length modulation
- 22. For the Zener diode shown in the figure, the Zener voltage at knee is 7 V, the knee current is negligible and the Zener dynamic resistance is  $10\Omega$ . If the input voltage ( $V_i$ ) range is form 10 to 16 V, the output voltage ( $V_0$ ) ranges from

(A) 7.00 to 7.29 V

(B) 7.14 to 7.29 V

(C) 7.14 to 7.43 V

(D) 7.29 to 7.43 V




- 23. In the voltage regulator shown in figure. The load current can vary from 100mA to 500mA. Assuming that the Zener diode is ideal.(i.e., Zener knee current is negligibly small and Zener resistance is zero in the break down region), the value of R is
  - (A)  $7\Omega$

(B)  $70 \Omega$ 

(C)  $70/3 \Omega$ 

(D) 14 Ω



 Consider the following statements regarding the circuit given in the figure, where the output voltage is constant

RS

1) V<sub>in</sub> > the voltage at which the zener breaks down

2)  $I_L$  < the difference between I and  $I_Z$  the current at which the zener breakes down

3)  $R_S$  < the zener nominal resistance.

Which of the above statements are correct


(A) 1, 2 and 3

(B) 1 and 2


(C) 2 and 3

(D) 1 and 3


25. For the circuit shown below, assume that the zener diode is ideal with a breakdown voltage of 6 Volts. The waveform observed across R is

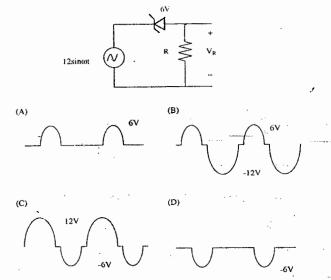

- 26. A zener diode regulator is to be designed to meet the specifications:  $l_L=10 mA$ ,  $V_0=10 V$ ,  $V_{in}$  varies from 30V to 50V. The zener diode has  $V_Z=10 V$ , &  $I_{ZK}$ , knec current ImA. For satisfactory operation
- a)  $R \le 1800\Omega$
- b)  $2000\Omega \le R \le 2200\Omega$
- c)  $3700\Omega \le R \le 4000\Omega$
- d)  $R > 4000\Omega$
- 27. The o/p voltage (V<sub>0</sub>) of the circuit shown in the figure is ·
  - a) 0
  - b) 5.7 V
  - c) 6.9 V
  - d) 12.6 V



- 28. The ideal characteristic of a stabilizer is
  - a) constant output voltage with low internal resistance
  - b) constant output current with low internal resistance
  - c) constant output voltage with high internal resistance
  - d) constant internal resistance with variable output voltage
- 29. The zenerdiode in the regulator circuit in Figure has a zenervoltage of 5.8 volts and a zenerknee current of 0.5 mA. The maximum load current drawn from this circuit ensuring proper functioning over the input voltage range between 20 and 30V is
  - (A) 23.7 mA
- (B) 14.2 mA
- (C) 13.7 mA
- (D) 24.2 mA



30. The values of voltage (V<sub>D</sub>) across a tunnel-diode corresponding to peak and valley currents are V<sub>P</sub> and V<sub>V</sub> respectively. The range of tunnel-diode voltage V<sub>D</sub> for which the slope of its 1-V<sub>D</sub> characteristics is negative would be

(a)  $N_{\rm D} < 0$ 

(b)  $0 \le V_D \le V_P$ 

(c)  $V_P \le V_D \le V_V$ 

(d)  $V_D > V_V$ 

31. Consider the following assertions

S1: For zener effect to occur, a very abrupt junction is required

S2: For Quantum tunneling to occur, a very narrow energy barrier is required Which of the following is correct

(A) only S2 is true

(B) \$1 and \$2 are both true but \$2 is not a reason for \$1

(C) S1 and S2 and both true and S2 is a reason for S1

(D) Both S1 and S2 are false

Codes to be used for the following questions (A: Assertion, R: Reason)

(A) Both A & R are true and R is correct explanation of A

(B) Both A & R are true but R is not a correct explanation of A

(C) A is true but R is false

(D) A is false but R is true

32. Assertion (A): A DC voltage stabilizer is one which stabilizes the output voltage irrespective of variation in 1/P voltage and load current

Reason (R): A DC voltage stabilizer uses a zener diode a cross the load to stabilize the voltage

Kev:

1.c 2.b 3.d 4.a 5.b 6.a 7.b 8.c 9.d 10.b 11.c 12.c

13. a 14. d 15. d 16. b 17. b 18. b 19. c 20. a 21. d 22. a 23. d 24. b

25. b 26. a 27. c 28. a 29. c 30. c 31.b 32. b

### TOPIC 3: TRANSISTORS AND OPTO ELECTRONIC DEVICES

1. At 25°C the collector-emitter voltage drop of a silicon transistor at saturation is Approximately (A) 0.1V (B) 0.3V

(C) 0.5V(D) 0.7V

2. Which one of the following is correct for the biasing of a BJT in active region

 $J_{C}$ (A) FB FB

J<sub>E</sub> J<sub>C</sub> (B) FB RB

 $J_E$   $J_C$ (C) RB FB

 $J_E - J_C$ (D) RB RB

3. For a BJT under saturation condition

(A)  $I_C = \beta I_B$  (B)  $I_C > \beta I_B$  (C)  $I_C$  is independent of all other parameters (D)  $I_C < \beta I_B$ 

4. If both emitter-base and collector-base junctions of BJT are forward biased the transistor is

in (A) active region

(B) saturation region (C) cut-off region (D) Inverse mode

5. If  $\alpha = 0.995$ ,  $I_E = 10$ mA,  $I_{CO} = 0.5$   $\mu$ A, then  $I_{CEO}$  is

(A) 100μA

(B) 25µA

(C) 10.1 mA

(D) 10.5 mA

6. In a BJT biased for operation at emitter current I<sub>E</sub> and collector current I<sub>C</sub>, the trans conductance gm is

 $(A) KT/qI_E$ 

(B)  $qI_C/KT$ 

 $(C) I_C / I_E$ 

(D)  $I_E/I_C$ 

7. Match List I with List II (assume List I as Region of BJT in a monolithic I(C)

List I

List II

P) Emitter O) Base

1) Moderate Resistivity 2) Very high Resistivity

R) Collector

3) Large size

S) Substrate

4) Very high Conductivity

(A) P-1, Q-4 R-2.S-3 (B) P-4, Q-1, R-2, S-3 (C) P-4, Q-1 R-3, S-2 (D) P-1, Q-4, R-3, S-2

8. A transistor has a current gain of 0.99 in CB mode. Its current gain in CC mode is

(A) 100

ACE Academy

(B) 99

(C) 1.01

(D) 0.99

9. Match List I with List II in respect of BJT (E-B: Emitter-Base, C-B: Collector-Base,

JN: Junction, FB: Forward bias, RB: Reverse Bias)

List I

List II

P) E-BJn FB & C-B Jn RB 1) Very low gain amplifier Q) E-B & C-B Jn FB

R) E-B Jn FB & CB Jn RB

2) Saturation condition 3) High gain amplifier

S) E-B & C-B Jn RB

4) Cutoff condition

(A) P-2, Q-3 R-1,S-4

(B) P-3, Q-2,R-1,S-4

(C) P-3, Q-2 R-4.S-1

(A) 43µA and 11.4 Volts

(B) 40µA and 16 Volts

(C) 45µA and 11 Volts

(D) 50µA and 60 Volts

(D) P-2, Q-3,R-4,S-1

10. The circuit using a BJT with  $\beta$  50 and  $V_{BE} = 0.7V$  is shown in figure the base current  $l_B$ and collector voltage V<sub>C</sub> are respectively.

430 kΩ

11. The phenomenon known as "Early Effect" in a bipolar transistor refers to a reduction of the effective base-width caused by

(a) electron-hole recombination at the base

(b) the reverse biasing of the base-collector junction

(c) the forward biasing of emitter-base junction\

(d) the early removal of stored base charge during saturation-to-cutoff switching

12. The DC current gain (β) of a BJT is 50. Assuming that the emitter injection efficiency is 0.995, the base transport factor is

(A) 0.980

(B) 0.985

(C) 0.990

(D) 0.995


13. For the BJT circuit shown, assume that the  $\beta$  of the transistor is very large and  $V_{\rm BF} = 0.7$  V. The mode of operation of the BJT is

(A) cut-off

(B) saturation

(C) normal active

(D) revere active

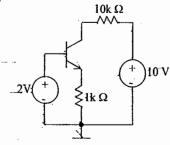

ACE Academy

increased (more negative) pinch-off would (A) high value of drain current	urce voltage constant if the gate source voltage is ald occur for ((B) saturation value of drain current (D) gate current equal to drain current
	e followed by saturation at higher voltages ue preceeded by saturation at low voltages
16. For a JFET in the pinch off region as the (A) becomes zero (B) abruptly decrease	drain voltage is increased the drain current es_(C) abruptly increases (D) remains constant
device is biased at a gate voltage of 3V.	chancement mode MOSFET is 0.5V, when the pinch off would occur at a drain voltage of (C) 3.5V (D) 4.5V
18. Match List I with List II	
List I	List II
P) N-channel FET is better than p-channel     Q) channel is wedge shaped     R) Channel is not completely closed at pinch off	
S) Input impedance is high	4) better performance since $\mu_p >> \mu_p$
	S-3 (C) P-3, Q-1 R-2,S-4 (D) P-3, Q-2,R-1,S-4
19. In a MOS transistor, the gate source I/P in 1. lower than I/P impedance of a BJT 3. lower than I/P impedance of a JFET Which of the above statement(s) is true (A) 1 alone (B) 2 and 3	mpedance is  2. Higher than I/P impedance of a BJT  4. Higher than I/P impedance of a JFET  (C) 4 alone  (D) 2 and 4
(1) 1 dione (1) 2 did 5	(c) 4 mone (b) 2 mrd 4
<ul> <li>20. The action of a JFET in its equivalent circ</li> <li>(A) current controlled current source</li> <li>(C) voltage controlled voltage source</li> </ul>	(B) current controlled voltage source
21. Silicon is not suitable for fabrication of L (A) an indirect band gap semi conductor (C) a wide band gap semi conductor	
	rbed by silicon which has a band gap of 1.12 ev can be absorbed by another material is 0.87 μm,  (C) 0.854 ev (D) 0.706 cv
23. A particular green LED emits light of way semi Conductor material used there is (pla (A) 2.26 ev (B) 1.98 ev	
<ul> <li>24. Given that the band gap of cadmium Sullength for electron hole pair generation (A) 5400 μm</li> <li>(B) 540 μm</li> </ul>	alphide is 2.296 ev the maximum photon wave will be  (C) 5400 A <sup>0</sup> (D) 540 A <sup>0</sup>

(C) A silicon water lightly dop	ped with boron is a p <sup>+</sup> substrate
Group I lists four different sen characteristic property in Group Group I	niconductor devices. Match cach device in Group I with its
• • • • • • • • • • • • • • • • • • •	Group II
P. BJT Q. MOS capacitor R. LASER diode S. JFET (A) P-3, Q-1, R-4, S-2 (C) P-3, Q-4, R-1, S-2	1. Population inversion 2. Pinch-off voltage 3. Early effect 4. Flat-band voltage (B) P-1, Q-4, R-3, S-2 (D) P-3, Q-2, R-1, S-4
27. Match List I with List II	
List I P) voltage controlled Q) current controlled R) Conductivity mod S) Negative conducts	device 2) UJT Julation device 3) FET
28. Match List I with List II	( ) = = ( ) = = ( ) = = ( ) = = ( )
List I	List II
P) BJT	1) Pinch off effect
Q) FET	Controlled rectification
R) SCR	Negative resistance characteristics
S) Tunnel Diode (A) P-1, Q-3 R-2,S-4	4) Punch through effect
(C) P-4, Q-1 R-2,S-3	(B) P-1, Q-2,R-3,S-4 (D) P-1, Q-4,R-3,S-2
	(D) 1-1, Q-4, R-3, 5-2
29. Match List I with List II	A Commence of the Commence of
List I	List II
P) BJT	<ol> <li>Voltage controlled negative resistance</li> </ol>
Q) MOSFET	2) High current gain
R) Tunnel Diode S) Zener Diode	3) Voltage regulation
(A) P-1, Q-4 R-2,S-3	4) High I/P impedance (B) P-2, Q-4,R-1,S-3
(C) P-2, Q-3 R-1,S-4	(D) P-1, Q-3,R-2,S-4
30: Match items in group I with group	
Group I P) LED	Group II
Q) Avalanche photo diode	1. Heavy doping
R) Tunnel diode	2. coherent radiation
S) LASER	3. Spontaneous emission 4/ Current gain
(A) P-1, Q-2, R-4, S-3	(B) P-2, Q-3, R-1, S-4
(C) P-3, Q-4, R-1, S-2	(D) P-2. Q-1, R-4, S-3

126 Electr	onic Devices	ACE Academy
31. Match List I with List II and-selectist - I P. Silicon diode Q. Germanium diode R. LED S. PIN diode (A) P-1, Q-3, R-4, S-2 (C) P-1, Q-4, R-3, S-2 32. Match List I with List II  List I P. Zener Diode	1. High frequency 2. Very low reverse 3. Low forward bia 4. cut off wave len (B) P-2, Q-4 (D) P-2, Q-3	application e bias saturation current as voltage drop gth , R-3, S-1 , R-4, S-1
Q. Tunnel Diode R. Gum Diode S. Pin Diode (A) P-3, Q-1,2 R-4. S-1 (C) P-4 Q-1,2,4, R-1, S-3	3. Voltage s 4. Microwa (B) P-4, Q- (D) P-3, Q-	stabilizer ve Oscillator 2,4, R-4, S-1 1,2,4, R-4, S-1
33. Find the correct match between Group I  P. Varactor Diode Q. PIN Diode R. Zener Diode S. Schottky Diode (A) P-4, Q-2, R-1, S-3 (C) P-3, Q-4, R-1, S-2	1. Voltage 2. High-fre 3 Tuned of 4. Current (B) P-2, C (D) P-1, C	reference equency switch
operation, 6.  Reason (R): Extrinsic P 1 that temperatu  35. Assertion(A): The I/P impe Reason(R): The current is  36. Assertion (A): High power Reason(R): silicon is a dire  37. Assertion (A): A N-chann Reason(R): most contamin	but R is not a correct e ductor devices like BJ yond which they do no type and N-type semice re and the effect of do dance of insulated gate MOSFET's is due to transistors are invarial ect band gap semi cond el enhancement MOSI ants is MOS fabrication d between gate and su tre as they are trapped	A is false but R is true TS have a maximum temperature of it function onductors behave as intrinstic beyond ping is lost e MOSFET is very high majority carriers bly made up of silicon ductor TET can turn on permaturely on are mobile positive charged ions at bestrate in a n-channel enhancement on the other side of the substrate in the
Key: 1.a 2.b 3.d 4.b 13.c 14.c 15.c 46.d 25.a 26.c 27.d 28.c 37.a	5. a 6. b 7. c 17. b 18. a 19. d 29. b 30. c 31. d	8. a 9. b 10. b 11. b 12. b 20. d 21. a 22. a 23. a 24. c 32. d 33. c 34. a 35. b 36. c

"ALL THE BEST"

## **OUR GATE 2009 TOPPERS**

## **CIVIL ENGINEERING TOPPERS**

S.NO	STUDENT NAME	GATE H.T NO	RANK
01	SATHISH.T	CE 1620834	1
02	NETAJI PRASAD.B	CE6920096	2
03	A.BHASKER	CE1430312 ,	3
04	MOHD.ATAULAH KHAN	CE1430072	5
05	CH.J.P.SREE RAM	CE6690202	10

## MECHANICAL ENGINEERING TOPPERS

S.NO	STUDENT NAME	GATE H.T NO	RANK
01	DESAI HARDIKKUMAR .G.	ME1500007	7
02	K.VENKATACHALAPATHI	ME1500093	9

## **COMPUTER SCIENCE & ENGINEERING TOPPERS**

S.NO	STUDENT NAME	GATE H.T NO	RANK	
01	JITHIN VACHARY	CS7580245	. 2	
02	VENKATASATYAKIRAN.D	CS1540009	10	

## **ELECTRICAL ENGINEERING TOPPERS**

S.NO	STUDENT NAME	GATE H.T NO	RANK .
01	ANIL KUMAR A.	EE6240284	2 (Test series)
02	GIRISH KUMAR DASARI	EE6760582	7 (Test series)
· 01	V. NARASIMHAMURTHY	· EE7640633	. 13
02	M. NAGARAJU REDDY	-EE7630195	14
03	THOKARE NITHIN.D	EE1600530	18

# ELECTRONICS & COMMUNICATION ENGINEERING TOPPERS

S.NO	STUDENT NAME	GATE H.T NO	RANK
01	M.YESHWANTH ·	EC1440615	9
02	SANDEEP SHARATH WAIKER	EC1460408	. 11
. 03	VENKATESH SASANAPURI	EC1490210	16

## INSTRUMENTATION ENGINEERING TOPPERS

S.NO	STUDENT NAME	GATE H.T NO	RANK
- 01	MAHESH RAVI VARMA	IN1570571	-2
02	MD ABDUL RAZAK	IN1570385	3
03	MAHESHWARI RUTHIKA	IN2300299	- 6

