ENG FAILURE AFTER T/O

No damage

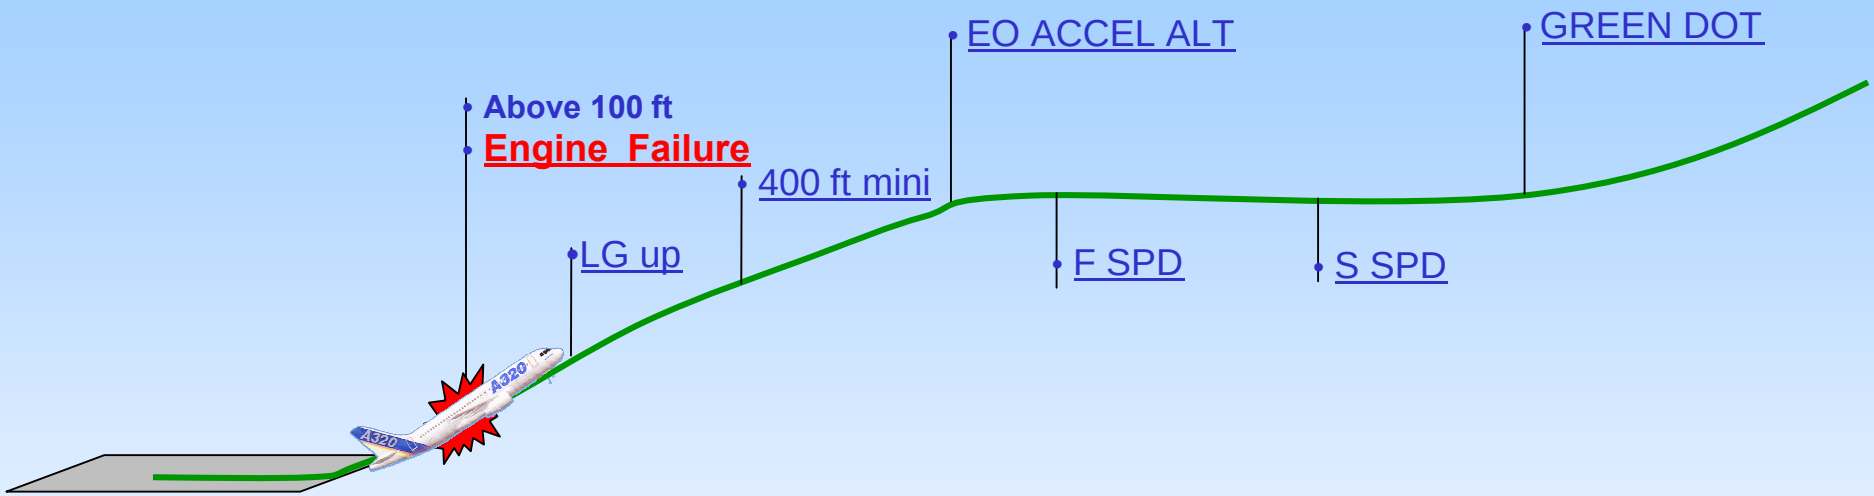

PF PNF

1. ENG FAIL

DETECTION

FLIES THE AIRCRAFT

NAVIGATES ⇒ LAND ASAP

CONSIDER AUTOMATION USE

NO ACTION until 400 ft AGL

Above 400 ft and established on appropriate flight path :

ECAM ACTIONS

ECAM PROCEDURE *DAMAGE ?*

ECAM actions can be stopped at any time on PF request for trajectory , configuration...

Before ENG RELIGHT initiate or Before EO ACCEL ALT

ORDER……..……"STOP ECAM" ECAM ACTIONS……..STOP

COMMUNICATES

CONSIDER TOGA :

- *TO THRUST (FLEX or TOGA) must be kept until GREEN DOT*
- *At TOGA, Engine Operation is limited to 10 min (5 min under FAA rules)*

PF	PNF

2. EO ACCEL ALT

At EO ACC ALT

V/S knob……..…PUSH

CLEAN UP THE A/C

At GREEN DOT

ALT SELECTOR knob……..……..…PULL

THR LEVERS……..……..……..…..…….MCT

ORDER……..……..…..…”CONTINUE ECAM”

ECAM ACTIONS……..…….CONTINUE

ECAM ACTIONS

ECAM PROCEDURE

ENG RELIGHT : QRH 2.00

<u>For T/O in FLEX :</u>

THR LEVERS……..…..MCT

PF

PNF

3. ENGINE RELIGHT

RETURN TO NORMAL TASK SHARING

AFTER TAKE-OFF C/L

DECISION

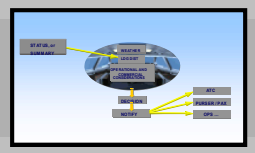

EO after T/O SYNTHESIS

<u>The Engine is restarted :</u>

➢If the EO CLR is still displayed, press on the prompt ⇒

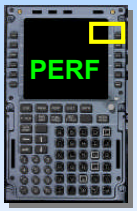

ß TARGET

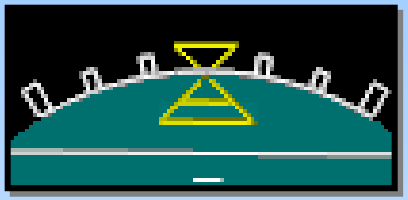

Asymetrical Thrust
in T/O CONF

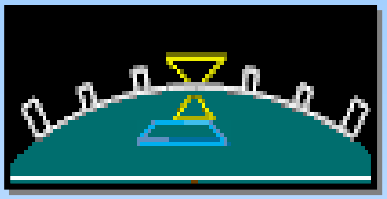

ß TARGET

<u>Once centered :</u>
Appropriate sideslip for optimum climb PERF

In this exercise, the Autopilot will center the ß TARGET.

DAMAGE OR NO DAMAGE ?

CONSIDER ENGINE DAMAGE IF YOU NOTICE :

- **High vibration prior to engine stopped, loud noise**
- **Stall**
- **Any Abnormal Indication on ENG Page (such as N1 or N2 ~ 0)**

⇒No attempt of RELIGHT

SYNTHESIS

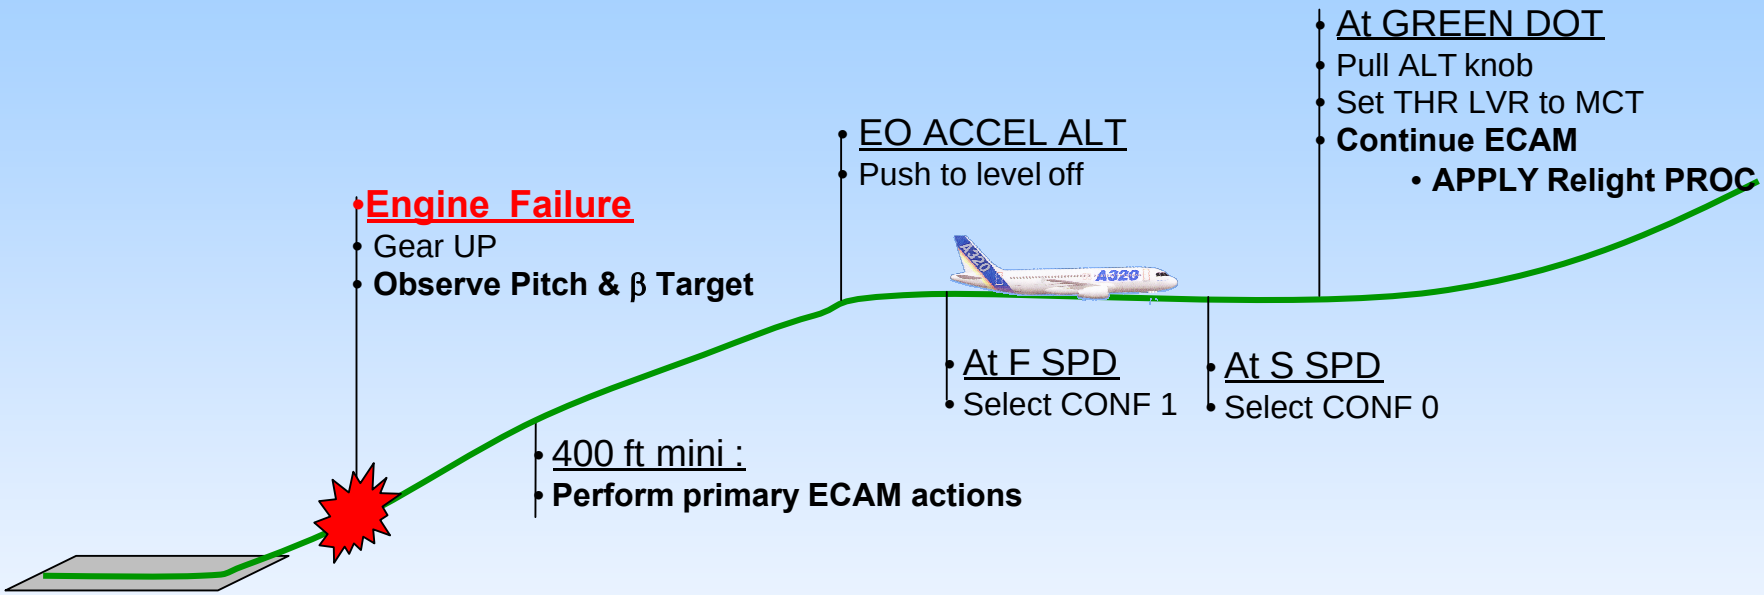
Engine Failure
Gear UP
Observe Pitch & β Target
400 ft mini :
Perform primary ECAM actions
EO ACCEL ALT
Push to level off
At F SPD
Select CONF 1
At S SPD
Select CONF 0
At GREEN DOT
Pull ALT knob
Set THR LVR to MCT
Continue ECAM
APPLY Relight PROC
A320

PF PNF

1. ENG FAIL

DETECTION

FLIES THE AIRCRAFT

NAVIGATES ⇒

CONSIDER AUT

NO ACTION until 400 ft AGL

If applicable, consider EO SID for specific RWY

Above 400 ft and established on appropriate flight path :

ECAM ACTIONS

ECAM PROCEDURE *DAMAGE ?*

ECAM actions can be stopped at any time on PF request for trajectory , configuration...

Before ENG RELIGHT initiate or Before EO ACCEL ALT

ORDER……..……"STOP ECAM" ECAM ACTIONS……..STOP

COMMUNICATES

CONSIDER TOGA :

- *TO THRUST (FLEX or TOGA) must be kept until GREEN DOT*
- *At TOGA, Engine Operation is limited to 10 min (5 min under FAA rules)*

PF | PNF

2. EO ACCEL ALT

At EO ACC ALT

V/S knob……..…PUSH

CLEAN UP THE A/C

At GREEN DOT

ALT SELECTOR knob……..……..…PULL

THR LEVERS……..……..……..…..…….MCT

ORDER……..……..…..…”CONTINUE ECAM”

ECAM ACTIONS……..…….CONTINUE

ECAM ACTIONS

ECAM PROCEDURE

ENG RELIGHT :

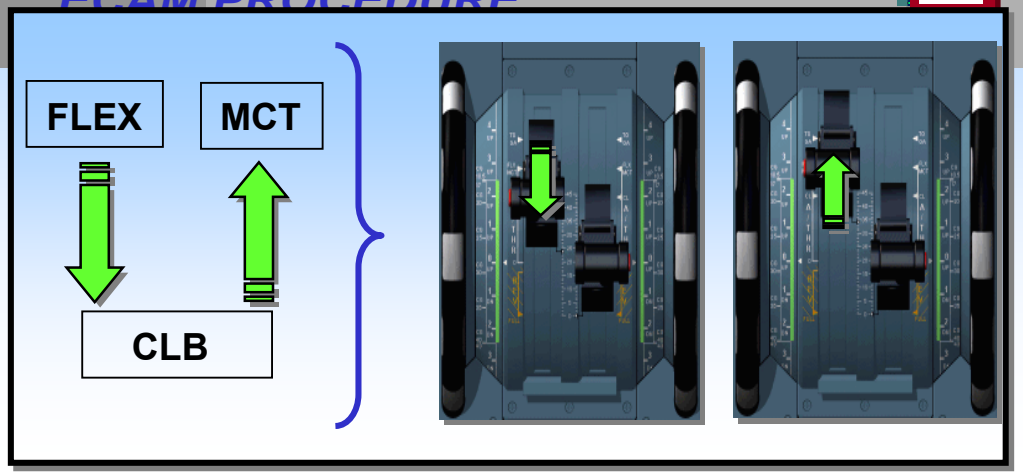

For T/O in FLEX :

THR LEVERS……..…..MCT