



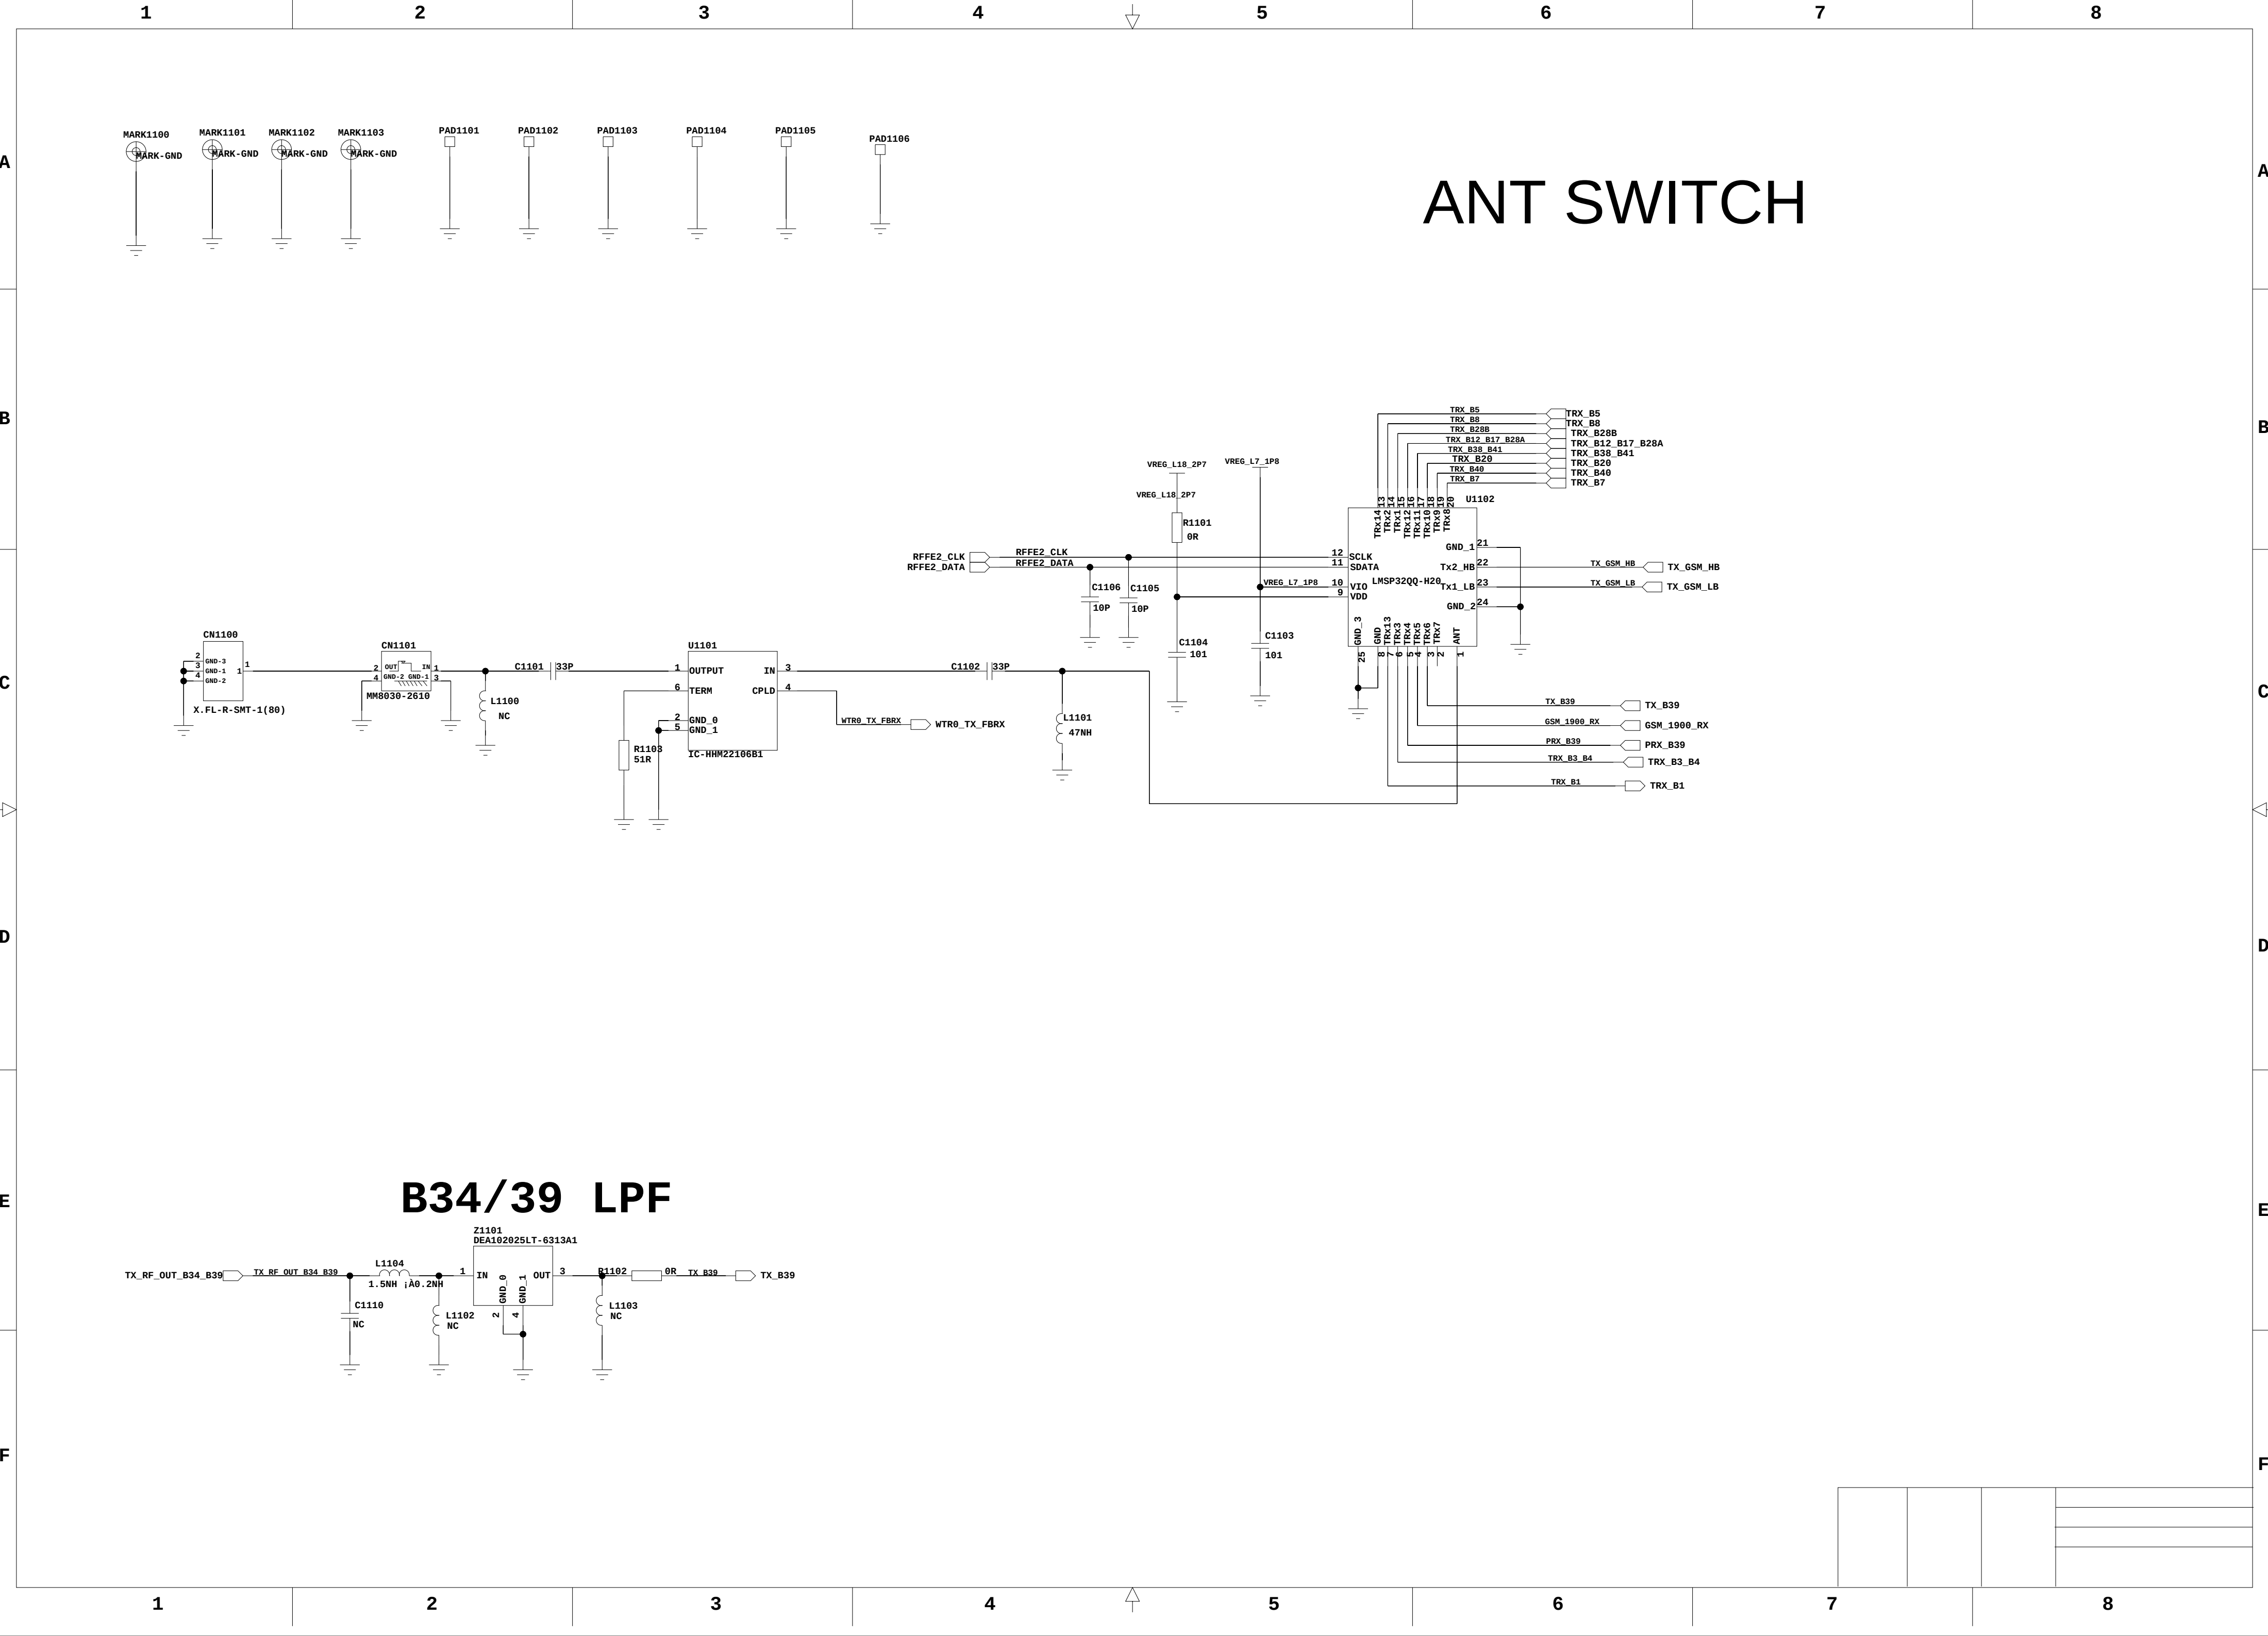



A




D

RF16130


C




B7 TRX

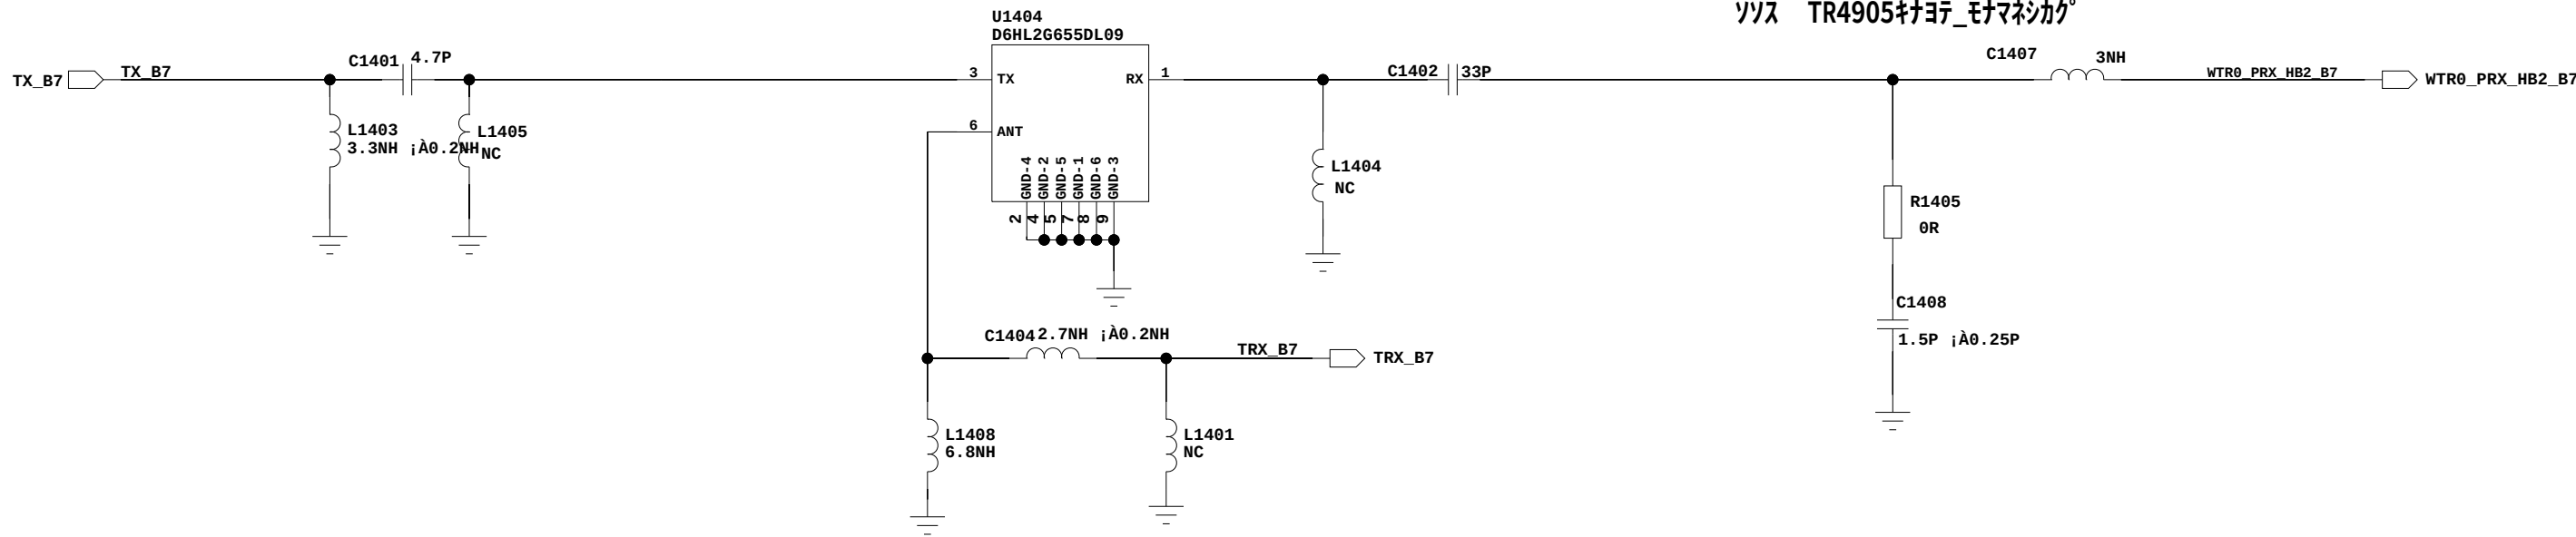

PRX B7 & B38_B41 Switch

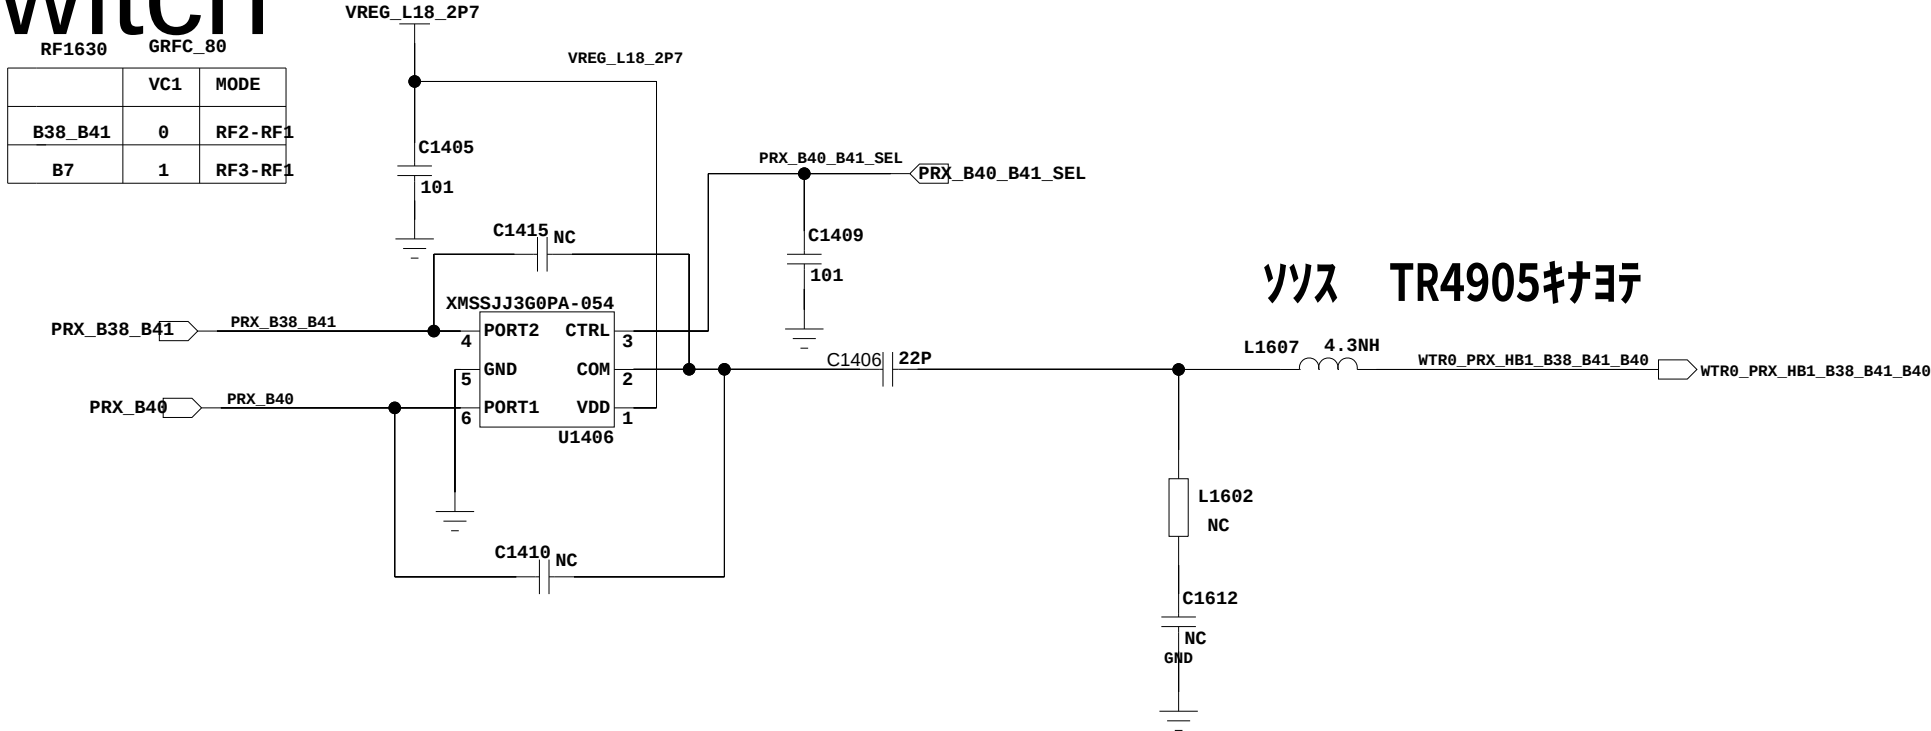


GPS

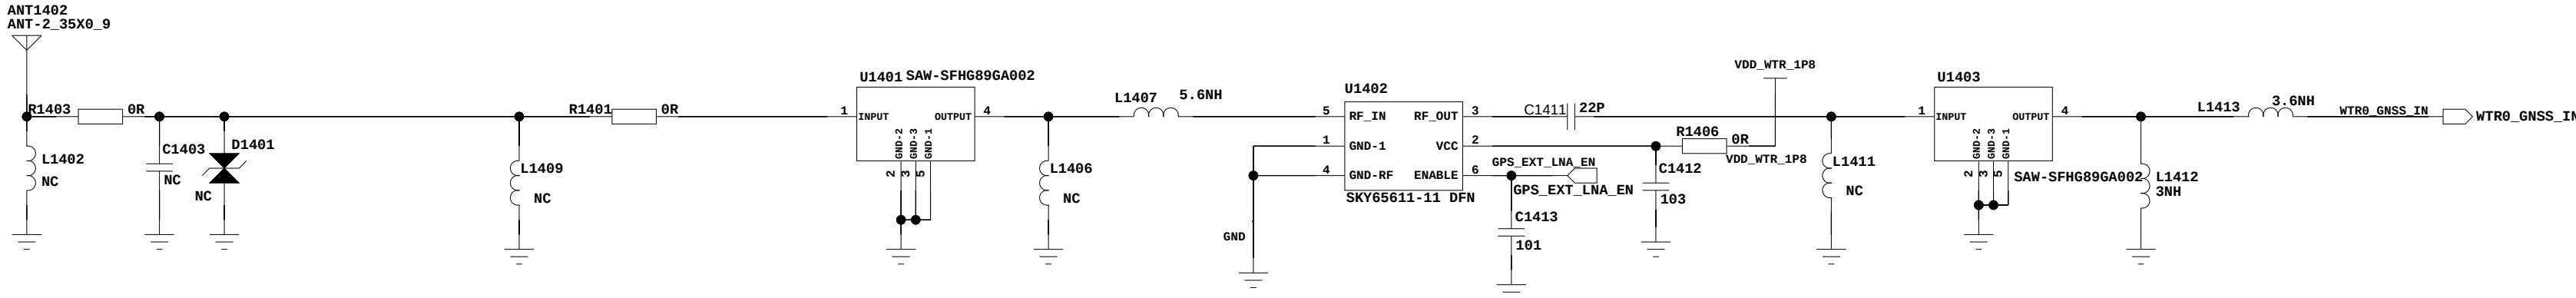


B20 TRX

B4/B17/B20/B28 TRX

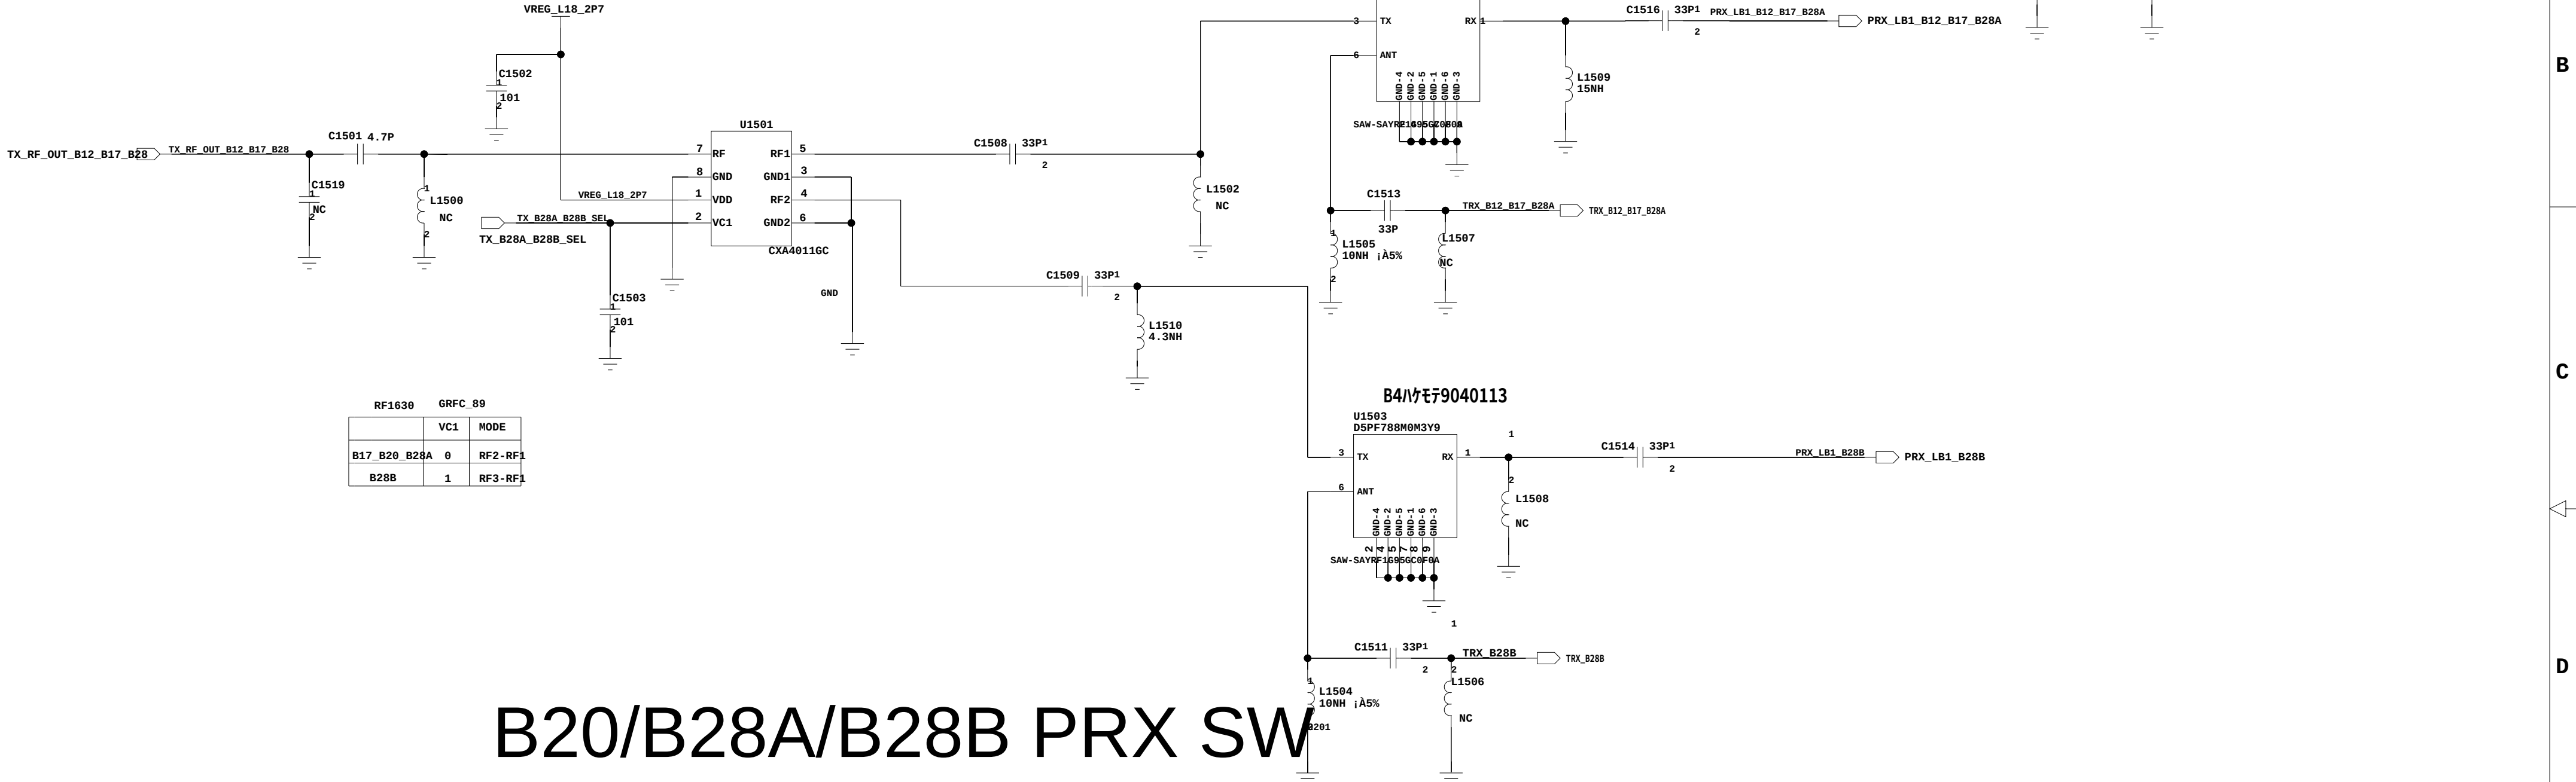


B20/B28A/B28B PRX SW

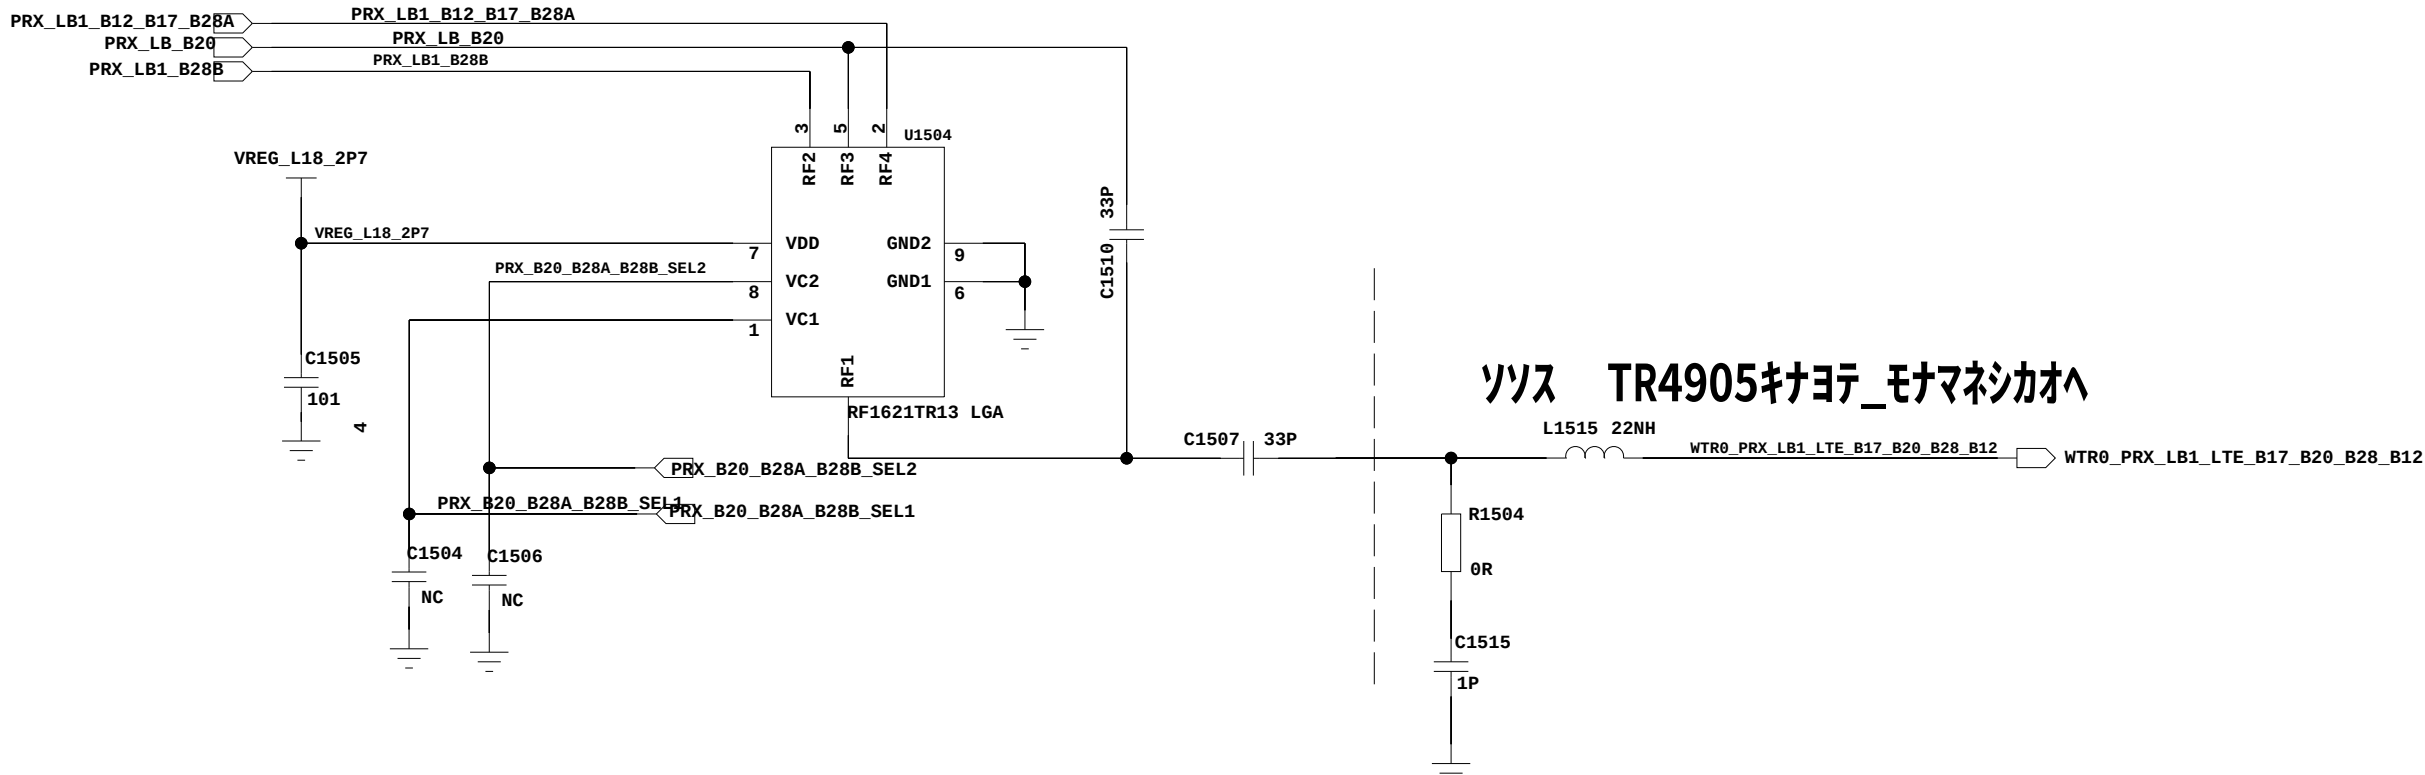


ソソス TR4905キナヨテ_モナマネシカオハ

Approved By _____

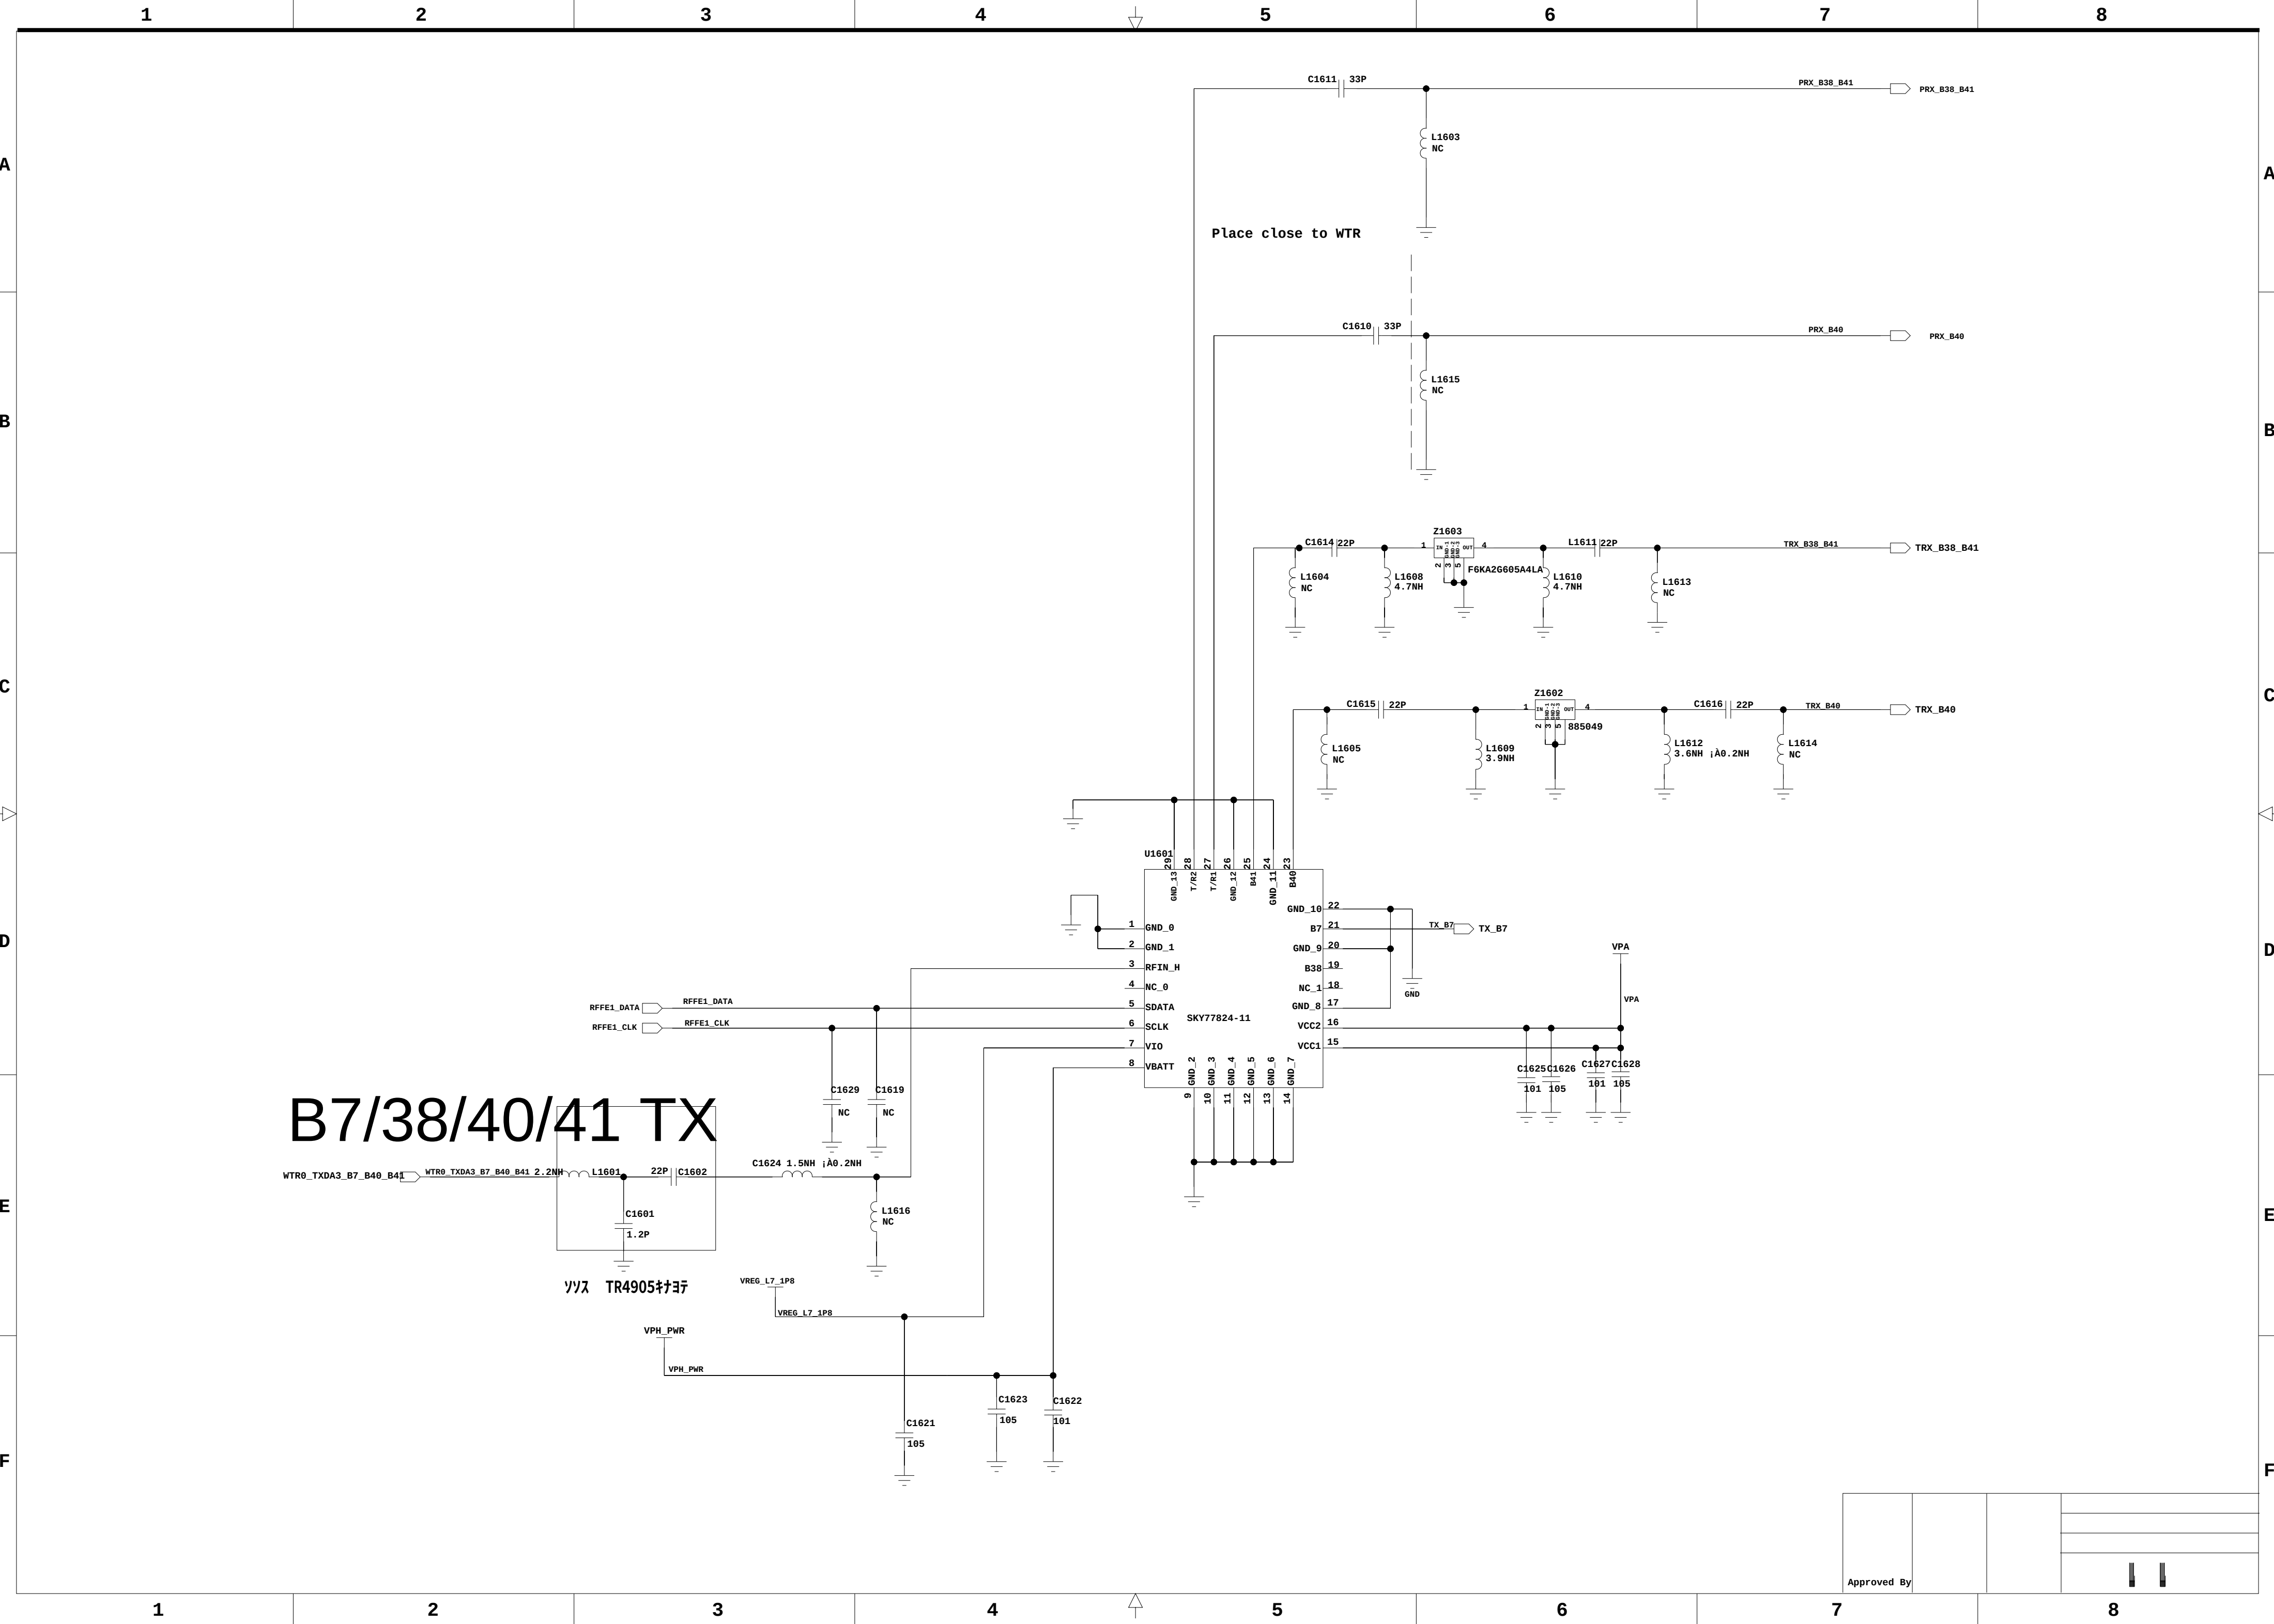

DRX B39 & B3 Switch


DRX B7 & B38_41 Switch

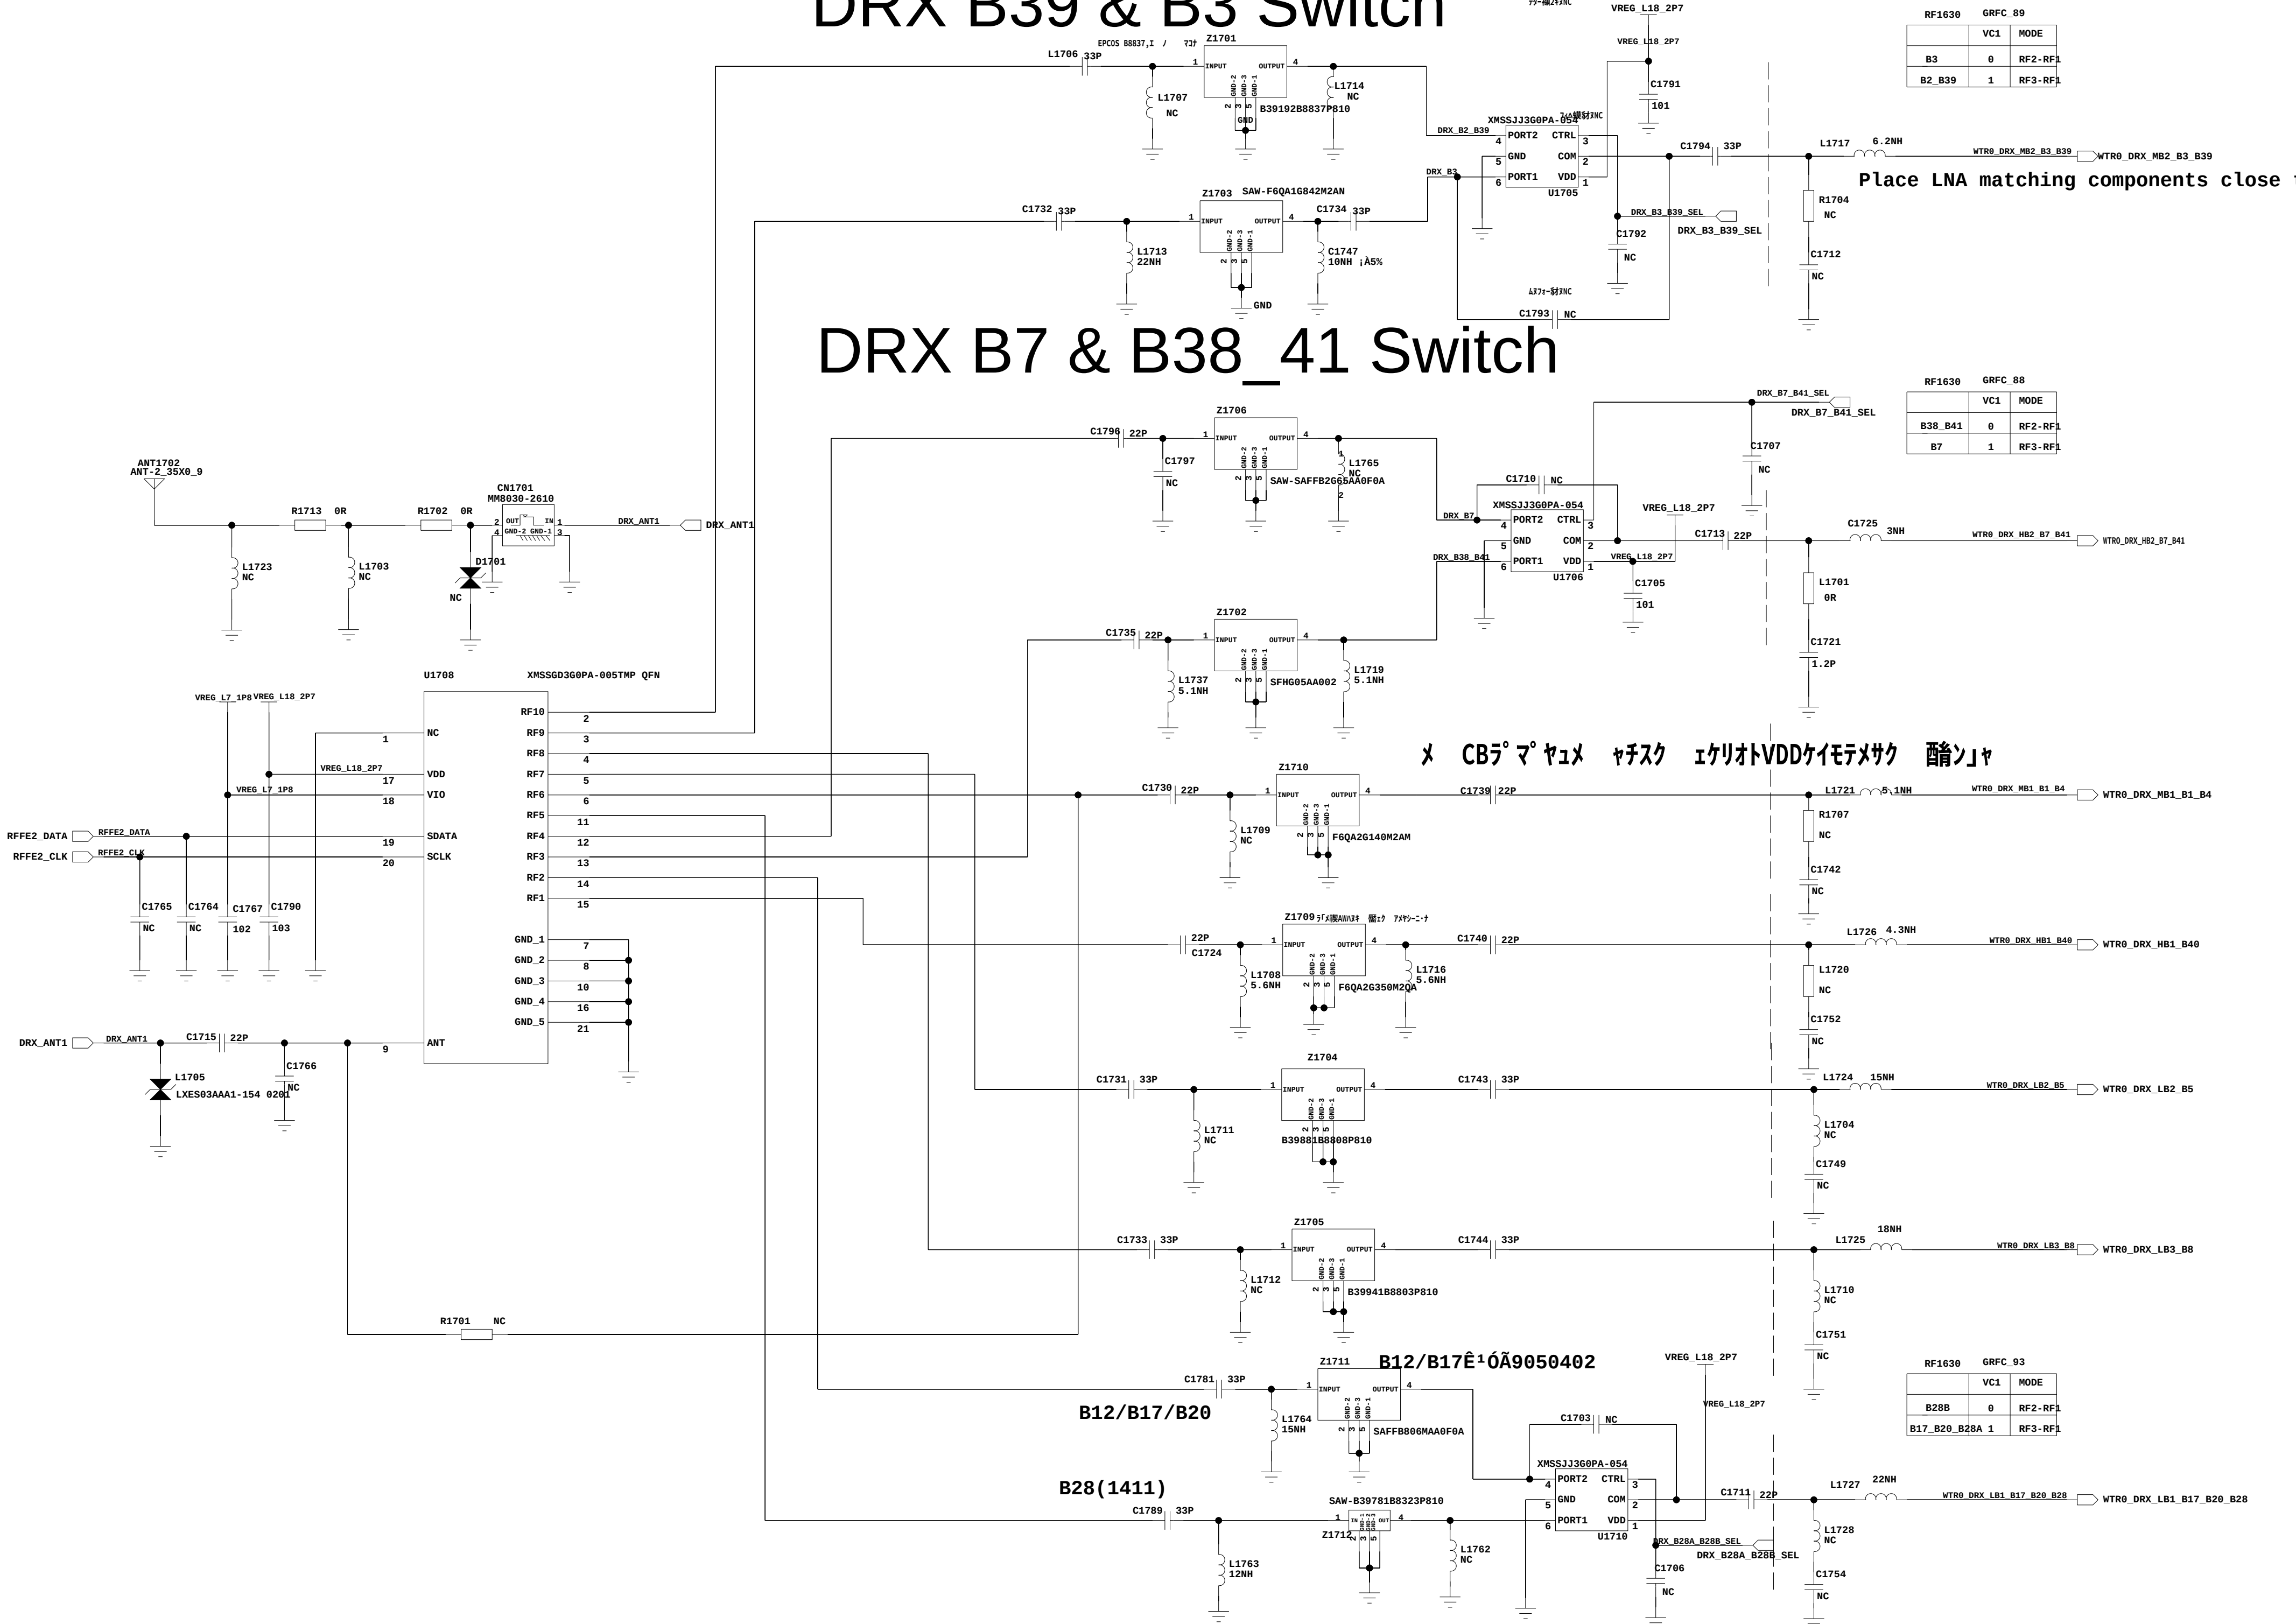


A




PM8916 CHARGING

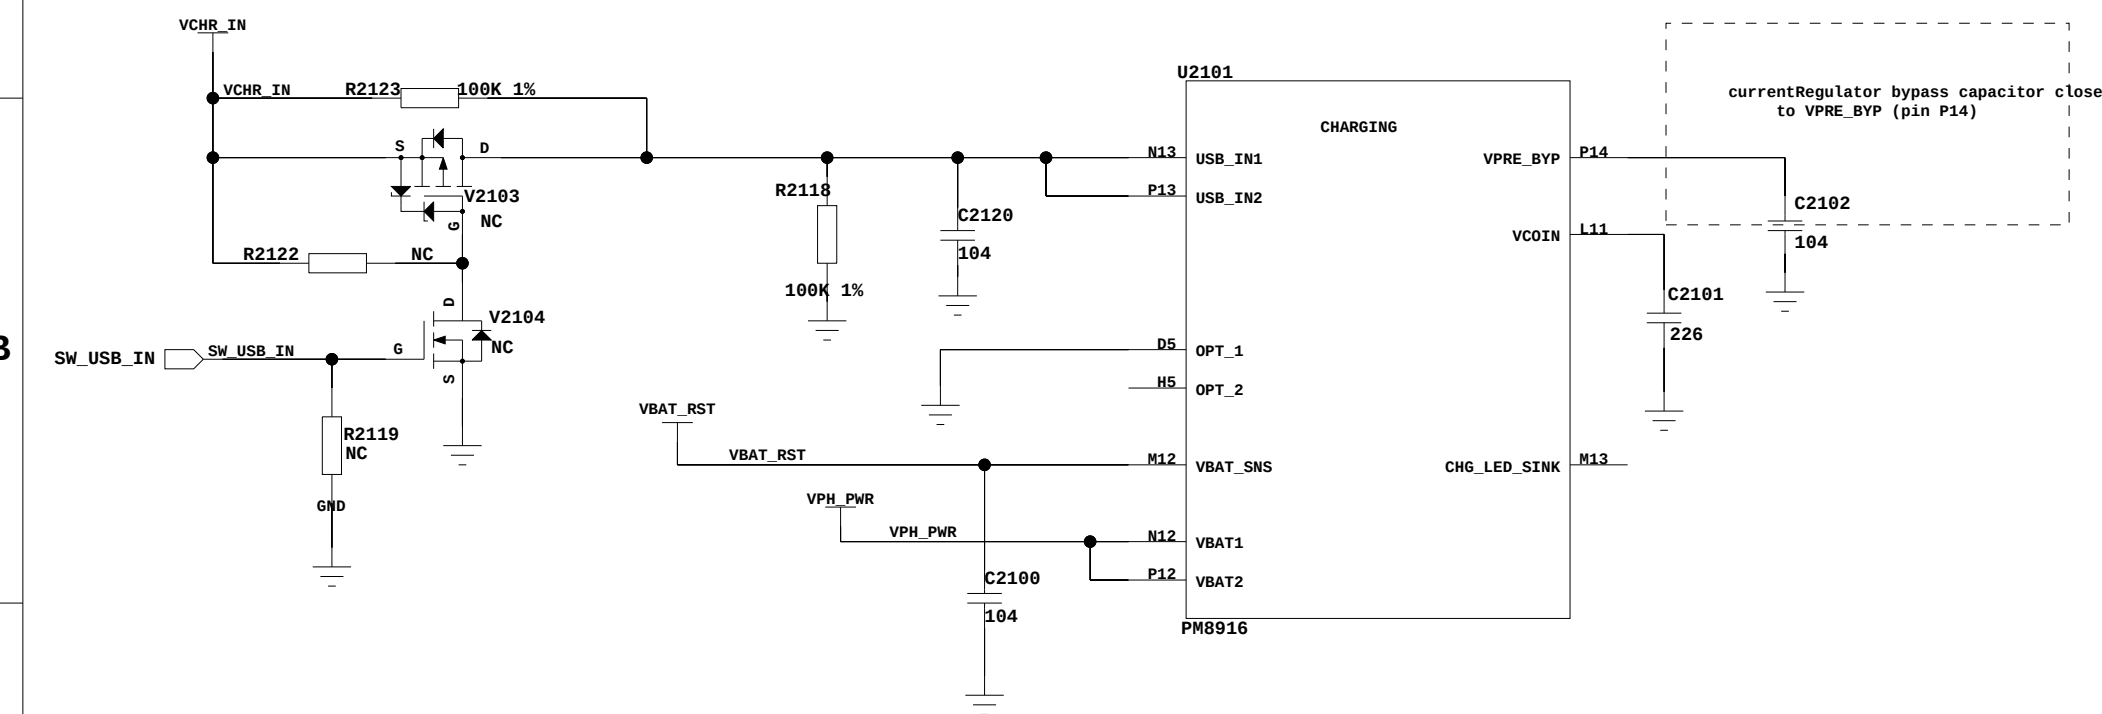


GPIO&MPP

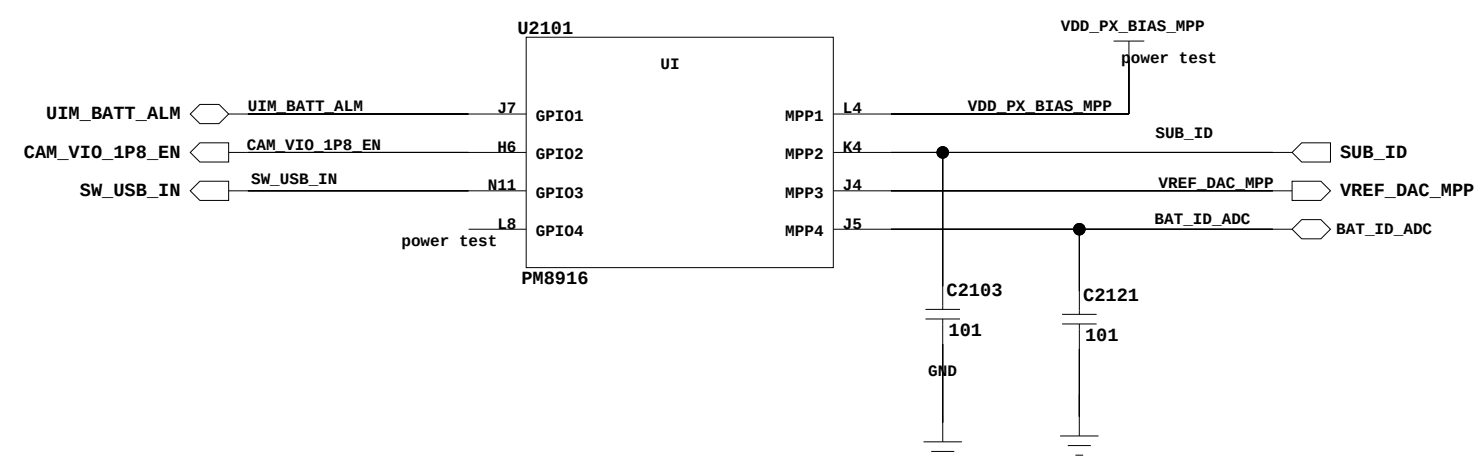


BATT CONNECTOR

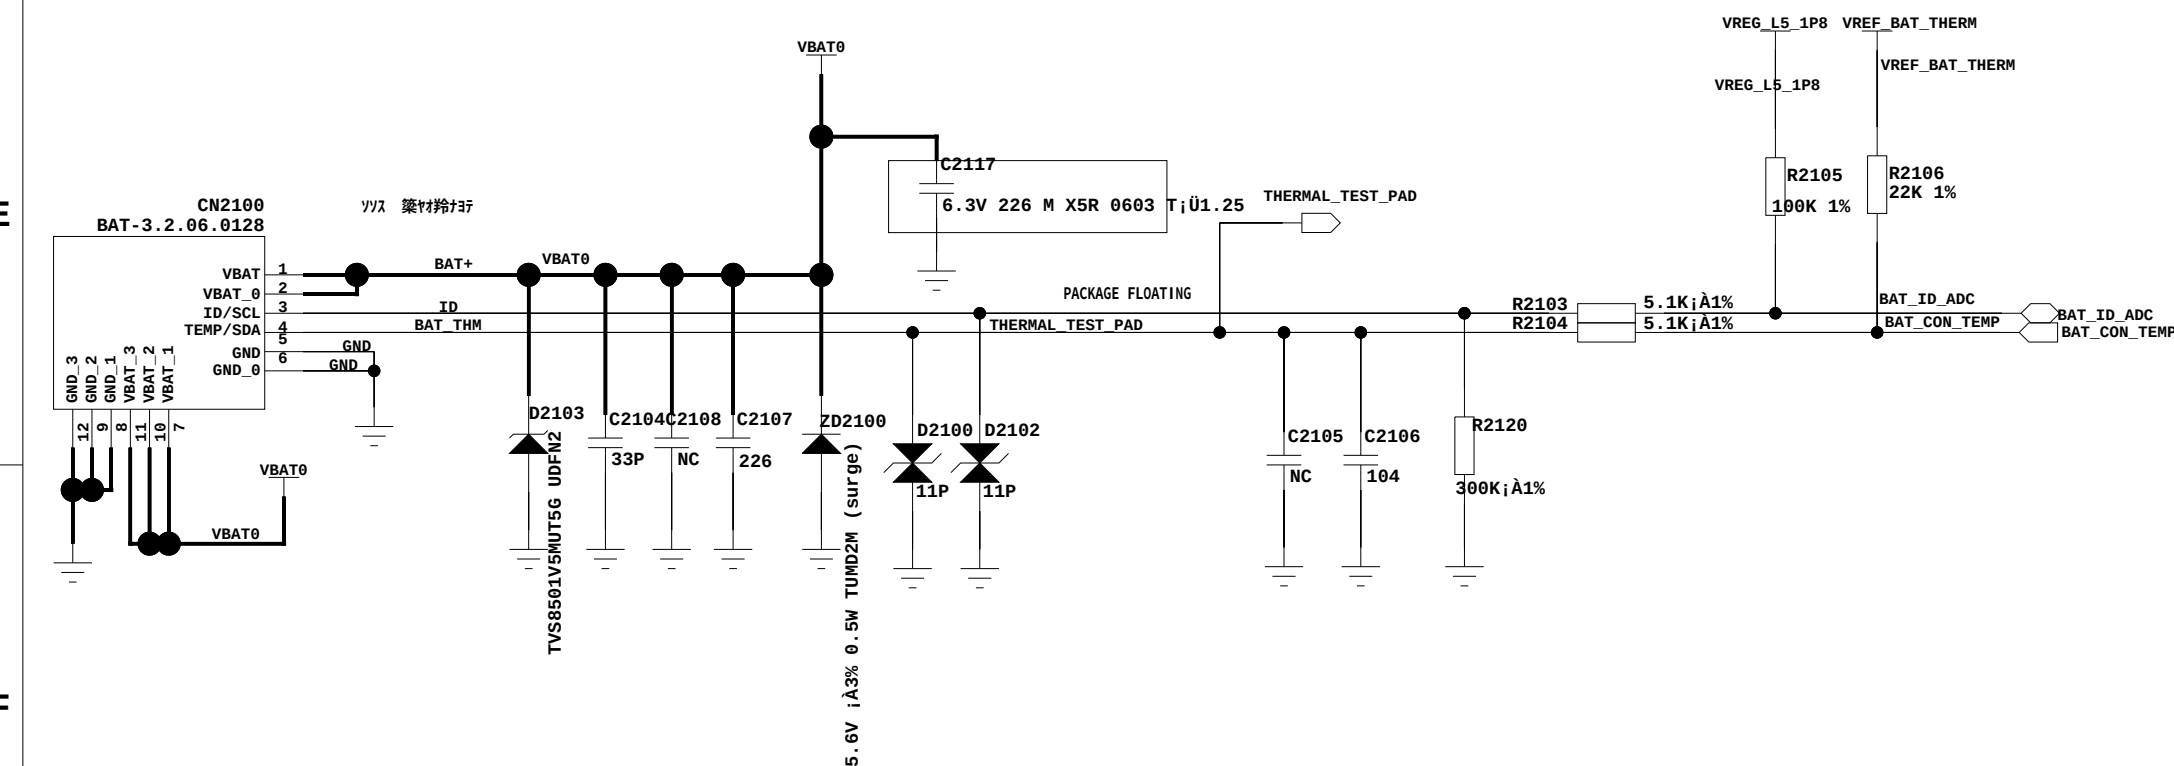

Circuit of Ext. Charge



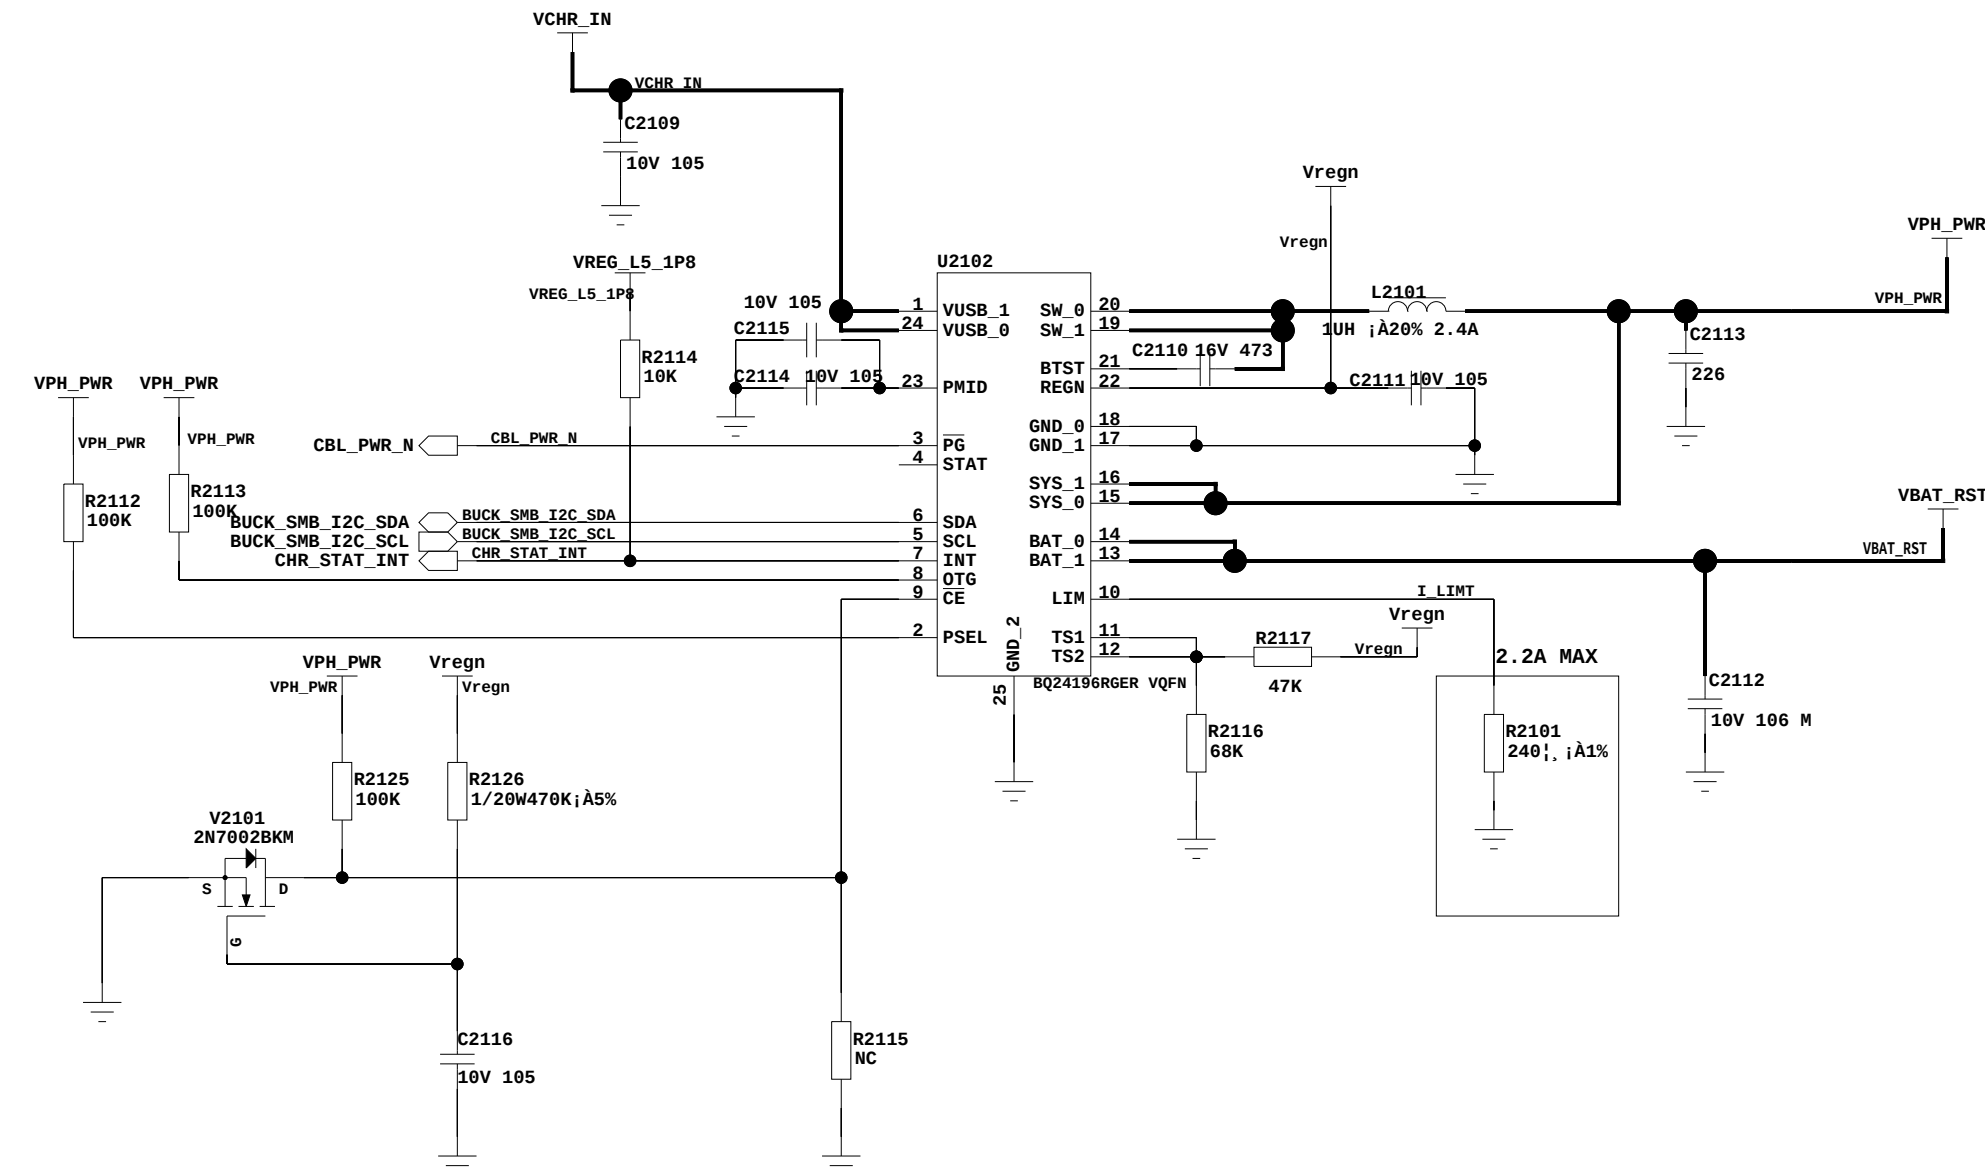



PM8916 GND

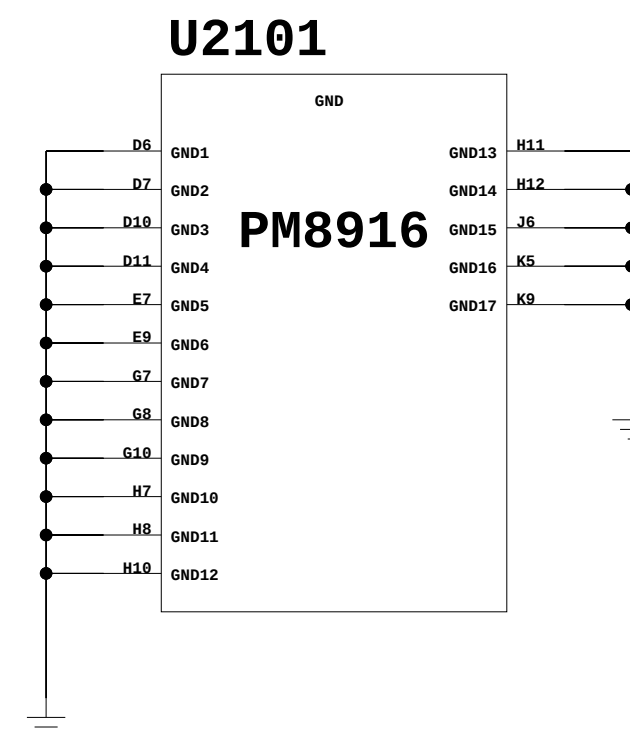


Approved By



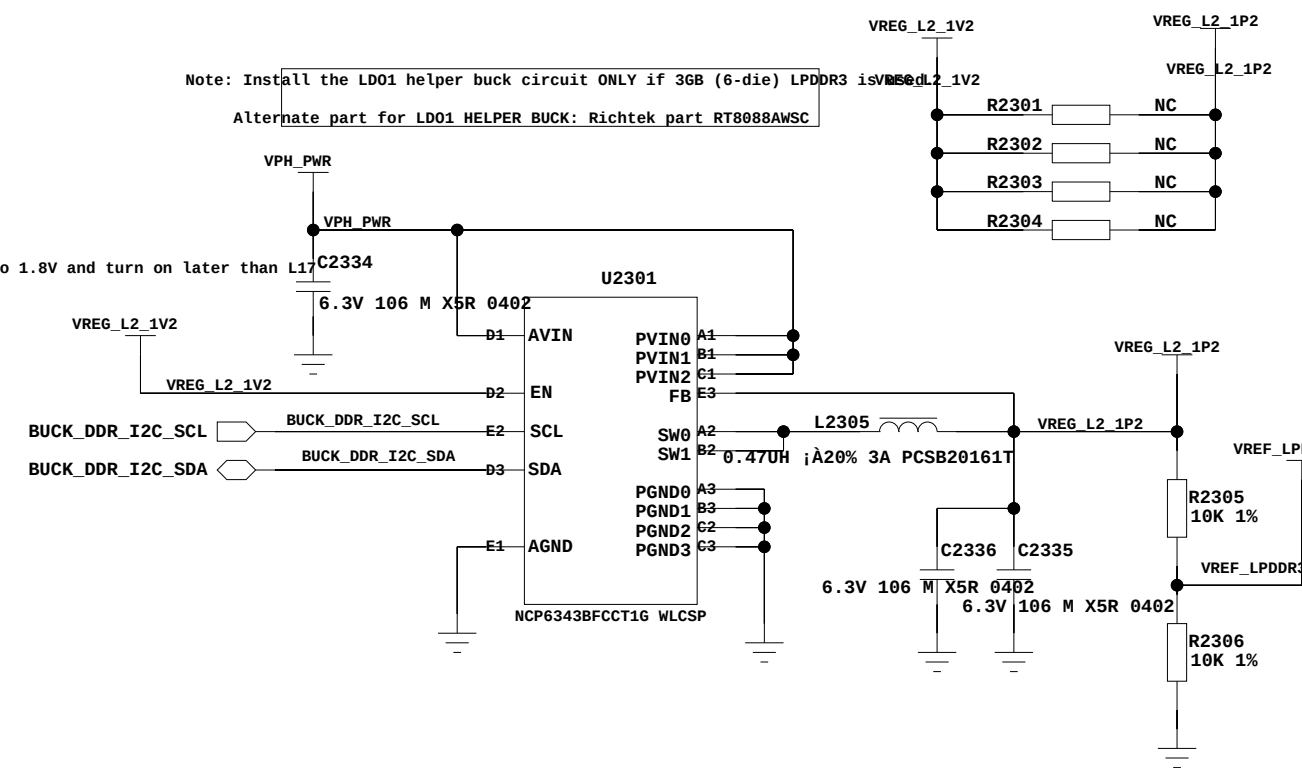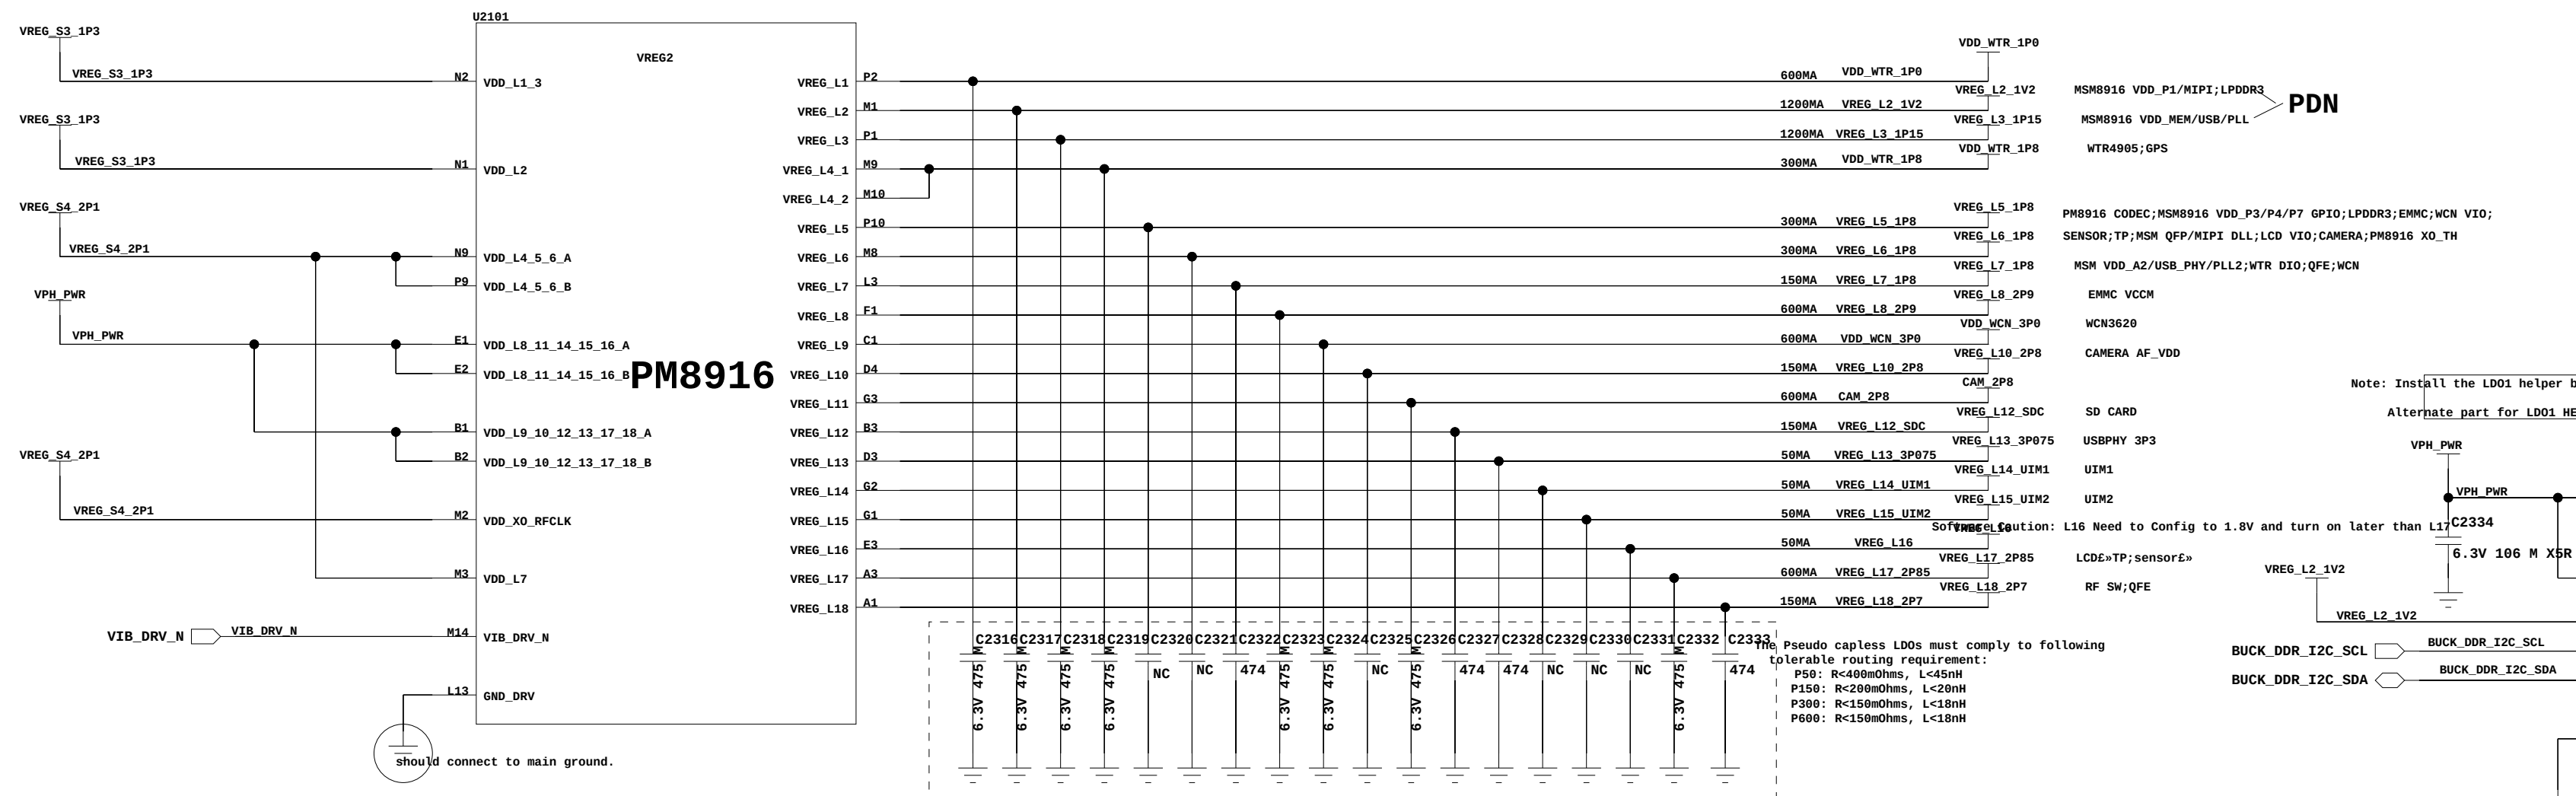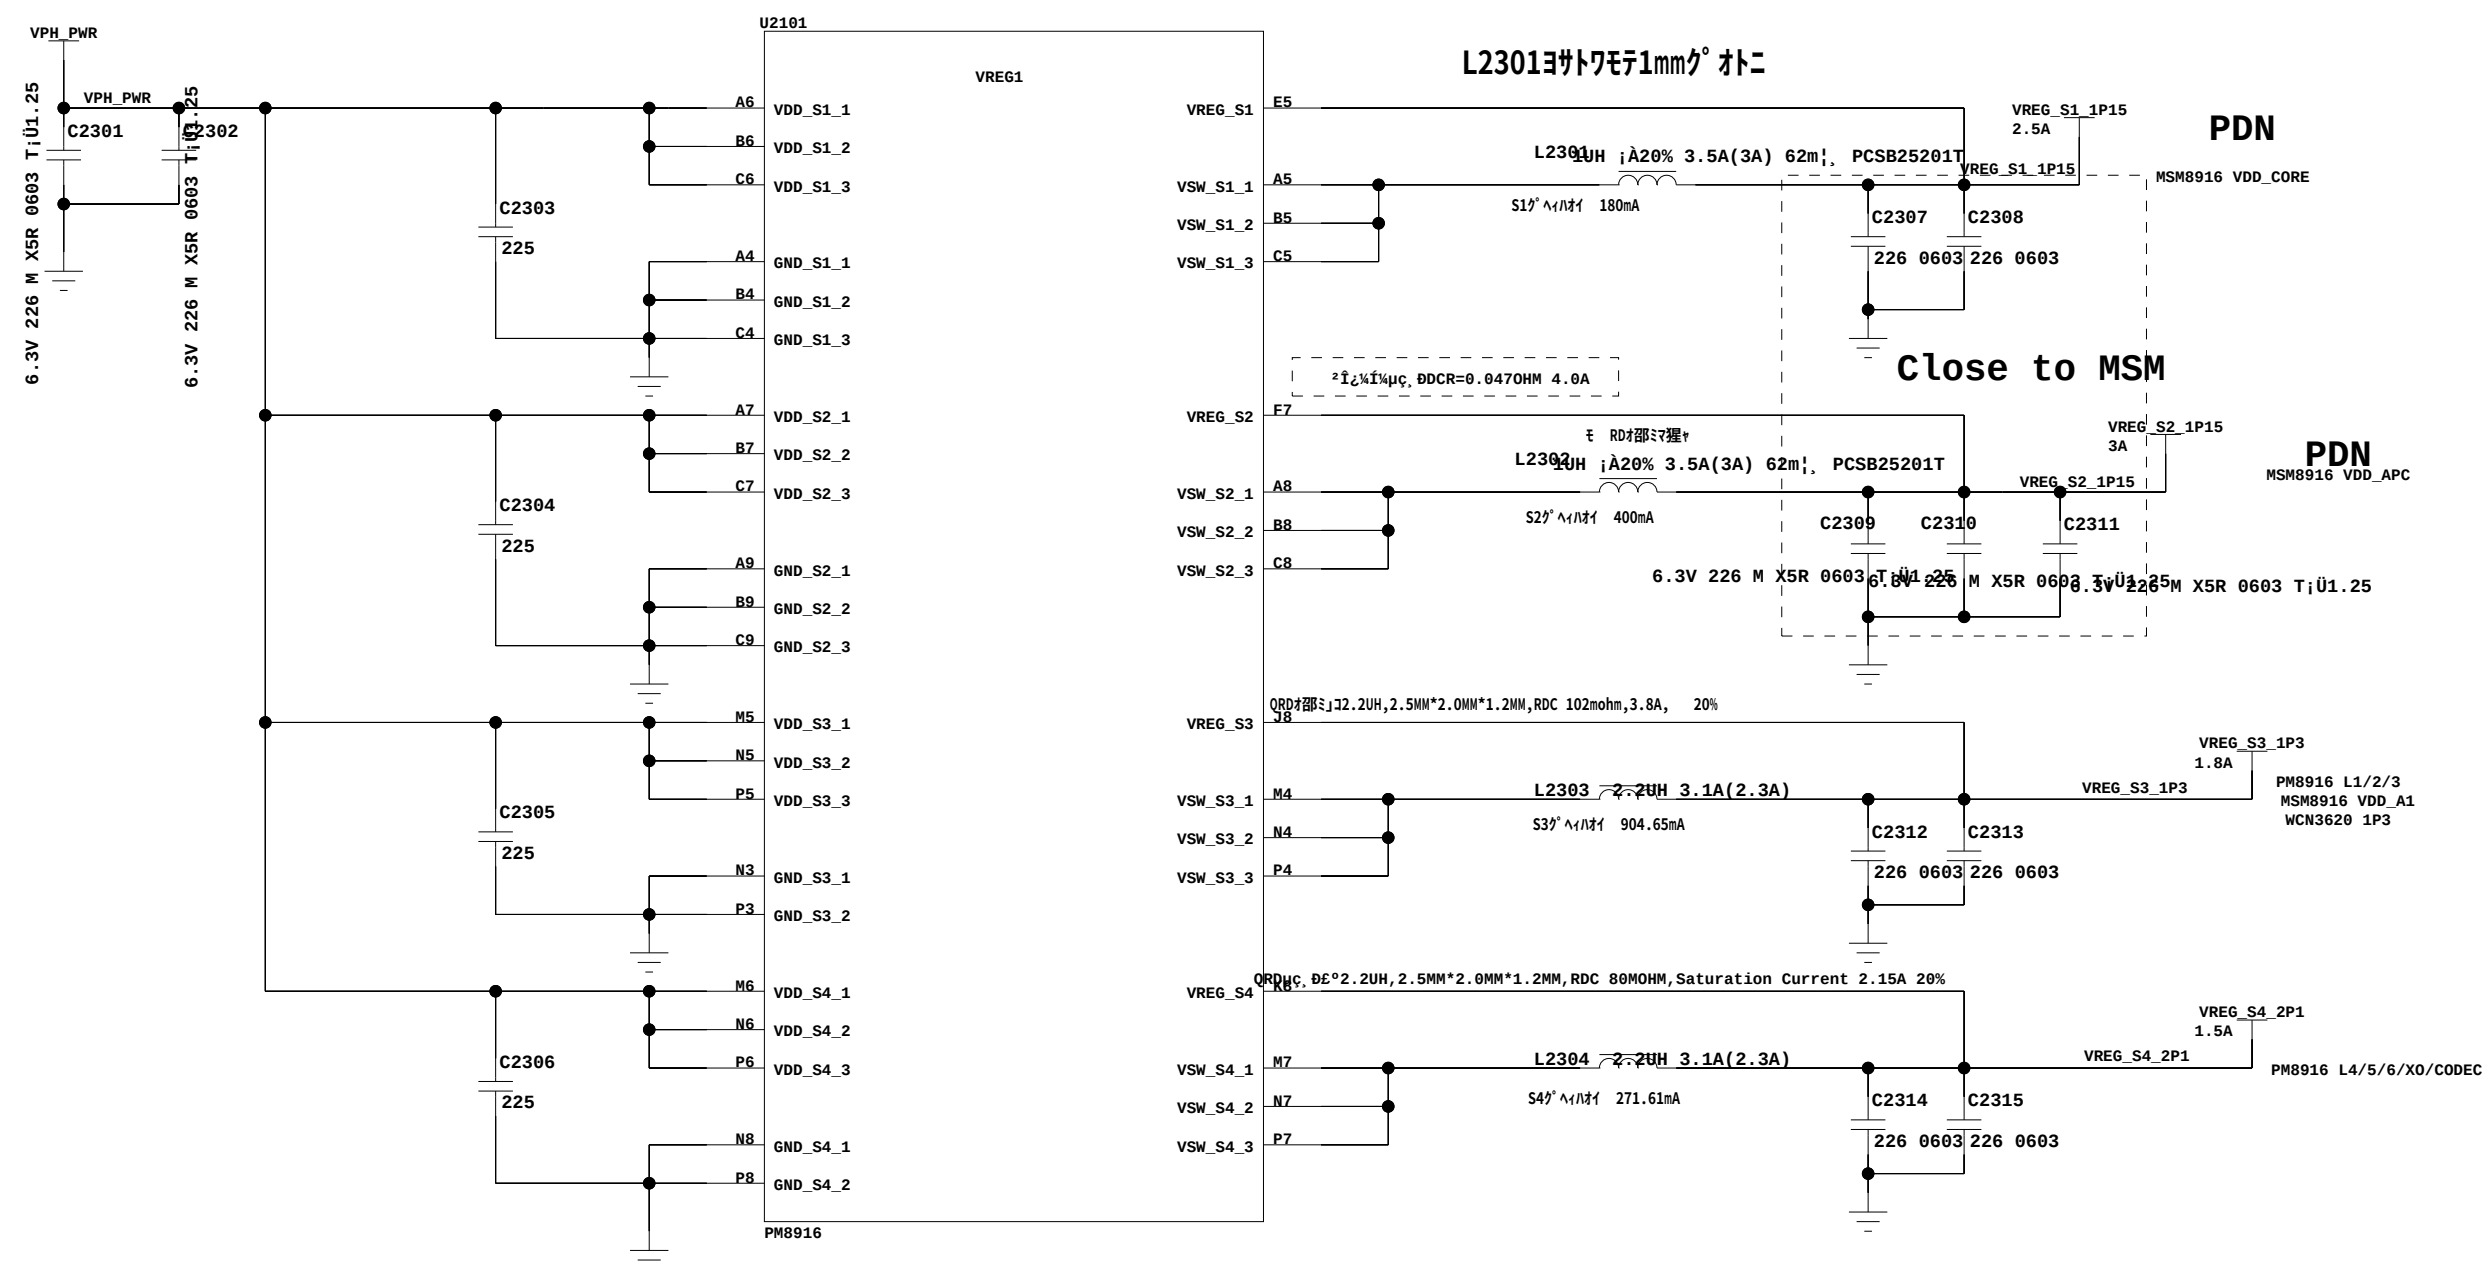

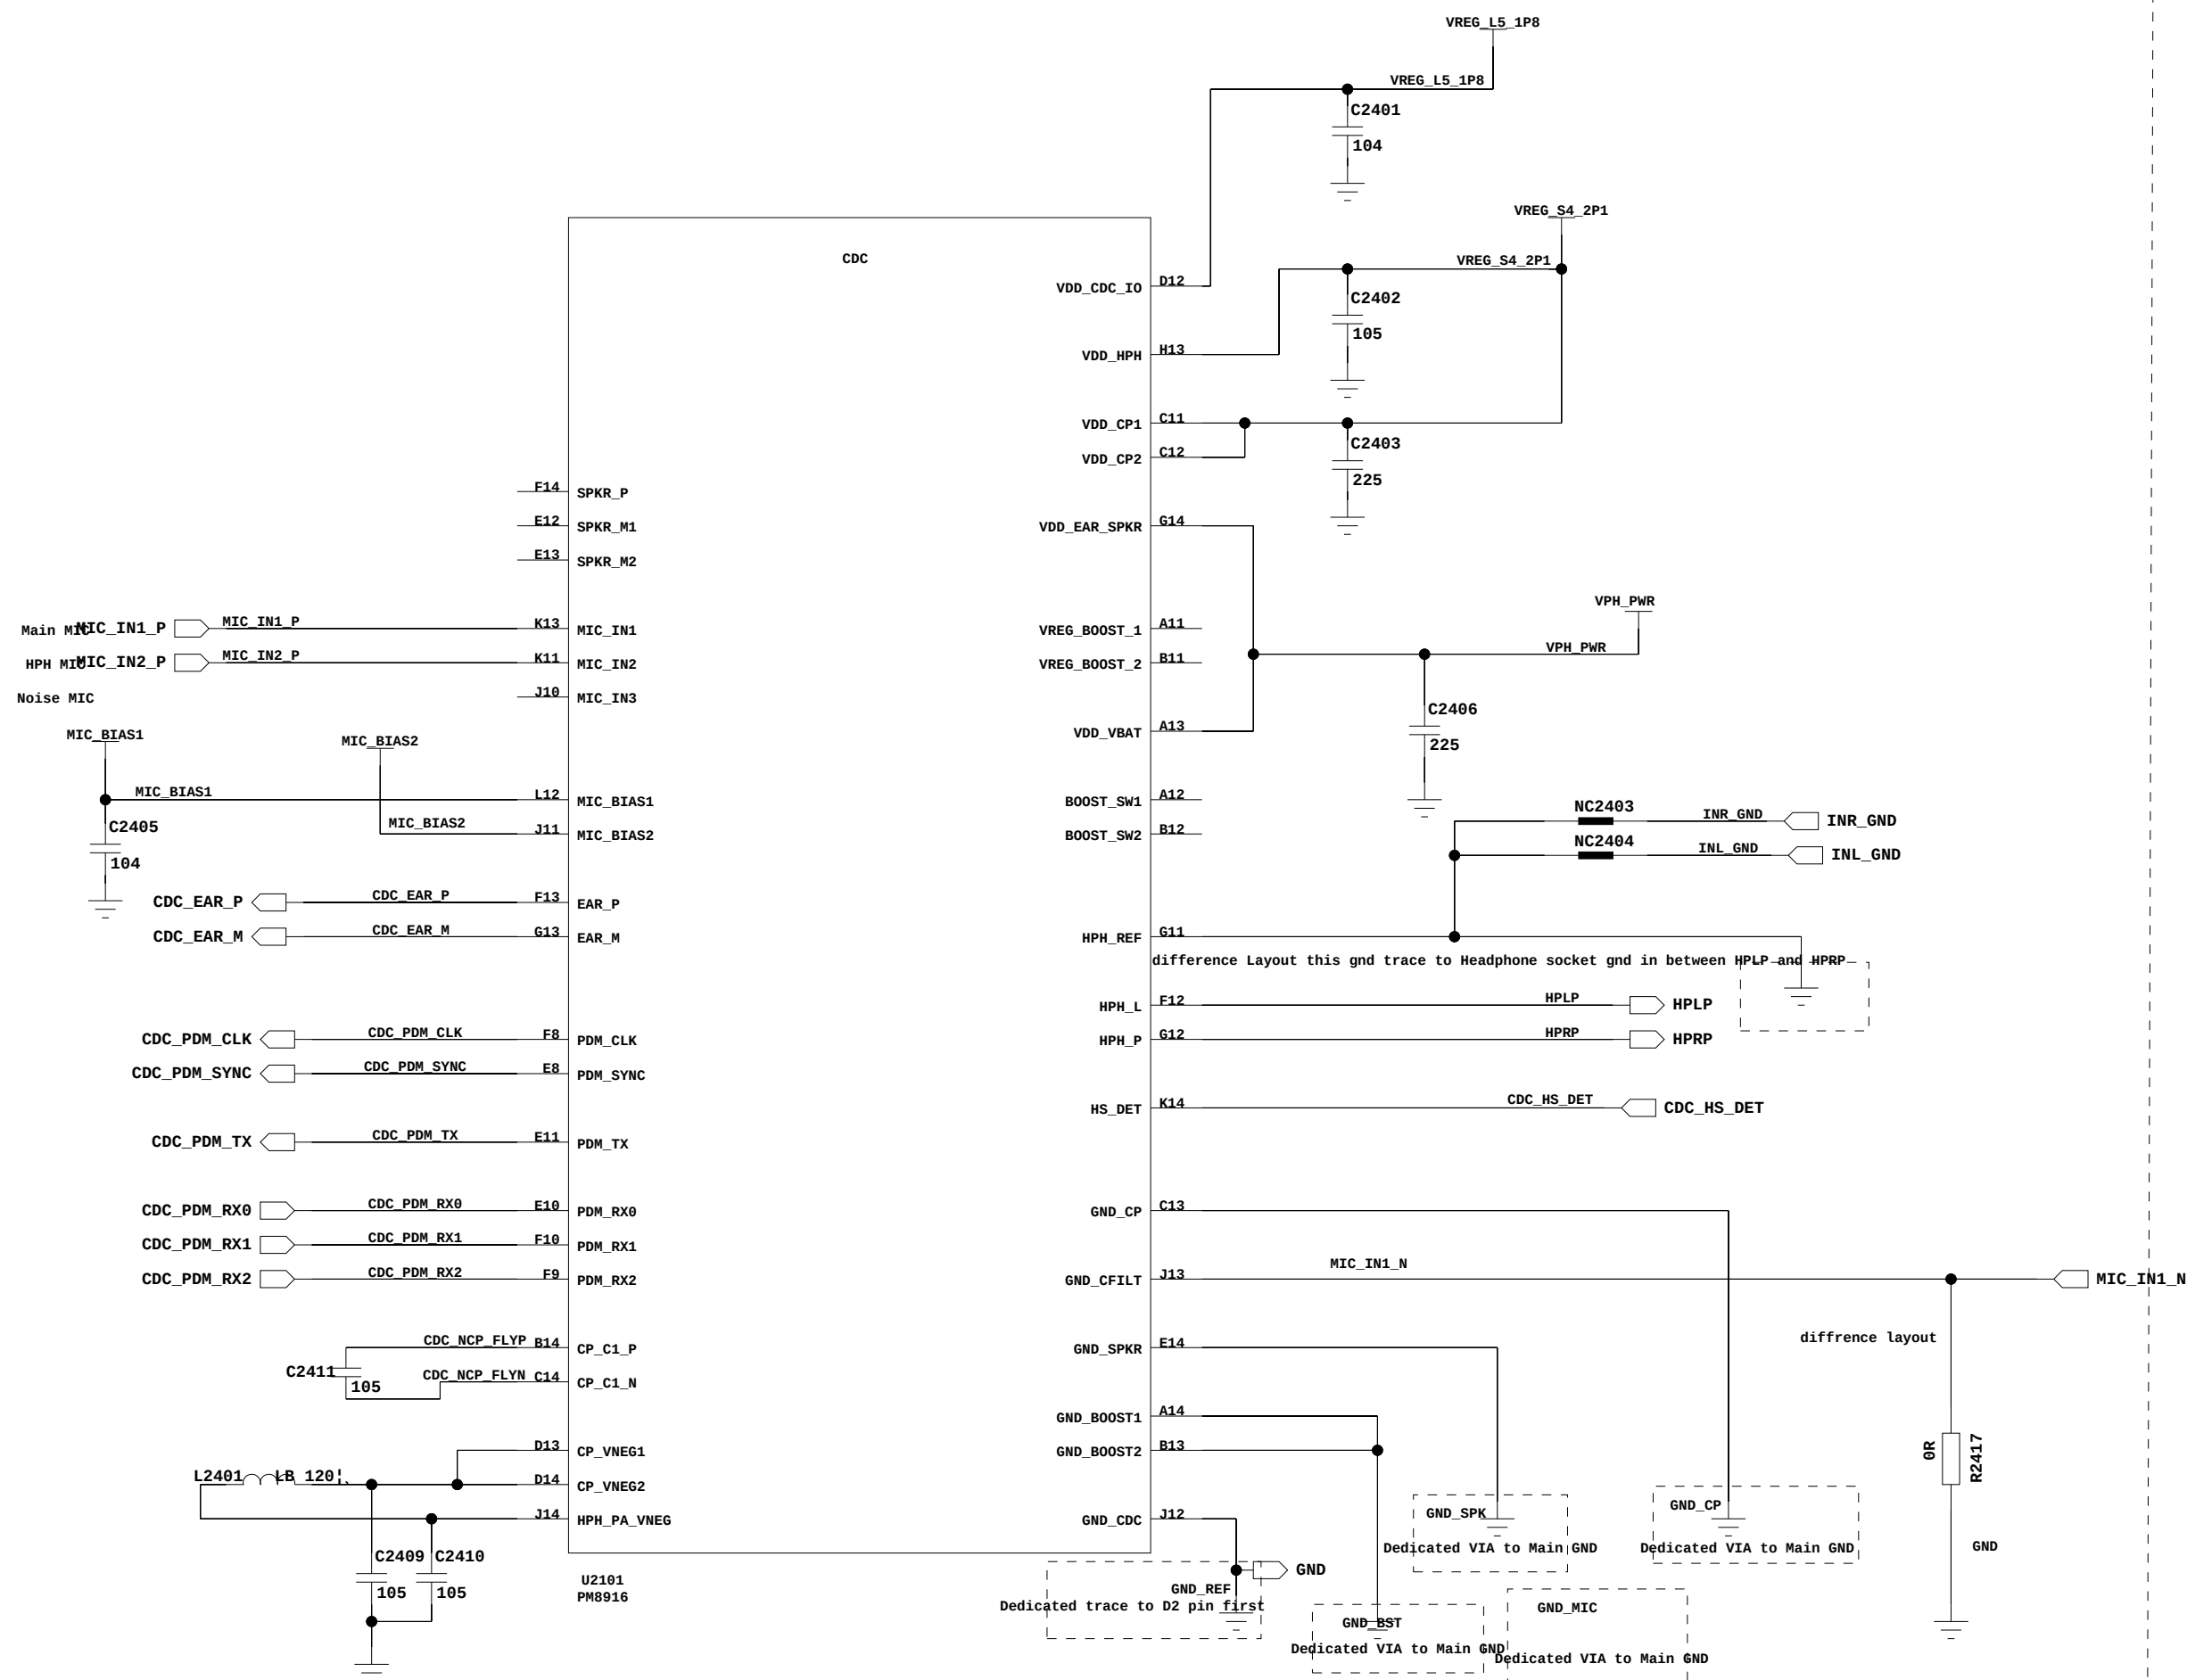


Please connect C13, E14, A14, B13 individually to the main ground directly

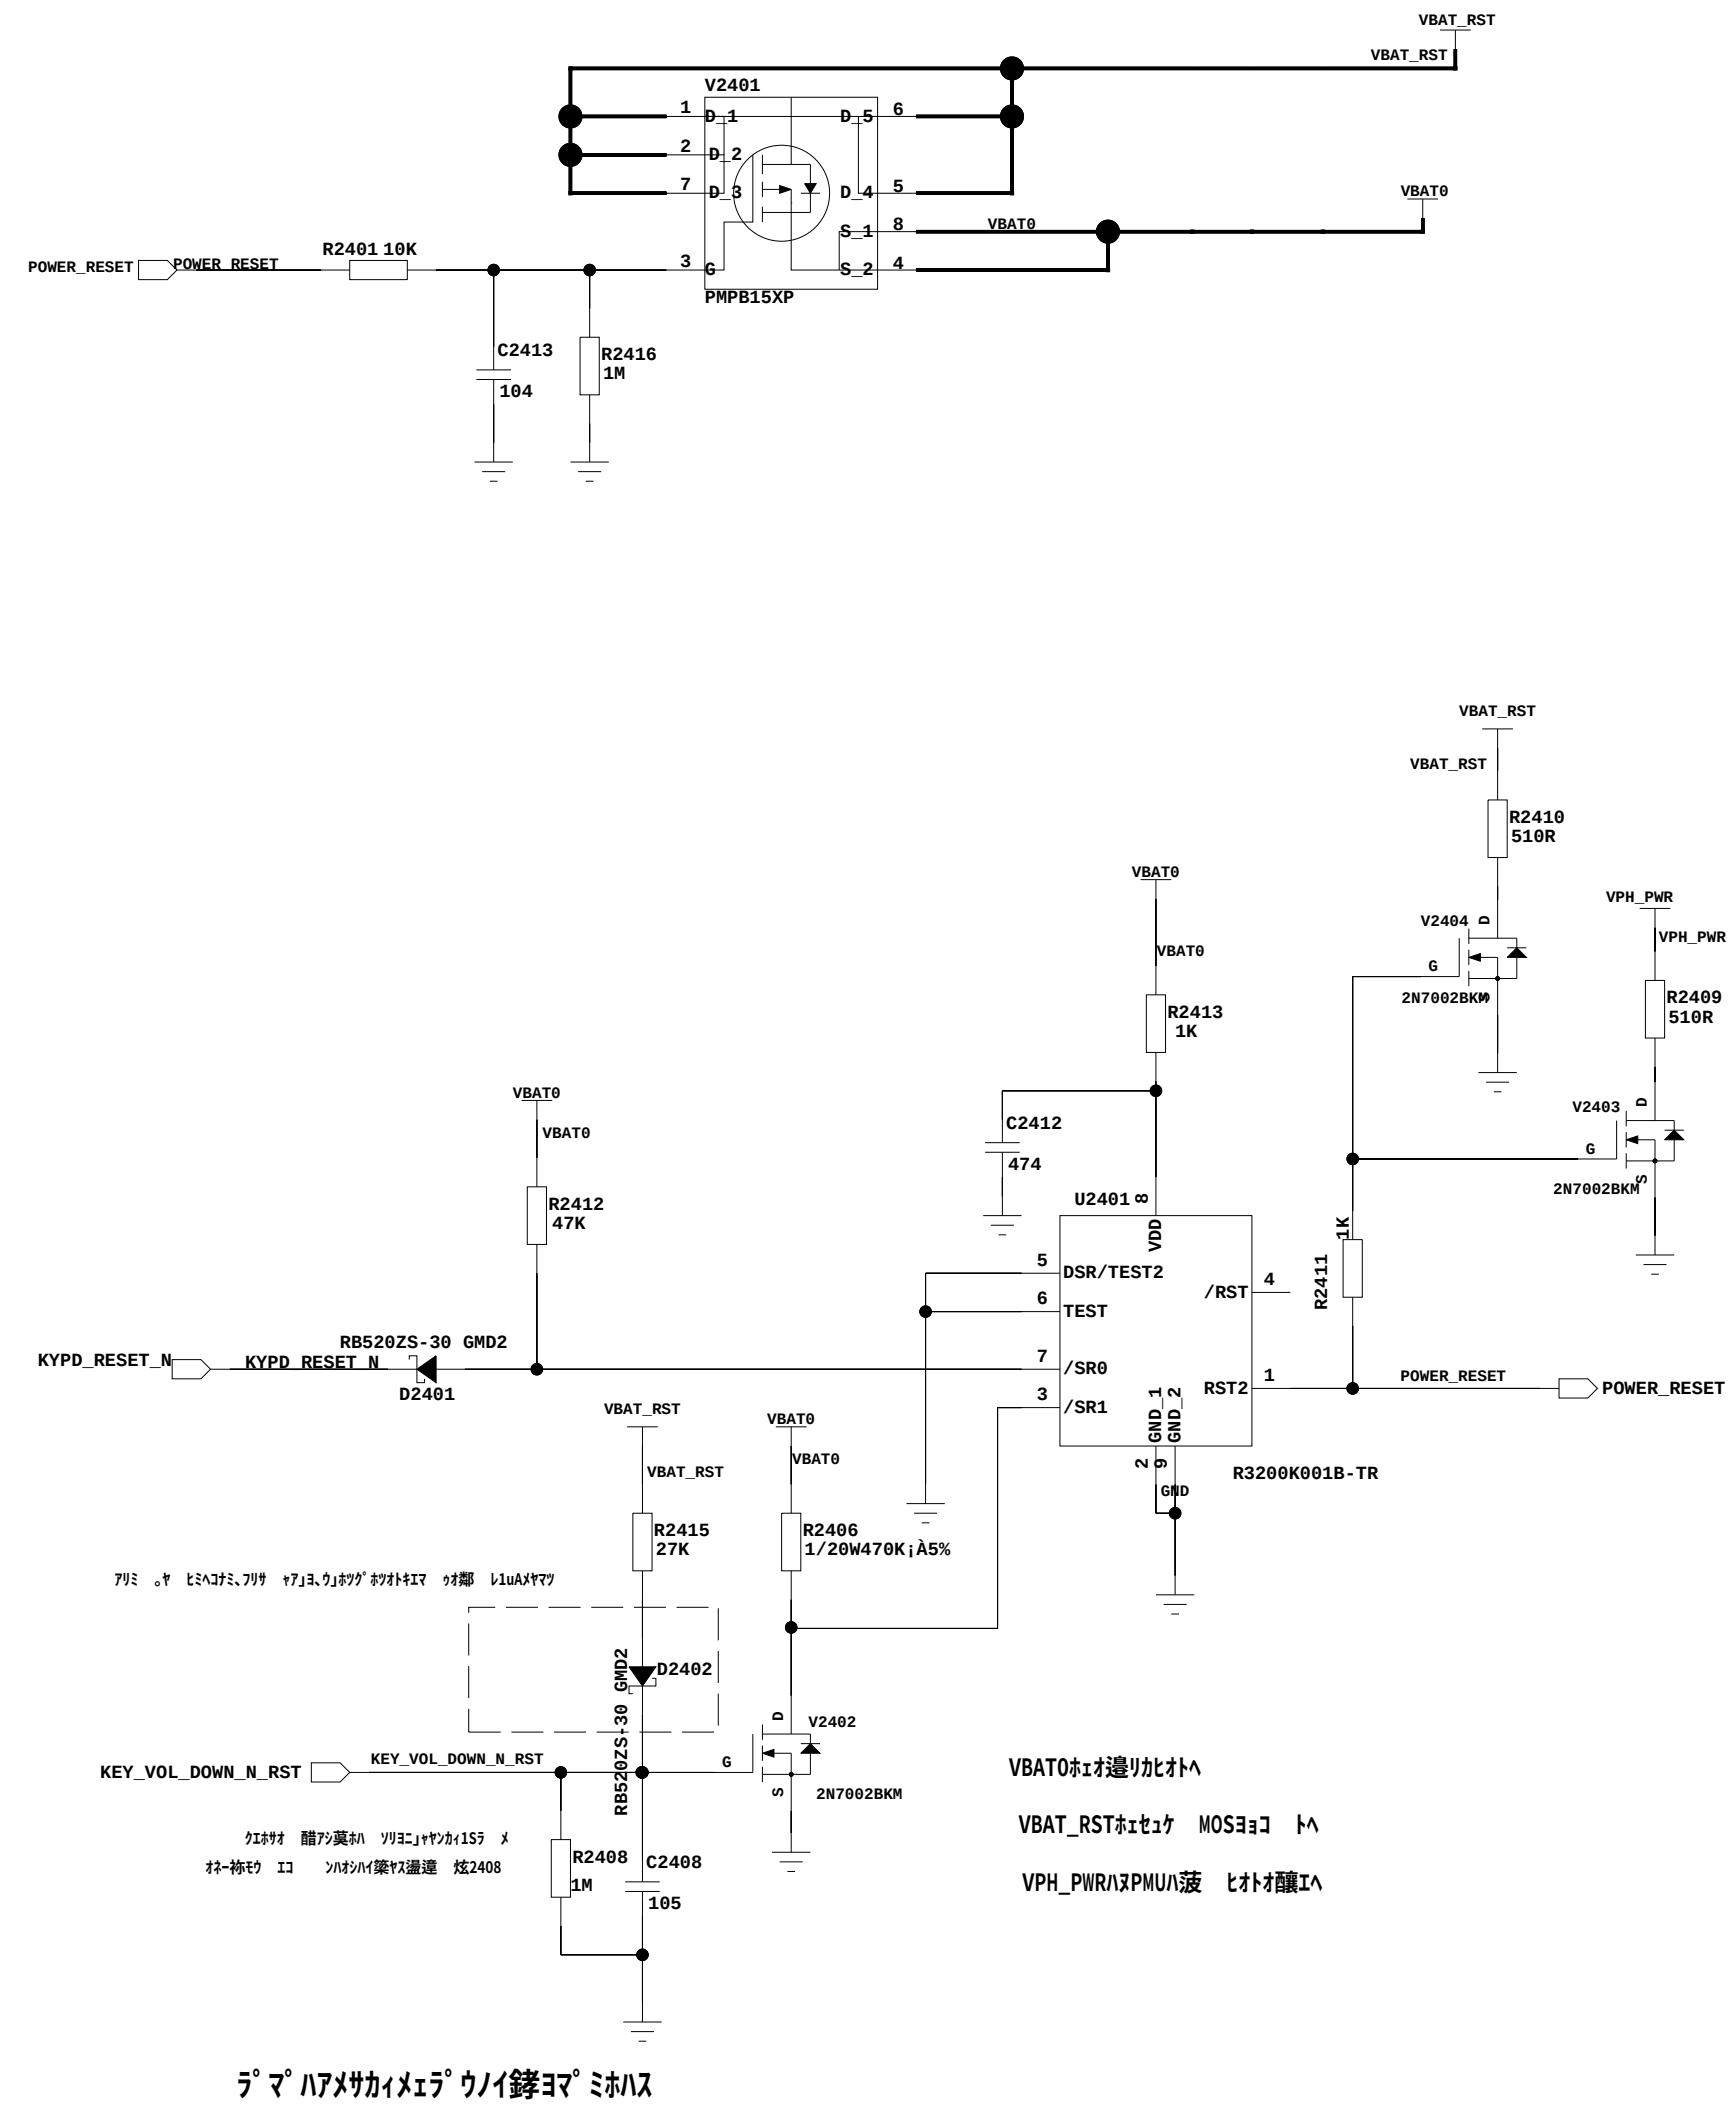

ラ° マ° ハアメサカイメエラ° ウノイ鑄ヨマ° ミホハス

ラ° マ° ハアメサカイメエラ° ウノイ鍔ヨマ° ミホハス

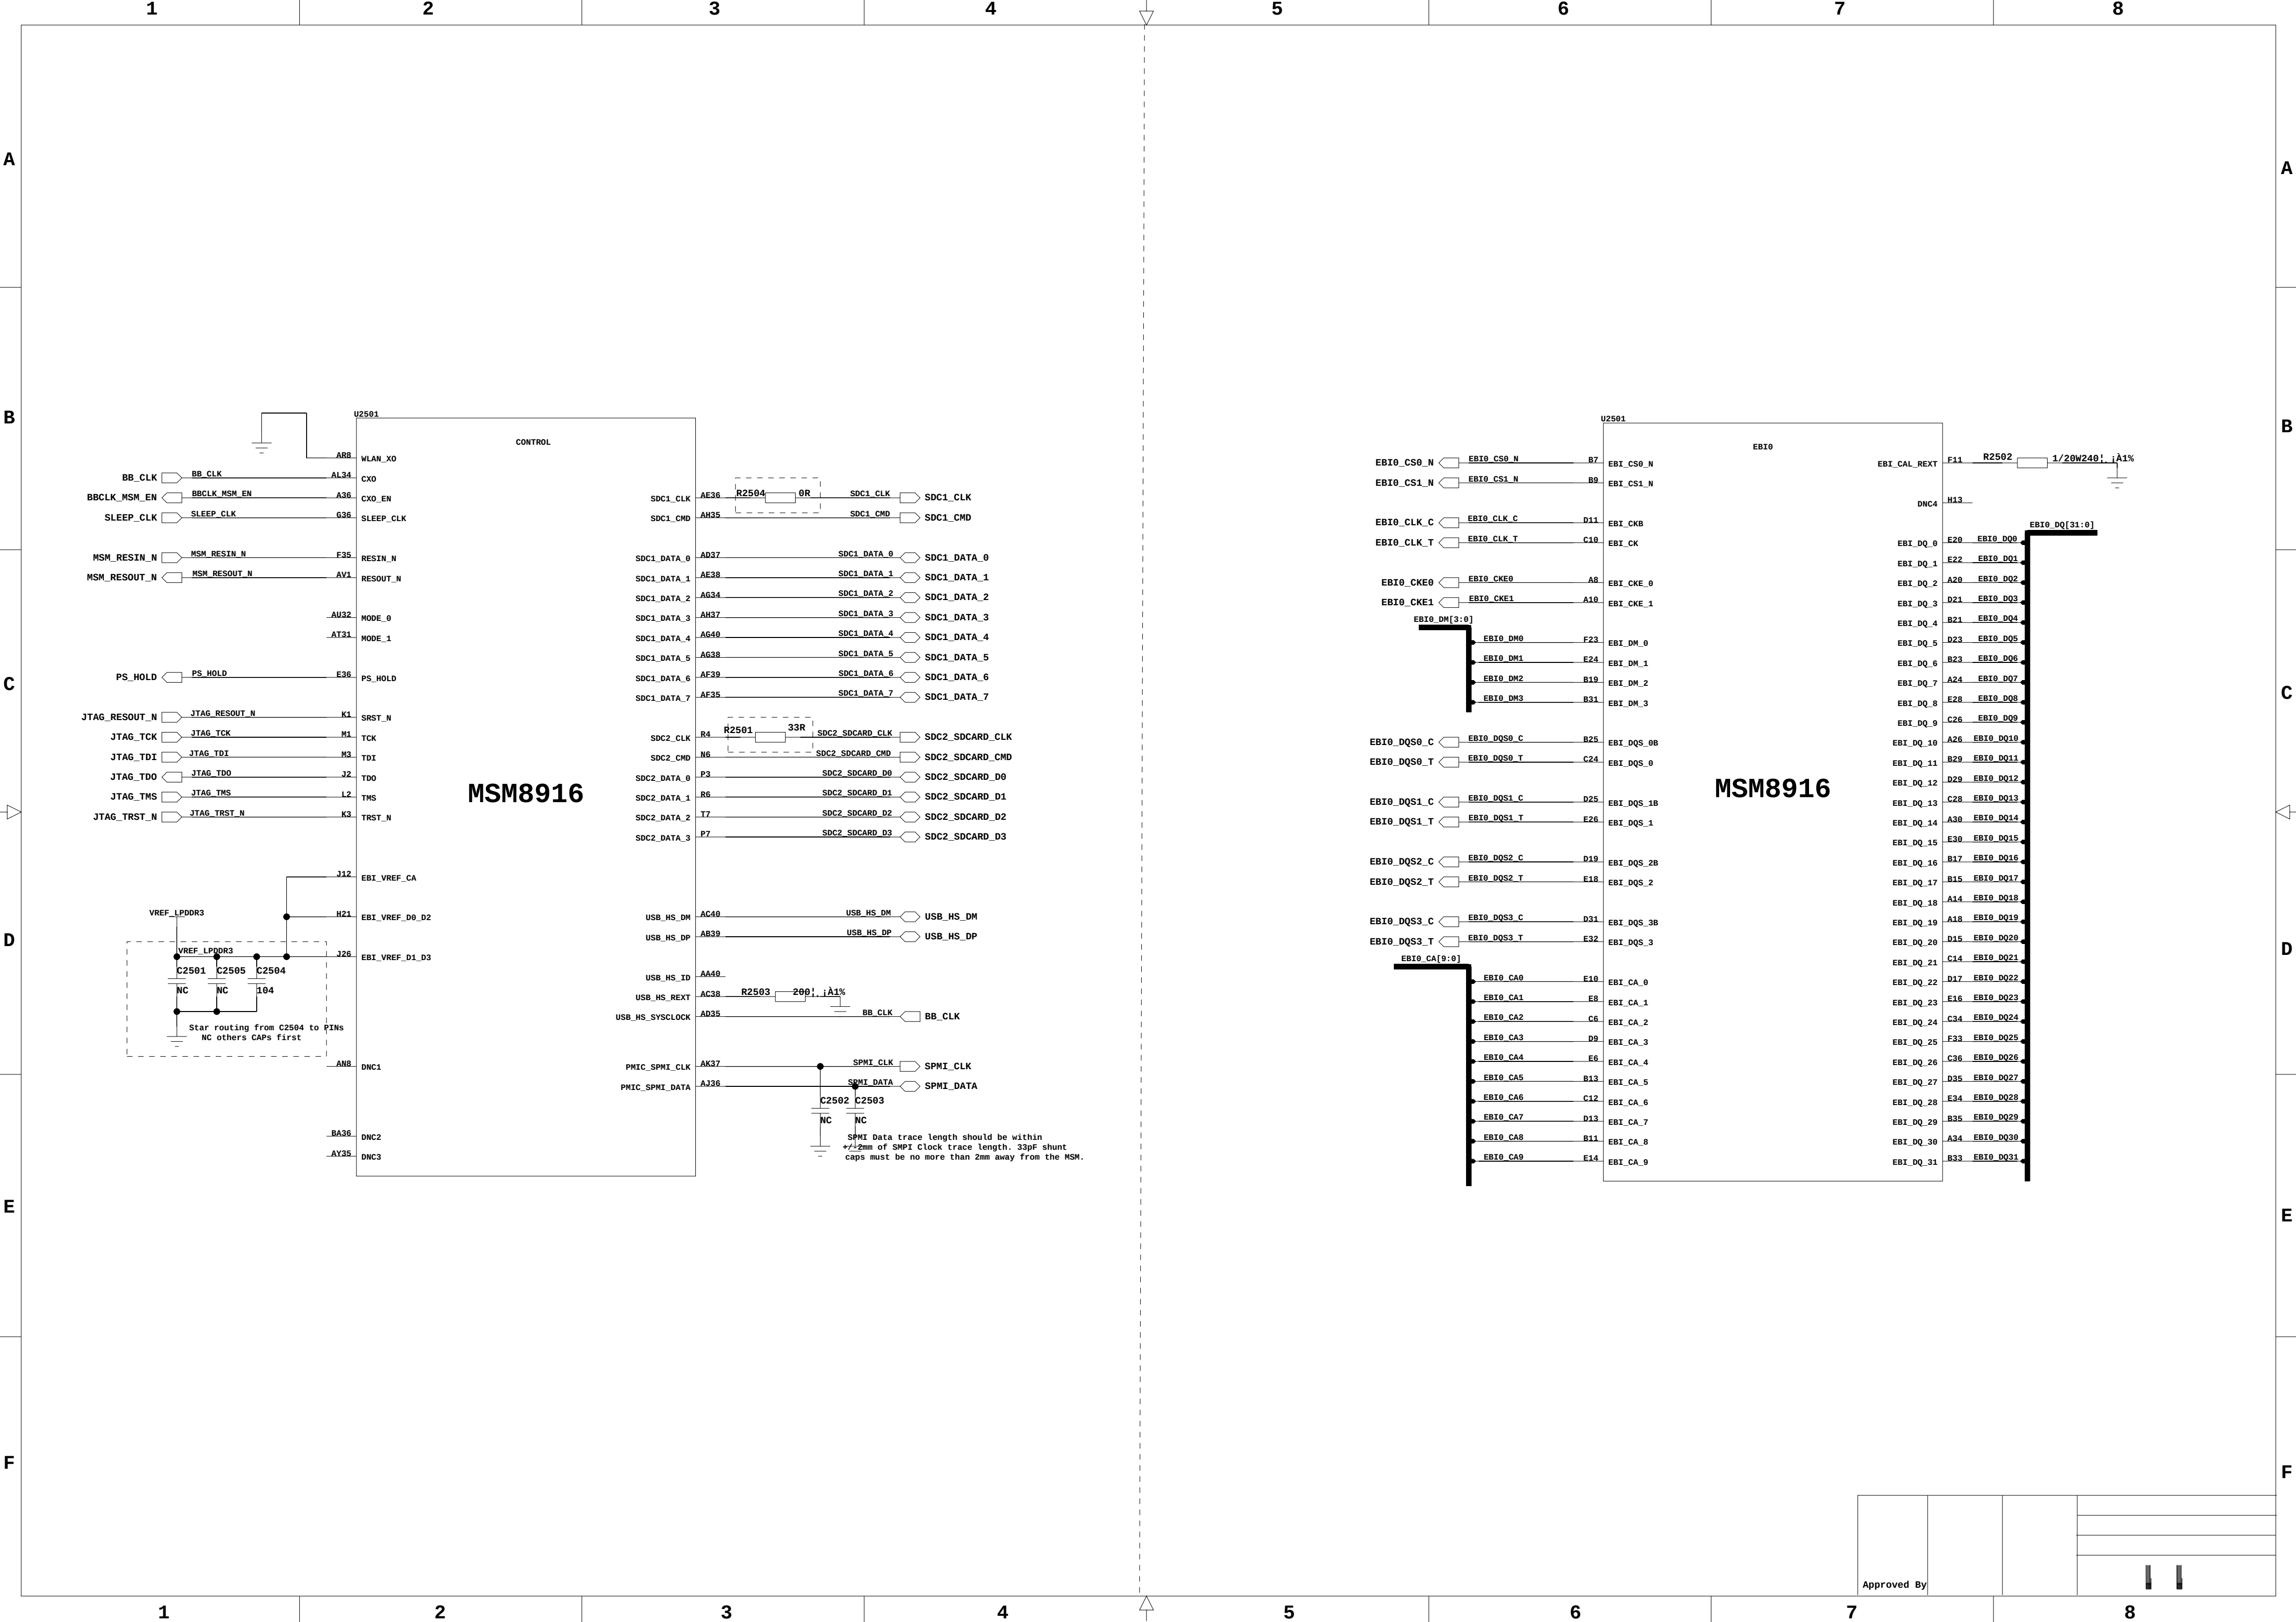

1

2

3

4

5

6


7

8

モジュール 一覧表


部品番号	モジュール名	HW_VER_5	HW_VER_4	HW_VER_3
15393	4G01A	1	1	0
15397	4G01E	0	0	1
15398	4G01K	0	1	0
15399	4G01A	1	0	0

モジュール名	HW_VER_2	HW_VER_1
-SA Ver1.0	1	1
-SB Ver1.1	1	0
-0 Ver1.2	0	1
-1 Ver1.3	0	0


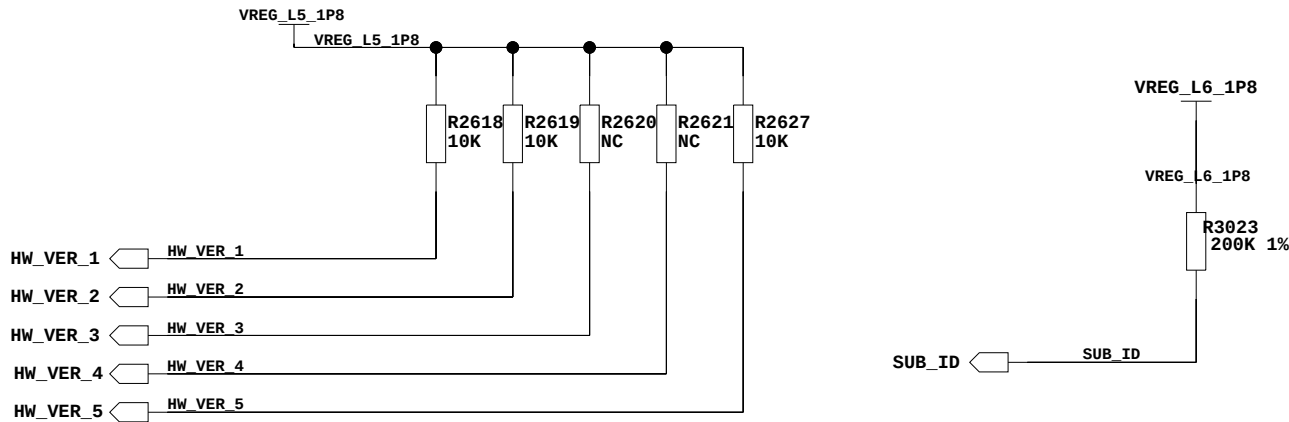


メモリー 拡張 機能


GPIO 111 will be in O/P mode on Power On Reset, After Power On Reset, SW can configure

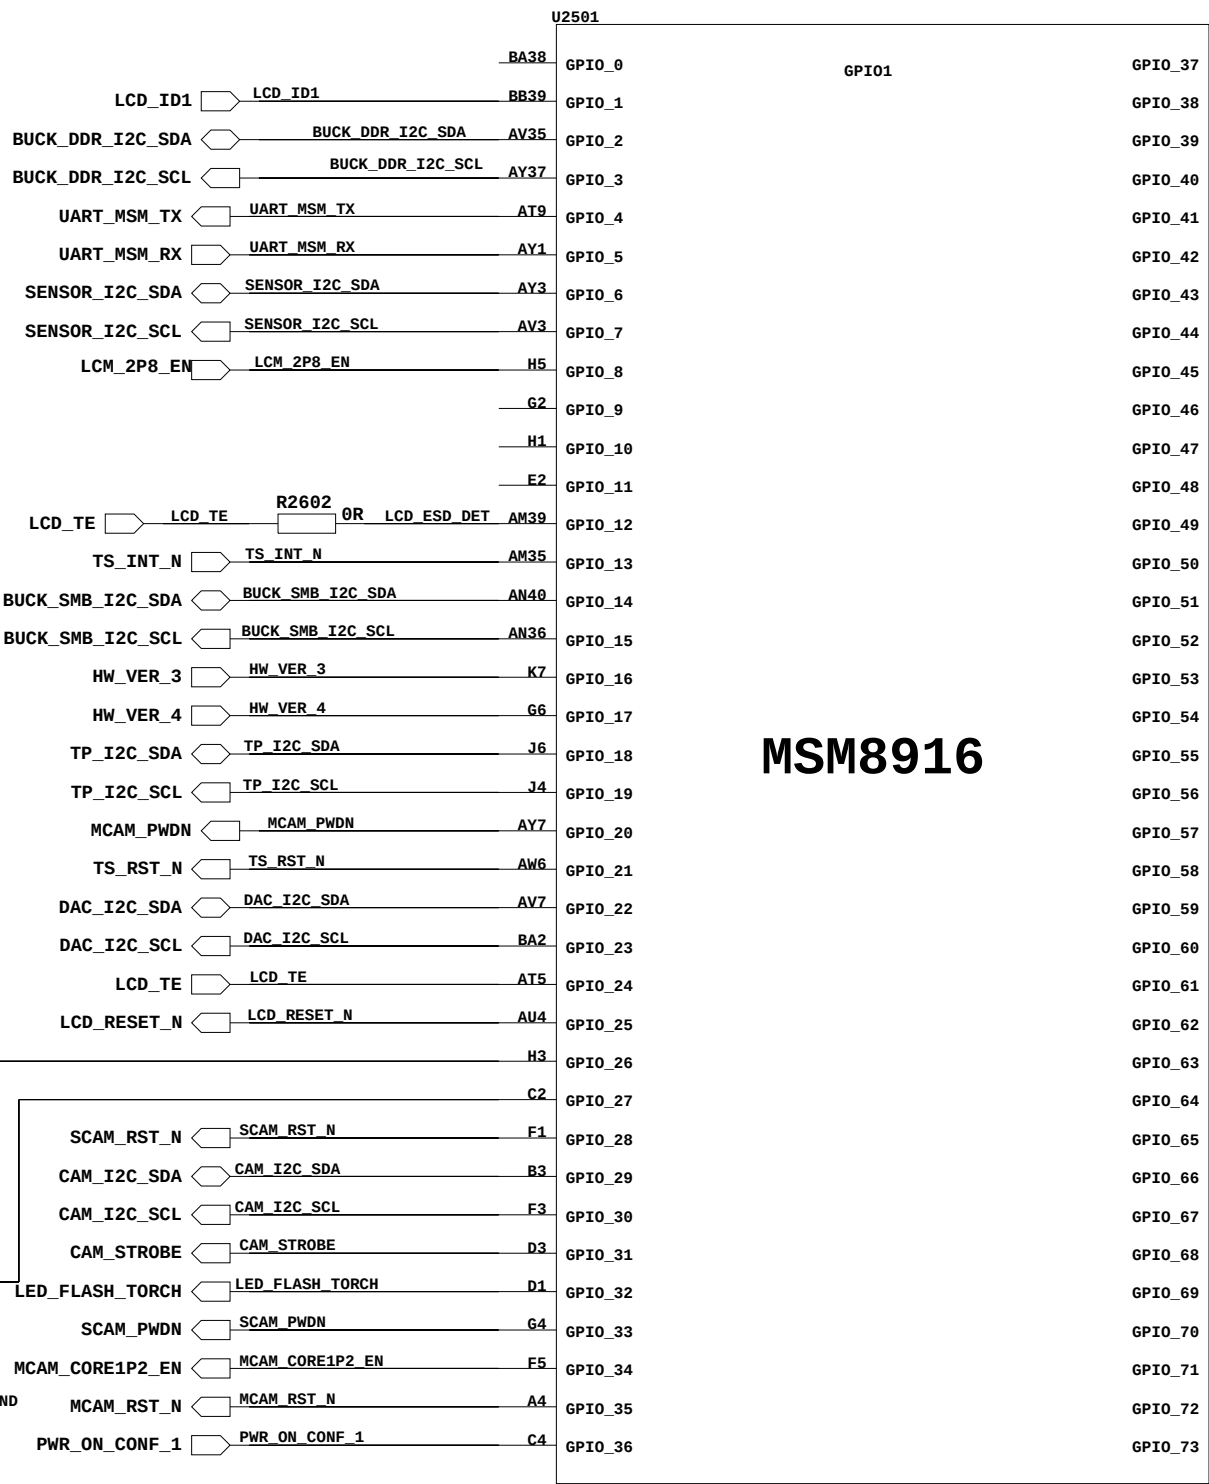

MSM8916

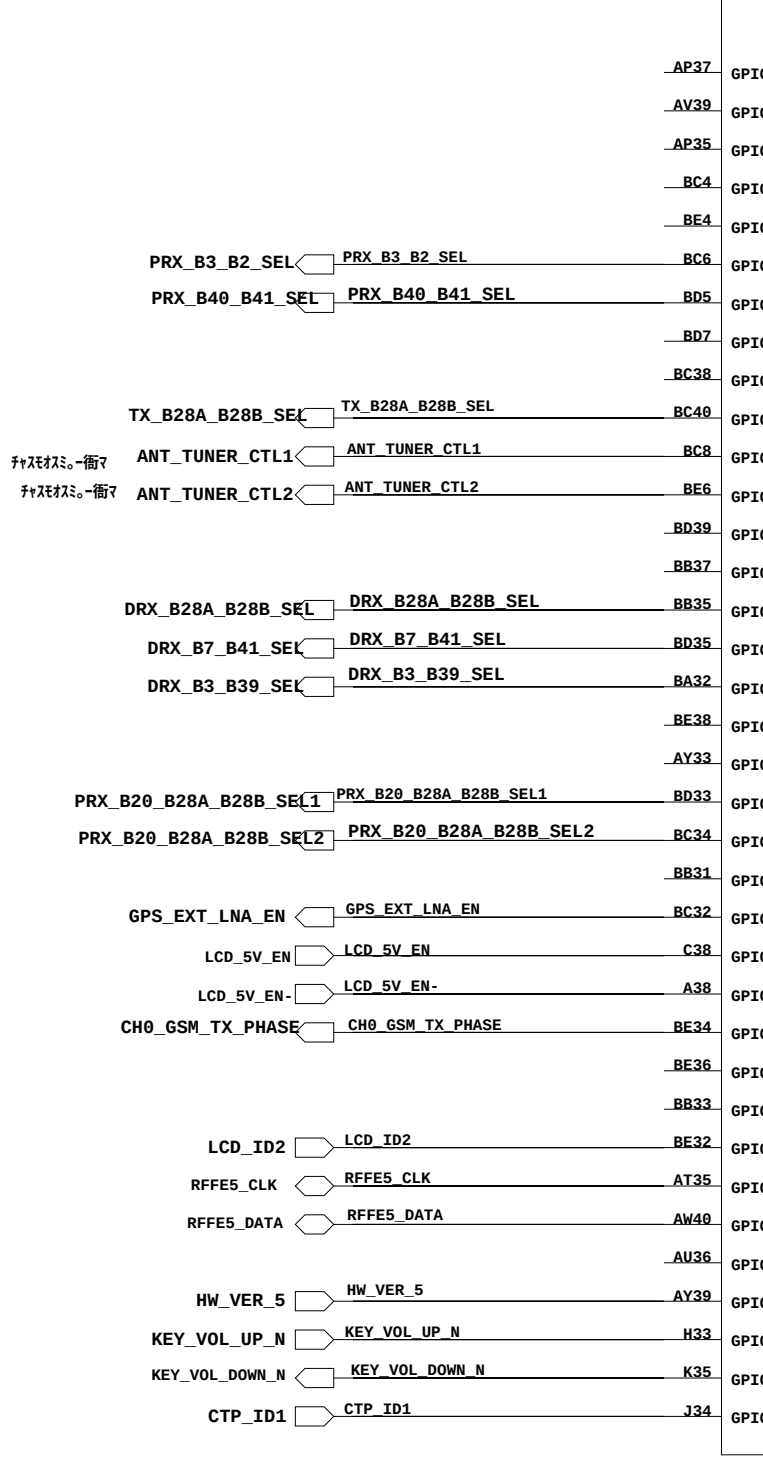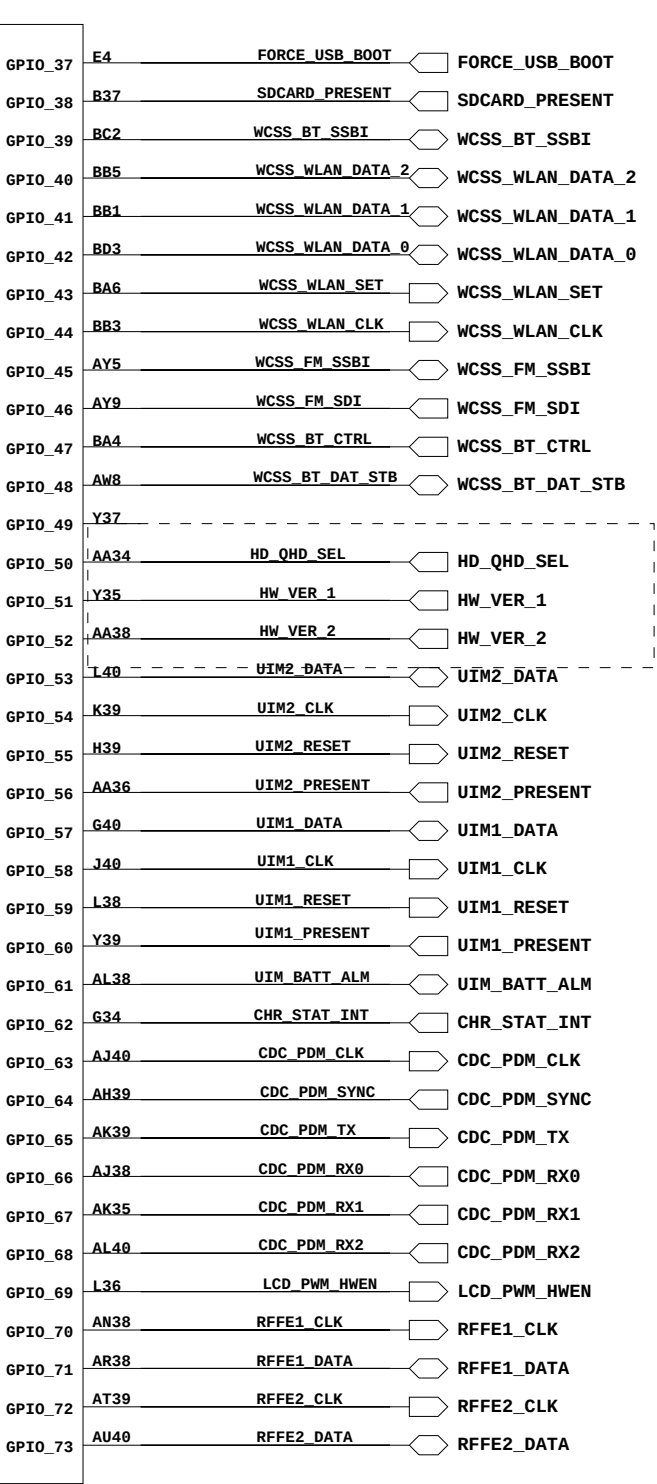

MSM8916

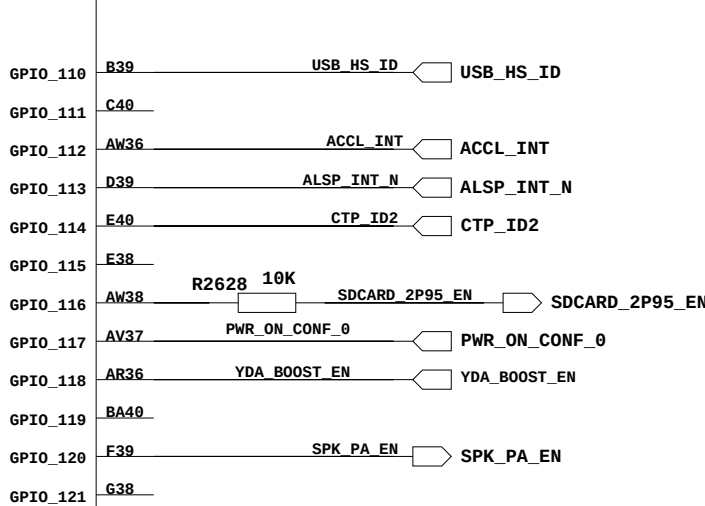

A

A

B

B

C

C

D


D

E

E

F

F

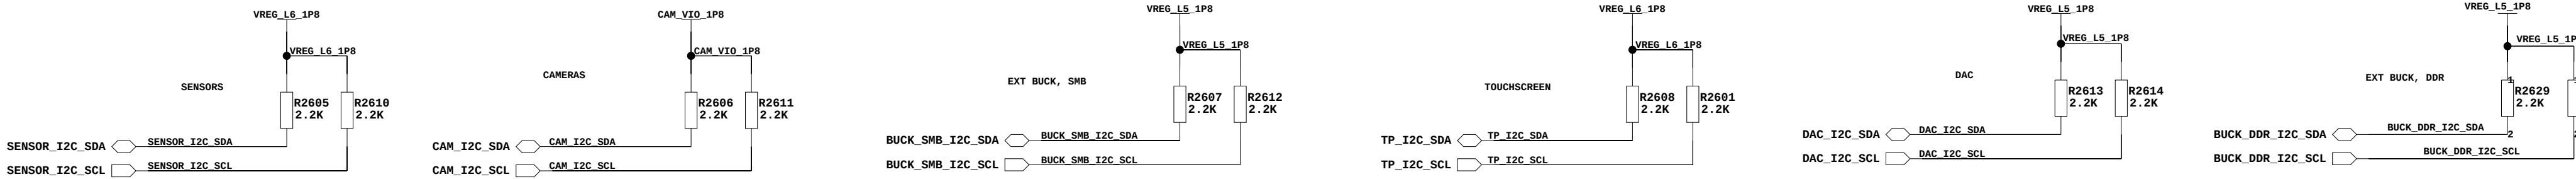

Approved By



A

B

C

D

E

F

A


B

C

D

E

F

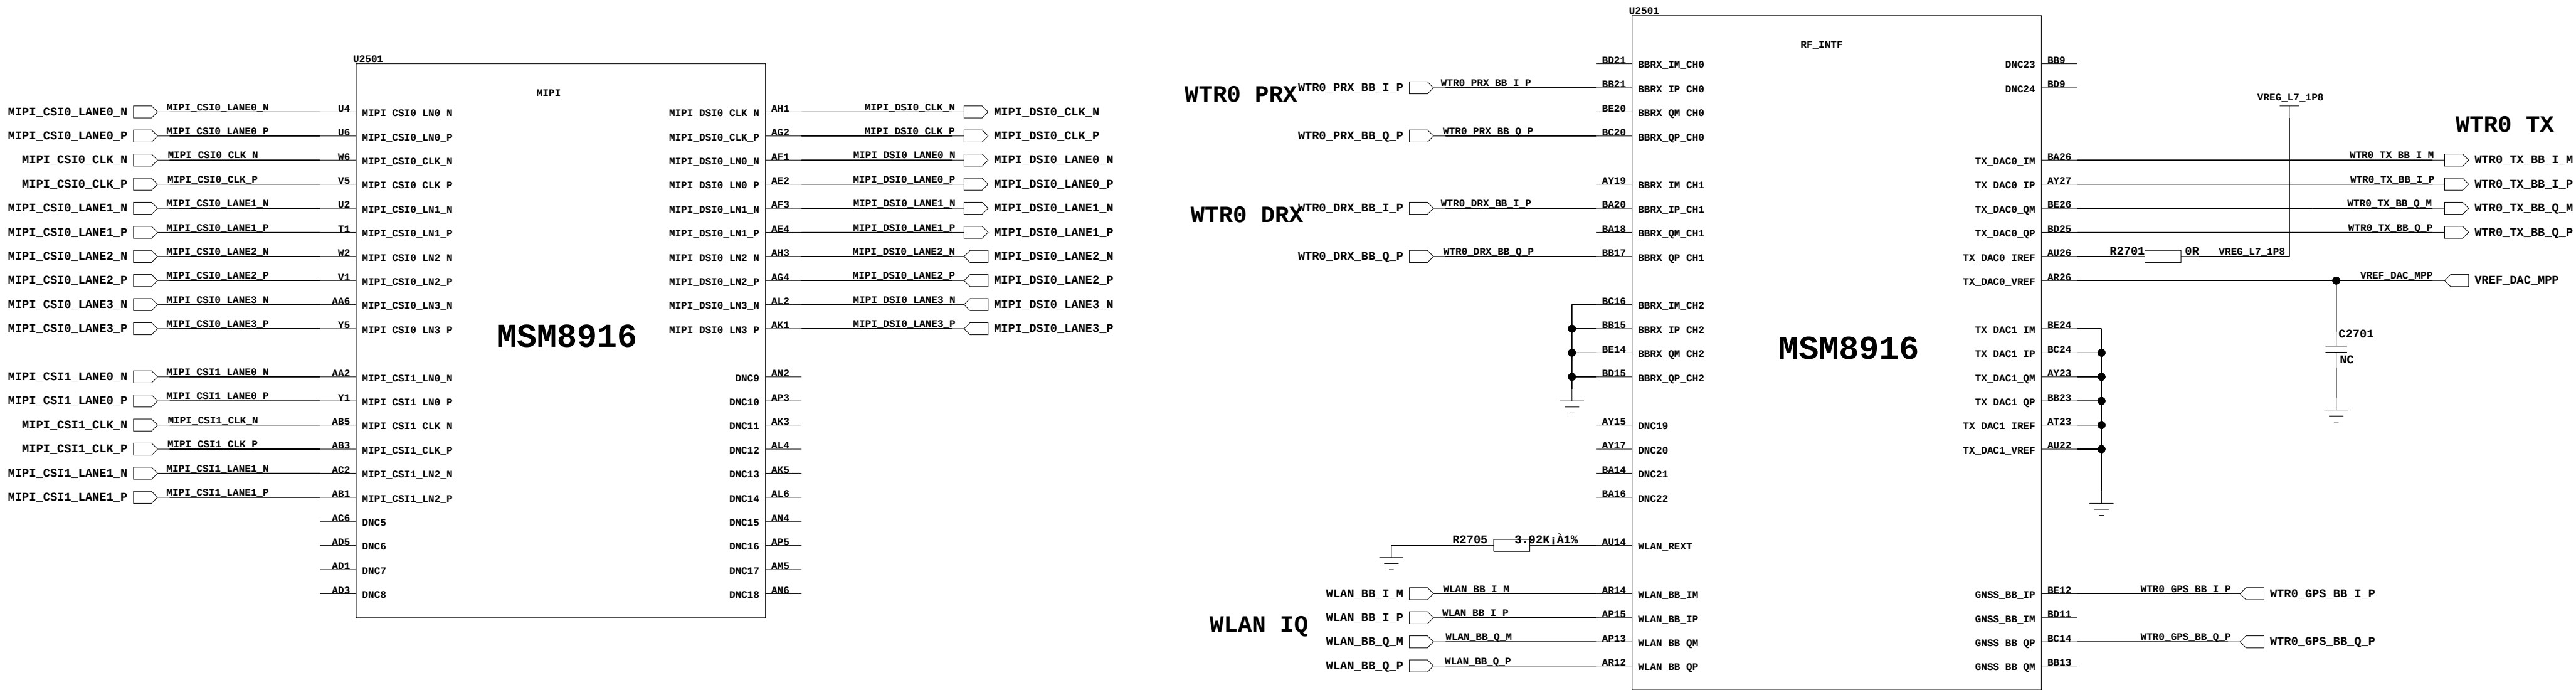

Approved By



A

B

C

D

E

F

A


B

C


D

E


F

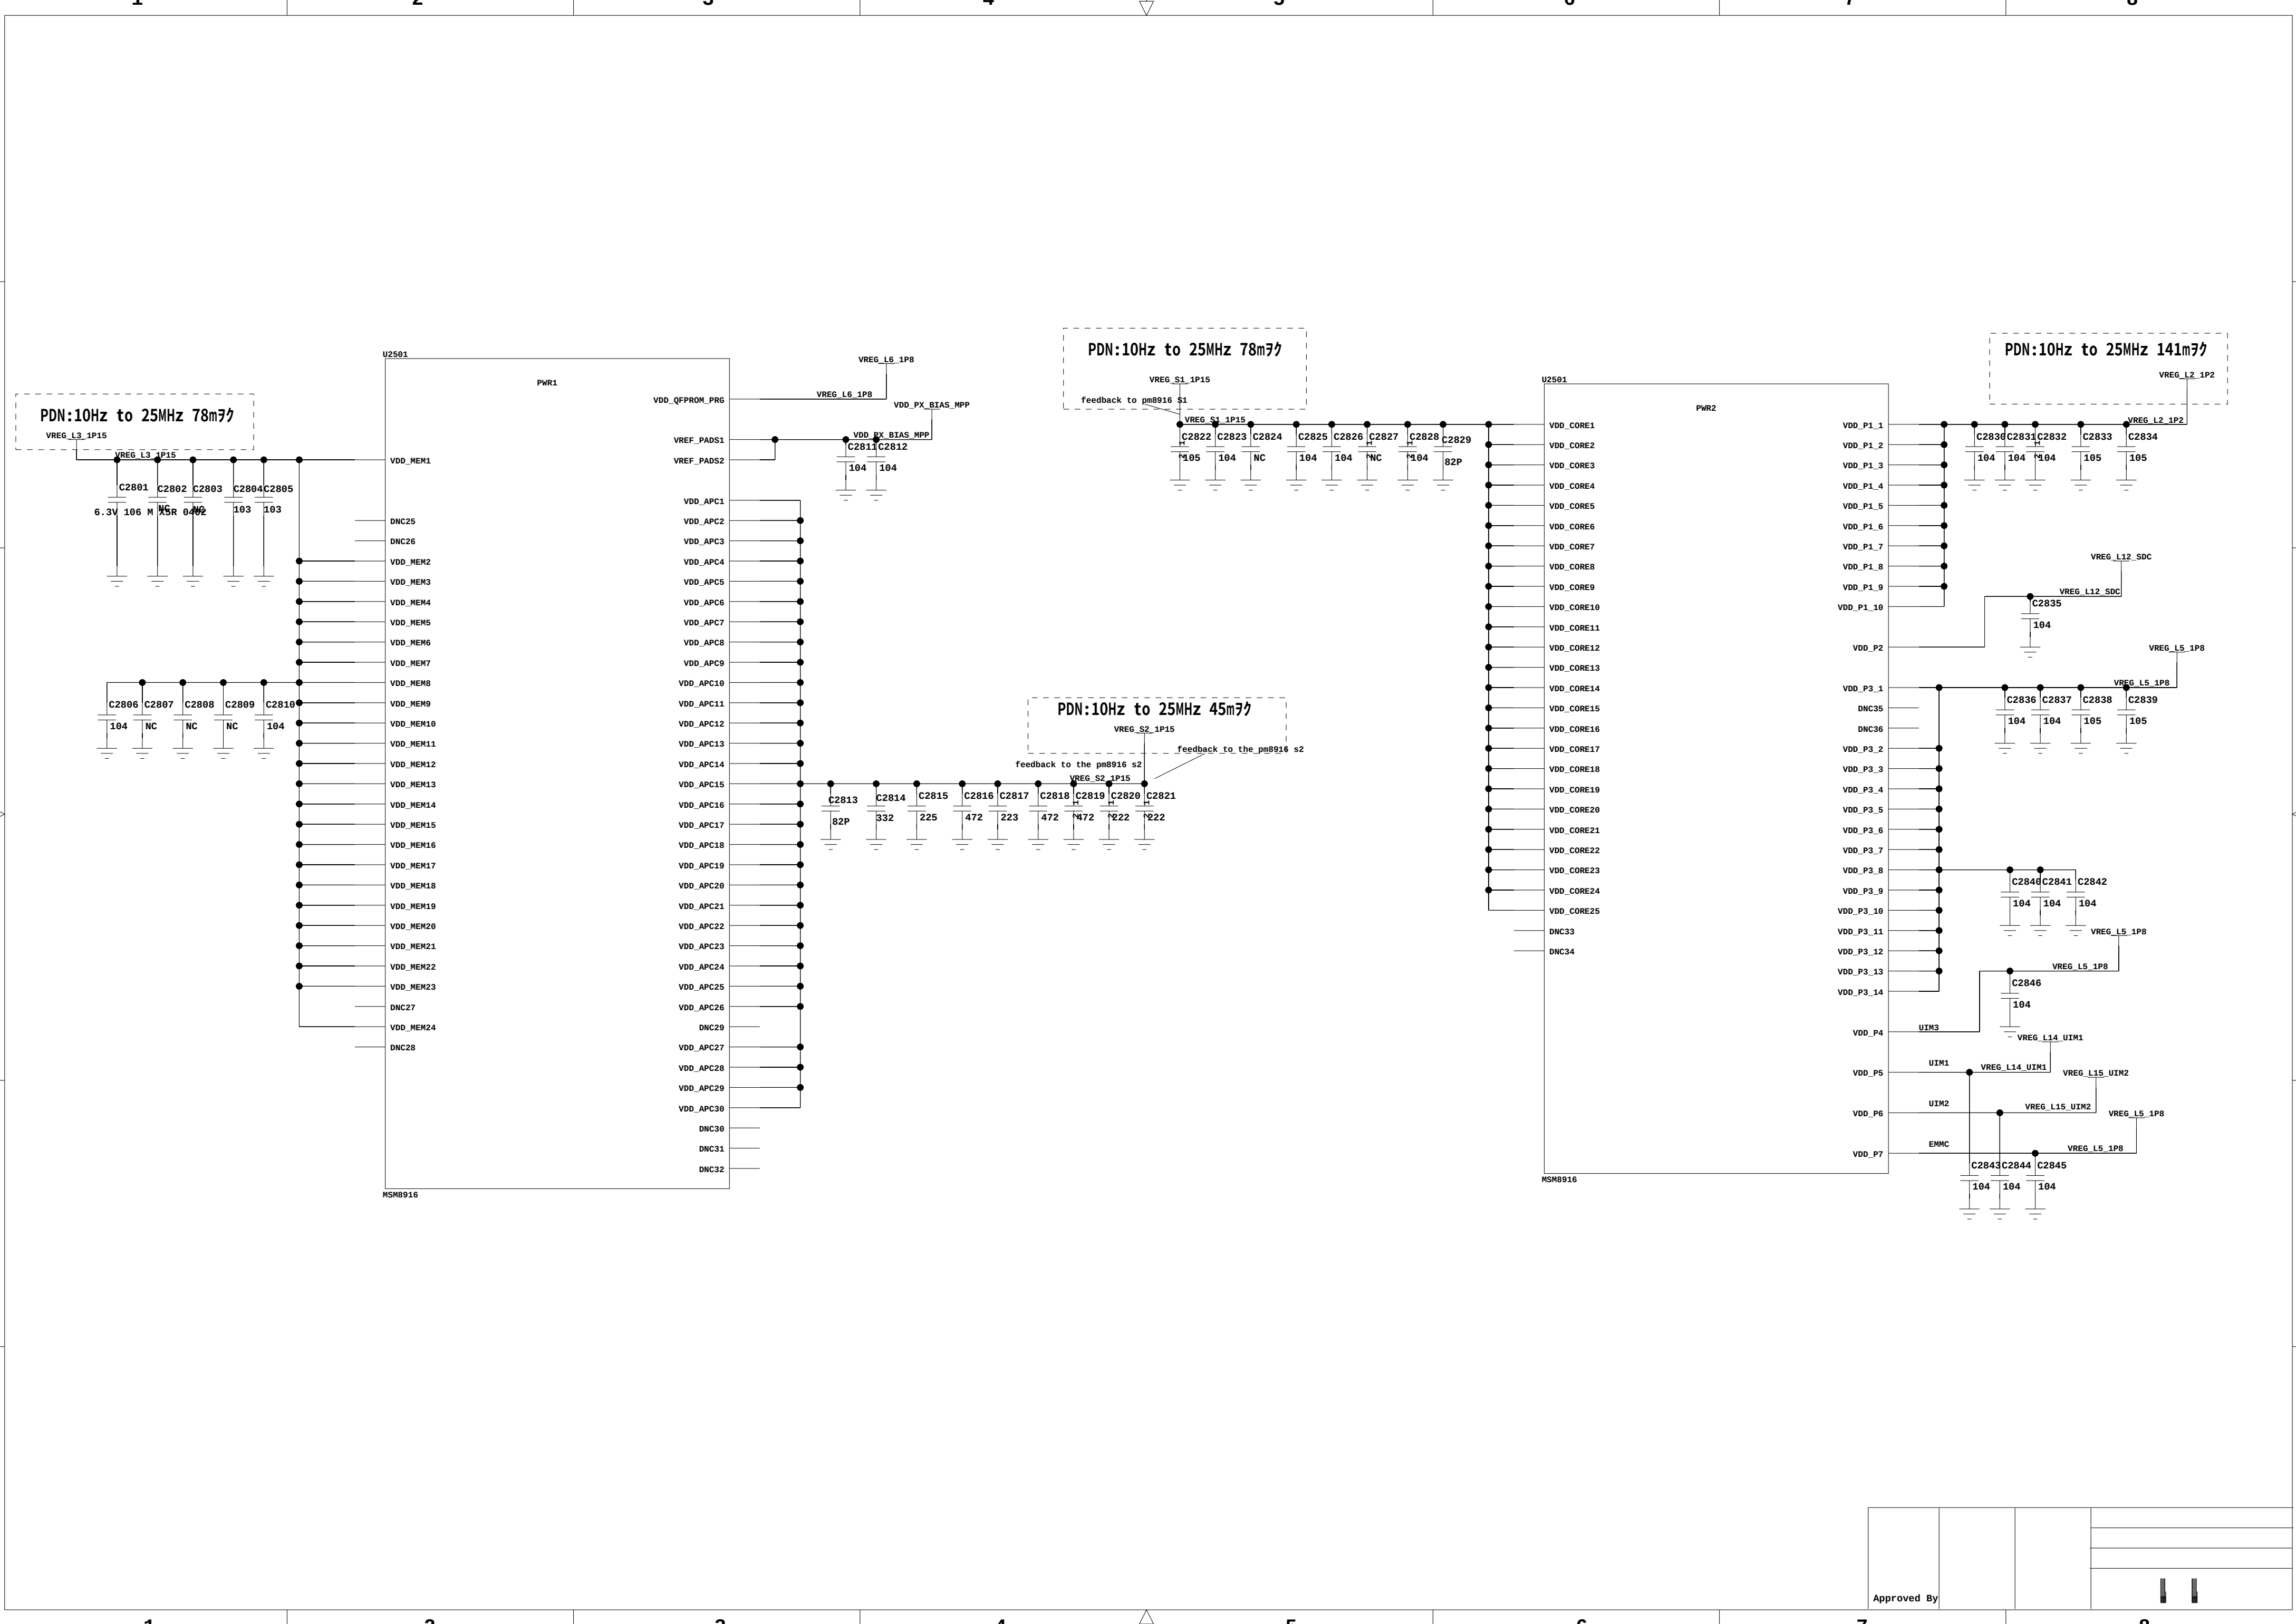

Approved By			

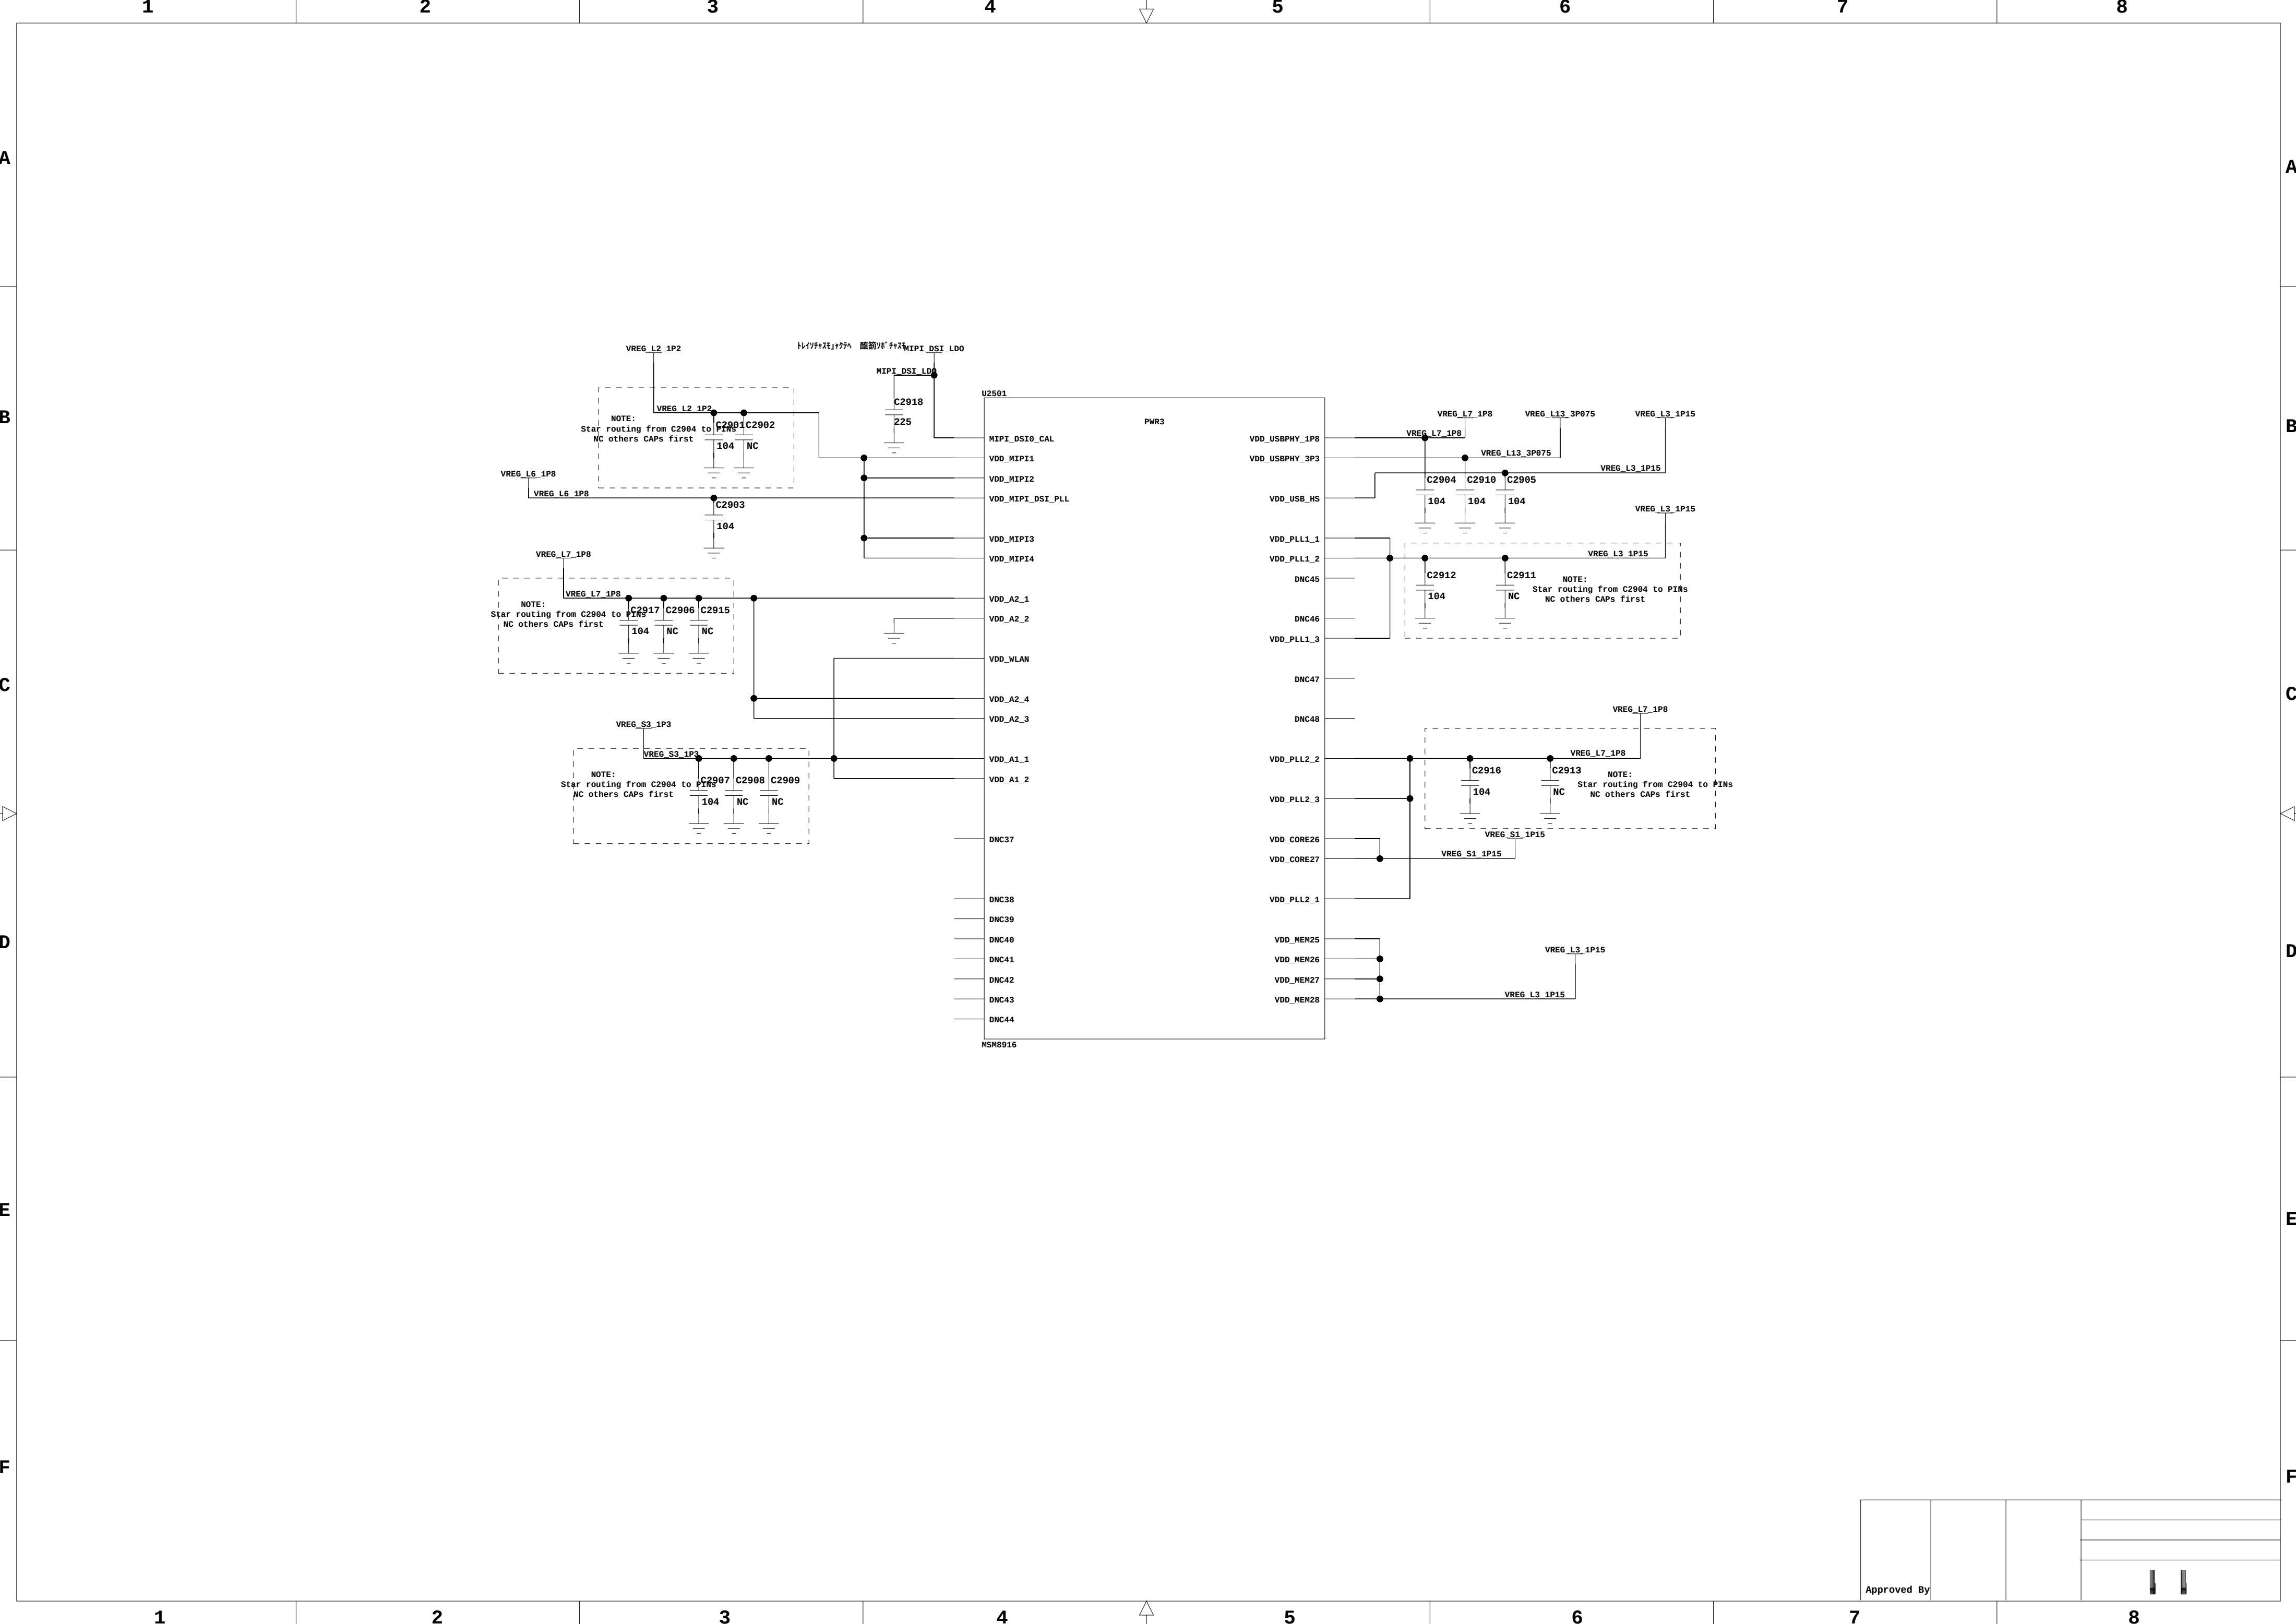

Approved By				

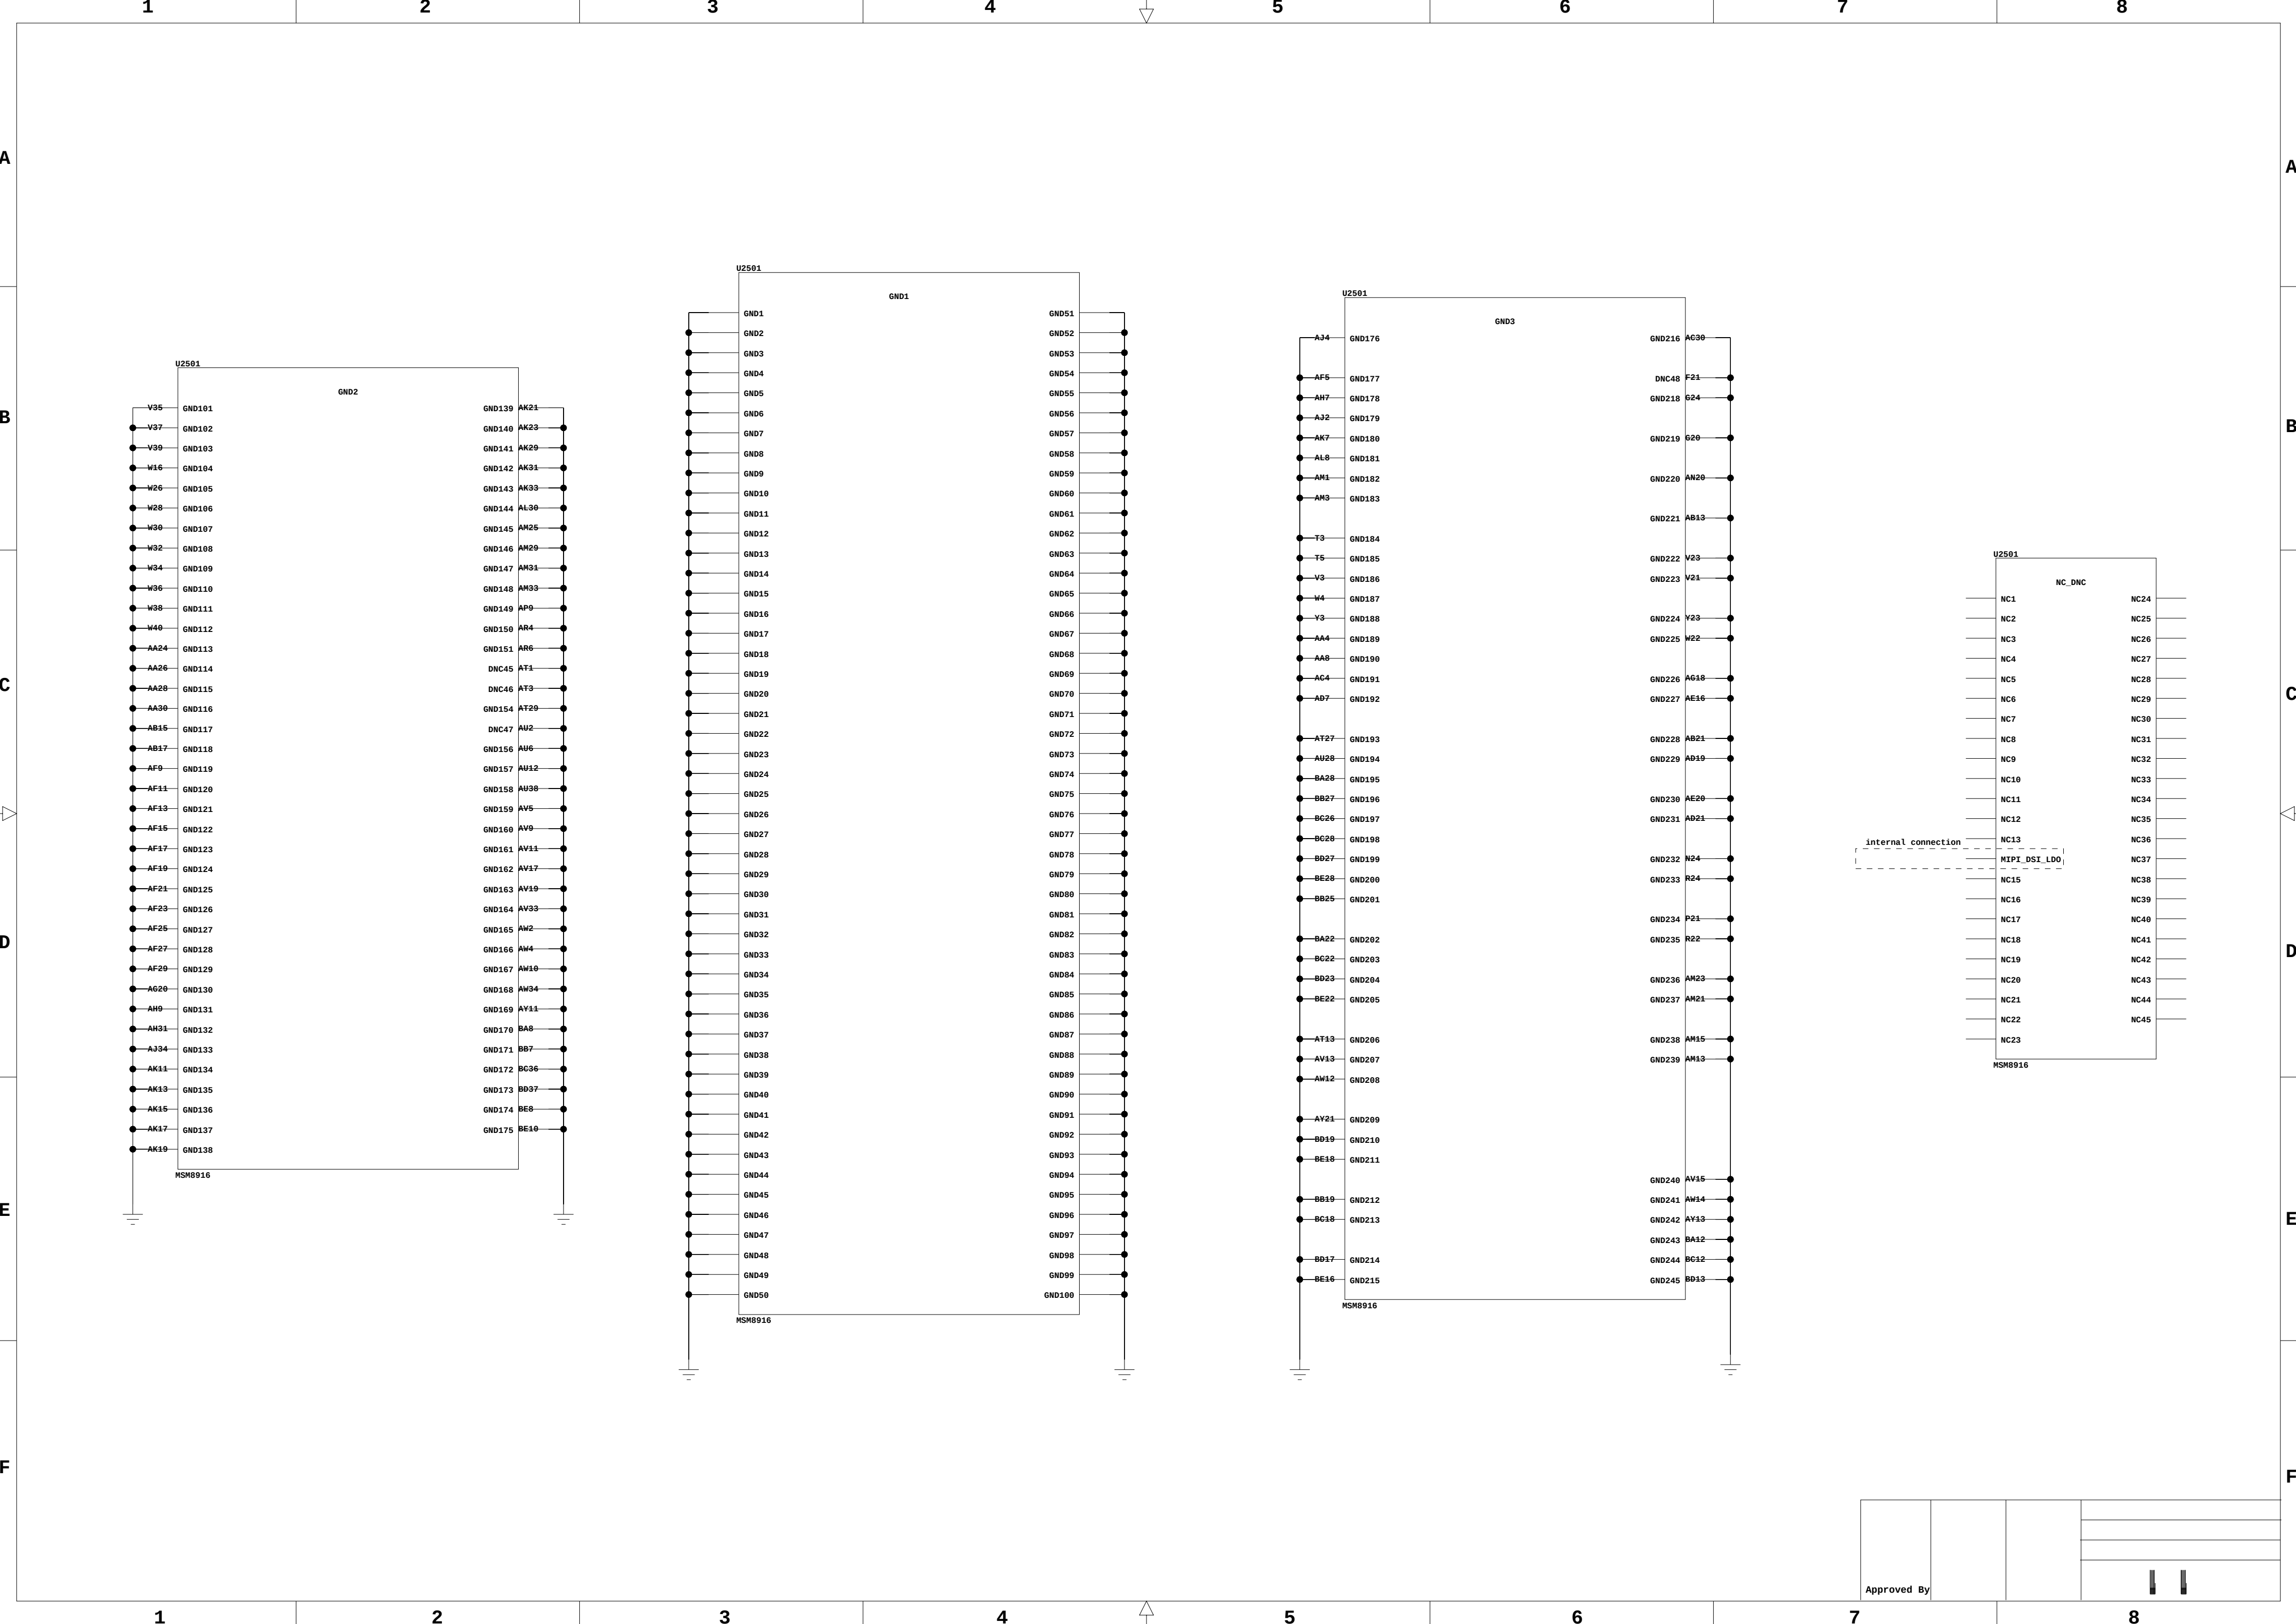

A

B

C

D

E

F

A


B

C

D

E




F



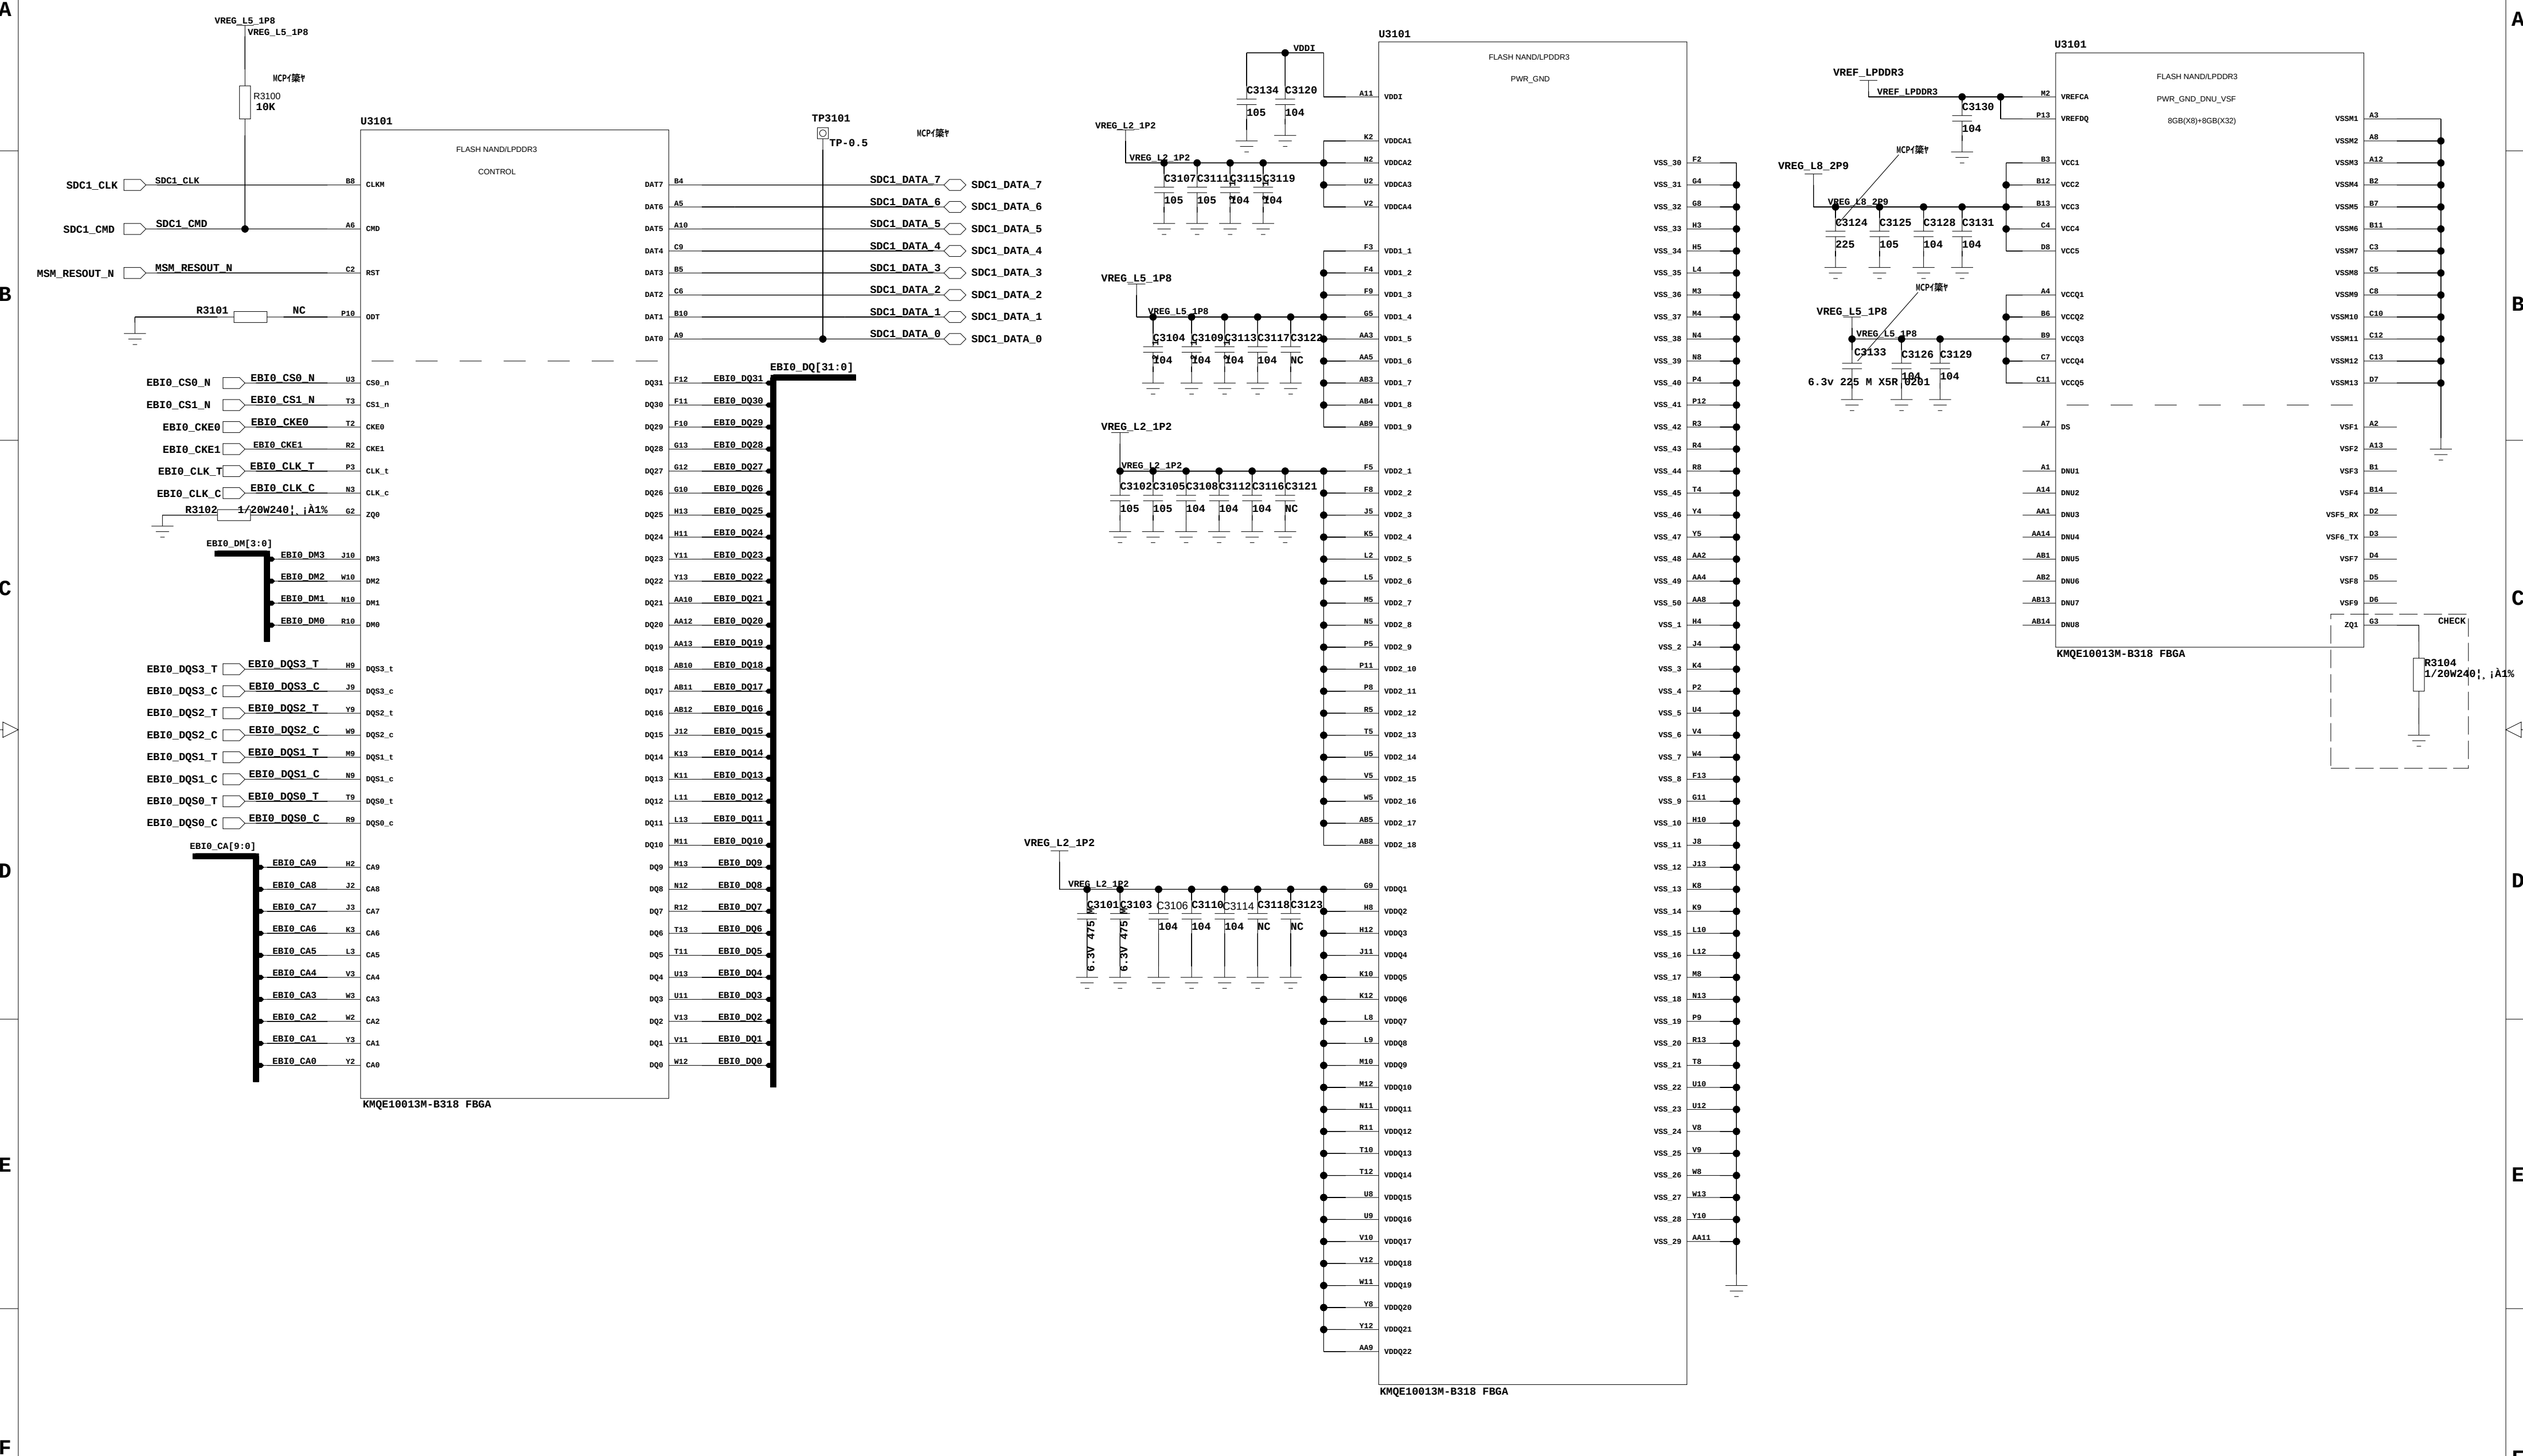


Approved By			


SPEAKER PA

YDA_5v_POWER

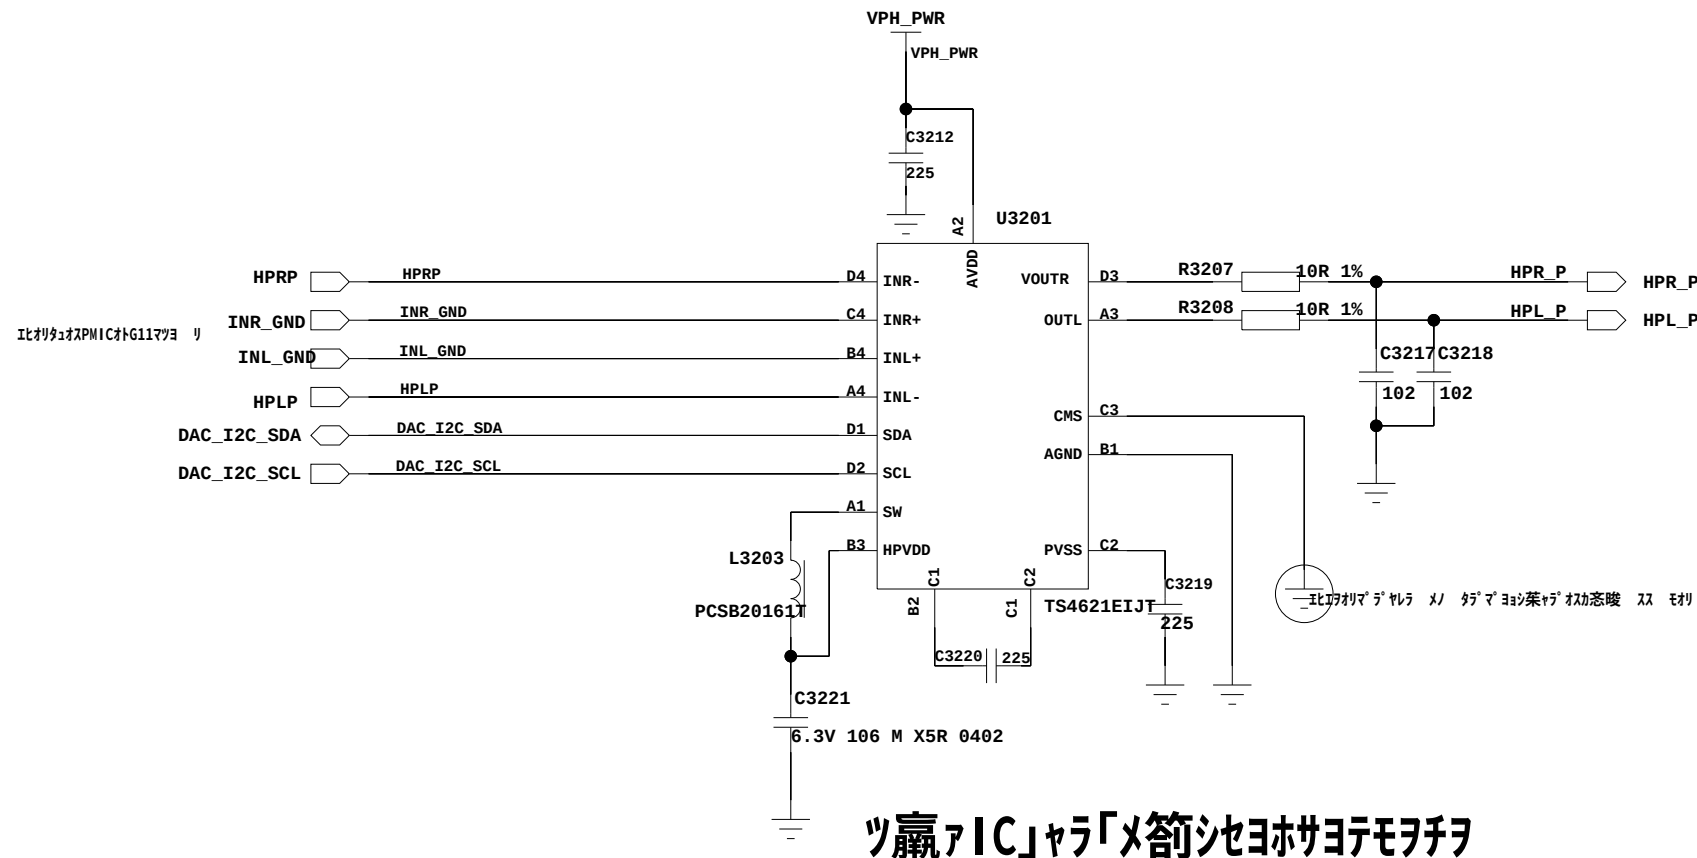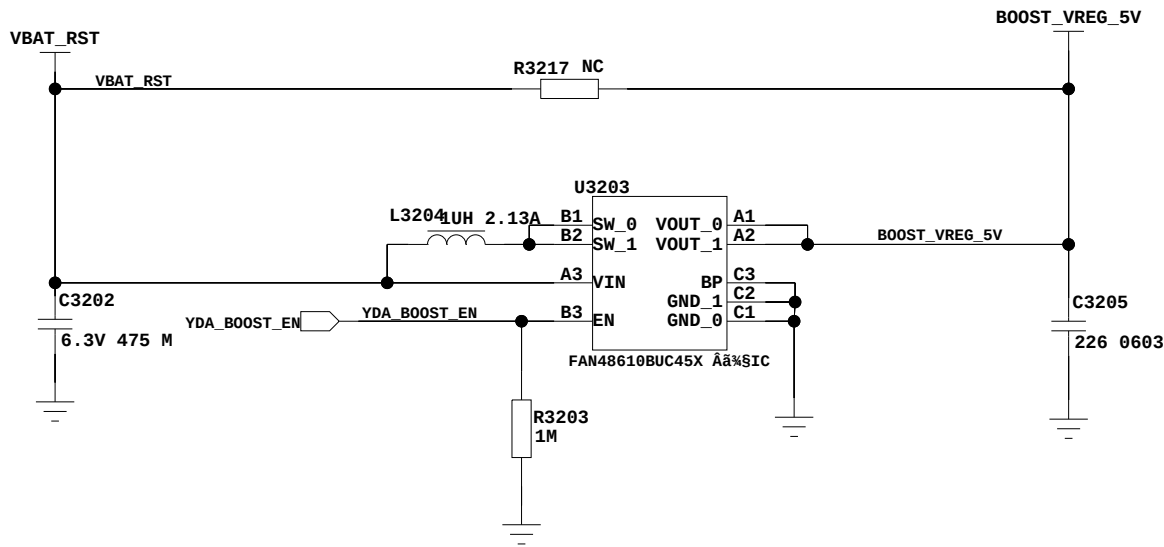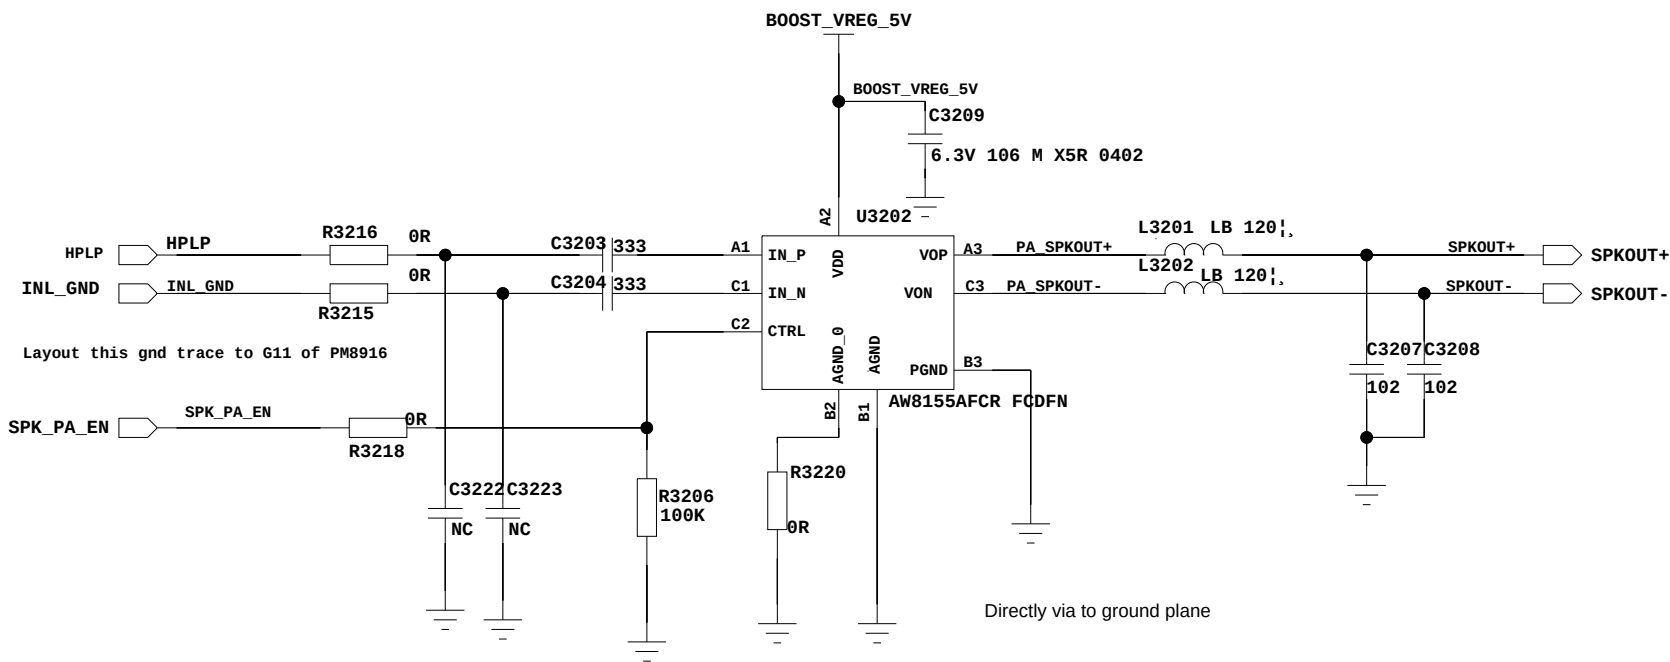


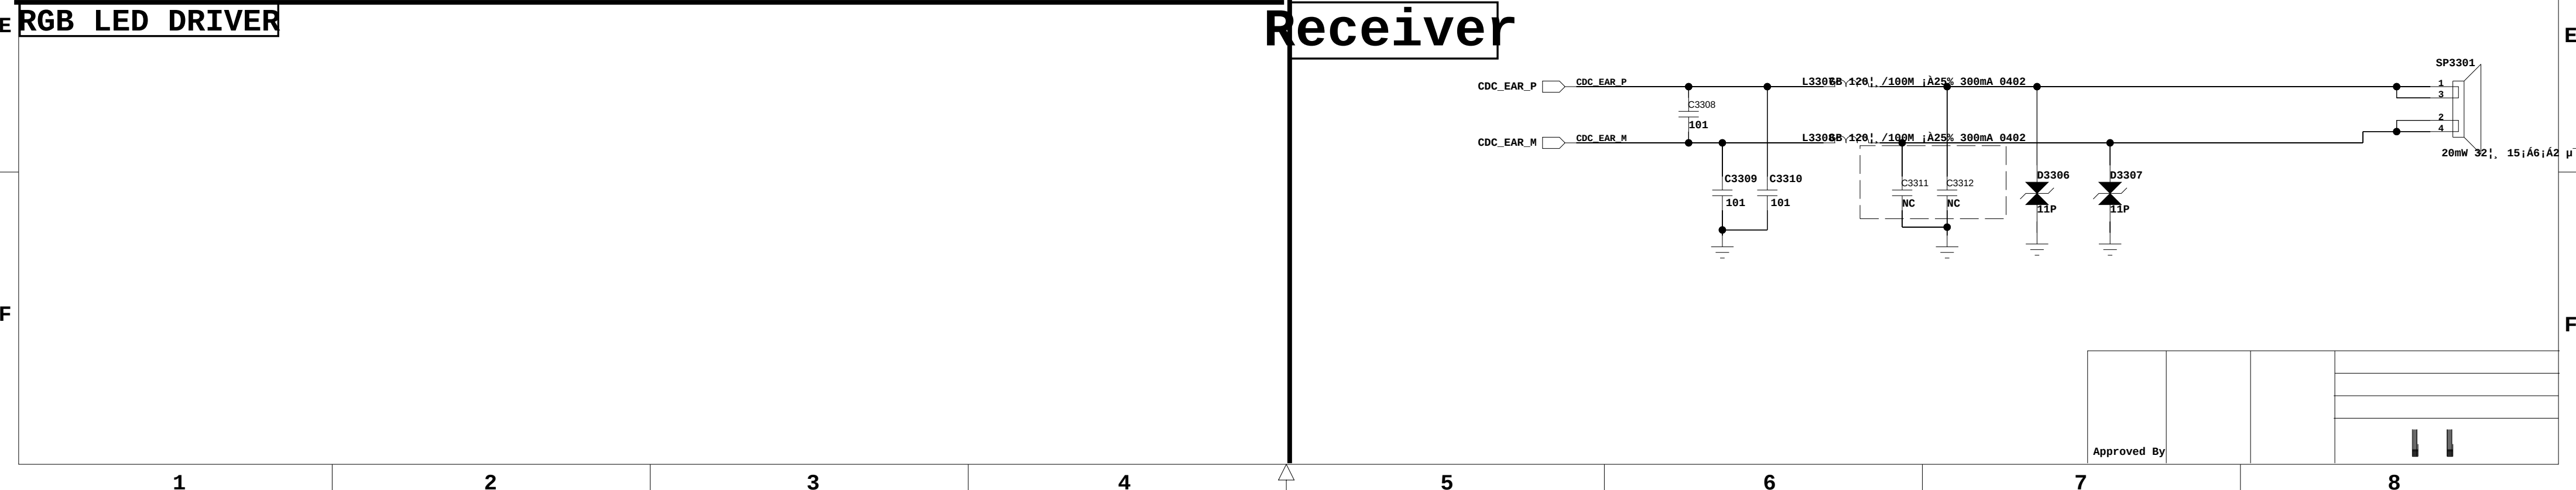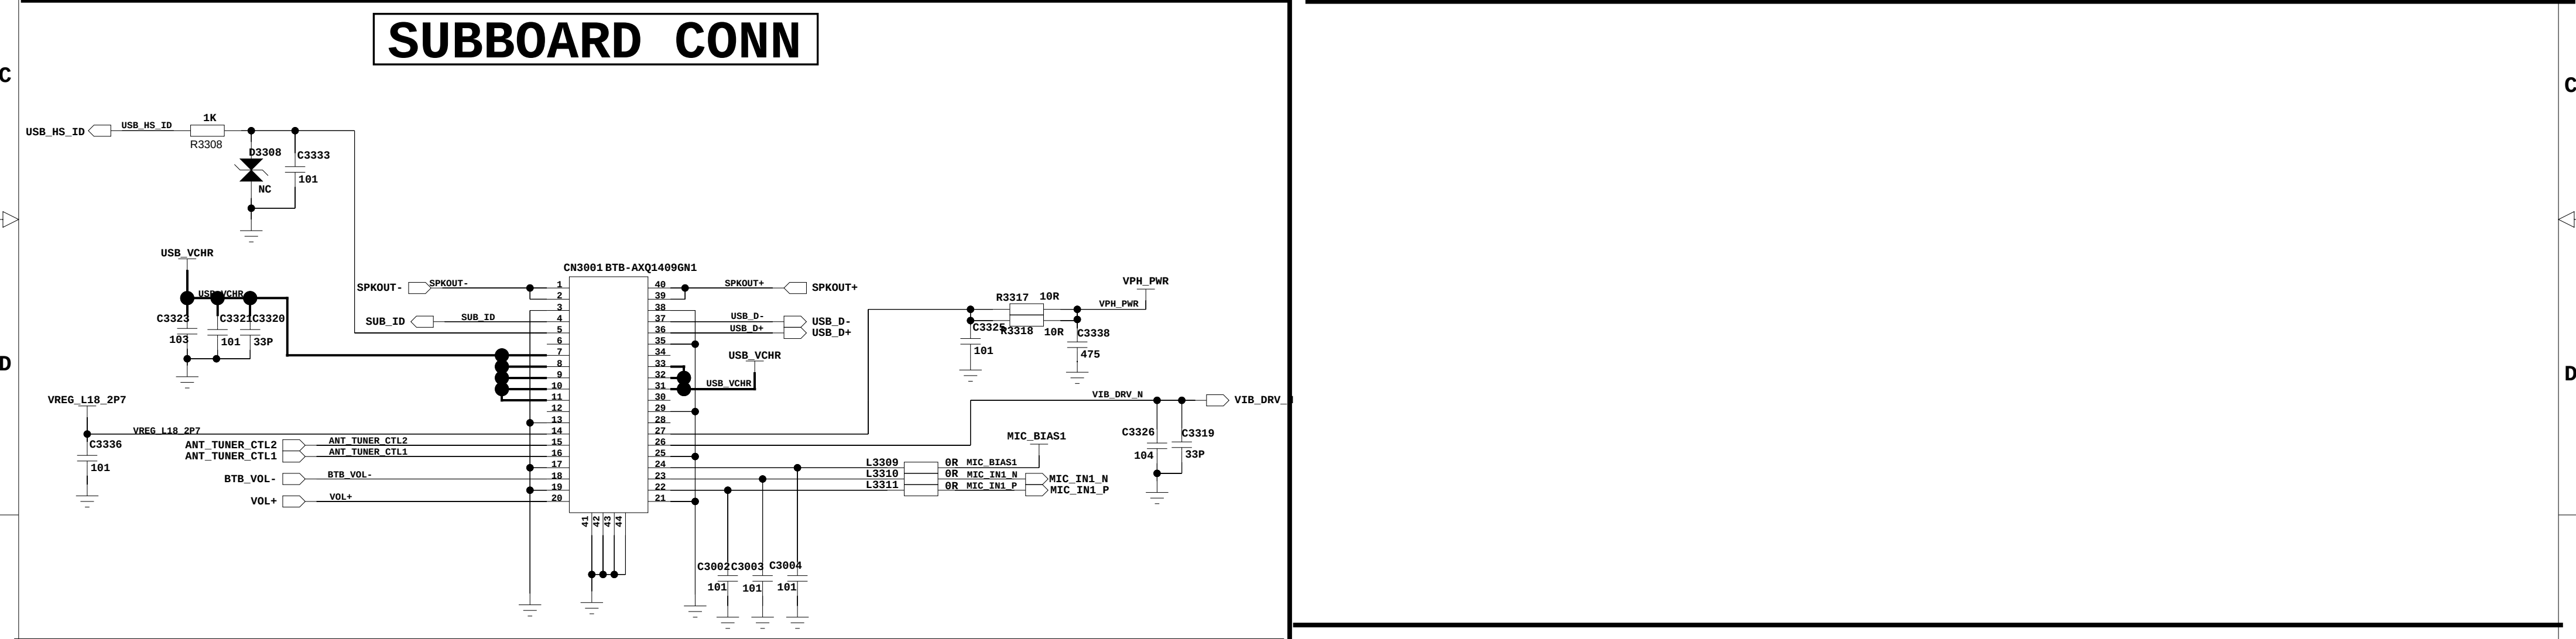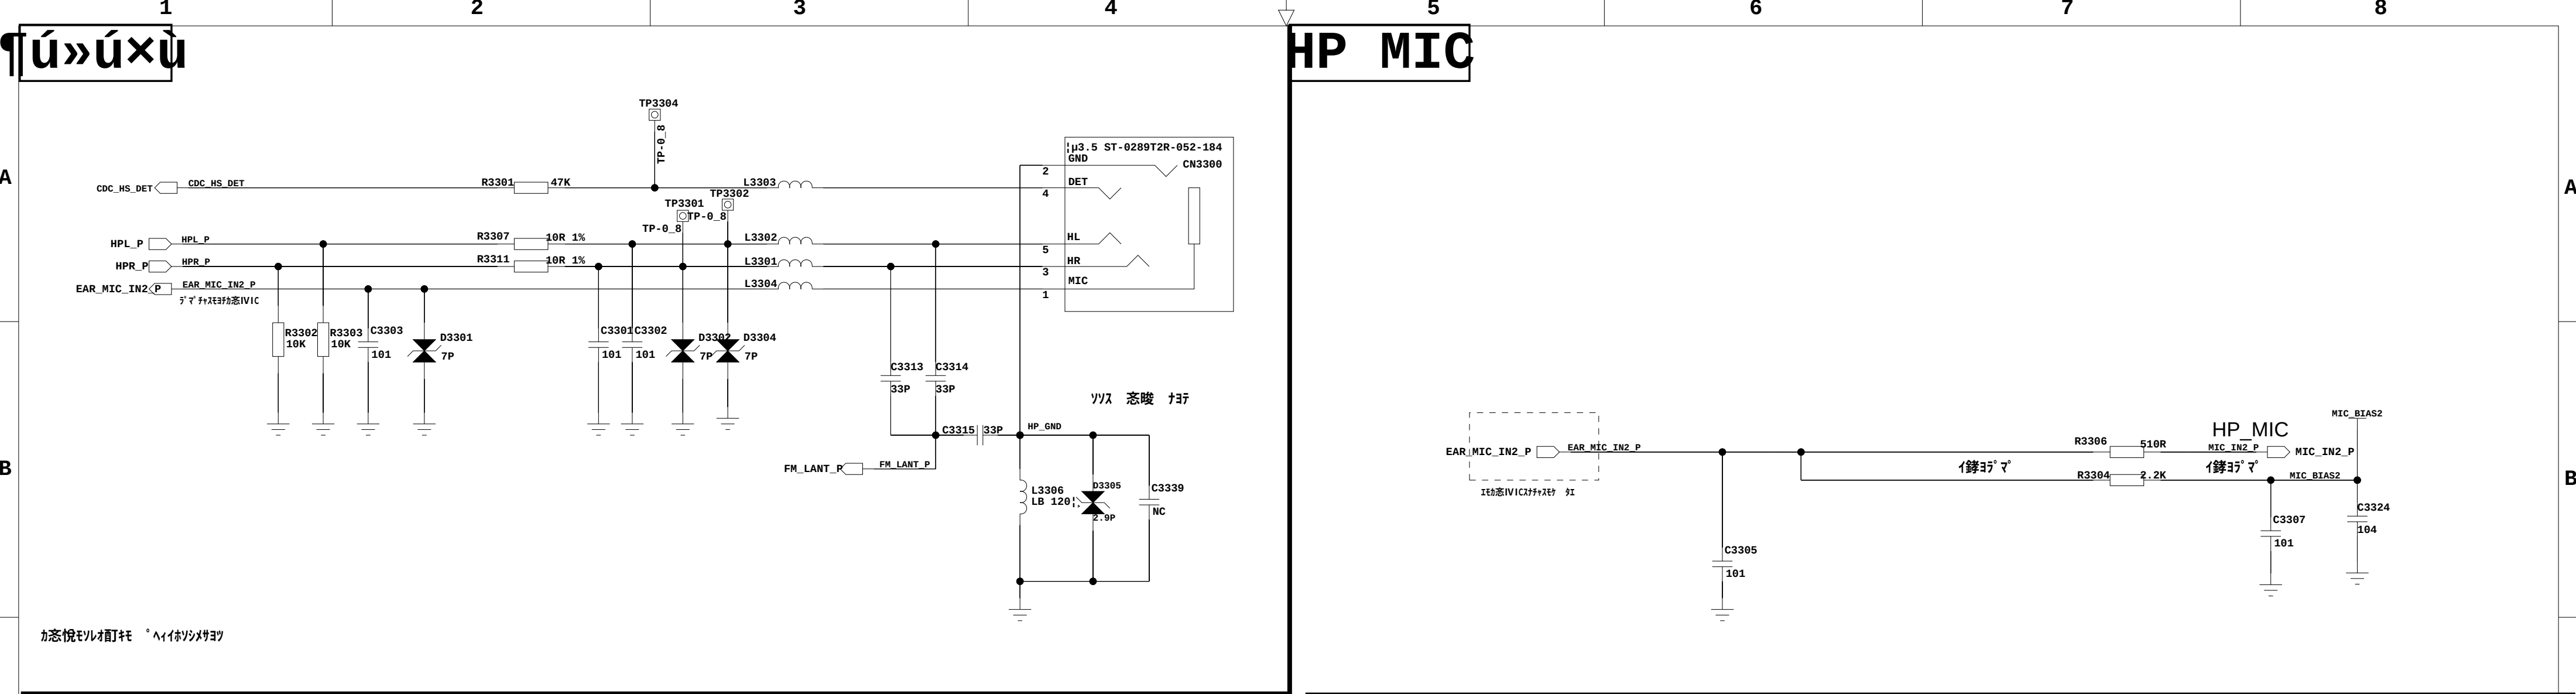


LCD 5V Driver

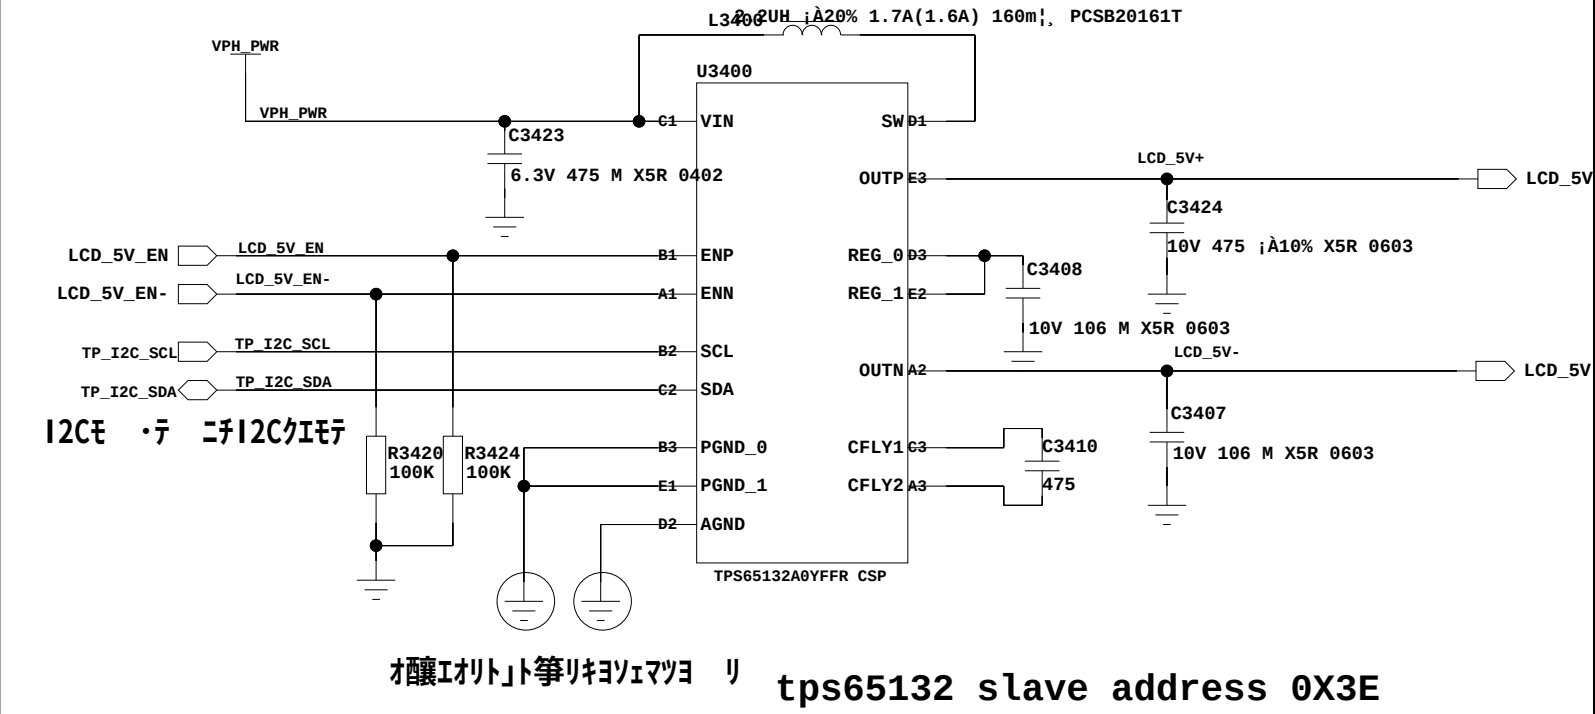


LCM CONN

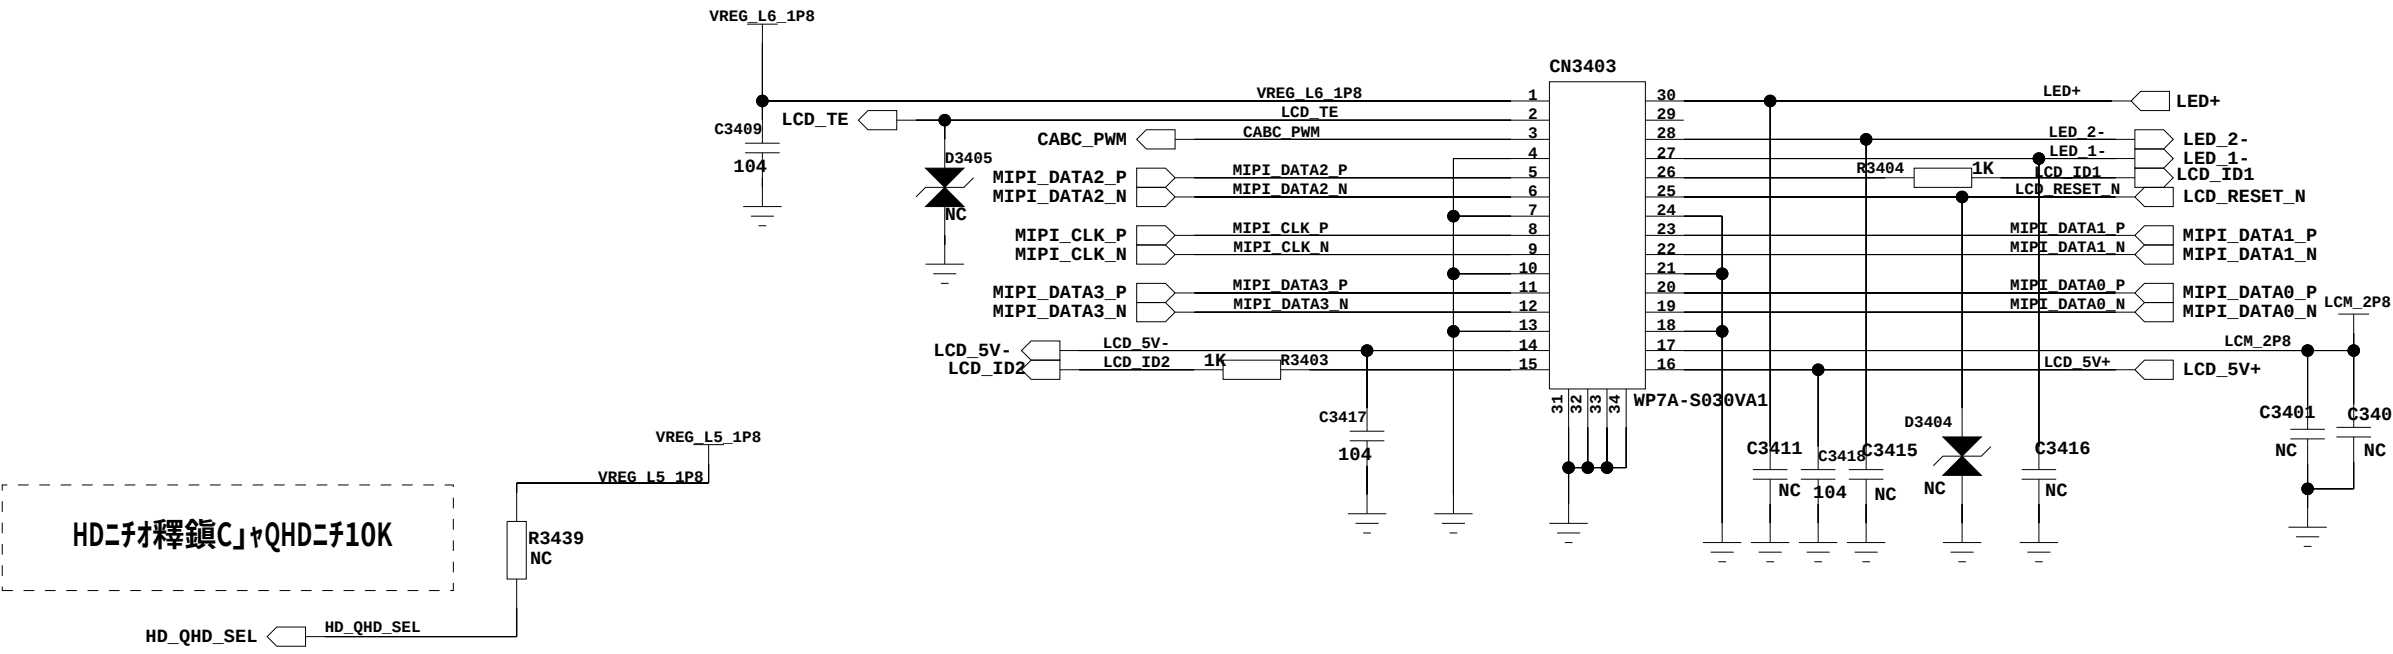


LCD LDO

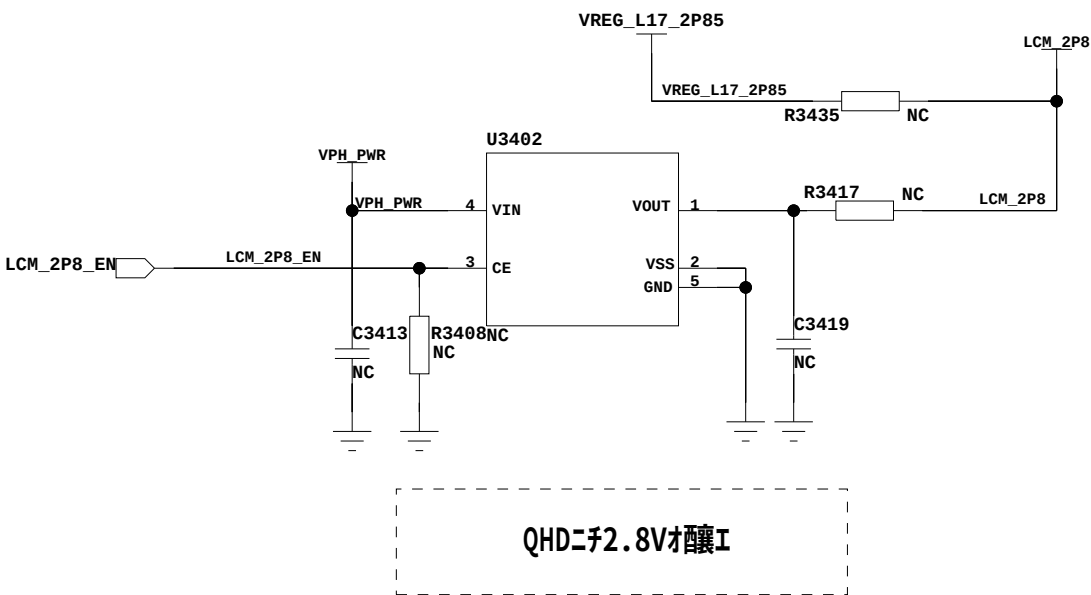


LCD BACKLIGHT

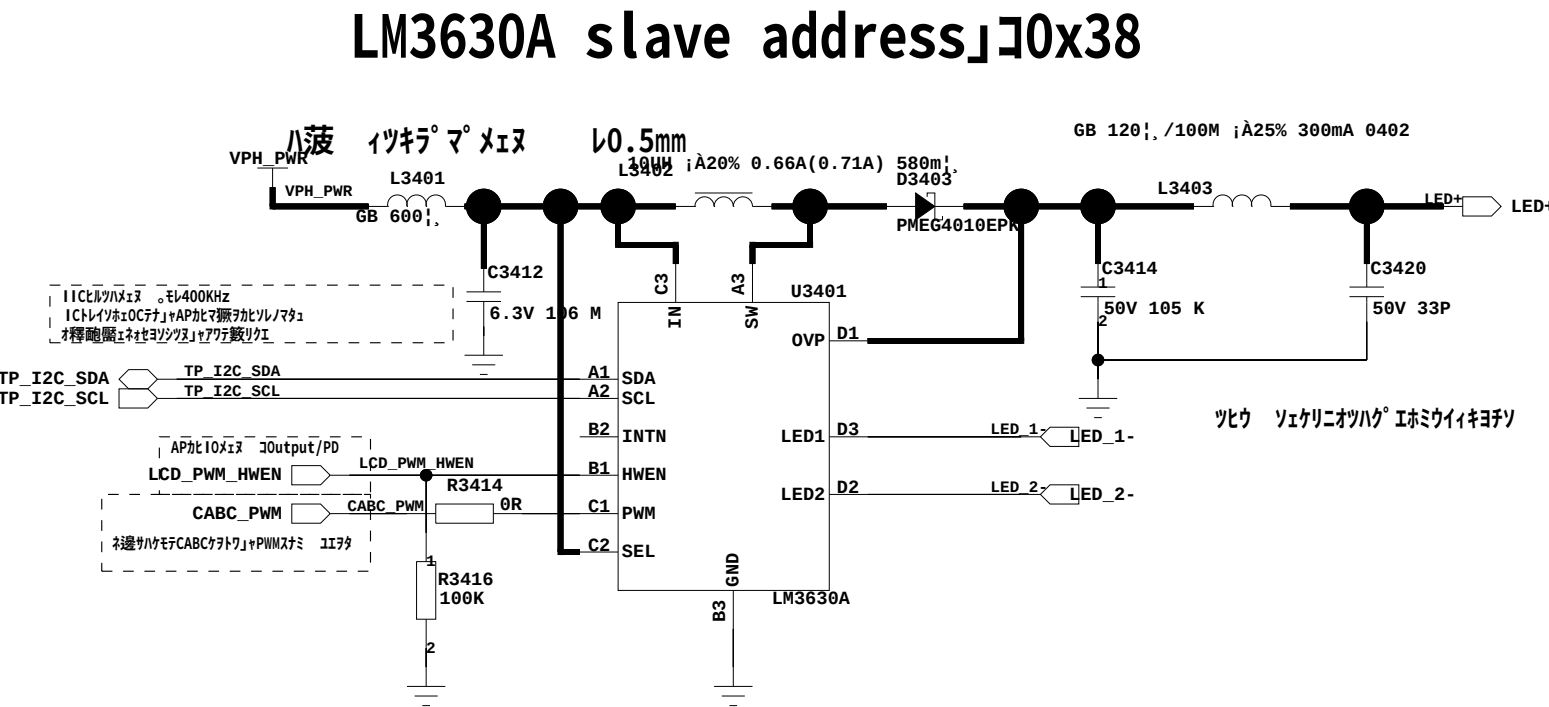


LCM CONN EMI

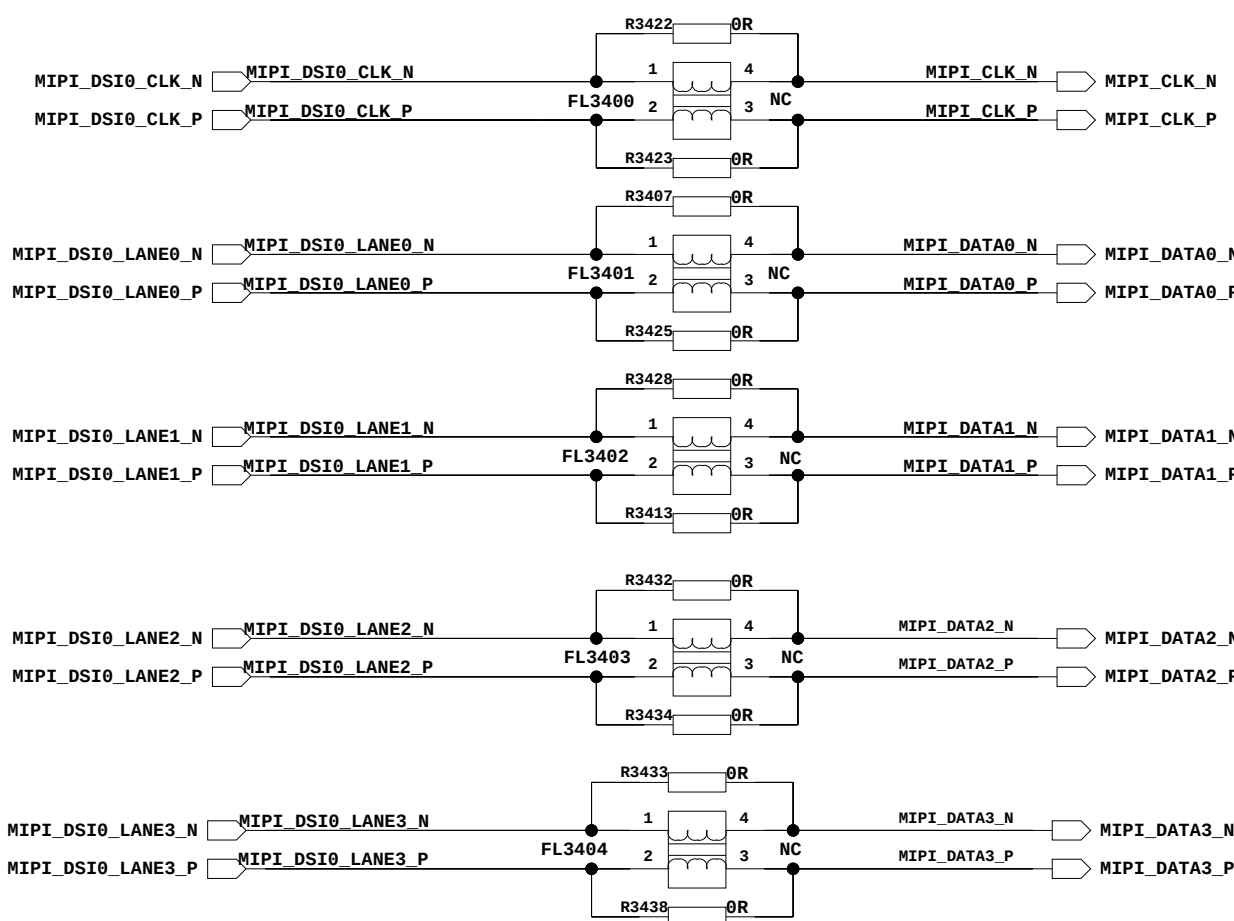


USB SWITCH

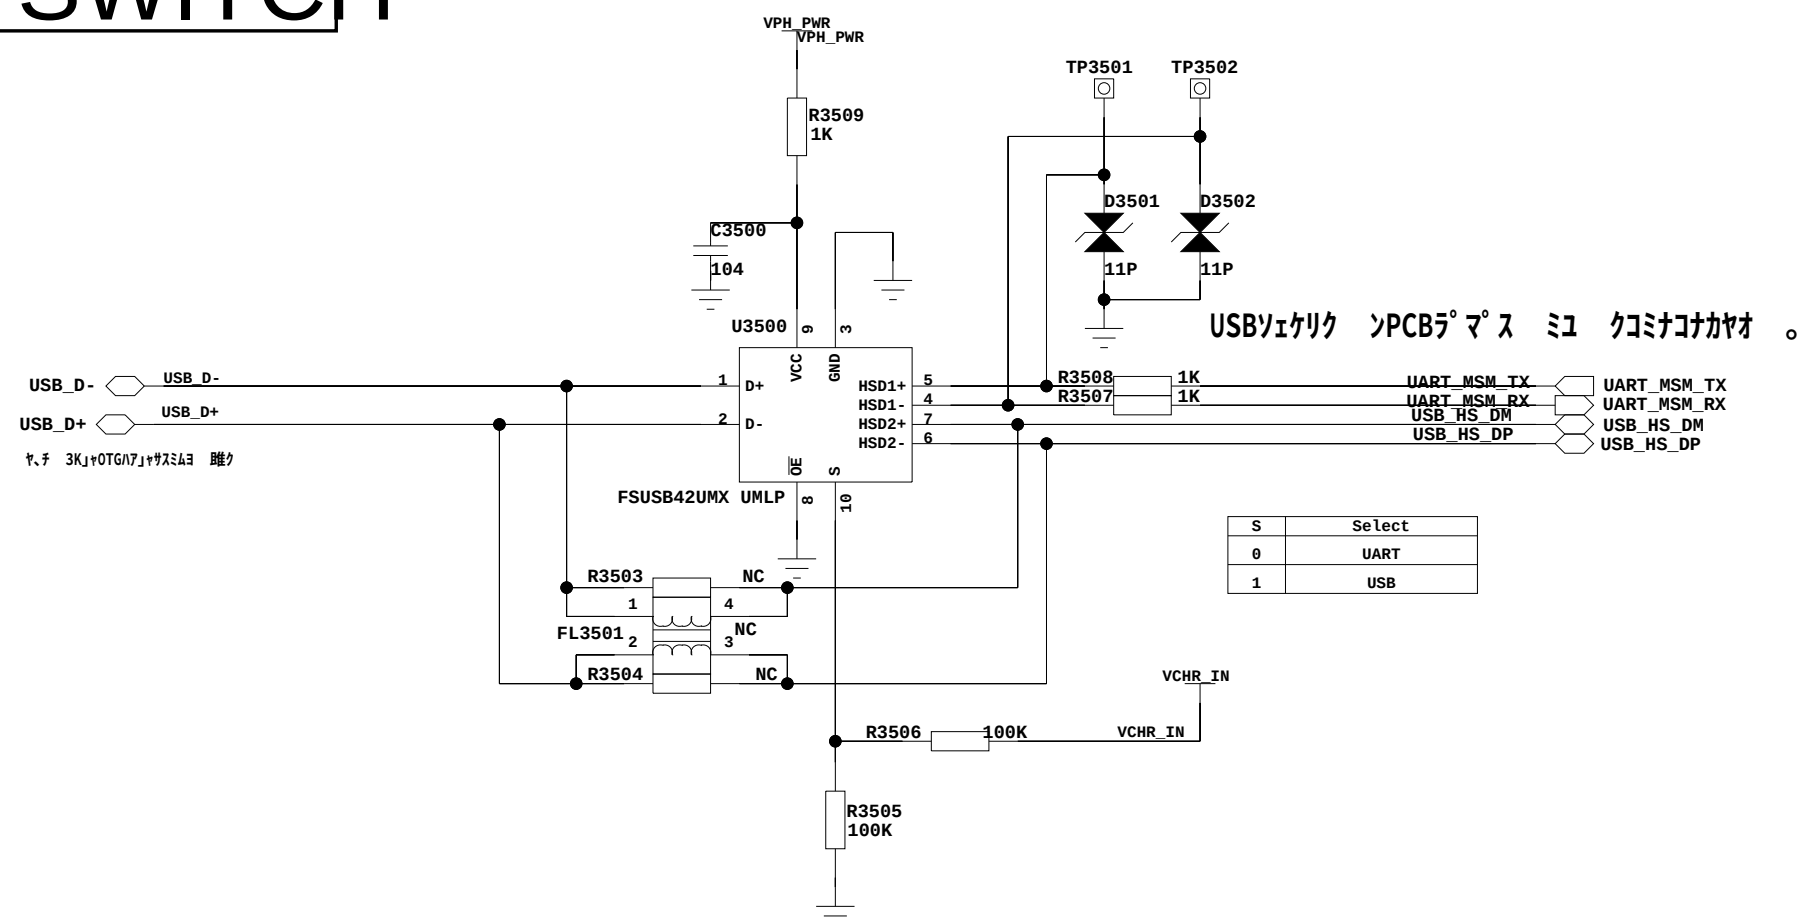

UPDATE

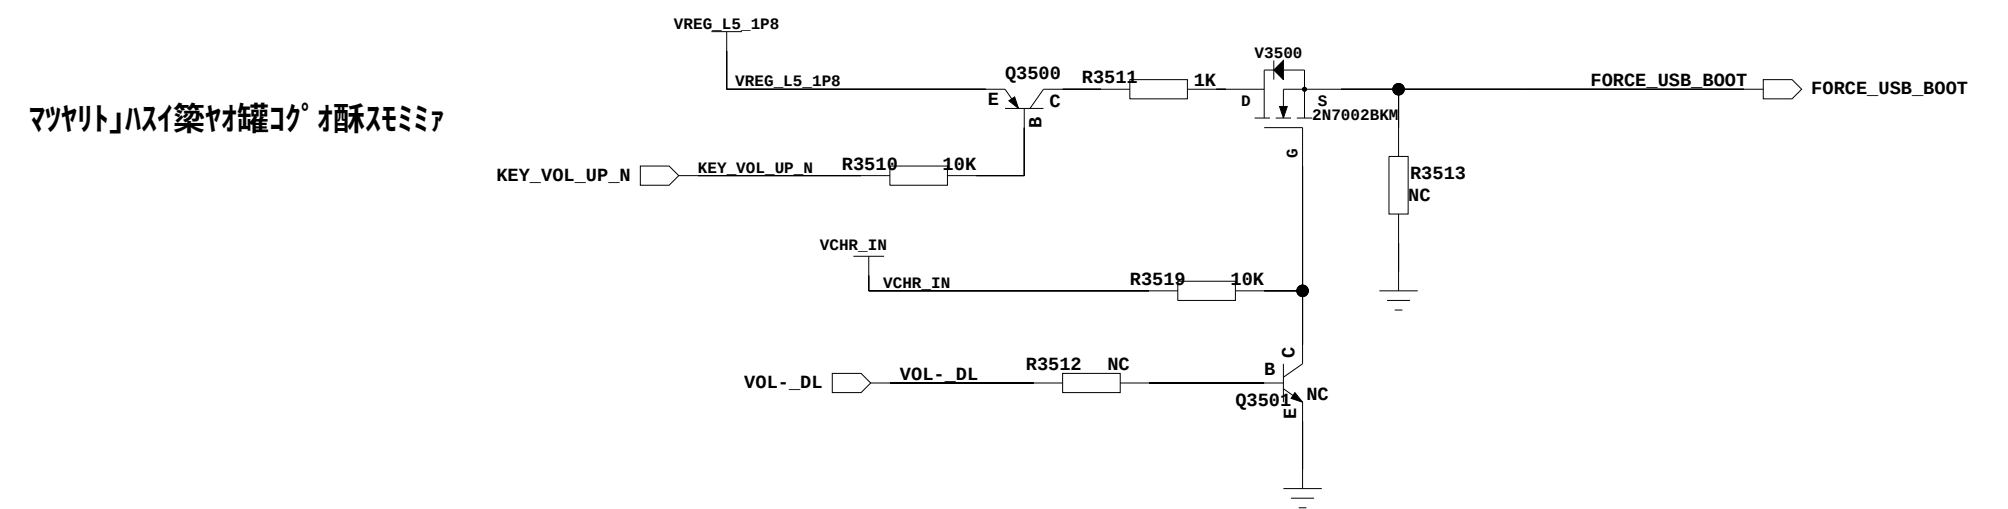

OVP

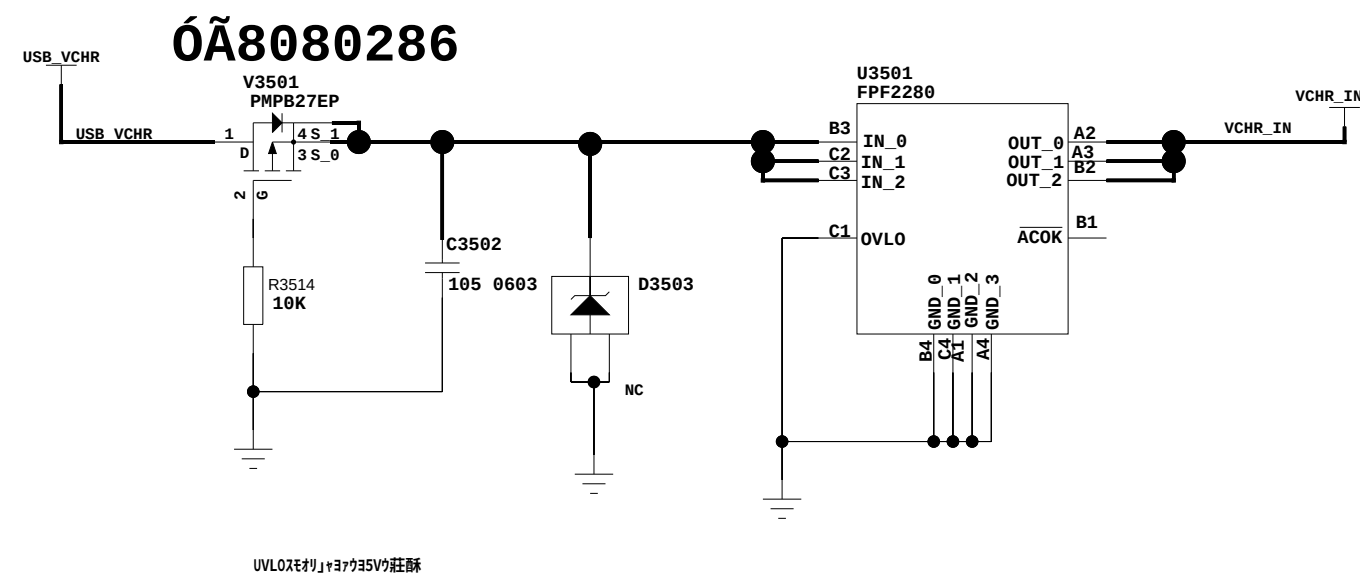


Test Config


和「筆」は「筆」の「筆」

BOOT MODE


CONF. 0	CONF. 1	Mode
0	0	Factory Mode
0	1	WLAN Final Test
1	0	RF mode
1	1	Ordinary Power On

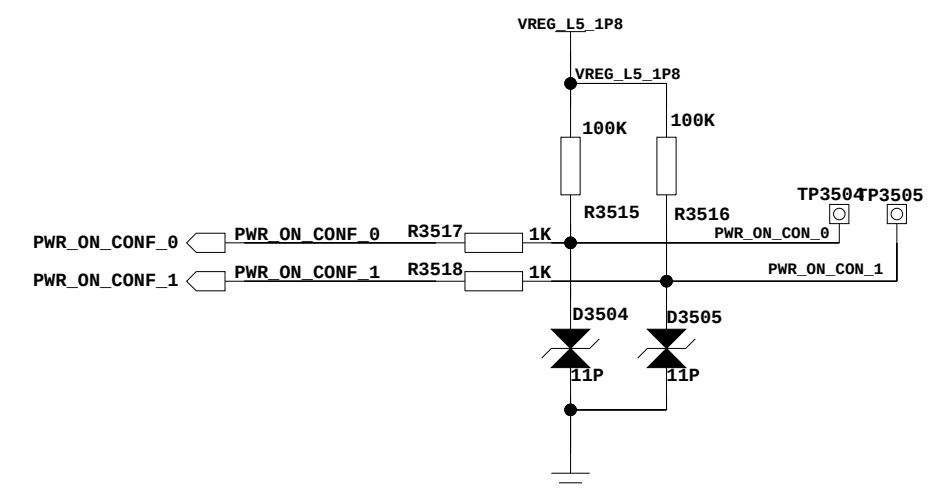

TEST POINT

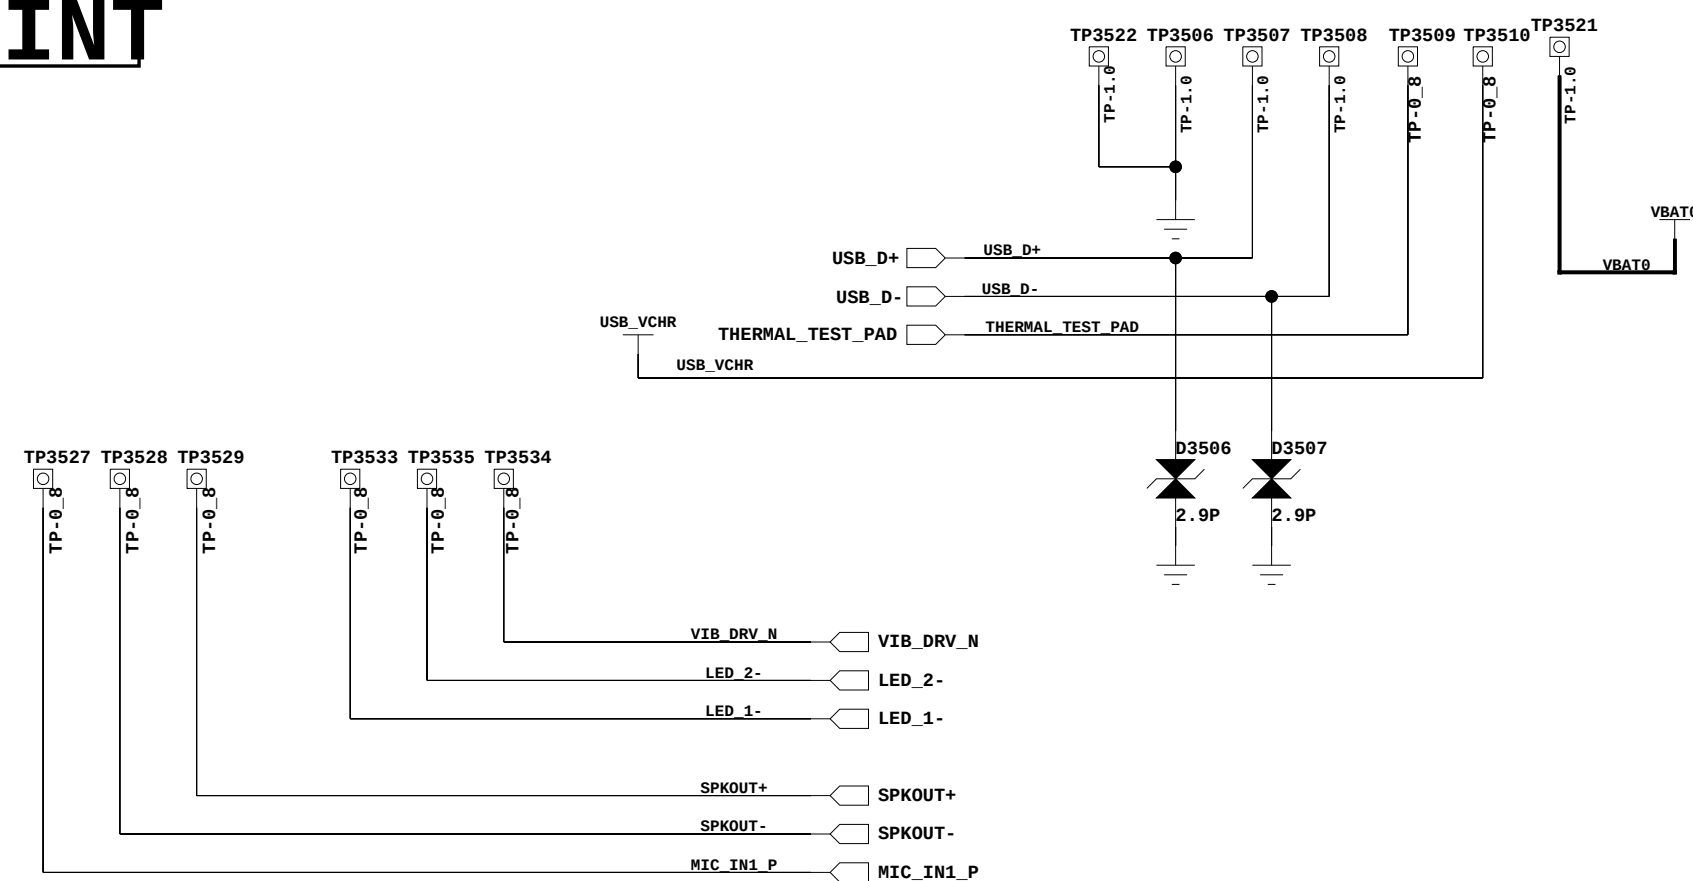


JTAG DEBUG

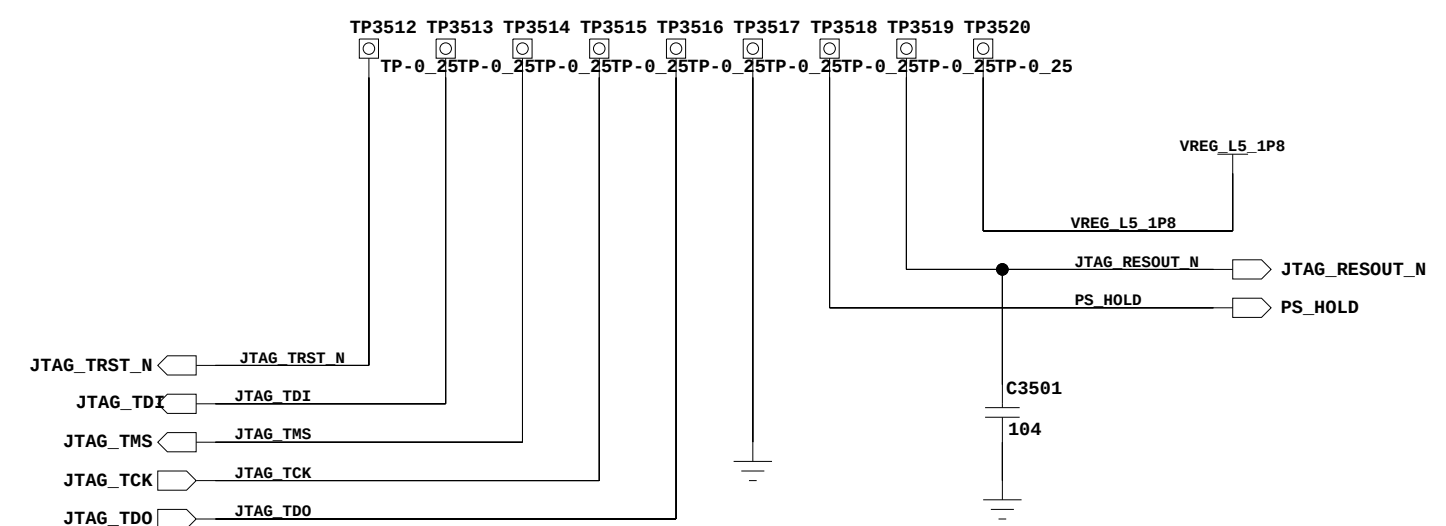


Approved By			


G - sensor

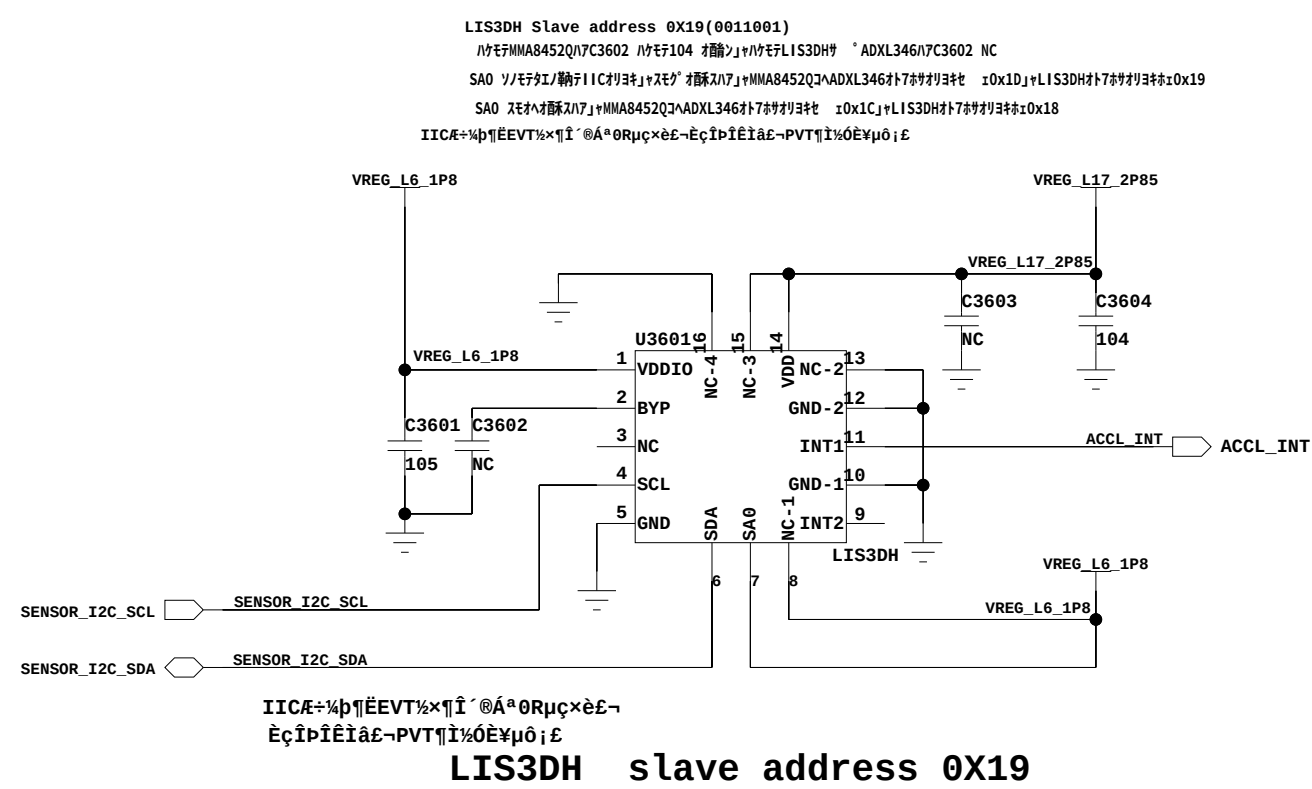


M - sensor	
------------	--

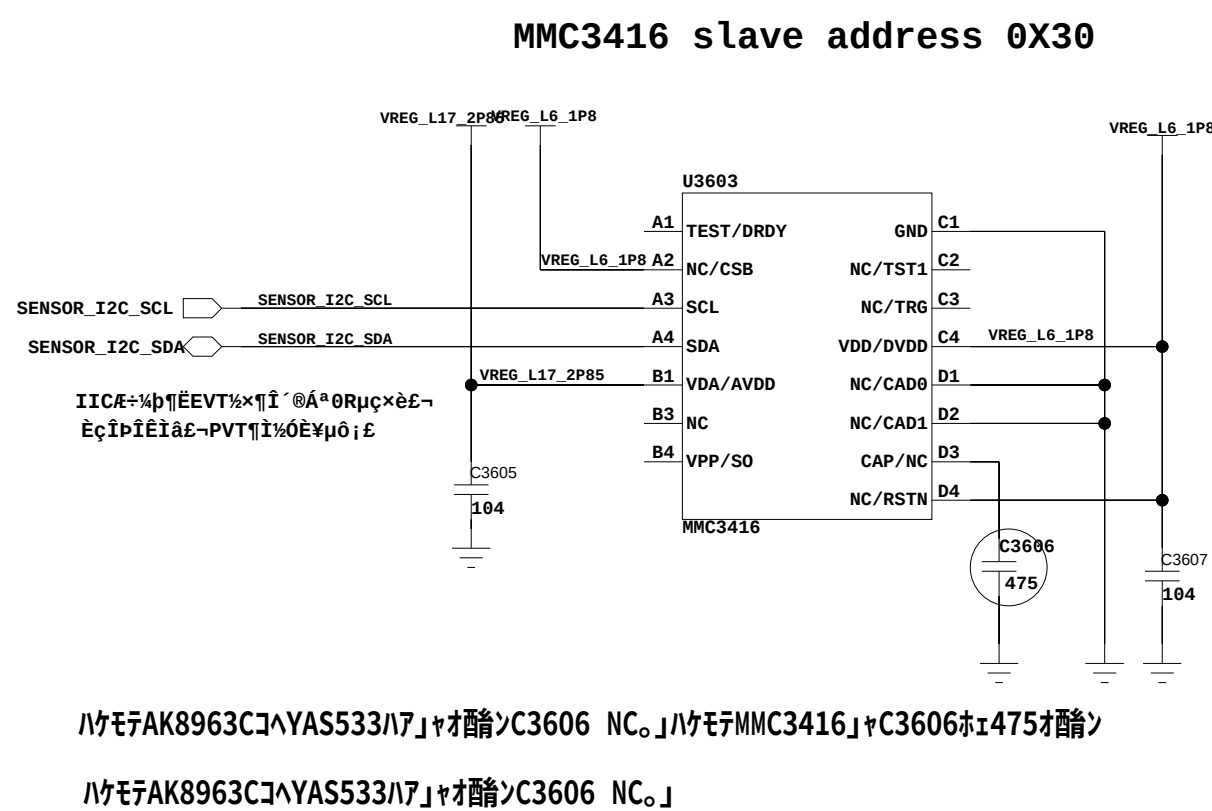


CTP COB

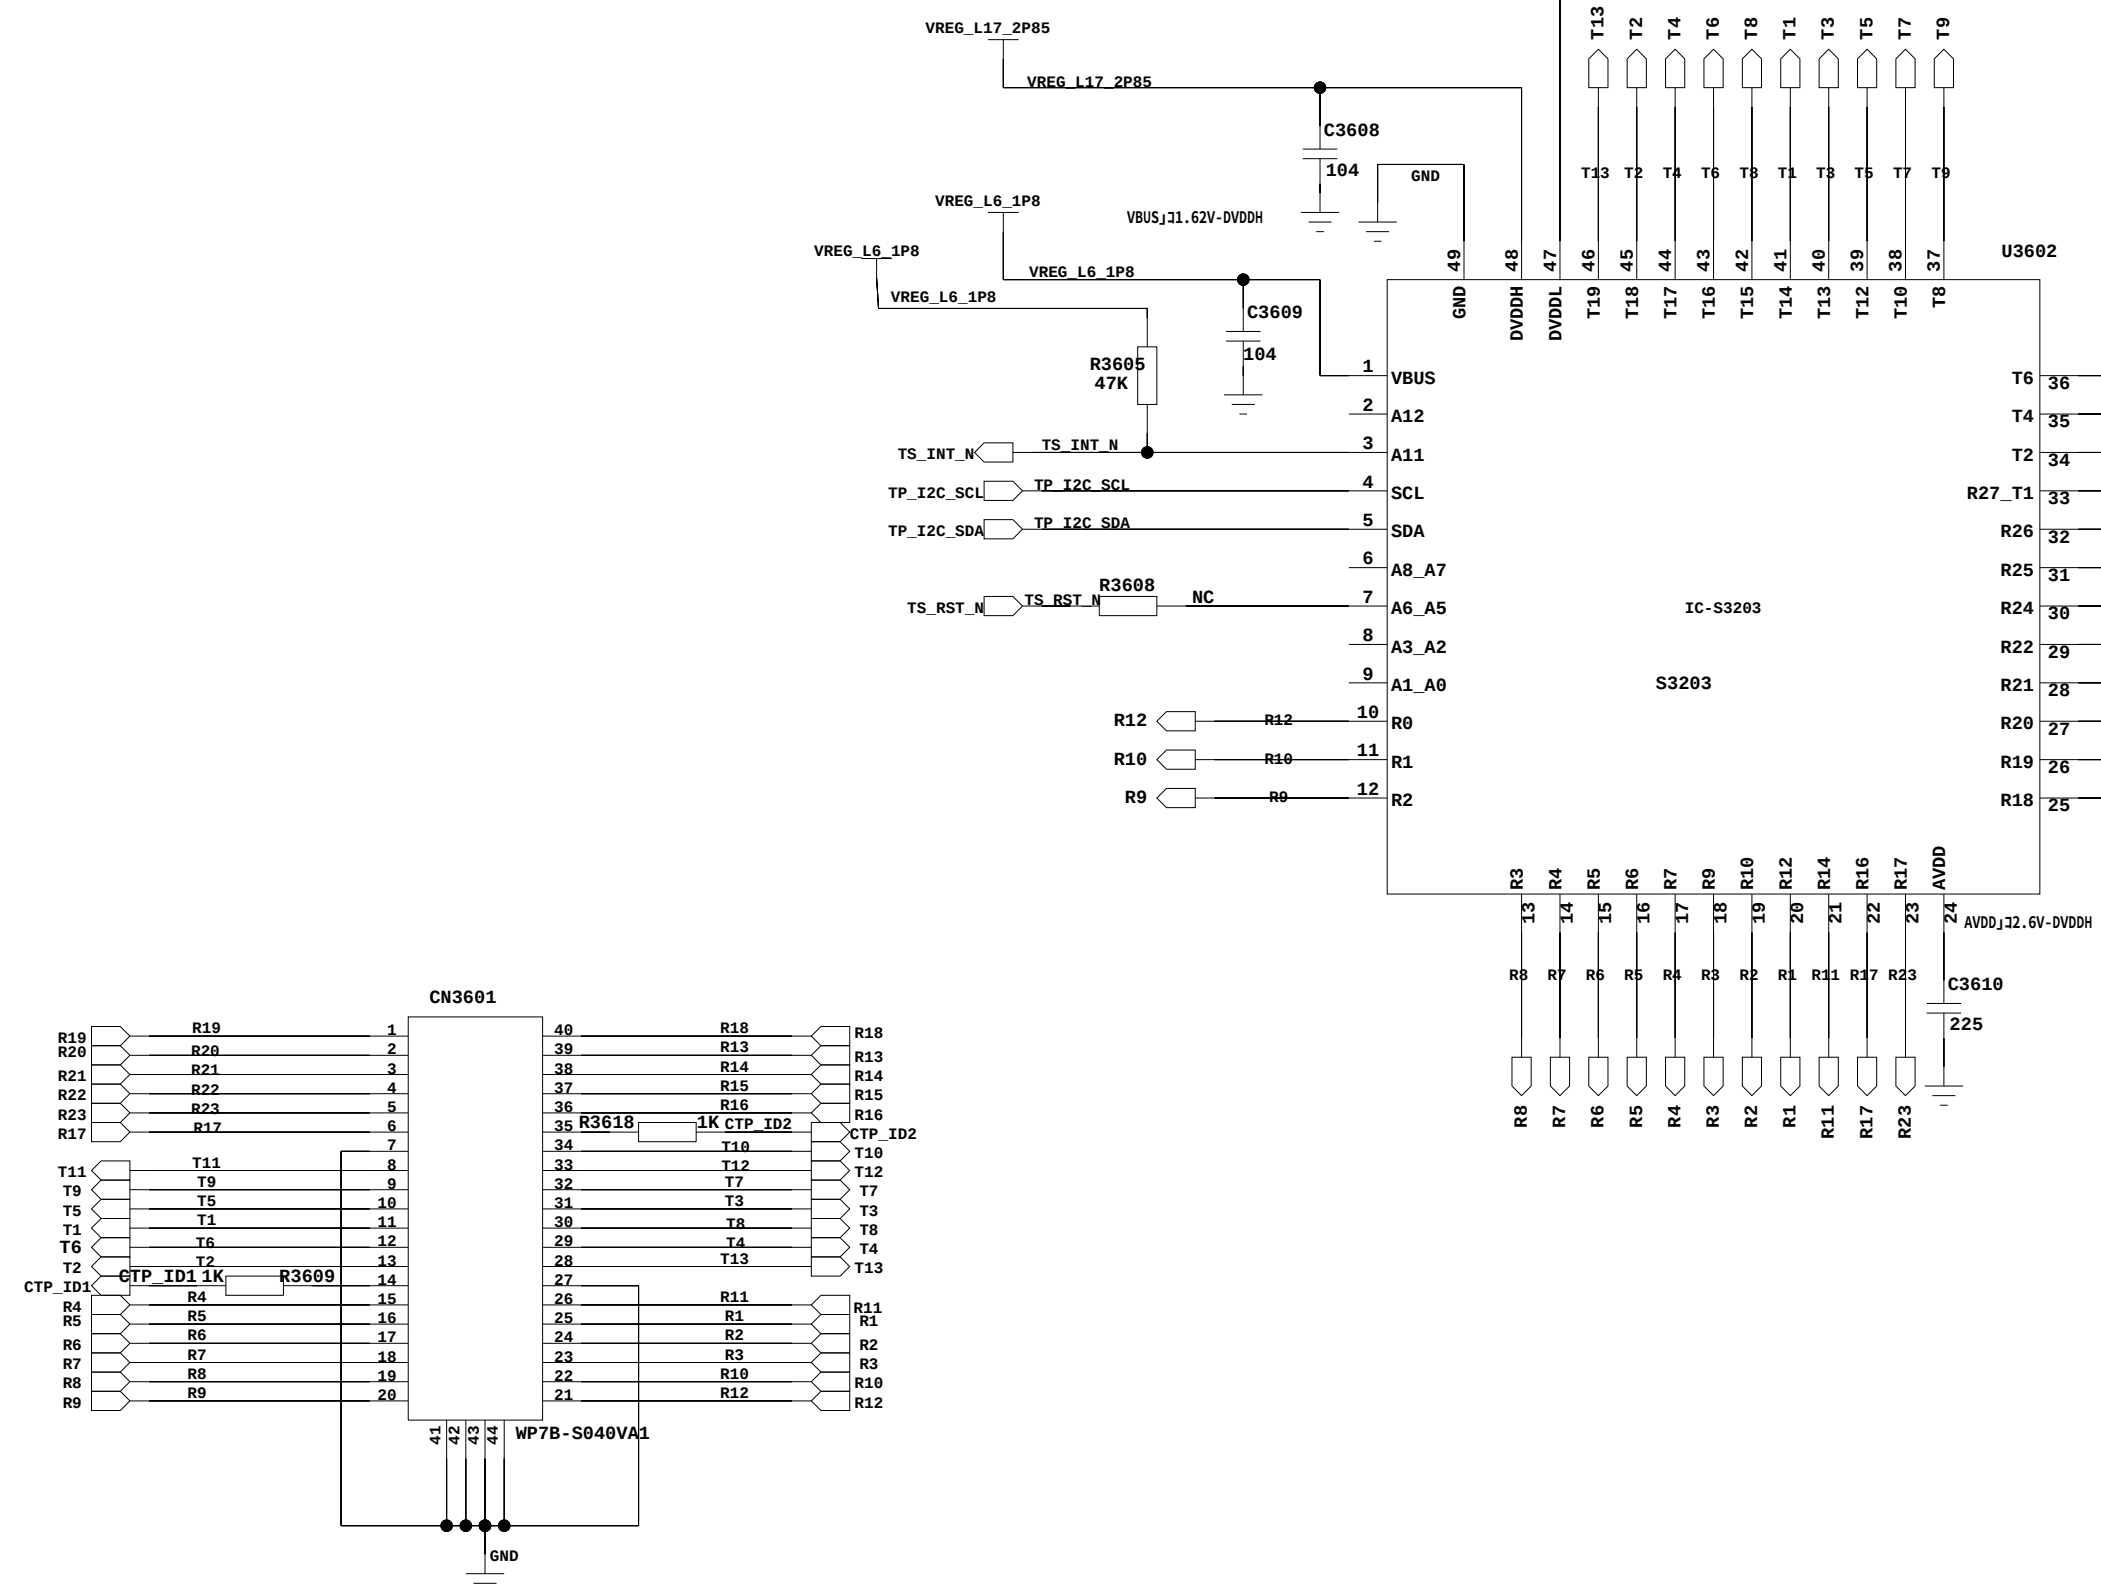


A.L.S.+P.S sensor module

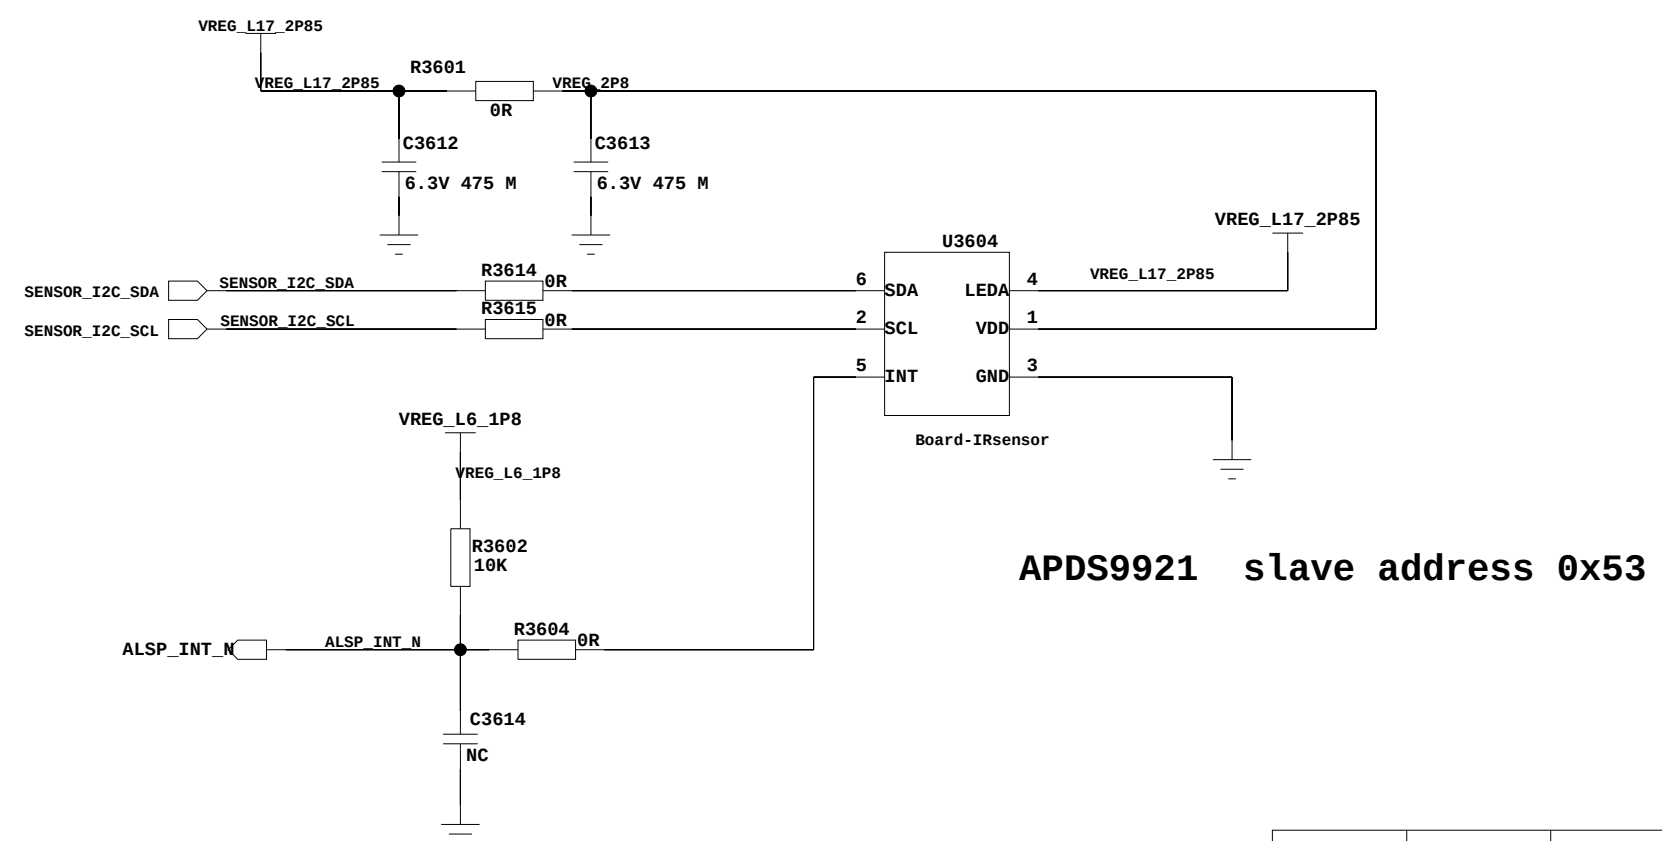




SIM1 Card

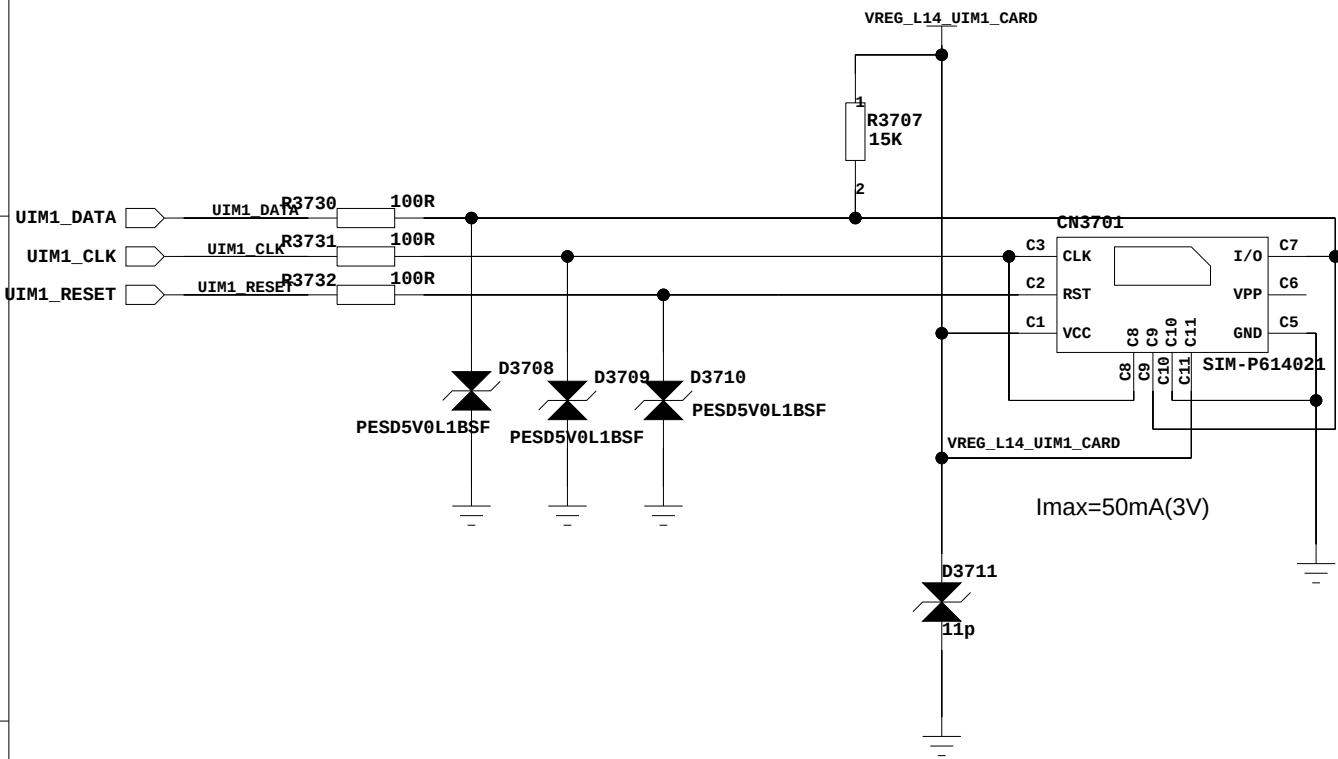


SIM2 Card

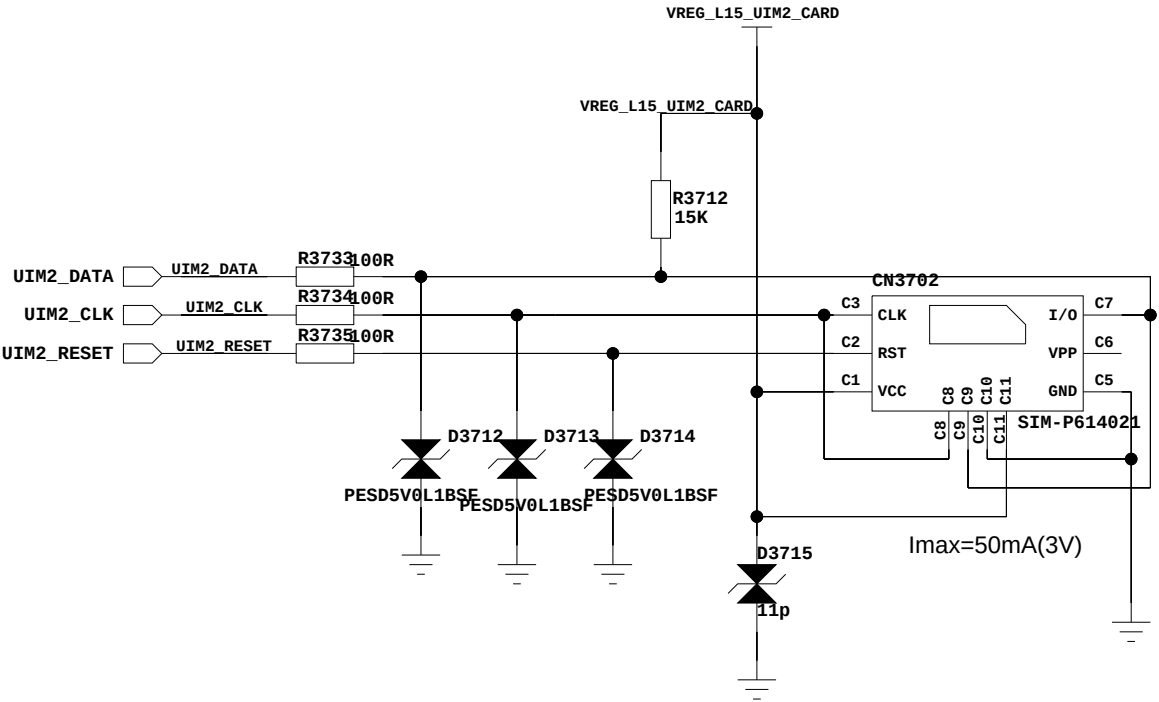


TF_CARD

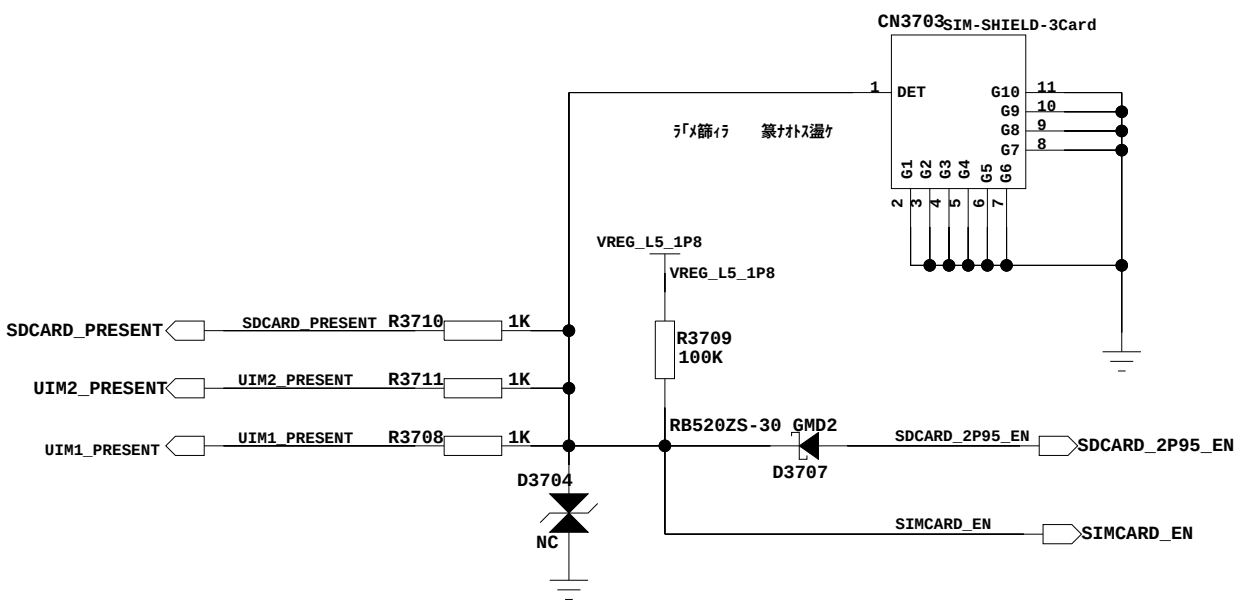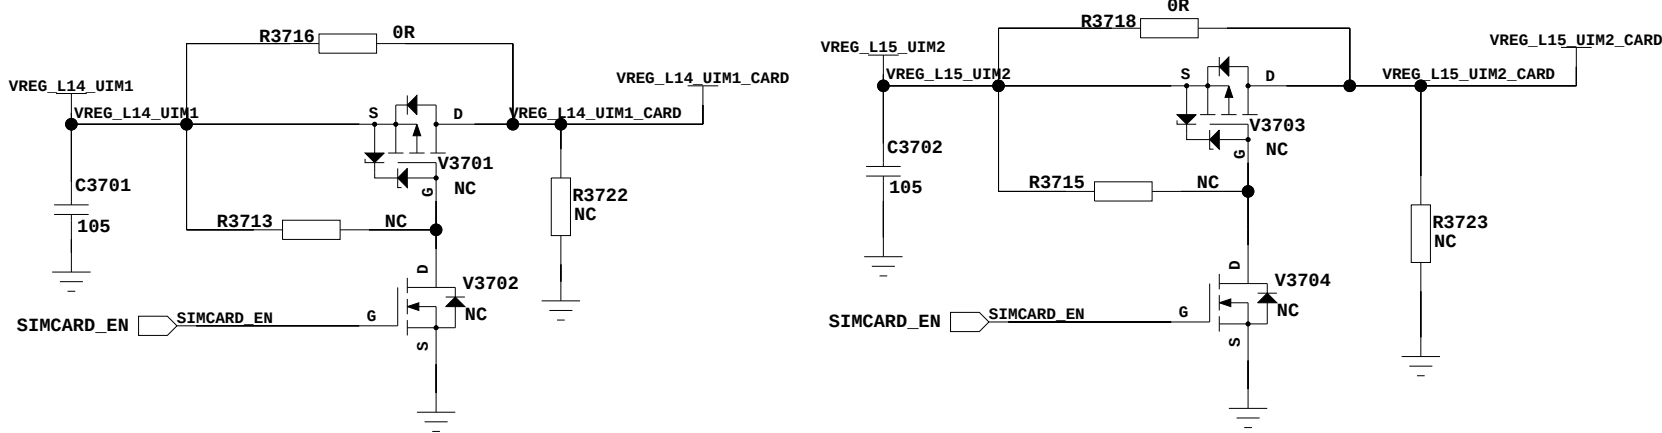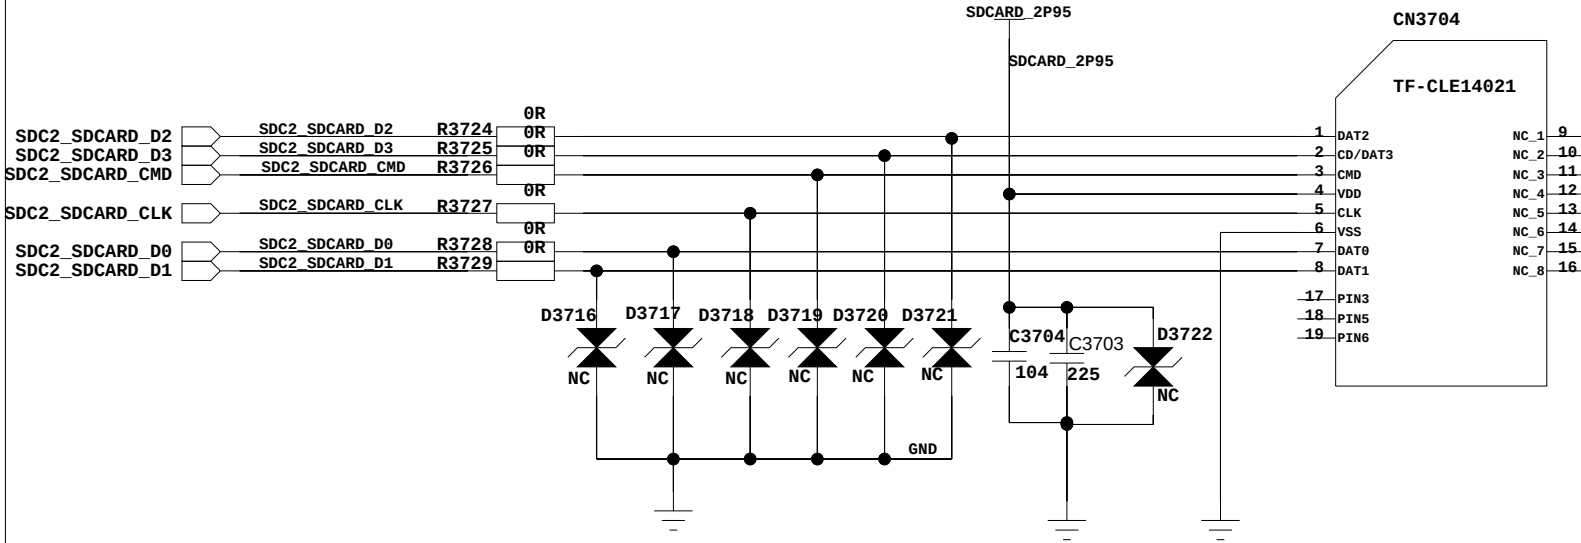

TF_LDO

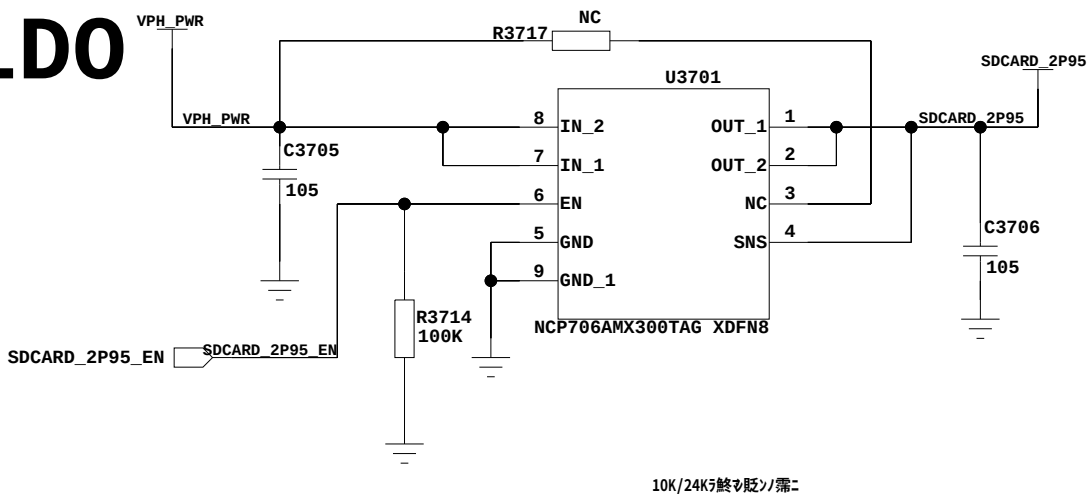

POWER&VOL KEY

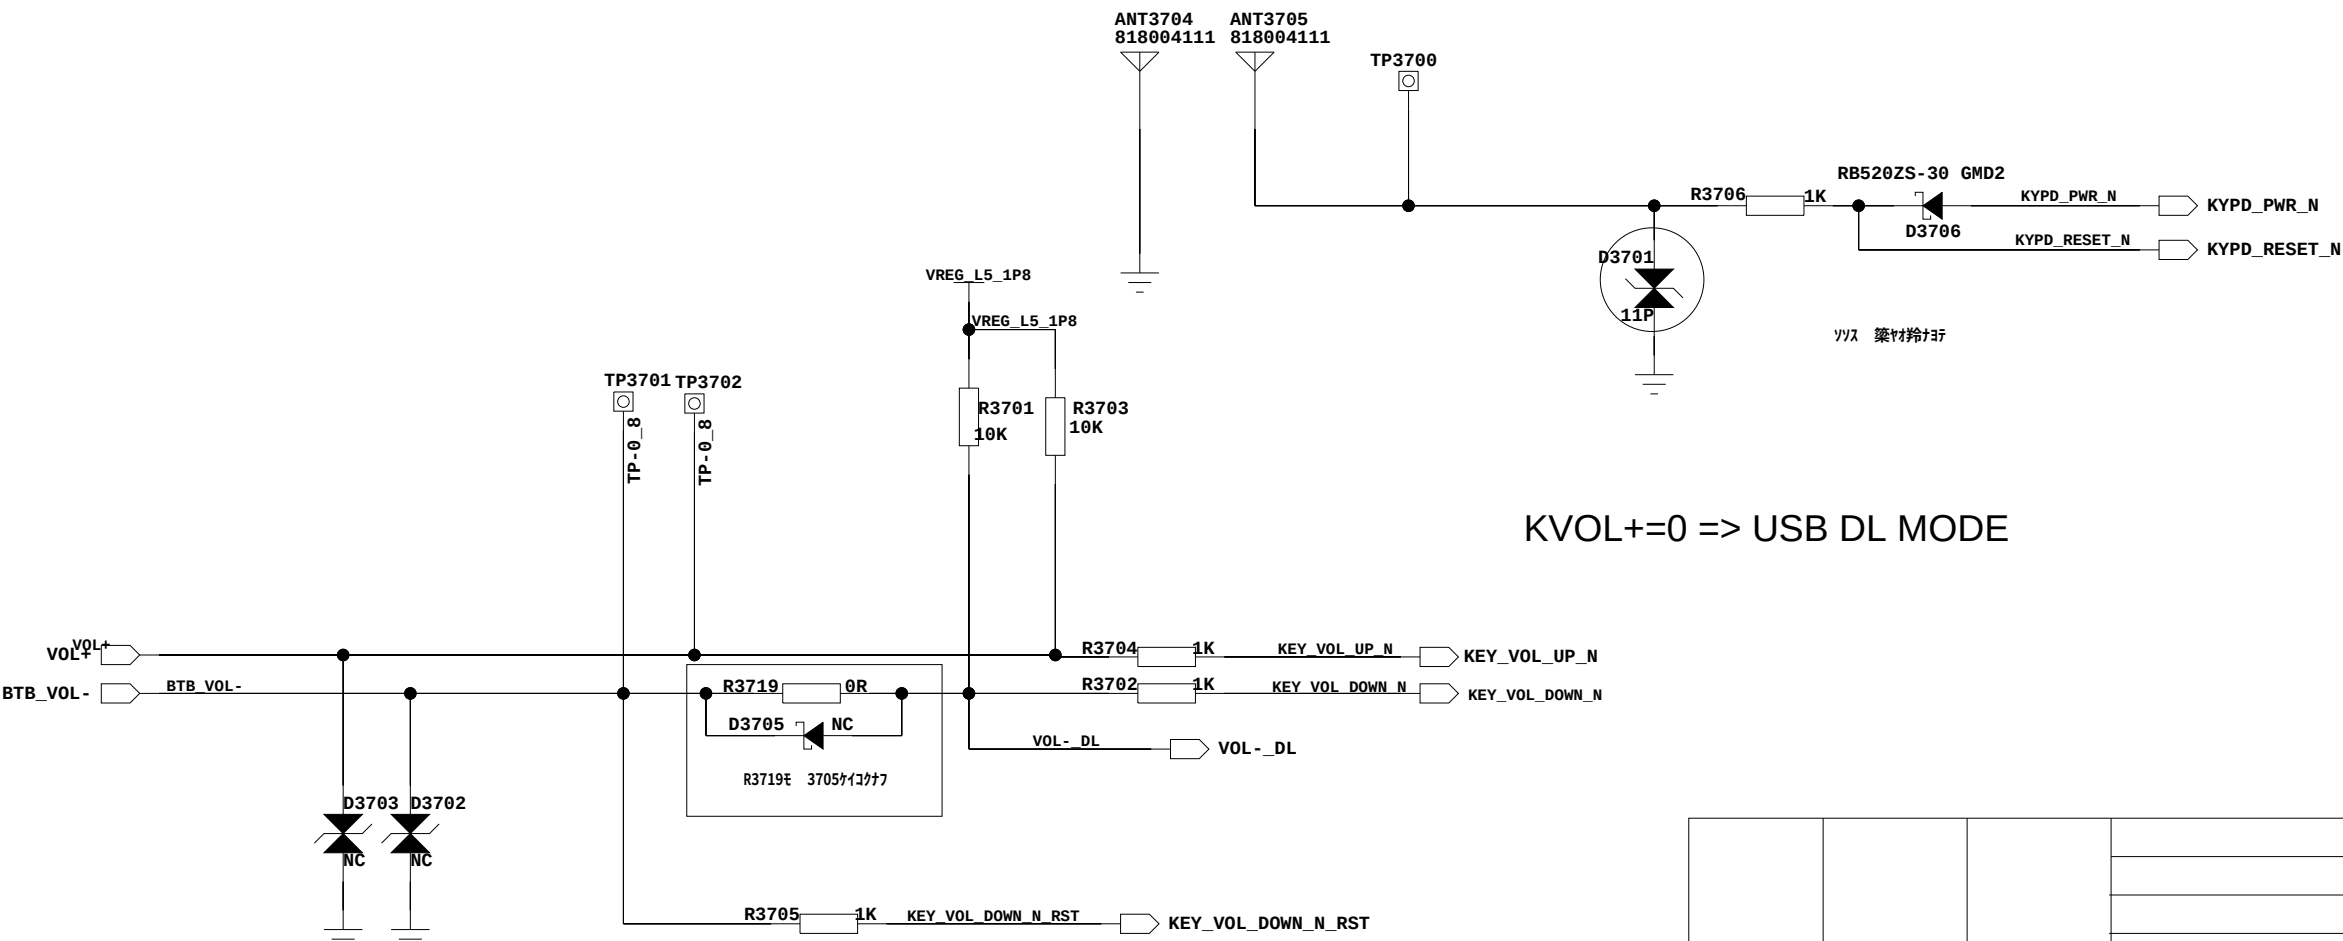

Approved By

11

MAIN_Camera

A


B

C

D

E

F

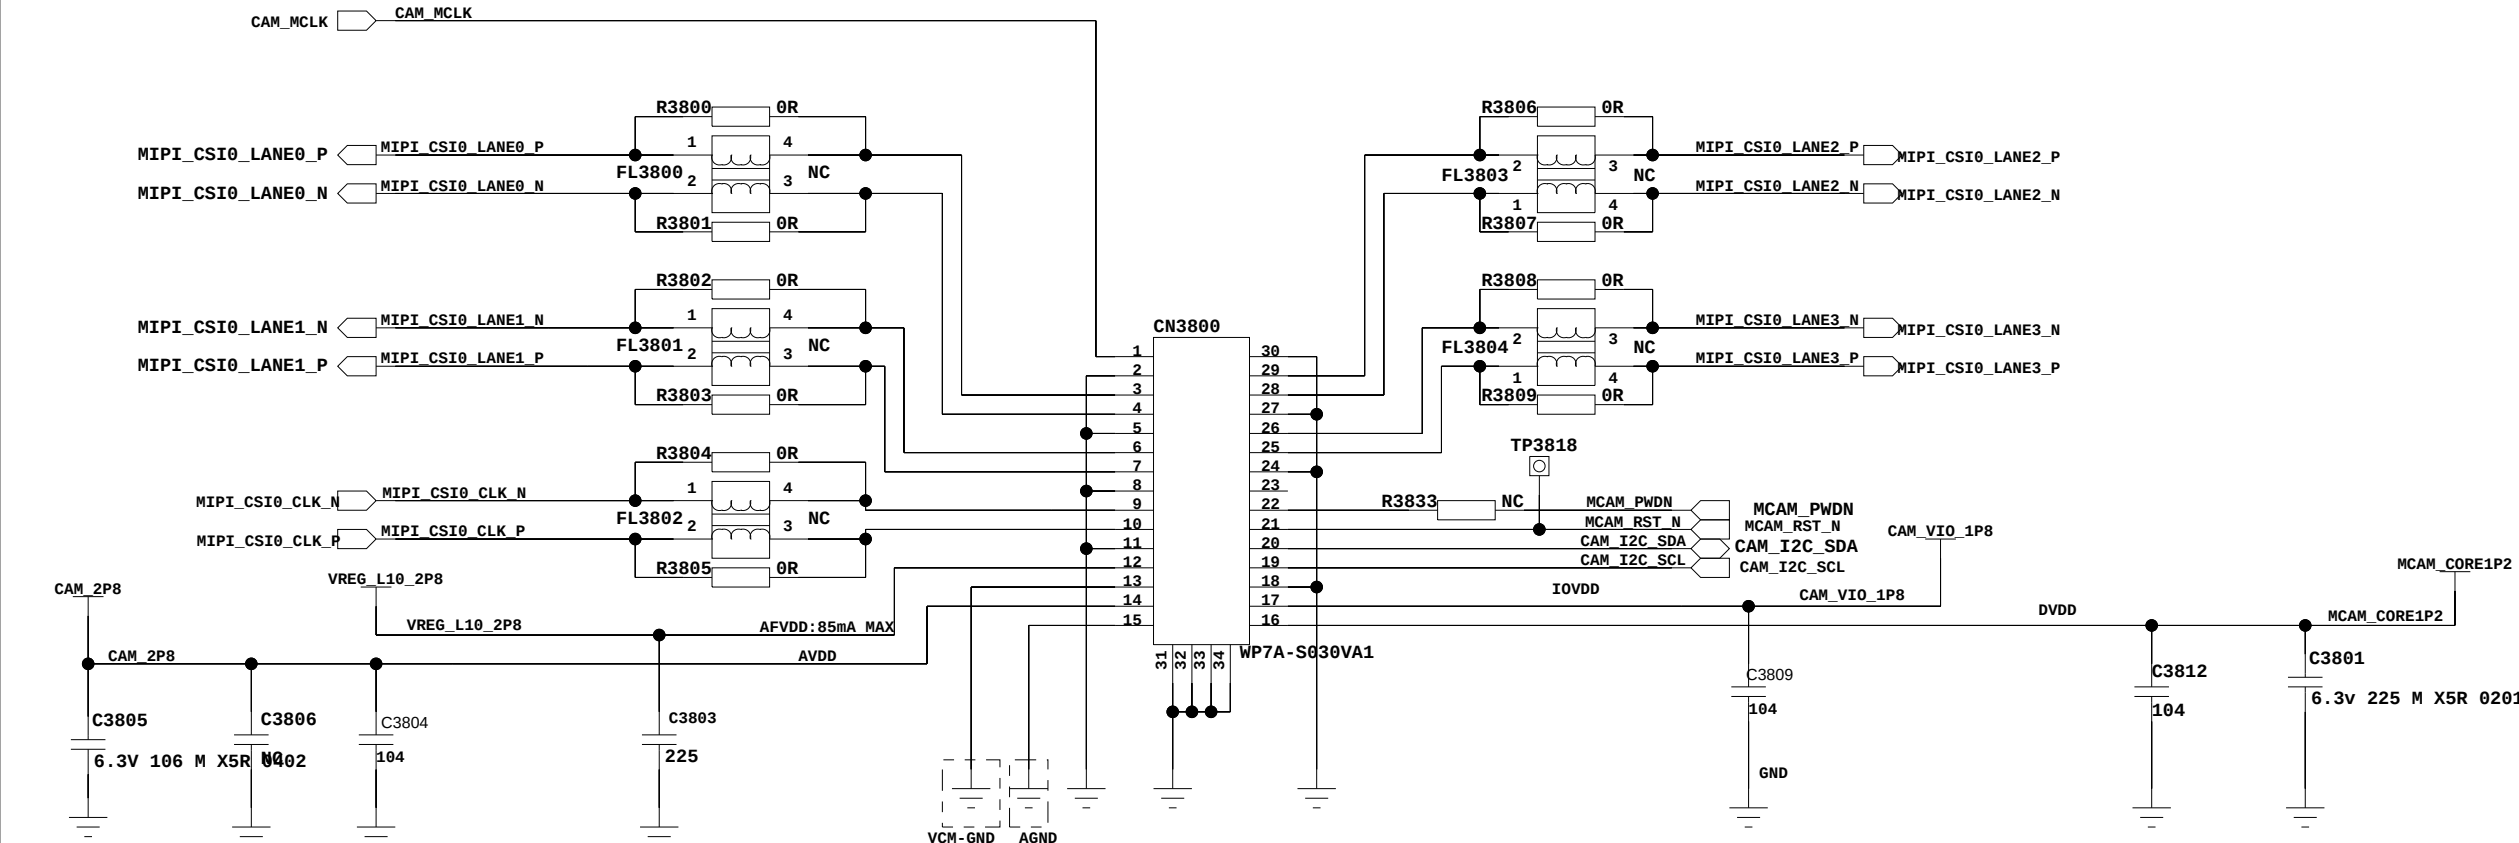

IMX179 slave address 0X21

SUB_Camera

A


B

C

D


E

F

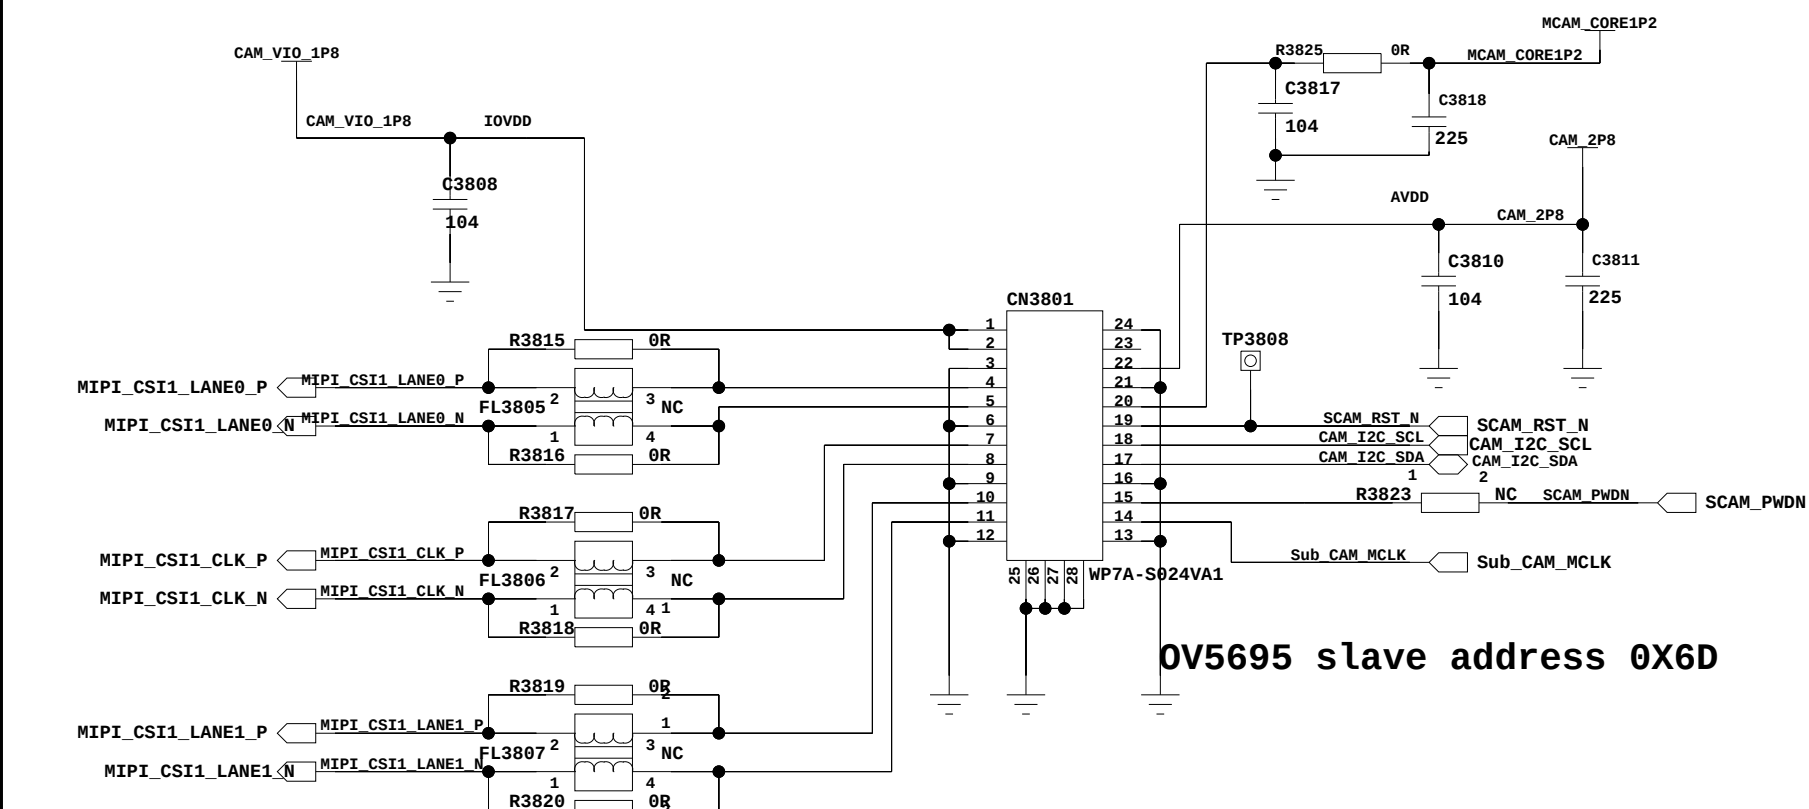


OV5695 slave address 0X6D

Camera_LDO

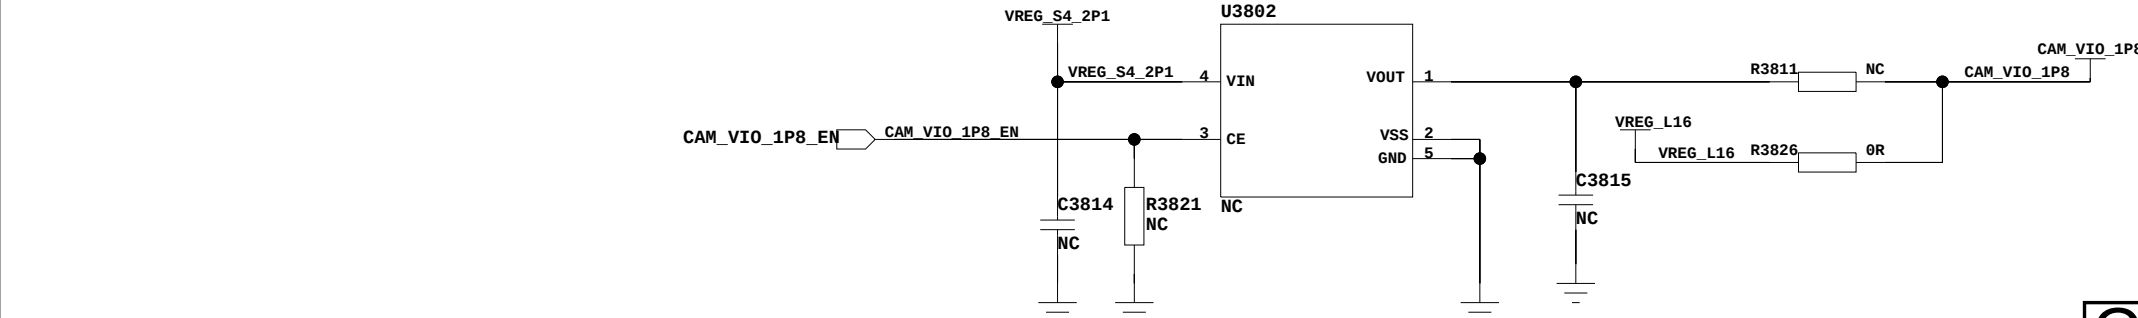


Camera_VDDIO

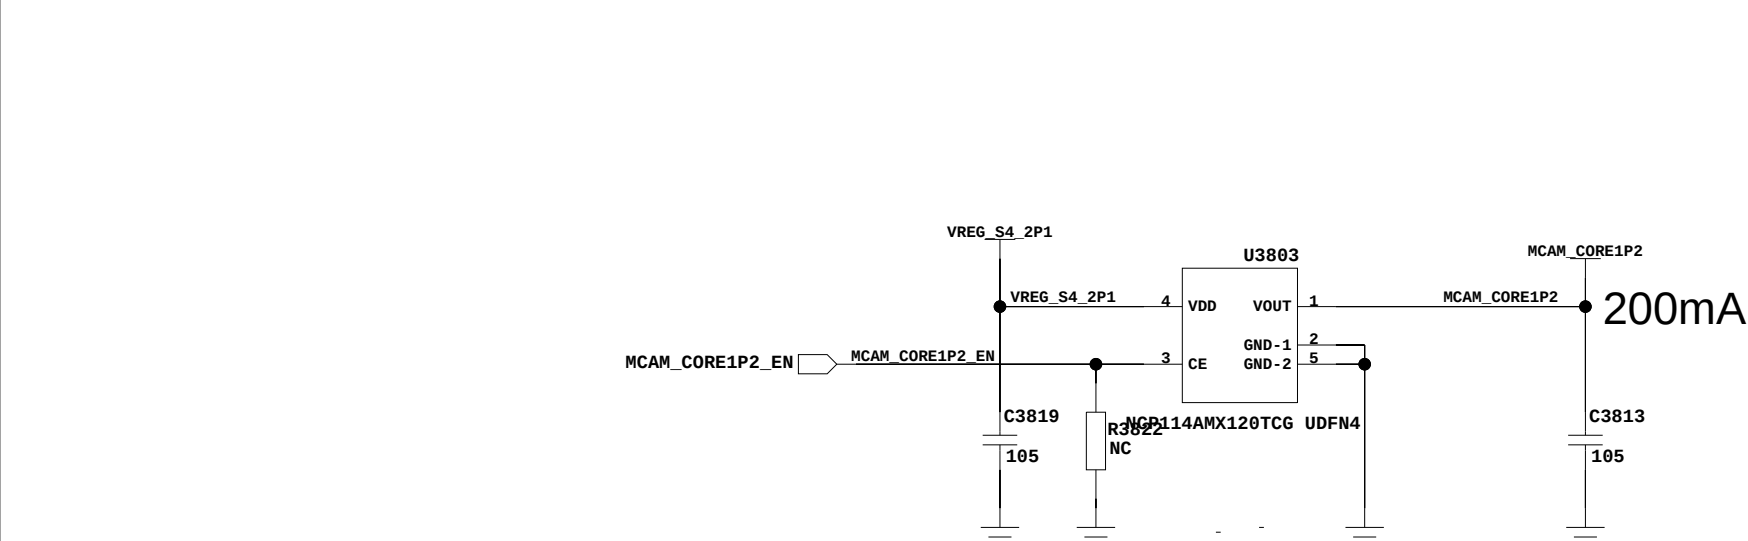

Camera_DVDD

Flash LED Driver

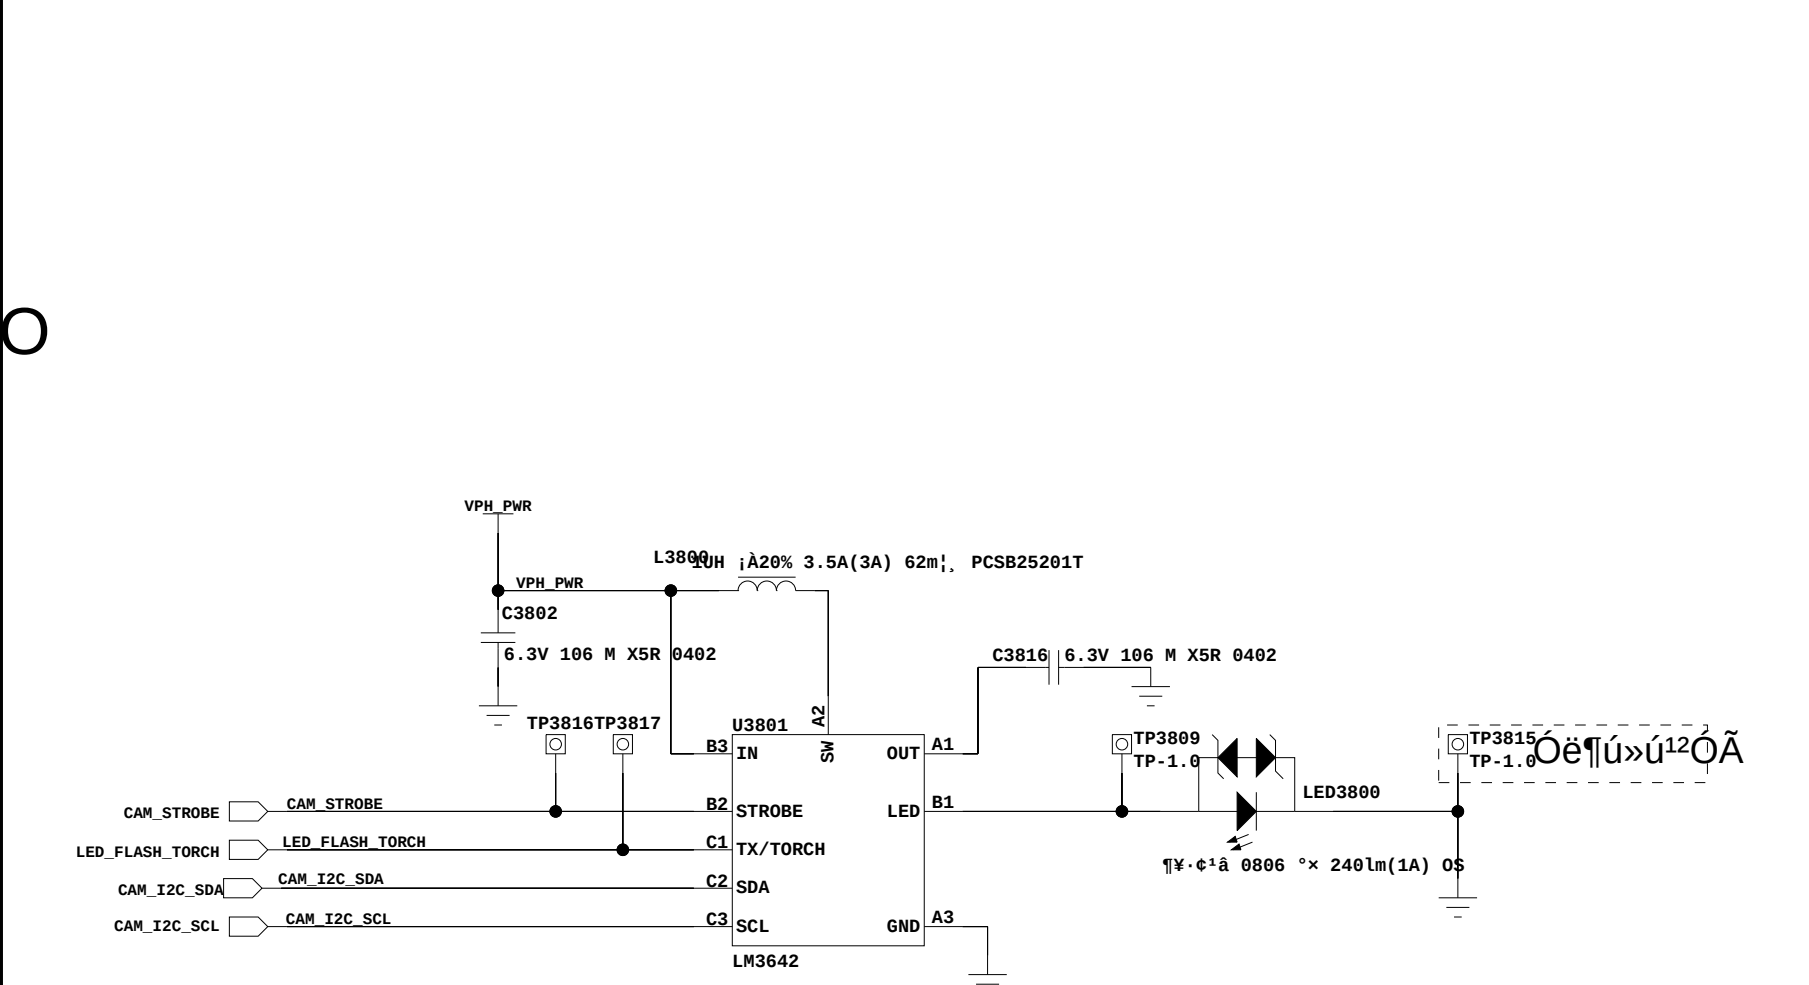

LM3642 slave address 0X63

Approved By			

