# NCTU-EE IC LAB - Spring 2025

## Final Project

## Design: single core Central Processing Unit (CPU)


## **Data Preparation**

1. Extract test data from TA's directory:

% tar xvf ~iclabTA01/Final Project 2025S.tar

## **Design Description**

A reduced instruction set computer (RISC) is a computer instruction set (AKA: the instruction set architecture (ISA)) which allows a computer's microprocessor to have fewer cycles per instruction (CPI) than a complex instruction set computer (CISC) [from Wikipedia]. In this exercise, you are asked to design a 16-bits CPU with 16 registers and the CPU should be available for the required instruction set, which shows below (very similar to MIPS).

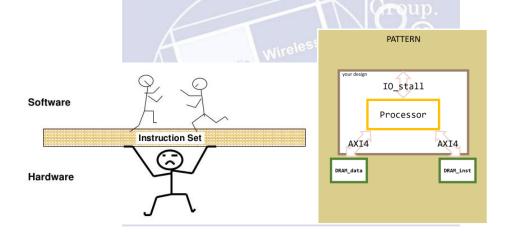

The following are the four formats for the core instruction set

Type	MSB	- Fo	ormat – (16-bit	LSB	
R	opcode (3-bits)	rs (4-bits)	rt (4-bits)	rd (4-bits)	func (1-bits)
Ι	opcode (3-bits)	rs (4-bits)	rt (4-bits)	immediate (5-	bits)
J	opcode (3-bits)	Address (13-b	its)		

Register s(rs), Register t(rt) and Register d(rd) represent the address of registers. Since the instruction takes 4 bits to store the address, it means we have 16 registers, from r0 to r15. Each register reserve 16 bits to store data, e.g. rs = 4'b0000 means one of operands is "r0". rt = 4'b0101 means one of operands is "r5", and so on.


### Detailed instructions are shown below

Function Name	Meaning	Туре	Instruction Binary Encode
ADD	rd = rs + rt	R	000-rs-rt-rd-0
SUB	rd = rs - rt	R	000-rs-rt-rd-1
Set less than	if(rs <rt) else="" rd="0&lt;/td"><td>R</td><td>001-rs-rt-rd-0</td></rt)>	R	001-rs-rt-rd-0
Mult	rd = rs * rt (16'b LSB)	R	001-rs-rt-rd-1
Load	$rt = DM[sign(rs+immediate) \times 2 + offset]$	I	010-rs-rt-iiiii
Store	$DM[sign(rs+immediate) \times 2 + offset] = rt$	I	011-rs-rt-iiiii
Branch on equal	if(rs==rt) pc=pc+1+immediate(sign) else pc=pc+1	I	100-rs-rt-iiiii
Jump	Next instruction address = address (range: 0x1000~0x1fff)	J	101-address

<sup>\*</sup>pc: program counter, meaning the next instruction. For R type, store and load instructions, pc should automatically +1 to get the next instruction.

```
@1000
21 4c // I_inst: load 0100110000100001 rs = 6, rt = 1, imm = 1
@1002
4d 54 // I_inst: load 0101010001001101 rs = 10, rt = 2, imm = 13
@1004
6e 42 // I inst: load 0100001001101110 rs = 1, rt = 3, imm = 14
@1000
e1 ff
@1002
1d 00
@1004
f2 ff
```

One instruction DRAM and one data DRAM are used in this lab. You should be careful if you wish to use the pipelining architecture, e.g. basic five-stage pipeline in a RISC machine, you must deal with data hazard problem.

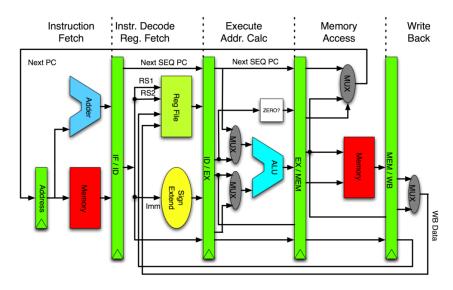

<sup>\*</sup>Each instruction has 16bits, which means the instruction address should +2 to get the next instruction.

<sup>\*</sup>offset = 0x1000

<sup>\*</sup>The first instruction address you acquire data should be "0x00001000".

## **Inputs & Output**

I/O	Bit	Signal Name	Description
Input	1	clk	Positive edge trigger clock within clock period below 20.0ns
Input	1	rst_n	Asynchronous reset active low reset
Output	1	IO_stall	Pull high when core is busy. It should be low for one cycle
			whenever you finished an instruction. TA will check the
			values of your registers when your IO_stall is low. (refer to
			appendix to see how to check the register value in
			PATTERN)

- All inputs will be changed at clk *negative* edge.
- There is *only 1 reset* before the first pattern, thus, your design must be able to reset automatically.
- The test pattern will check the value in all registers at clock *negative* edge if stall is low.
- The test pattern will check the value in data DRAM every 10 instruction at clock negative edge if IO\_stall is low.
- All the registers should be zero after the reset signal is asserted.
- The value in all registers should be **unchanged** when stall is low.

## **AXI 4 Interface (Connected with DRAM in Pattern)**

In this project, the signal naming rule for AXI4 related signals is: AXI4 signal name (lower case) + \_m\_inf (suffix). Because we have two AXI4 interface, one of them is read only while the other one is for read write, so the port number for read port should be multiplied by two while for writing port it should only be multiplied by one. For example, the port width for ARADDR [63:0] and AWADDR [31:0] should be:

ARADDR [63:32] is the address port for DRAM\_inst ARADDR [31:0] is the address port for DRAM\_data AWADDR [31:0] is the address port for DRAM\_data

# Write Address Channel

Signal	Source	Description
AWID[3:0]	Master	Write address ID. This signal is the identification tag for the write address group of signals. (In this project, we only use this to recognize master, reordering method is not supported)
AWADDR[31:0]	Master	Write address. The write address bus gives the address of the first transfer in a write burst transaction. The associated control signals are used to determine the addresses of the remaining transfers in the burst.
AWLEN[6:0]	Master	Burst length. The burst length gives the exact number of transfers in a burst. This information determines the number of data transfers associated with the address.
AWSIZE[2:0]	Master	Burst size. This signal indicates the size of each transfer in the burst. (In this project, we only support 3'b001 which is 2 Bytes (matched with Data Bus-width) in each transfer)
AWBURST[1:0]	Master	Burst type. The burst type, coupled with the size information, details how the address for each transfer within the burst is calculated. (only INCR(2'b01) is supported in this Project)
AWVALID	Master	Write address valid. This signal indicates that valid write address and control information are available:  1 = address and control information available  0 = address and control information not available.  The address and control information remain stable until the address acknowledge signal, AWREADY, goes HIGH.
AWREADY	Slave	Write address ready. This signal indicates that the slave is ready to accept an address and associated control signals:  1 = slave ready  0 = slave not ready.

# Write Data Channel

Signal	Source	Description
WDATA[15:0]	Master	Write data. The write data bus can be 8, 16, 32, 64, 128, 256, 512, or 1024 bits wide. (In this project, we only support 16 bit data width: WDATA[15:0])
WLAST	Master	Write last. This signal indicates the last transfer in a write burst.
WVALID	Master	Write valid. This signal indicates that valid write data and strobes are available:  1 = write data and strobes available 0 = write data and strobes not available.
WREADY	Slave	Write ready. This signal indicates that the slave can accept the write data: 1 = slave ready 0 = slave not ready.

# Write Response Channel

Signal	Source	Description
BID[3:0]	Slave	Response ID. The identification tag of the write response. The BID value must match the AWID value of the write transaction to which the slave is responding.
BRESP[1:0]	Slave	Write response. This signal indicates the status of the write transaction. The allowable responses are OKAY, EXOKAY, SLVERR, and DECERR. (only OKAY(2'b00) is supported in this Project)
BVALID	Slave	Write response valid. This signal indicates that a valid write response is available:  1 = write response available  0 = write response not available.
BREADY	Master	Response ready. This signal indicates that the master can accept the response information.  1 = master ready  0 = master not ready.

# Read Address Channel

Signal	Source	Description
ARID[3:0]	Master	Read address ID. This signal is the identification tag for the read address group of signals. (In this project, we only use this to recognize master, reordering method is not supported)
ARADDR[31:0]	Master	Read address. The read address bus gives the initial address of a read burst transaction.
ARLEN[6:0]	Master	Burst length. The burst length gives the exact number of transfers in a burst. This information determines the number of data transfers associated with the address.
ARSIZE[2:0]	Master	Burst size. This signal indicates the size of each transfer in the burst. (In this project, we only support 3'b001 which is 2 Bytes (matched with Data Bus-width) in each transfer)
ARBURST[1:0]	Master	Burst type. The burst type, coupled with the size information, details how the address for each transfer within the burst is calculated. (only INCR(2'b01) is supported in this Project)
ARVALID	Master	Read address valid. This signal indicates, when HIGH, that the read address and control information is valid and will remain stable until the address acknowledge signal, <b>ARREADY</b> , is high.  1 = address and control information valid  0 = address and control information not valid.
ARREADY	Slave	Read address ready. This signal indicates that the slave is ready to accept an address and associated control signals:  1 = slave ready  0 = slave not ready.

## Read Data Channel

Signal	Source	Description
RID[3:0]	Slave	Read ID tag. This signal is the ID tag of the read data group of signals. The RID value is generated by the slave and must match the ARID value of the read transaction to which it is responding.
RDATA[15:0]	Slave	Read data. The read data bus can be 8, 16, 32, 64, 128, 256, 512, or 1024 bits wide. (In this project, we only support 16 bit data width: RDATA[15:0])
RRESP[1:0]	Slave	Read response. This signal indicates the status of the read transfer. The allowable responses are OKAY, EXOKAY, SLVERR, and DECERR. (only OKAY(2'b00) is supported in this Project)
RLAST	Slave	Read last. This signal indicates the last transfer in a read burst.
RVALID	Slave	Read valid. This signal indicates that the required read data is available and the read transfer can complete: 1 = read data available 0 = read data not available.
RREADY	Master	Read ready. This signal indicates that the master can accept the read data and response information:  1= master ready  0 = master not ready.

## **Specifications**

- 1. Top module name: CPU (top file name: CPU.v)
- 2. It is **asynchronous** reset and **active-low** architecture. **rst\_n** would active once at the beginning. All the registers should be zero after the reset signal asserts.
- 3. All the data are in **signed** format in all registers.
- 4. The maximum clock period is set to **20ns**, and **you can determine the clock period by yourself**.
- 5. The input delay and the output delay should be **half** of the clk period, if clock period is 10ns, the input delay and the output delay will be 5ns.
- 6. IO\_stall signal cannot be continuous high for 2000 cycles during functionality check, cannot be continuous high for 100000 during performance check.
- 7. The output loading is set to **0.05**. The wire load is **top** and target library is **slow.db**
- 8. The synthesis result of data type cannot include any **LATCH** (in syn.log).
- 9. In this project, you should modify the syn.tcl (e.g. link library for your memory.db) by yourself. compile\_ultra will be used to synthesis. Since memories are used in this project, the syn.tcl in Lab05 may be a good reference one.
- 10. You **CANNOT PASS** the demo if there are **timing violation** messages in the gate level simulation WITHOUT notimingchecks option
- 11. No **ERROR** is allowed in every simulation/synthesis.
- 12. You must use SRAM in your design or you wouldn't get any point in this project.
- 13. The maximum area should be smaller than 2,000,000.
- 14. You cannot change the register name or type from the original file.
- 15. PATTERN will not generate any overflow cases during calculation.
- 16. The program counter will not over access range of memory when the jump instruction asserts. So, you need to think how to write your pattern by yourself.
- 17. For achieving the data dependence in real case, the next load/store address will be constrained in certain range for data memory and the address for jump/branch

- instruction will also be constrained in certain range. Please refer appendix.
- 18. Please refer the check list.pdf file for APR routing specs.
- 19. The latency between BVALID and BREADY, RREADY and RVALID should not be larger than 300 cycles.
- 20. DRAM must be declared in PATTERN, do not declare it in your DESIGN.
- 21. Don't use any wire/reg/submodule/parameter name called \*error\*, \*latch\*, \*congratulation\* or \*fail\* otherwise you will fail the lab. Note: \* means any char in front of or behind the word. e.g: error note is forbidden.
- 22. Don't write Chinese comments or other language comments in the file you turned in.
- 23. Verilog commands

//synopsys dc\_script\_begin, //synopsys dc\_script\_end
//synopsys translate\_off, //synopsys translate\_on
Are only allowed during the usage of including and setting designware IPs, other
design compiler optimizations are forbidden.

- 24. Using the above commands are allowed, however any error messages during synthesize and simulation, regardless of the result will lead to failure in this lab.
- 25. Any form of display or printing information in verilog design is forbidden. You may use this methodology during debugging, but the file you turn in should not contain any coding that is not synthesizable.

## **APR Specifications**

- 1. Floor plan:
  - a. Core to IO boundary must be more than 100.
  - b. Hard macro must be placed inside core.
- 2. Power plan:
  - a. Power ring must be wire group, interleaving, at least 4 pairs, width at least 9
  - b. Stripes sets distance should be less than 200, width at least 4.
- 3. Timing slack shouldn't have any negative slacks after setup/hold time analysis (including SI).
- 4. The DRV of (fanout, cap, tran) should be all 0 after post\_Route setup/hold time analysis (including SI).
- 5. No LVS violation after "verify connectivity".
- 6. No DRC violation after "verify geometry".
- 7. Core filler must be added.

## **Grading Policy**

1st Demo (100%), 2nd Demo (70% of total)

- Synthesis, RTL & Gate Level Simulation Correctness, APR and Post Level Simulation Correctness: 70%
  - You can only get this score and pass the demo with correct synthesis, APR specs, post layout and gate-level simulation (including functionality check and performance evaluation).
- Performance : 30%
  - 1. Performance: (Total Cycle x Clock Period)<sup>2</sup> x Core Area
  - 2. You can only get performance score when you pass the demo.

If you fail the 1.a, 2.a, 2.b APR specs and pass all the other checks, you can still pass demo, but each violation will deduct 2 points. (the sub-points in 2.a and 2.b are counted separately) TA will demo your design with 2 different patterns, one is for functionality check, the other is for performance evaluation.

For functionality check, the DRAM latency is in between 1 to 20, not fixed. For performance evaluation, the DRAM latency is above 100 but below 1000, not fixed.

### Note

1. Please submit your files under 09\_SUBMIT before 12:00 noon.

```
Due Day: 1st Demo: June 9th 2nd Demo: June 11th
```

- If uploaded files violate the naming rule, you will get 5 deduct point.
- > 09 submit/00 tar Example: ./00 tar 20.0

In this lab, you can adjust your clock cycle time. Consequently, make sure your pre-layout and post-layout clock cycle time are consistent.

After that, you should check the following files under 09 SUBMIT/Final Project iclabXXX/

CHIP\_iclabXXX.sdf
CHIP\_iclabXXX.inn.dat

If you miss any files on the list, you will fail this lab.

If any error occurs when restoring your design, you will FAIL the lab

Then use the command like the figure below to check the files are uploaded or not.

## [Exercise/09\_SUBMIT]% ./02\_check 1st\_demo

2. Template folders and reference commands:

```
01 RTL/
             (RTL simulation)
                                              ./01 run vcs rtl
02 SYN/
             (Synthesis)
                                              ./01 run dc shell
(Check latch by searching the keyword "Latch" in 02 SYN/syn.log)
(Check the design's timing in /Report/CPU.timing)
(Check the design's area in /Report/ CPU.area)
03 GATE/
             (Gate-level simulation)
                                             ./01 run vcs gate
04 MEM/
             (Memory location)
             (Automatic Place & Route Folder)
05 APR/
06 POST/
              (Post Layout Simulation)
                                                  ./01 run vcs post
(You should generate your own memory and put the required files here)
09 SUBMIT/ (submit your files)
./00 tar
             ./01 submit
                                ./02 check
```

You can key in ./09\_clean\_up to clear all log files and dump files in each folder

#### **Appendix**

- TA will check the value in data memory **every ten instructions** when IO\_stall is low.
- TA will check your registers by the following command in PATTERN:

(RTL & GATE level)

```
if((My_CPU.core_r0 !== golden_reg[0]) || (My_CPU.core_r8 !== golden_reg[8]) ||
(My_CPU.core_r1 !== golden_reg[1]) || (My_CPU.core_r9 !== golden_reg[9]) ||
(My_CPU.core_r2 !== golden_reg[2]) || (My_CPU.core_r10 !== golden_reg[10]) ||
(My_CPU.core_r3 !== golden_reg[3]) || (My_CPU.core_r11 !== golden_reg[11]) ||
(My_CPU.core_r4 !== golden_reg[4]) || (My_CPU.core_r12 !== golden_reg[12]) ||
(My_CPU.core_r5 !== golden_reg[5]) || (My_CPU.core_r12 !== golden_reg[12]) ||
(My_CPU.core_r6 !== golden_reg[6]) || (My_CPU.core_r14 !== golden_reg[13]) ||
(My_CPU.core_r7 !== golden_reg[7]) || (My_CPU.core_r15 !== golden_reg[13]) ||
(My_CPU.core_r7 !== golden_reg[7]) || (My_CPU.core_r15 !== golden_reg[15]))begin

(APR & POST)

if((My_CHIP.core_r0 !== golden_reg[1]) || (My_CHIP.core_r10 !== golden_reg[1]) ||
(My_CHIP.core_r1 !== golden_reg[1]) || (My_CHIP.core_r10 !== golden_reg[10]) ||
(My_CHIP.core_r2 !== golden_reg[2]) || (My_CHIP.core_r11 !== golden_reg[11]) ||
(My_CHIP.core_r4 !== golden_reg[4]) || (My_CHIP.core_r11 !== golden_reg[11]) ||
(My_CHIP.core_r5 !== golden_reg[5]) || (My_CHIP.core_r13 !== golden_reg[13]) ||
(My_CHIP.core_r6 !== golden_reg[6]) || (My_CHIP.core_r13 !== golden_reg[13]) ||
(My_CHIP.core_r6 !== golden_reg[6]) || (My_CHIP.core_r14 !== golden_reg[13]) ||
(My_CHIP.core_r7 !== golden_reg[7]) || (My_CHIP.core_r14 !== golden_reg[13]) ||
(My_CHIP.core_r7 !== golden_reg[7]) || (My_CHIP.core_r15 !== golden_reg[13])) ||
(My_CHIP.core_r7 !== golden_reg[7]) || (My_CHIP.core_r15 !== golden_reg[13])) ||
(My_CHIP.core_r7 !== golden_reg[7]) || (My_CHIP.core_r15 !== golden_reg[13])) ||
(My_CHIP.core_r7 !== golden_reg[7]) || (My_CHIP.core_r15 !== golden_reg[15])) ||
(My_CHIP.core_r7 !== golde
```

Please make sure your registers can be read by PATTERN after synthesis and APR,

otherwise if TA's pattern can not access your register, you will fail your demo.

Memory available range

From: 0x0000
To : 0x0FFF
Kernel Not Accessible

From: 0x1000
To : 0x1FFF
DRAM\_data

From: 0x0000
To : 0x1FFF
DRAM\_inst

Read & Write

From: 0x0000
To : 0x1FFF
DRAM\_inst

Read only

• Store, load, branch and jump address
The address value of the above instructions must be within the available address range for DRAM (0x00001000~0x00001FFF).

■ Instruction
 Ex. 000-0001-0010-0011-0 means r1 + r2 and saves the result into r3.
 The first instruction address you acquire data should be "0x00001000".

• Data Dependence Prediction

For achieving the data dependence in real case, the next load/store address will be constrained in certain range for data memory and the address for jump/branch instruction will also be constrained in certain range. The range is from (current address -64 + 2) to (current address +64), e.g. if current address is dec(1000), the next load/store address will be from dec(938) to dec(1064).