



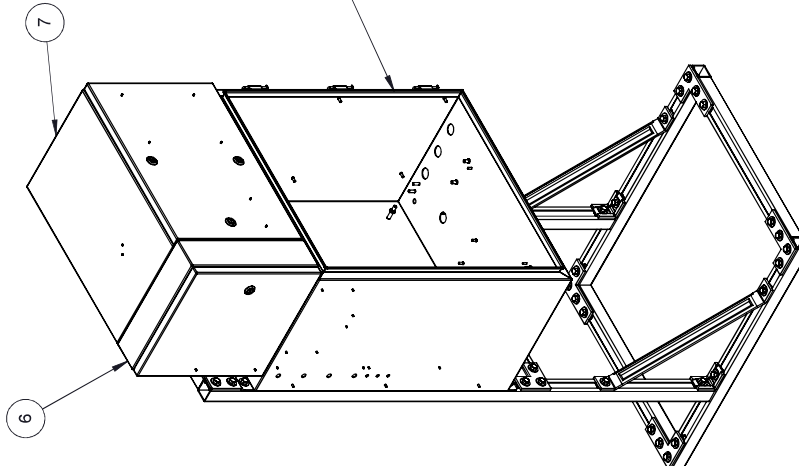

STEP 1: LAY OVER UNISTRUT FRAME
& SUPPORT ON JACK STANDS. PLACE
ENCLOSURE ONTO FRAME ASSEMBLY
AND SECURE WITH BOLTS & WASHERS
SUPPLIED WITH THE FRAME

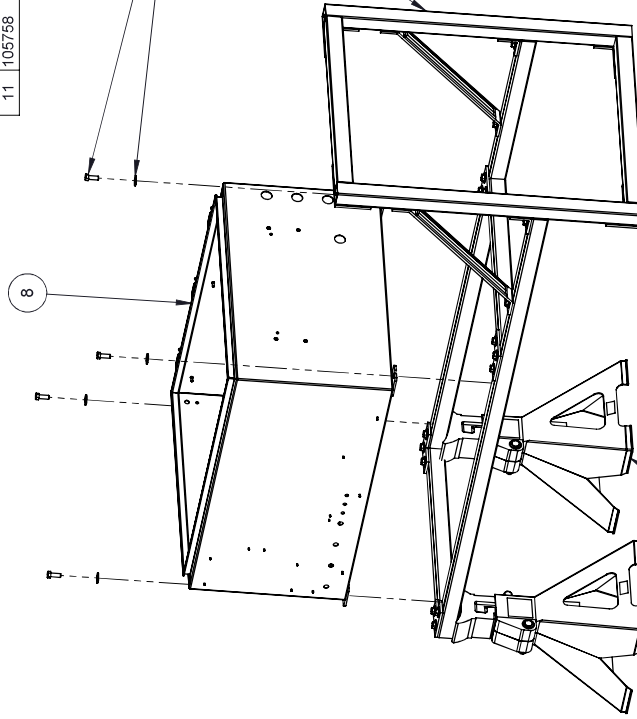

-PROVIDED BY
OPERATIONS

OPERATIONS
(NOT ON BOM AND FOR ASSEMBLY PURPOSES ONLY)

G	REMOVE 6200-UNISTRUT, ADD ASSEMBLY FIXTURE	CR 5272A	10/08/20	PDB
F	(REVISION NOT USED)			
E	(REVISION NOT USED)			
D	-	CO 2579A	2/1/2019	KJ
C	SHOW CHANGE IS SILICONE PLACEMENT	CO 2579	7/12/16	LMYB4
B	B4 REMOVED DOOR FROM ELECTRONICS CABINET, ADD INSULATION	CO 2579	2/10/16	LMY PDB
A	INITIAL RELEASE	CO 2579	9/11/15	LMY
REV	ZONE	PR.#	DATE	DRAWN BY
	DESCRIPTION			

ITEM	P/N	DESCRIPTION	QTY.
1	01017	NUT, ELASTIC LOCK, 8-32 SS	2
2	01019	WASHER, #8 FLAT S/S	2
3	01116	BOLT 1/4-20 x 1/2 HEX HD SS	10
4	102477	WASHER, 5/16 ID - HARD FIBER	4
5	103194	WASHER, HARD FIBER, .28 ID X .50 OD X .031 THK	10
6	105590	ENCLOSURE, SAMPLE VALVE ASSEMBLY (W/NUTS & FERRULES)	1
7	105591	ENCLOSURE, FURNACE ASSEMBLY	1
8	105992	CABINET, ELECTRONICS ASSEMBLY	1
9	102499	SILICONE SEALANT, 9 OZ TUBE OR EQUAL	1
10	105628	INSULATION, Nsure FURNACE ENCLOSURE	1
11	1055758	BRACKET, SAMPLE VALVE MOUNTING ASSEMBLY	1

 — ASSEMBLY FIXTURE (STAND) AND HARDWARE PROVIDED BY PRODUCTION.
(TO BE REMOVED FOR SHIPMENT)



DIMENSIONS
INCHES



8824 FALLBROOK DRIVE, HOUSTON, TX 77064-9912
TELEPHONE: +1 281 590 0329 FAX: +1 281 590 0710

DRAWN: LMY APPVD:

TITLE: ASSEMBLY

DATE:	9-9-15	SCALE:	NONE
-------	--------	--------	------


DATE:	9-9-15	SCALE:	NONE
MODEL:		PART #	

MODEL:	NSure
PART #	105593

2

STEP 3: BEFORE THE SILICON HAS A CHANCE TO SET UP, PLACE FURNACE ENCLOSURE ONTO DETECTOR ENCLOSURE. USE HARDWARE TO FASTEN THE TWO ENCLOSURES TOGETHER, REMOVE THE TUBE FITTING HARDWARE FROM THE FITTINGS ON THE SAMPLE VALVE ENCLOSURE. SLIDE THE SAMPLE VALVE ENCLOSURE FITTINGS INTO THE HOLES ON TOP OF THE DETECTOR ENCLOSURE. USE THE NUTS AND WASHERS TO SECURE VALVE ENCLOSURE TO THE DETECTOR ENCLOSURE. REINSTALL THE NUTS & FERRULES ONTO THE SWAGELOK FITTINGS

STEP 2: STAND FRAME / ENCLOSURE UPRIGHT
PLACE A SMALL BEAD OF P/N 102499, GE-
SILICON-II OR EQUIVALENT AROUND LARGE
HOLE. EACH OF THE (4) BULKHEAD HOLES,
AROUND TWO HOLES ON THE RIGHT SIDE AND
THE TWO HOLES ON THE VALVE BOX AS SHOWN.

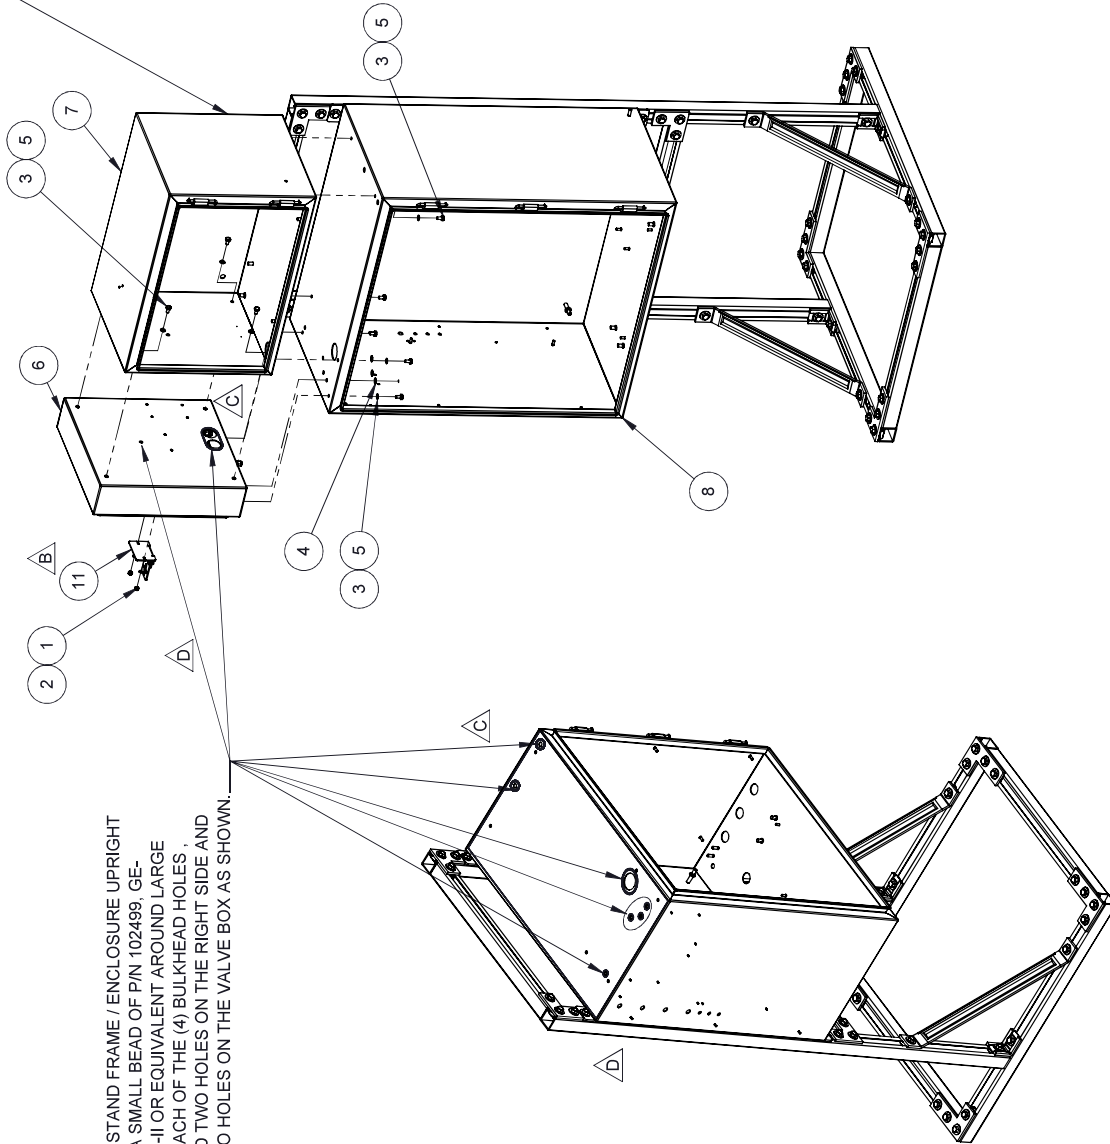

DRAWN PER
ASME Y14.5-2009

TOLERANCES:
X = $\pm .03$
.XX = $\pm .01$
.XXX = $\pm .005$
ANGULAR $\pm 1^\circ$

 DIMENSIONS
ARE IN INCHES



8824 FALLBROOK DRIVE HOUSTON, TX 77064-3912
TELEPHONE: +1 281 580 0339 FAX: +1 281 580 0719

DRAWN: LMY APPVD: MK
TITLE: ASSEMBLY


CHASSIS ASSEMBLY, BASE UNIT

DATE: 9-9-15	SCALE: NONE	SHEET: 2 of 3
MODEL: NSure	PART #: 105593	DWG #: 105593
		REV: G


THIS DOCUMENT CONFIDENTIAL AND PROPRIETARY, SEE SHEET (1) FOR DETAIL

NOTES:


FURNACE CABINET
INSULATION INSTALLATION

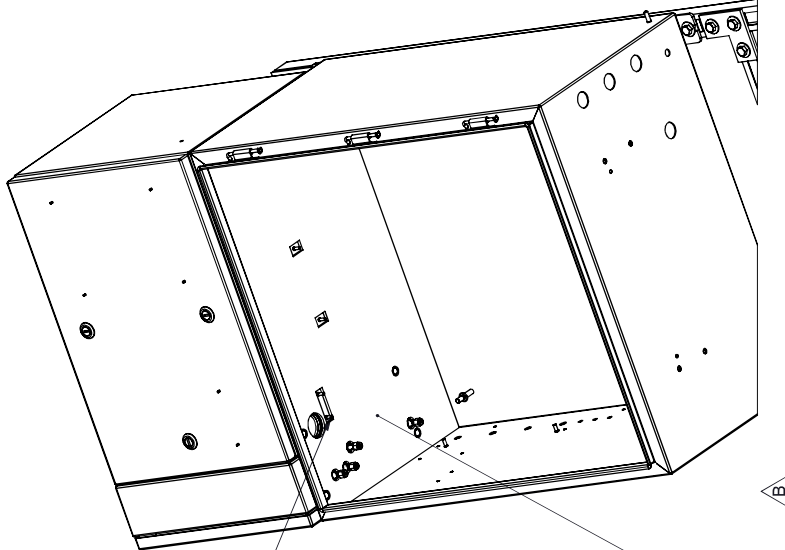

STEP 5: APPLY, P/N
102499, GE-SILICON-II
OR EQUIVALENT ON
INSULATION (OUTLINE
AND CRISSCROSS)
TYPICAL ALL PCS.

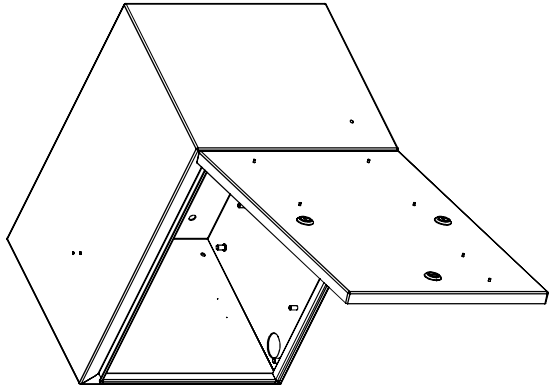

STEP 4: APPLY, P/N
102499, GE-SILICON-II
OR EQUIVALENT ON
INSULATION (OUTLINE
AND CRISSCROSS)
TYPICAL ALL PCS.

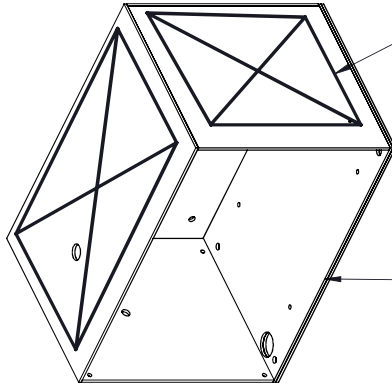

INSULATION KIT

DRAWN PER
ASME Y14.5-2009

TOLERANCES:
X = $\pm .03$
.XX = $\pm .01$
.XXX = $\pm .005$
ANGULAR $\pm 1^\circ$

 DIMENSIONS
ARE IN INCHES



8824 FALLBROOK DRIVE HOUSTON, TX 77064-3912
TELEPHONE: +1 281 580 0338 FAX: +1 281 580 0719

DRAWN: LMY APPVD: MK
TITLE: ASSEMBLY

CHASSIS ASSEMBLY, BASE UNIT

DATE: 9-9-15	SCALE: NONE	SHEET: 3 of 3
MODEL: NSure	PART #: 105593	DWG #: 105593
		REV. G

THIS DOCUMENT CONFIDENTIAL AND PROPRIETARY, SEE SHEET (1) FOR DETAIL