



Chapter 5

Analog Transmission


5-2 ANALOG AND DIGITAL

Analog-to-analog conversion is the representation of analog information by an analog signal. One may ask why we need to modulate an analog signal; it is already analog. Modulation is needed if the medium is bandpass in nature or if only a bandpass channel is available to us.

Topics discussed in this section:

- **Amplitude Modulation**
- **Frequency Modulation**
- **Phase Modulation**



Figure 5.15 *Types of analog-to-analog modulation*

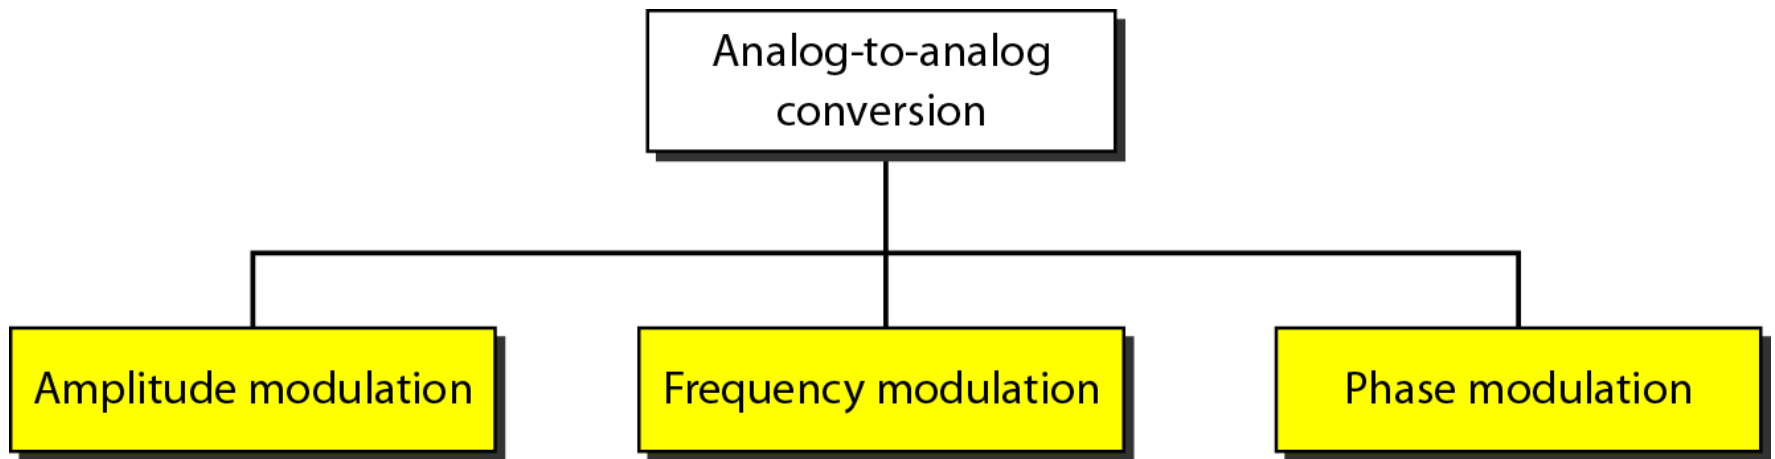

Amplitude Modulation

- A carrier signal is modulated only in amplitude value
- The modulating signal is the envelope of the carrier
- The required bandwidth is $2B$, where B is the bandwidth of the modulating signal
- Since on both sides of the carrier freq. f_c , the spectrum is identical, we can discard one half, thus requiring a smaller bandwidth for transmission.

Figure 5.16 *Amplitude modulation*

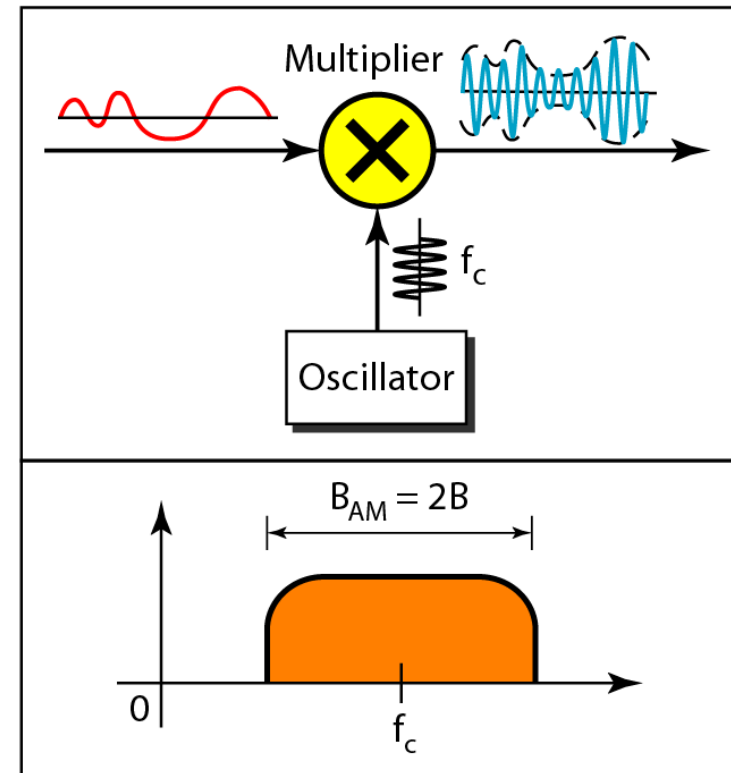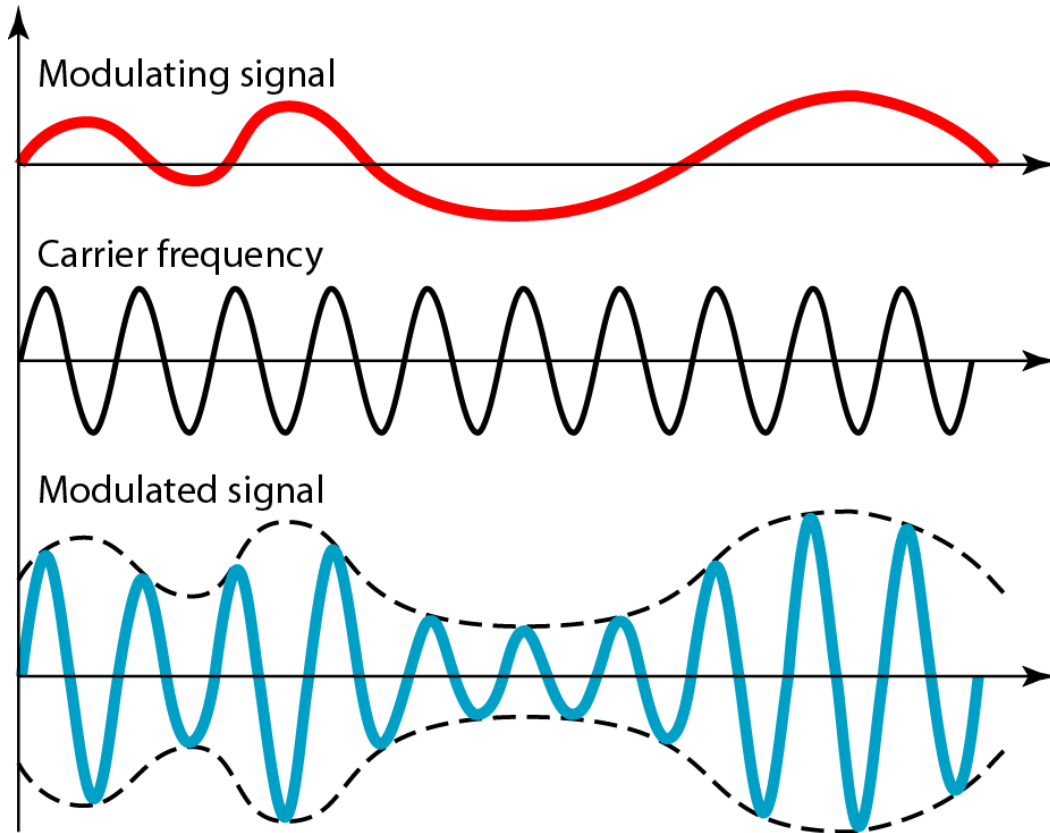




Note

**The total bandwidth required for AM
can be determined
from the bandwidth of the audio
signal: $B_{AM} = 2B$.**

Figure 5.17 *AM band allocation*

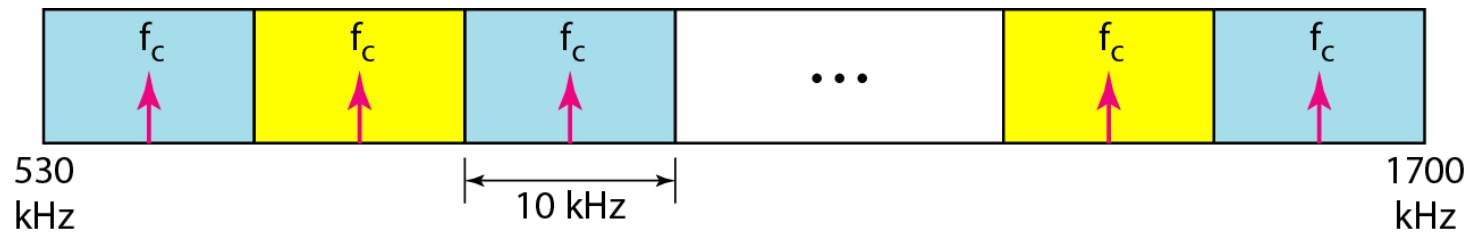

Frequency Modulation

- The modulating signal changes the freq. f_c of the carrier signal
- The bandwidth for FM is high
- It is approx. 10x the signal frequency

Note

**The total bandwidth required for FM can be determined from the bandwidth of the audio signal: $B_{FM} = 2(1 + \beta)B$.
Where β is usually 4.**

Figure 5.18 *Frequency modulation*



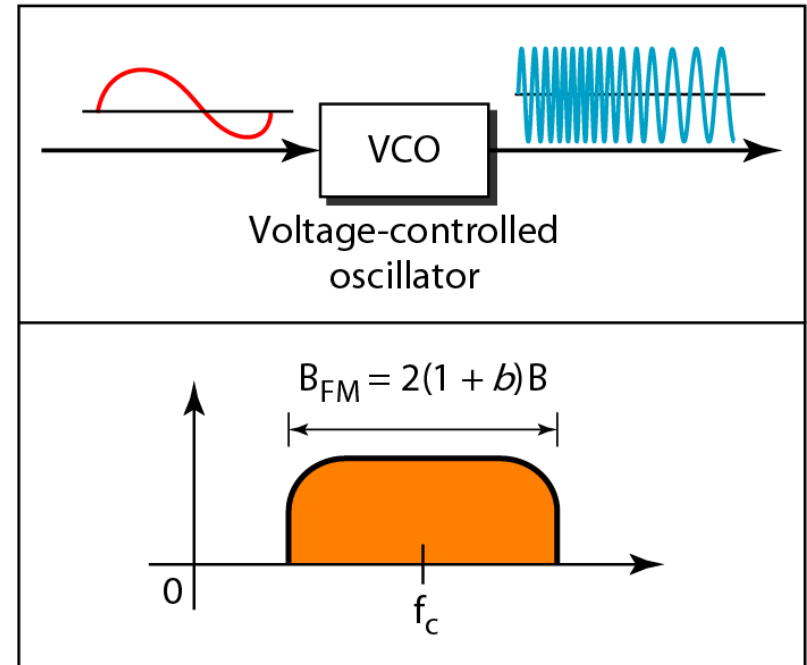




Figure 5.19 *FM band allocation*

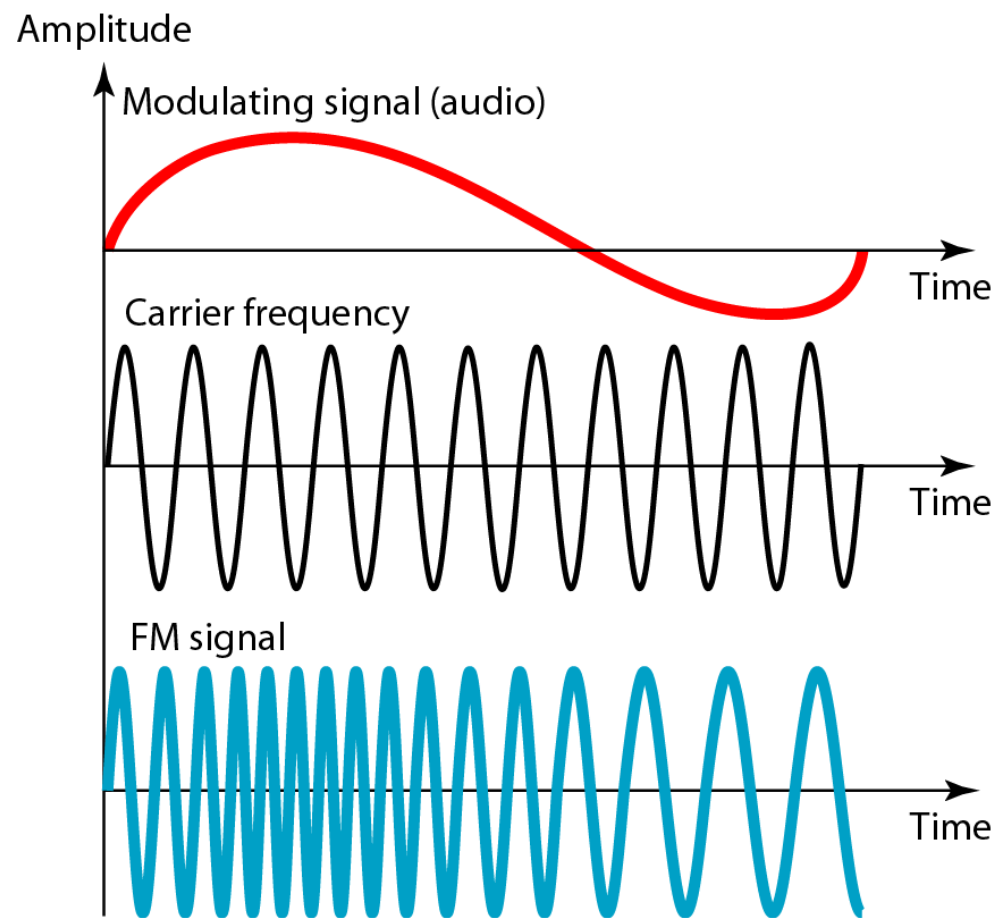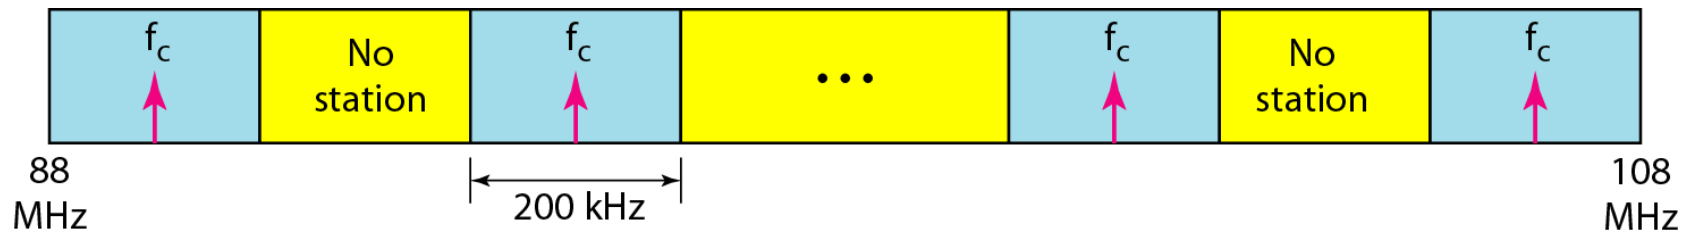

Phase Modulation (PM)

- The modulating signal only changes the phase of the carrier signal.
- The phase change manifests itself as a frequency change but the instantaneous frequency change is proportional to the derivative of the amplitude.
- The bandwidth is higher than for AM.

Figure 5.20 *Phase modulation*

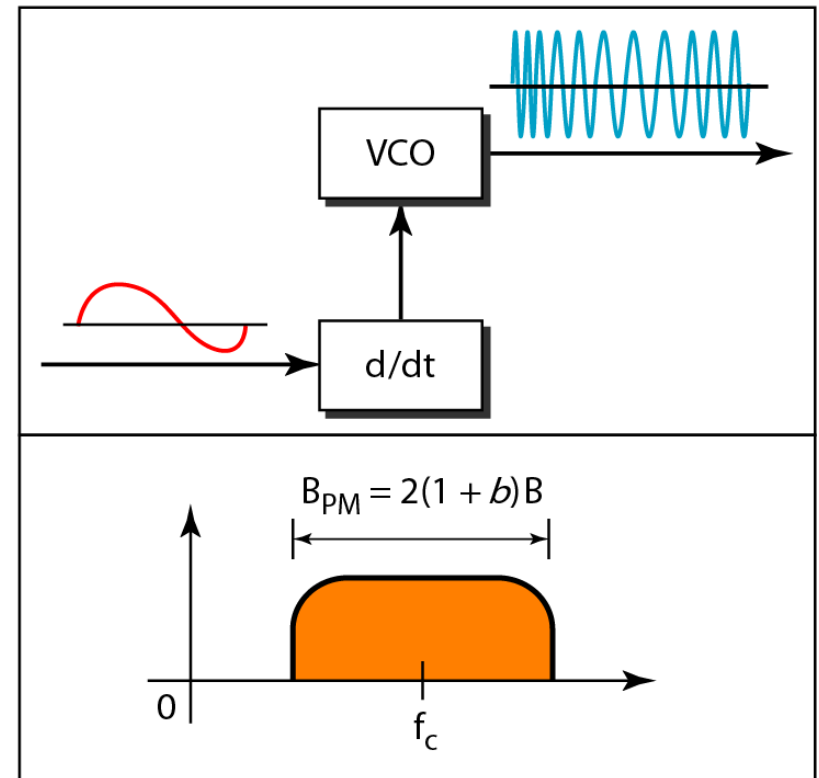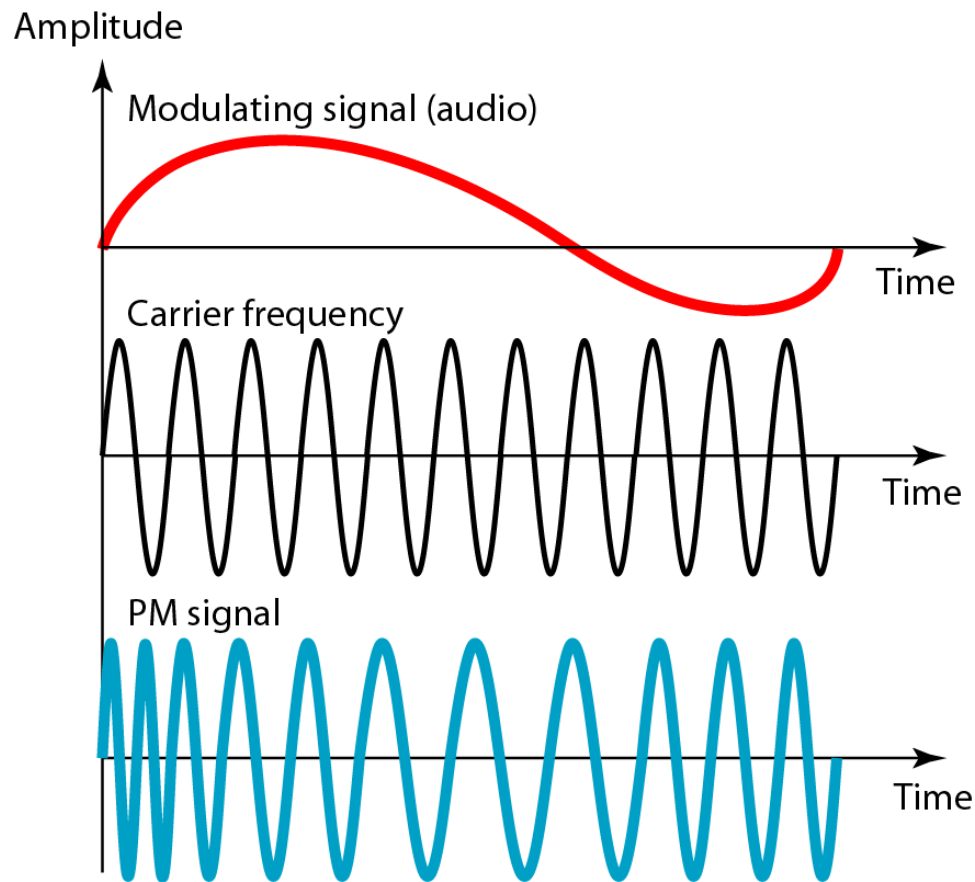

Note

The total bandwidth required for PM can be determined from the bandwidth and maximum amplitude of the modulating signal:

$$B_{PM} = 2(1 + \beta)B.$$

Where $\beta = 2$ most often.

QUESTIONS

1. Explain the concept of Amplitude Modulation with the help of a diagram.
2. Explain the concept of Frequency Modulation with the help of a diagram.
3. Explain the concept of Phase Modulation with the help of a diagram.
4. What is Modulation? What are the Types of modulation?
5. State and explain different types of modulation.