LUMINOUS INTENSITY SENSOR

1. Product Overview

WIN-SN-PAR-M is a compact, high-precision horticultural sensor designed for applications requiring accurate Photosynthetic Photon Flux Density (PPFD) monitoring in a small form factor. Utilizing an advanced internal calibration algorithm, the device precisely converts ambient Lux measurements into actionable PPFD values (μmol/m².s), ensuring highly reliable data for optimized plant growth. Its RS485 communication interface simplifies integration into smart agriculture and embedded IoT systems. The sensor's long-term stability ensures consistent performance in harsh greenhouse or outdoor environments, making it a cost-effective solution for long-term deployment.



Fig.1 - Product Image (Similar form factor shown for reference)

- Superior sensor performance.
- Operating range -20°C to 60°C and 0% to 70% RH for humidity
- Fully calibrated and processed digital, RS485 Output
- Wide Input voltage options 12-24V DC / 230V AC (optional)
- Excellent long-term stability
- Advanced PPFD Conversion: Internal engine calculates PPFD (up to ~3,700 µmol/m².s).
- Configurable Working Modes: Built-in selectable multiplication factors via Modbus to ensure accurate PPFD conversion based on the specific light source.

WIN-SN-PAR-M

Measuring Parameter	Measuring Range	Operating Temperature
PPFD	up to 3,700 µmol/m².s	-20°C ~ 60°C.

2. Sensor Specifications

- **Wide temperature range:** –40 °C to +125 °C
- **Full humidity range:** 0 % to 100 % RH
- **Power supply DC:** 12-24V@1A.
- **Product dimension:** 100*100*60 mm.
- **Certifications:**

3. Power Supply Connection

DC Connection

- Use 12-24V@ 1A, Power supply.
- Don’t make loose connection.

4. Configuration Settings

➢ Communication Speed	9600 – 115200 Kbps (SW Selectable)
➢ Data Bits	8
➢ Parity	None
➢ CRC	Yes
➢ Slave ID	1, DIP (SW Selectable)
➢ Function Code	0X03 (Read Holding Register)

Recommended Cable Electrical Characteristics

22 AWG Cable	Shielded and twisted pair should be used.
Tinned Copper	Recommended
Nominal Conductor DCR	14.7 ohm / 1000 ft
Nominal Capacitance	11 pf / feet (conductor to conductor)
High Frequency Non-Insertion Loss	0.5db / 100ft

6. Modbus RS485 Data Storage register

ID	Function Description	Register Description	Modbus Function Code	Protocol	Data Type
1	PPFD (µmol/m².s)	40001	0x03	RS485	32 bit unsigned big endian
2	Current Light Mode	40003	0x03	RS485	16-bit int
3	Enter New Light Mode	40004	0x03	RS485	16-bit int
1	Display Baud Rate (Default: 960)	40011	0x03	RS485	16-bit int
2	Enter New Baud Rate	40012	0x03	RS485	16-bit int
3	Display Slave ID (Default: 1)	40013	0x03	RS485	16-bit int
4	Enter New Slave ID	40014	0x03	RS485	16-bit int
5	Display Parity (Default: None-3 And for Odd-1, Even-2)	40015	0x03	RS485	16-bit int
6	Enter New Parity	40016	0x03	RS485	16-bit int
7	Display Stop Bit (start-2/stop bit-1)	40017	0x03	RS485	16-bit int
8	Enter New Start/ Stop Bit	40018	0x03	RS485	16-bit int


7. Modbus Configuration


Here is an example of receiving data on Mb poll software.


- Open Mb-poll software connect using configuration setting (Default baud rate is 9600 and slave id is 1).
- After connecting you will get data as shown below.

Important Note

1. If you want to enter the baud rate 9600/19200/38400/57600/115200etc, enter it like this 960/1920/3840/5760/11520etc.
2. After that press the reset button or reboot the system.
3. Then you will get the present value of 11520 at 40011 baud rate (115200) and 2 at 40013 slave id.

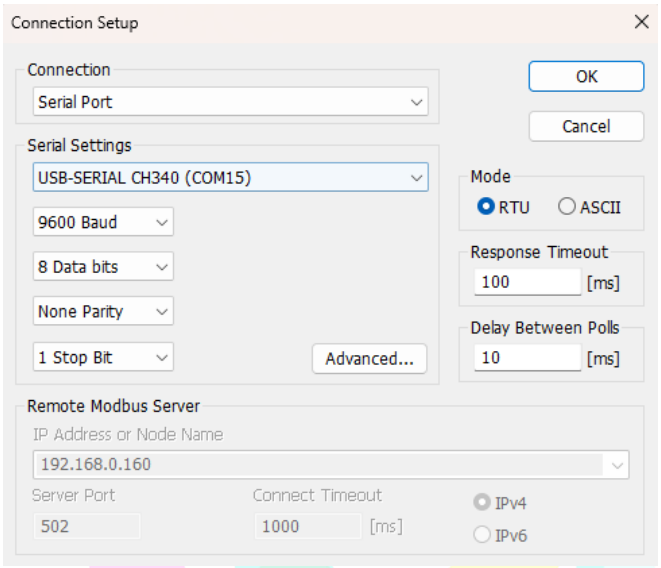


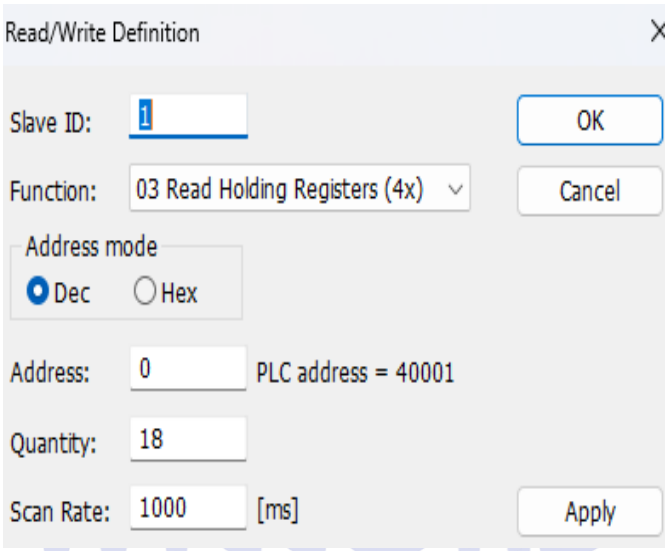

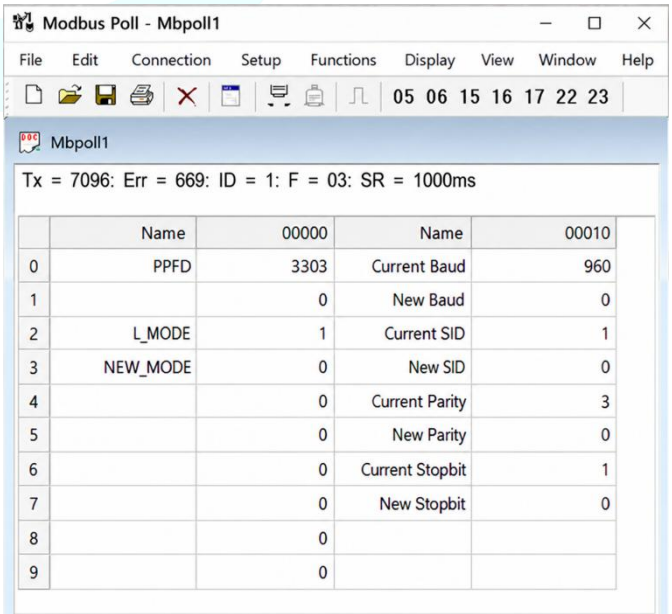


	Name	00000	Name	00010
0	PPFD	3303	Current Baud	960
1		0	New Baud	0
2	L_MODE	1	Current SID	1
3	NEW_MODE	0	New SID	0
4		0	Current Parity	3
5		0	New Parity	0
6		0	Current Stopbit	1
7		0	New Stopbit	0
8		0		
9		0		

- Above image Shows sensor data over Modbus with default Modbus settings
- As you can see in the image above, the resistor 40011 – 960 represents the present bund rate (9600) of the board and 40013 – 1 represents the present slave id of the board.
- To change the baud rate and slave id Jumper should be in single/removed then you must enter a value on the 40012 resistors for the baud rate and 40014 for the slave id as shown in the image below and restart the board.
- Now you can see data below image set 115200 baud rate and slave ID 10.

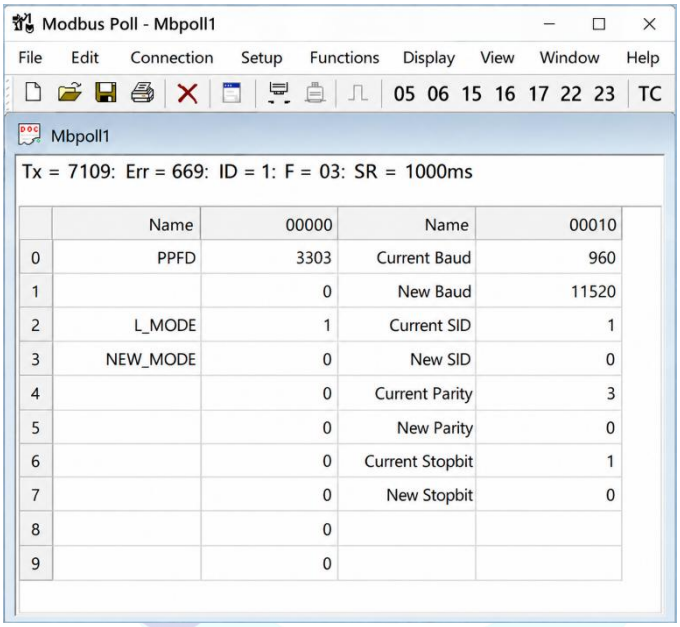

	Name	00000	Name	00010
0	PPFD	3303	Current Baud	960
1		0	New Baud	11520
2	L_MODE	1	Current SID	1
3	NEW_MODE	0	New SID	0
4		0	Current Parity	3
5		0	New Parity	0
6		0	Current Stopbit	1
7		0	New Stopbit	0
8		0		
9		0		

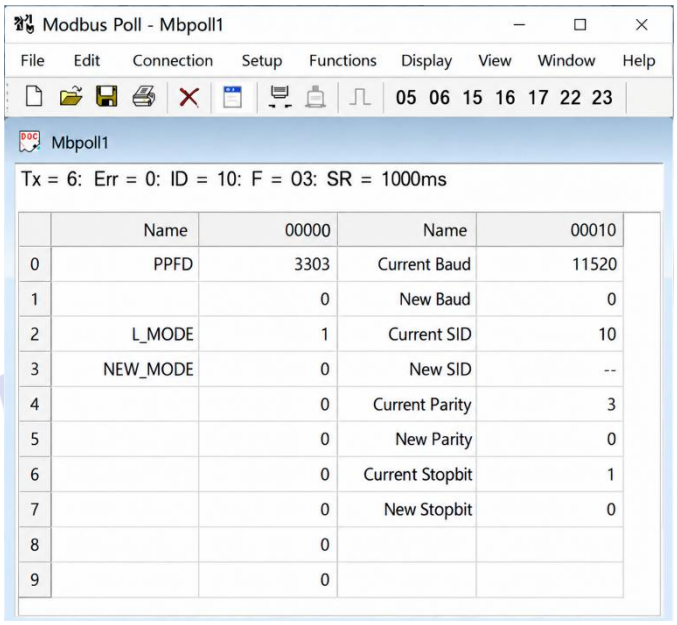

	Name	00000	Name	00010
0	PPFD	3303	Current Baud	11520
1		0	New Baud	0
2	L_MODE	1	Current SID	10
3	NEW_MODE	0	New SID	--
4		0	Current Parity	3
5		0	New Parity	0
6		0	Current Stopbit	1
7		0	New Stopbit	0
8		0		
9		0		

- Resistor 40003 will show Current Light Mode for PPFD multiplication factor.
- To set the PPFD light mode, enter the 1-5 value in register 40004. The new value is applied after reset, and the updated PPFD value is reflected in register 40003.
    - 1: Full spectrum LED (0.0150 multiplication factor)
    - 2: Cool white light (0.0142 multiplication factor)
    - 3: HPS(High Pressure Sodium) (0.0122 multiplication factor)
    - 4: Sunlight (0.0185 multiplication factor)
    - 5: Custom Factor (As per client request)

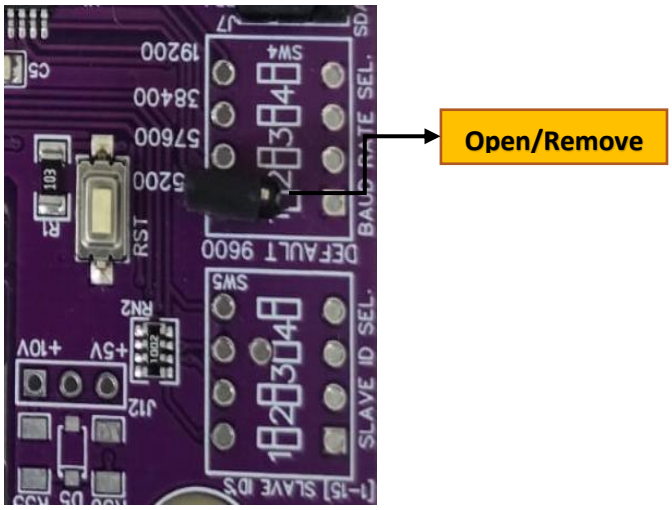


Image1.1

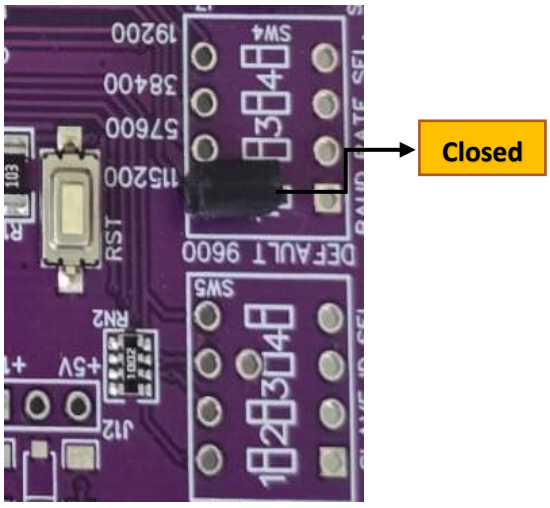


Image1.2

Hard reset Setting

- Somehow you forgot the baud rate or slave id of the board then Place the jumper (as shown in the image 1.2) from the board reboot the system or press the reset button (given on the board). Then you will get the default baud rate of 9600 and slave id 1.

Contact Information

Augmatic Technologies Pvt. Ltd.,
Plot no 6, Shah Industrial Estate II,
Kotambi,
Vadodara – 391510.
Email – Sales@wittelb.com
Support E.: support@wittelb.raiseaticket.com / M.: 9403892805