
Kit Assembling







• Nut, Bolt, Screws & Spacers.

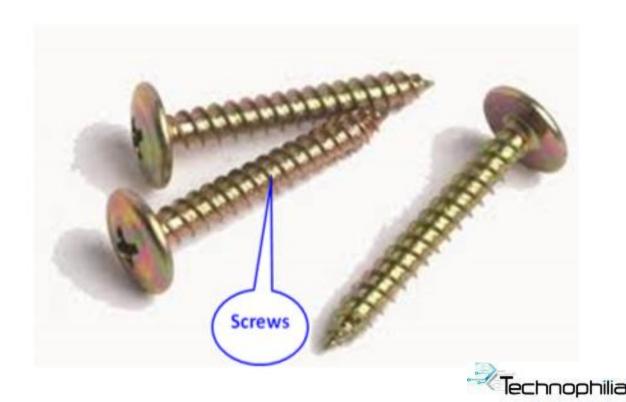

Mount the motors on chassis as shown below

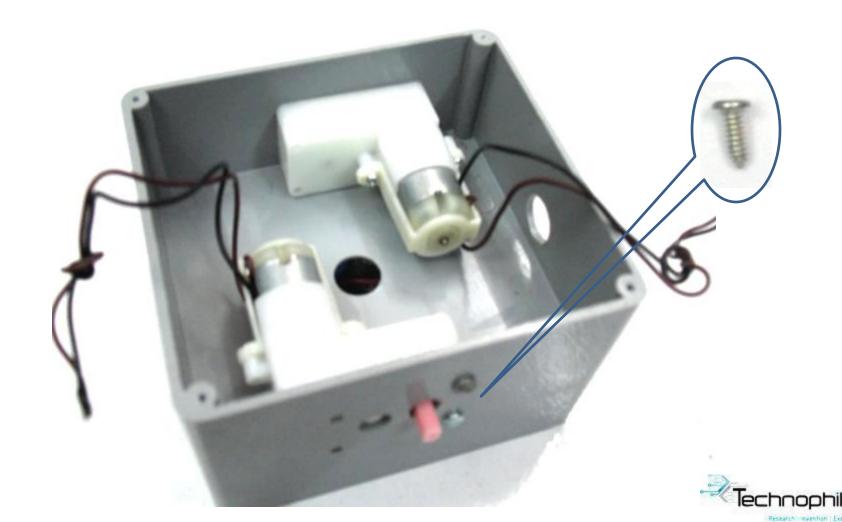


Fix wheels to the shaft of the motors

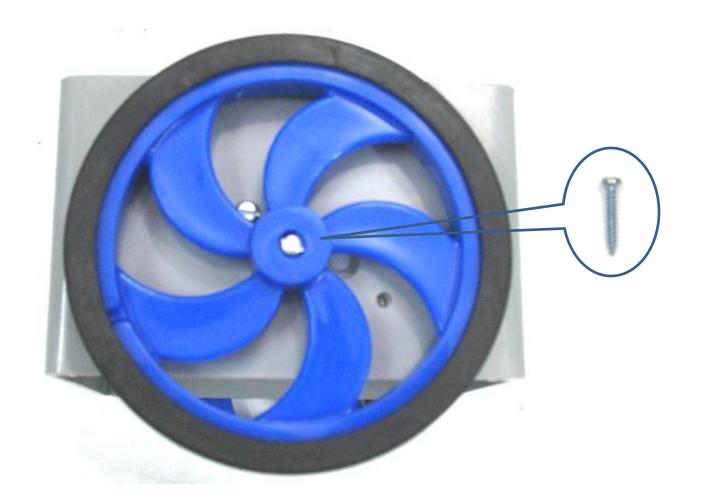




Fix the lower plate to the chassis using tiny screws & the caster wheels using nut-bolts

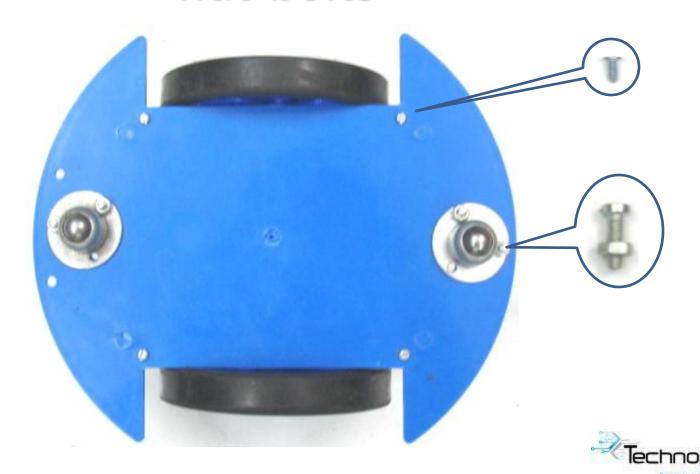


Connect battery snapper & place the batteries at the upper side of the chassis

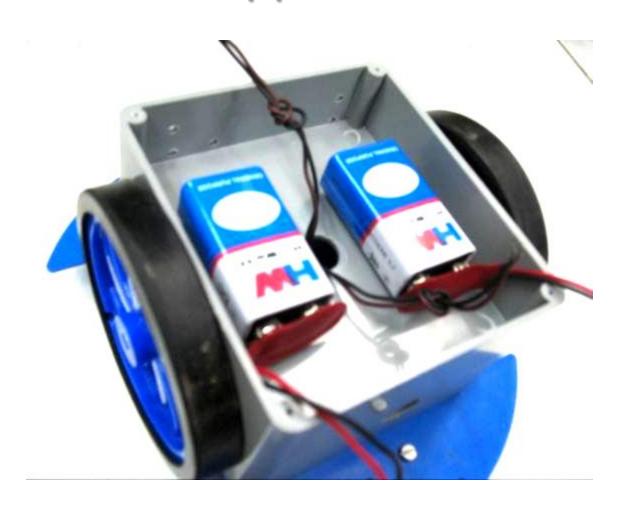




Fix motherboard on upper plate by using nut-bolt & the spacers

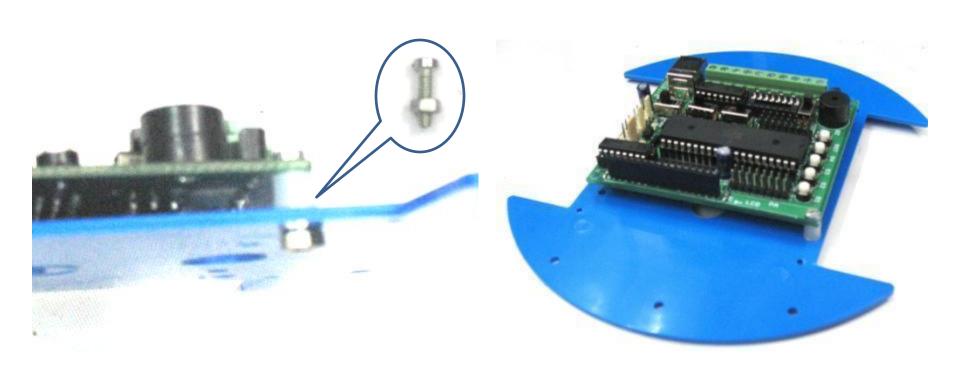



Take out motor wires from motor side & battery wire from other side and fix upper plate on chassis with tiny screws

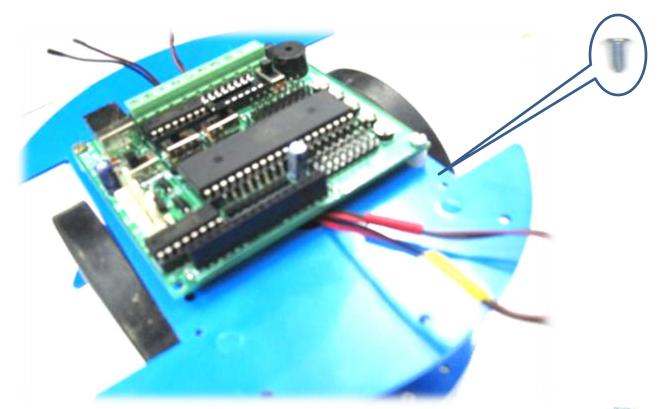



Basic Robotic Assembly is Ready...

