CAB SIDE (FRONT) APPLIQUE AND SIDE MARKER REPLACEMENT

0029 01

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool Kit, General Mechanic's (Item 10, WP 0032 00)

Materials/Parts

Rag, Wiping (Item 7, WP 0033 00) Sealant, Urethane (Item 8, WP 0033 00) Locknut (8)

References

WP 0011 00

Personnel Required

Two

Equipment Conditions

Vehicle parked on level ground (TM 9-2320-364-10)

Parking/Emergency Brake applied (TM 9-2320-364-10)

Engine off (TM 9-2320-364-10)

If equipped, Battery Disconnect Switch in OFF position (TM 9-2320-364-10)

NOTE


The following procedure is for the left side. Use same procedure for right side.

0029 01-1 Change 1

0029 01

REMOVAL

1. Remove four screws (1) and two side marker covers (2) from side of cab.

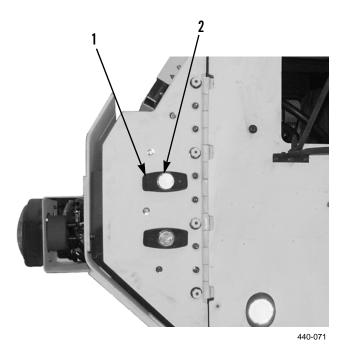

2. Disconnect two side marker wiring connectors (9) from inside cab.

NOTE

There are spacers between cab side (front) applique and cab side (front) armor. Spacers are attached to cab side (front) armor with sealing compound.

3. Remove four bolts (4) and washers (5) from cab side (front) applique (3).



WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Failure to follow this warning may cause injury or death to personnel.


NOTE

Cab side (front) applique weighs 29 lb (13 kg).

- 4. With assistance, remove four nuts (7), washers (8), and cab side (front) applique (3) from vehicle.
- 5. If damaged, remove four spacers (6) from cab side (front) armor assembly (14).
- 6. Remove eight locknuts (11), washers (12), bolts (13), and two side markers (10) from cab side (front) applique (3). Discard locknuts.

Change 1

REMOVAL - CONTINUED

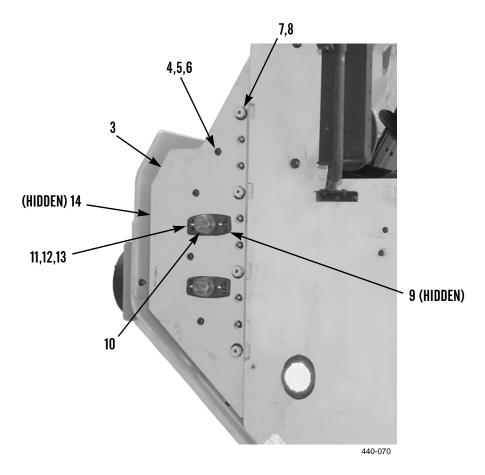

CLEANING AND INSPECTION

Clean and inspect all parts IAW General Maintenance Instructions (WP 0011 00).

INSTALLATION

1. Install two side markers (10), eight bolts (13), washers (12), and new locknuts (11) on cab side (front) applique (3).

NOTE

Ensure spacers are aligned with four bolt (4) holes.

- 2. If removed, attach four spacers (6) on inside surface of cab side (front) applique (3) with sealing compound.
- 3. Feed two side marker wiring harnesses (9) through cab side (front) armor assembly (14).

0029 01-3 Change 1

INSTALLATION - CONTINUED




WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Failure to follow this warning may cause injury to personnel.

NOTE

Cab side (front) applique weighs 29 lb (13 kg).

- 4. With assistance, position cab side (front) applique (3) and install four washers (8) and nuts (7) on side of cab.
- 5. Install four washers (5) and bolts (4) on cab side (front) applique (3).
- 6. Connect two side marker wiring connectors (9) to cab wire harness.

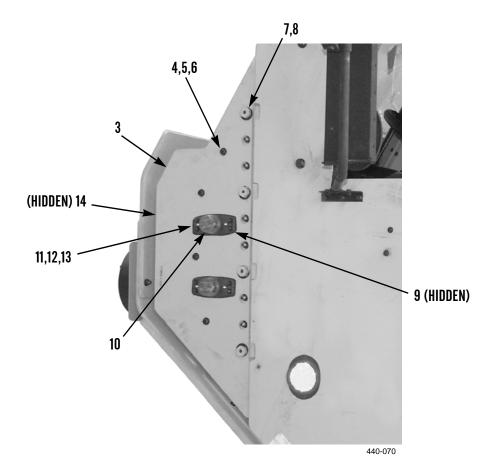


Change 1 0029 01-4

CAB SIDE (FRONT) APPLIQUE AND SIDE MARKER REPLACEMENT - CONTINUED

0029 01

INSTALLATION - CONTINUED

7. Install two side marker covers (2) and four screws (1) on side marker (10).

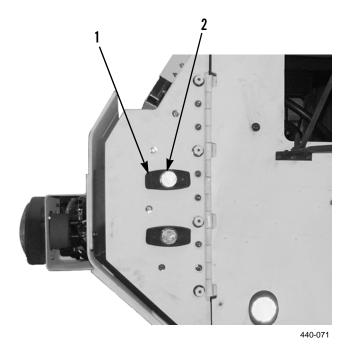

8. Verify operation of side marker lights (TM 9-2320-364-10).

END OF WORK PACKAGE