CAB SIDE (REAR) APPLIQUE REPLACEMENT

0028 01

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool Kit, General Mechanic's (Item 10, WP 0032 00)

Materials/Parts

Rag, Wiping (Item 7, WP 0033 00)

Adhesive, Thread (Item 1, WP 0033 00)

References

WP 0011 00

Equipment Conditions

Vehicle parked on level ground (TM 9-2320-364-10)

Parking/Emergency Brake applied (TM 9-2320-364-10)

Engine off (TM 9-2320-364-10)

If equipped, Battery Disconnect Switch in OFF position (TM 9-2320-364-10)

NOTE

The following procedure is for the left side cab side (rear) armor. Use same procedure for right side.

0028 01-1 Change 1

CAB SIDE (REAR) APPLIQUE REPLACEMENT - CONTINUED

0028 01

REMOVAL

1. Remove two bolts (12), washers (11), and grab handle (13) from side of cab.




WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Failure to follow this warning may cause injury or death to personnel.

NOTE

Cab side (rear) applique weighs 45 lb (20 kg).

- 2. With assistance, remove three bolts (10), washers (9), and cab side (rear) applique (8) from side of cab.
- 3. Remove two bolts (1), washers (2), brackets (3), and threaded spacers (7) from side of cab.
- 4. Remove three bolts (5), washers (4), and mounts (6) from side of cab.

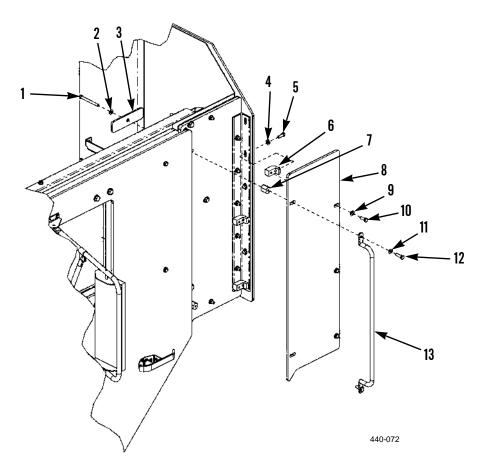

CLEANING AND INSPECTION

Clean and inspect all parts IAW General Maintenance Instructions (WP 0011 00).

Change 1

CAB SIDE (REAR) APPLIQUE REPLACEMENT - CONTINUED

0028 01

INSTALLATION







WARNING

Use caution when using adhesives and sealants. Prolonged inhalation of vapors can cause lung irritation. Contact with skin can cause dermatitis. Wear gloves and safety goggles and use product in a well-ventilated area away from open flame. If ingested, keep individual calm and seek medical attention. DO NOT induce vomiting. If contact with skin or eyes is made, flush thoroughly with water. Dispose of cleanup rags IAW local policy and ordinances. Failure to follow this warning may cause injury to personnel.

NOTE

Apply thread adhesive to all bolts that thread into spacers.

- 1. Apply thread adhesive to seven bolts.
- 2. Install three mounts (6), washers (4), and bolts (5) on side of cab.
- 3. Install two brackets (3), washers (2), bolts (1), and threaded spacers (7) on side of cab.



WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Failure to follow this warning may cause injury or death to personnel.

NOTE

Cab side (rear) applique weighs 45 lb (20 kg).

- 4. With assistance, install cab side (rear) applique (8), three washers (9), and bolts (10) on side of cab.
- 5. Install grab handle (13), two washers (11), and bolts (12) on side of cab.

END OF WORK PACKAGE