
// generative instrument

CIG_OS

diceFriend / quick start

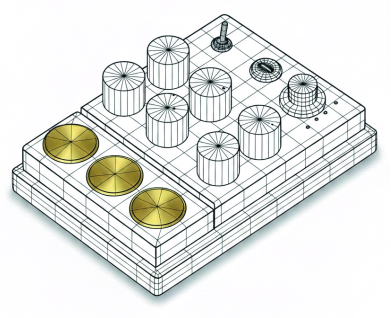

An impulse core with a retained-memory layer: folding, scanning and uneven clock motion.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: self-moving impulse / memory core. **TS:** the shared core is gated by touch and triggers.

T1: rate / folding. **T2:** rungler / feedback. **T3:** resonant peaks / tone. Holds increase their influence.

// SIX KNOBS / TWO LAYERS

P	NORMAL	SHIFT
1	Clock / post fold*	Oscillator A rate
2	Oscillator B relation	Post feedback
3	Resonant peak 1	Post tone
4	Resonant peak 2	Retention amount
5	Spread / excitation	Retention scan
6	Gain / grit / resonance	Jitter / clock unevenness

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE: randomize. **SHIFT + tap:** deeper variation. **DICE 1.8 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: trigger / clock. **CV2:** modulation; repeated pulses can become clock / triggers. CV edges generate notes 36 / 37; steady CV2 sends CC74, bend and pressure.
Banana: 0-9 V; common GND.

// USB MIDI

IN: notes and Clock. **OUT:** CV notes, panel CC, internal / CV Clock. Incoming USB messages are not echoed. **Panel:** CC20-25 = normal P1-P6; CC26-31 = SHIFT P1-P6.

*With external clock, normal P1 transposes the second MIDI-output layer. SHIFT P6 bends internal timing; Retention + Scan reveal past material.