
// generative instrument

# Fracture

diceFriend / quick start

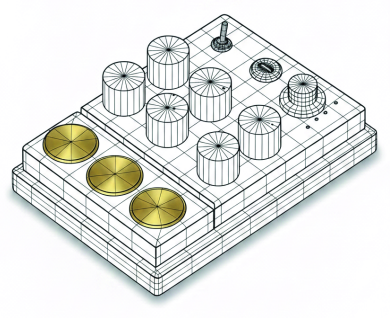

Mallets, bells and metal. Evolving phrases. Fractured rhythms.

---

**START:** USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

**AS:** three evolving percussion parts play themselves. **TS:** play the three voice pads, CV or MIDI notes.

**TS pads:** three voices from the mallet / bell / metal instrument. Pitch follows evolving scales and phrases.

// SIX KNOBS / TWO LAYERS

| P | NORMAL | SHIFT |
|---|---|---|
| 1 | Mallet: wood > glass > noise | Tempo: 7.5-375 BPM |
| 2 | Mallet decay | Density of all three parts |
| 3 | Bells: pure > FM > fold | Repeats: intensity / 2-6 hits |
| 4 | Bell feedback / sustain | Local rhythm deformation |
| 5 | Metal: bar > spring > noise | Glitch: freeze / reverse / bits |
| 6 | Global stereo feedback | Evolution / divisions |

**SHIFT:** up = second layer; down = normal. **Pickup:** After switching layers or rolling DICE, turn the knob through its saved value to take control.

// DICE / SHIFT

**Tap DICE:** randomize the current layer only. **SHIFT up:** rhythm layer. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

---

// CV IN

**CV1:** clock; in TS, triggers all 3 voices.
**CV2:** timbre modulation; in TS, scale-step selection and rising-edge triggers.
**Banana:** 0-9 V; common GND.

// USB MIDI

**IN:** channel 1 notes, Clock and transport.
**OUT:** TS pad notes; 24 PPQN Clock with internal / CV timing. **Panel:** CC20-25 = normal P1-P6; CC26-31 = SHIFT P1-P6.

High normal P6 sustains resonance; lower it to let sound fade. CV > MIDI > internal; MIDI returns after 20 s without CV, internal after 30 s without external timing.