
// generative instrument

NonLin_OS

diceFriend / quick start

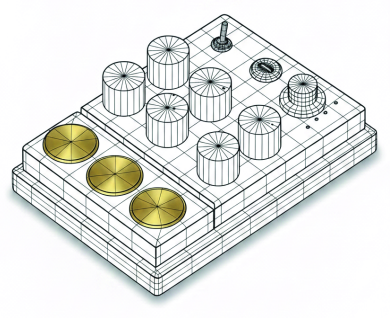

Lorenz and Dadras attractors become melodies, resonant pings and nonlinear textures.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: scale-quantized attractor motion. **TS:** Duffing / Granular / LFSR / Rossler.

AS: pads reshape the attractor; all three freeze stepping. **TS:** three voices with individual pitch and decay.

// KNOBS / AS

P	NORMAL	SHIFT
1	Tempo / MIDI transpose*	Scale selection
2	Root pitch	Pitch range
3	Lorenz width / Dadras B	Fold
4	Chaos / Dadras C	Bleed / texture
5	Filter / Dadras D	Feedback low-pass
6	Decay	Ping / fold intensity

// KNOBS / TS

P	NORMAL	SHIFT
1	T1 pitch	T1 tone / filter
2	T2 pitch	T2 tone / filter
3	T3 pitch	T3 tone / filter
4	T1 decay	T1 fold / feedback
5	T2 decay	T2 fold / feedback
6	T3 decay	T3 fold / feedback

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE in AS: new scene and scale. **SHIFT + tap in AS:** Lorenz / Dadras. **Tap in TS:** next engine. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: trigger / clock. **CV2:** modulation; repeated pulses can become clock / triggers. CV1 triggers the TS group.
Banana: 0-9 V; common GND.

// USB MIDI

IN: notes, clock; CC74 modulates TS. **OUT:** generated / pad notes, pressure, CV2 pitch bend; attractor movement on CC16-18.

*With external clock, normal P1 transposes the second MIDI-output layer. Start with low chaos and fold, then raise ping intensity.
