
// generative instrument

4S_OS

diceFriend / quick start

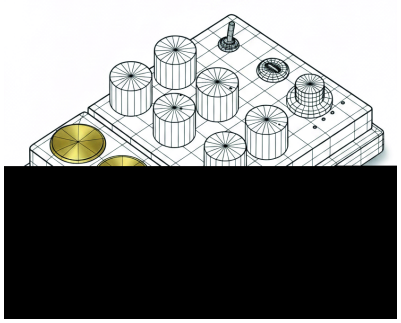

Four interacting slopes collide, exchange energy and form breathing cybernetic drones.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: continuously active four-slope network. **TS:** all pads open and reshape the same shared stereo network.

T1: rate / folding. **T2:** coupling / feedback. **T3:** spectrum / instability. Holds deepen each disturbance.

// SIX KNOBS / TWO LAYERS

P	NORMAL	SHIFT
1	Boundaries / clock*	Slope A rate
2	Slope B rate	Drift
3	Slope C rate	Shape / fold
4	Slope D rate	Spectrum / smoothing
5	Coupling	Feedback
6	Rise / fall asymmetry	Stereo spread

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE: randomize. **SHIFT + tap:** deeper mutation. **DICE 1.8 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: trigger / clock. **CV2:** modulation; repeated pulses can become clock / triggers. Each external step changes the temporary network configuration. **Banana:** 0-9 V; common GND.

// USB MIDI

IN: notes create mutations; note number seeds variation instead of conventional transposition. Clock steps mutate. **OUT:** CV notes 36 / 37, CV2 CC74 and local / CV Clock. **Panel:** CC20-25 = normal P1-P6; CC26-31 = SHIFT P1-P6.

*With external clock, normal P1 controls the second MIDI-output transpose. Start with Coupling below halfway; raise it gradually to hear moving boundaries.