
// generative instrument

Aether_OS

diceFriend / quick start

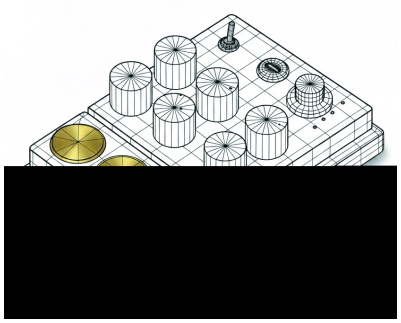

A melodic attractor and granular pulsar weave masked impulses through fractured stereo memory.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: scale-based attractor melody. **TS:** three gated voices with separate pitch and decay.

AS: T1 freezes rungler / memory writes; T2 creates ruptures / dense grains; T3 expands phase space. **TS:** three voices; SHIFT + pad adds rupture.

// KNOBS / AS

P	NORMAL	SHIFT
1	Grain emission rate	Grain overlap
2	Grain duration	Memory length / feedback
3	Melody base pitch	Phasing / orbit rate
4	Pulse shape / masking	Fold / saturation
5	Attractor / feedback	Melody > chaos / cuts
6	Tempo / release	Space / stereo / scale

// KNOBS / TS

P	NORMAL	SHIFT
1	T1 pitch	Duration / overlap
2	T2 pitch	Formant colour
3	T3 pitch	Shape / fold
4	T1 decay	Memory / phaser
5	T2 decay	Chaos / mutation
6	T3 decay	Space / clock rate

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE: mutate the current layer. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: priority step / trigger. **CV2:** smoothed continuous modulation; sends CC74.
Banana: 0-9 V; common GND.

// USB MIDI

IN: channel 1 notes, transport, Clock; notes force an AS attack or open a TS voice. **OUT:** local / CV / pad notes and internal / CV Clock. **Panel:** CC20-25 = normal P1-P6; CC26-31 = SHIFT P1-P6.

Start with moderate emission and overlap. CV owns clock priority; MIDI returns after 20 s without CV, internal after 30 s without an external source.