
// generative instrument

Blip_OS

diceFriend / quick start

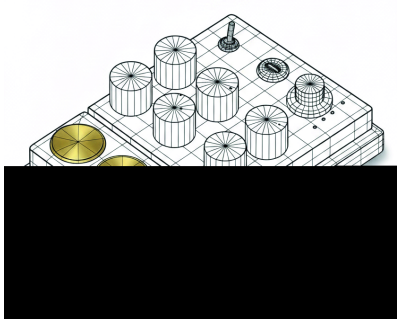

Coupled oscillators, shift registers and resonant peaks move between clicks and ringing drones.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: continuously active core. **TS:** the same shared core opens from touch or triggers.

T1: rate movement. **T2:** rungler instability. **T3:** resonant-peak motion. In TS, any pad opens the sound; holds deepen it.

// SIX KNOBS / TWO LAYERS

P	NORMAL	SHIFT
1	Clock / rungler A*	Oscillator A rate
2	Oscillator B relation	Rungler B
3	Resonant peak 1	Sample & hold A
4	Resonant peak 2	Sample & hold B
5	Spread / excitation	Register source balance
6	Gain / grit	Resonance / stereo

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE: randomize. **SHIFT + tap:** deeper variation. **DICE 1.8 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: trigger / clock. **CV2:** modulation; repeated pulses can become clock / triggers. CV1 / CV2 pulses produce MIDI notes 36 / 37.
Banana: 0-9 V; common GND.

// USB MIDI

IN: notes retune and strike; Clock drives strikes. **OUT:** CV notes, CV2 CC74 and internal Clock. Incoming musical / realtime MIDI is passed through. **Panel:** CC20-25 = normal P1-P6; CC26-31 = SHIFT P1-P6.

*Under external clock, normal P1 controls the second MIDI-output transpose. Raise normal P5 and SHIFT P6 for ringing textures.