
// generative instrument

Mult_OS

diceFriend / quick start

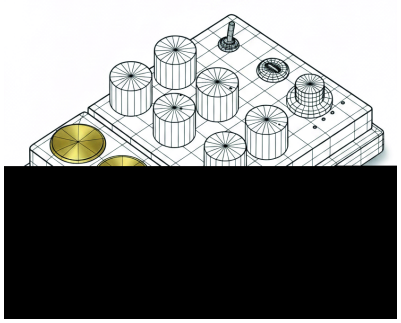

A walking three-voice cluster with four engines and four mutation depths.

START: USB-C power + 3.5 mm stereo audio out. Connect to a mixer or speakers; begin with the listening level low.

AS: autonomous pitch walk. **TS:** Wave Cluster / Glass FM / Chip Swarm / Bounce.

TS: T1-T3 play their own pitch and decay. Holds let the voices develop.

// KNOBS / AS

P	NORMAL	SHIFT
1	Tempo / MIDI transpose*	Scale / voice 1 detune
2	Base pitch	Walk range / voice 2 detune
3	Harmonic spread / PM	Fold / voice 3 detune
4	Feedback / cross-mod	Modulation depth
5	Motion	Feedback damping
6	Release	Space / stereo

// KNOBS / TS

P	NORMAL	SHIFT
1	T1 pitch	Harmonic spread
2	T2 pitch	Phase fold
3	T3 pitch	Tone / brightness
4	T1 decay	PM depth
5	T2 decay	Feedback
6	T3 decay	Motion / stereo

SHIFT: up = second layer; down = normal. **Pickup:** After changing layers or using DICE, move a knob to take control of its stored value.

// DICE / SHIFT

Tap DICE: mutate AS or select the next TS engine. **SHIFT + tap:** next depth + mutation: Safe / Musical / Chaos / Wild. **DICE 3 s:** AS / TS. **SHIFT + DICE 10 s:** bootloader.

// CV IN

CV1: trigger / clock. **CV2:** modulation; repeated pulses can become clock / triggers.
Banana: 0-9 V; common GND.

// USB MIDI

IN: notes and MIDI Clock; CC74 = CV2 modulation. **OUT:** local notes, panel CC and internal / CV clock. **Panel:** CC20-25 = normal P1-P6; CC26-31 = SHIFT P1-P6.

*With external clock, normal P1 transposes the second MIDI-output layer. Start resets the walk; Stop clears incoming notes.