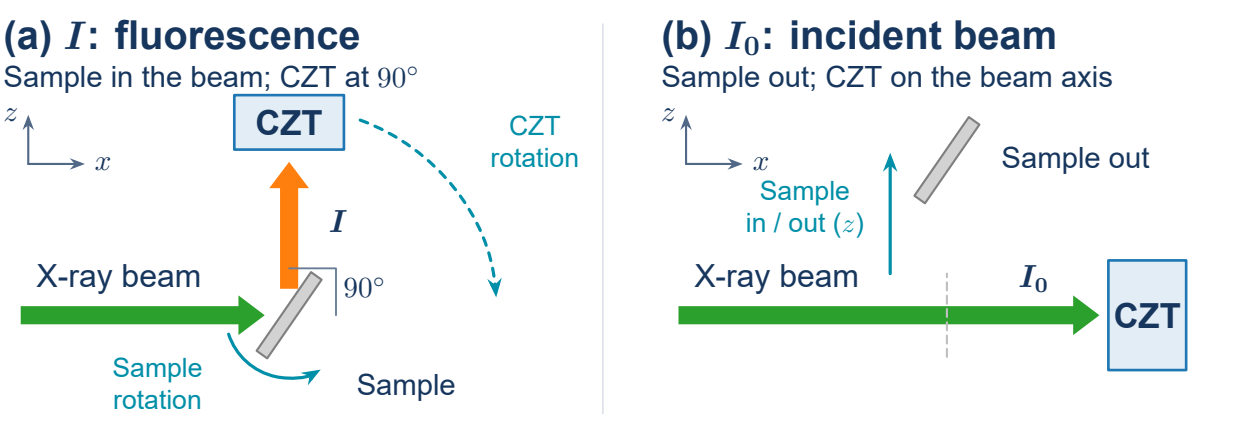
(a) I: fluorescence
Sample in the beam; CZT at $90°$
z
x
CZT
CZT rotation
I
X-ray beam
$90°$
Sample rotation
Sample
(b) I_0: incident beam
Sample out; CZT on the beam axis
z
x
Sample out
Sample in / out (z)
X-ray beam
I_0
CZT
2 rotations + 1 translation: automatic switching between I and I_0