


BitBot - wiring schematic

By Torgeir Bull

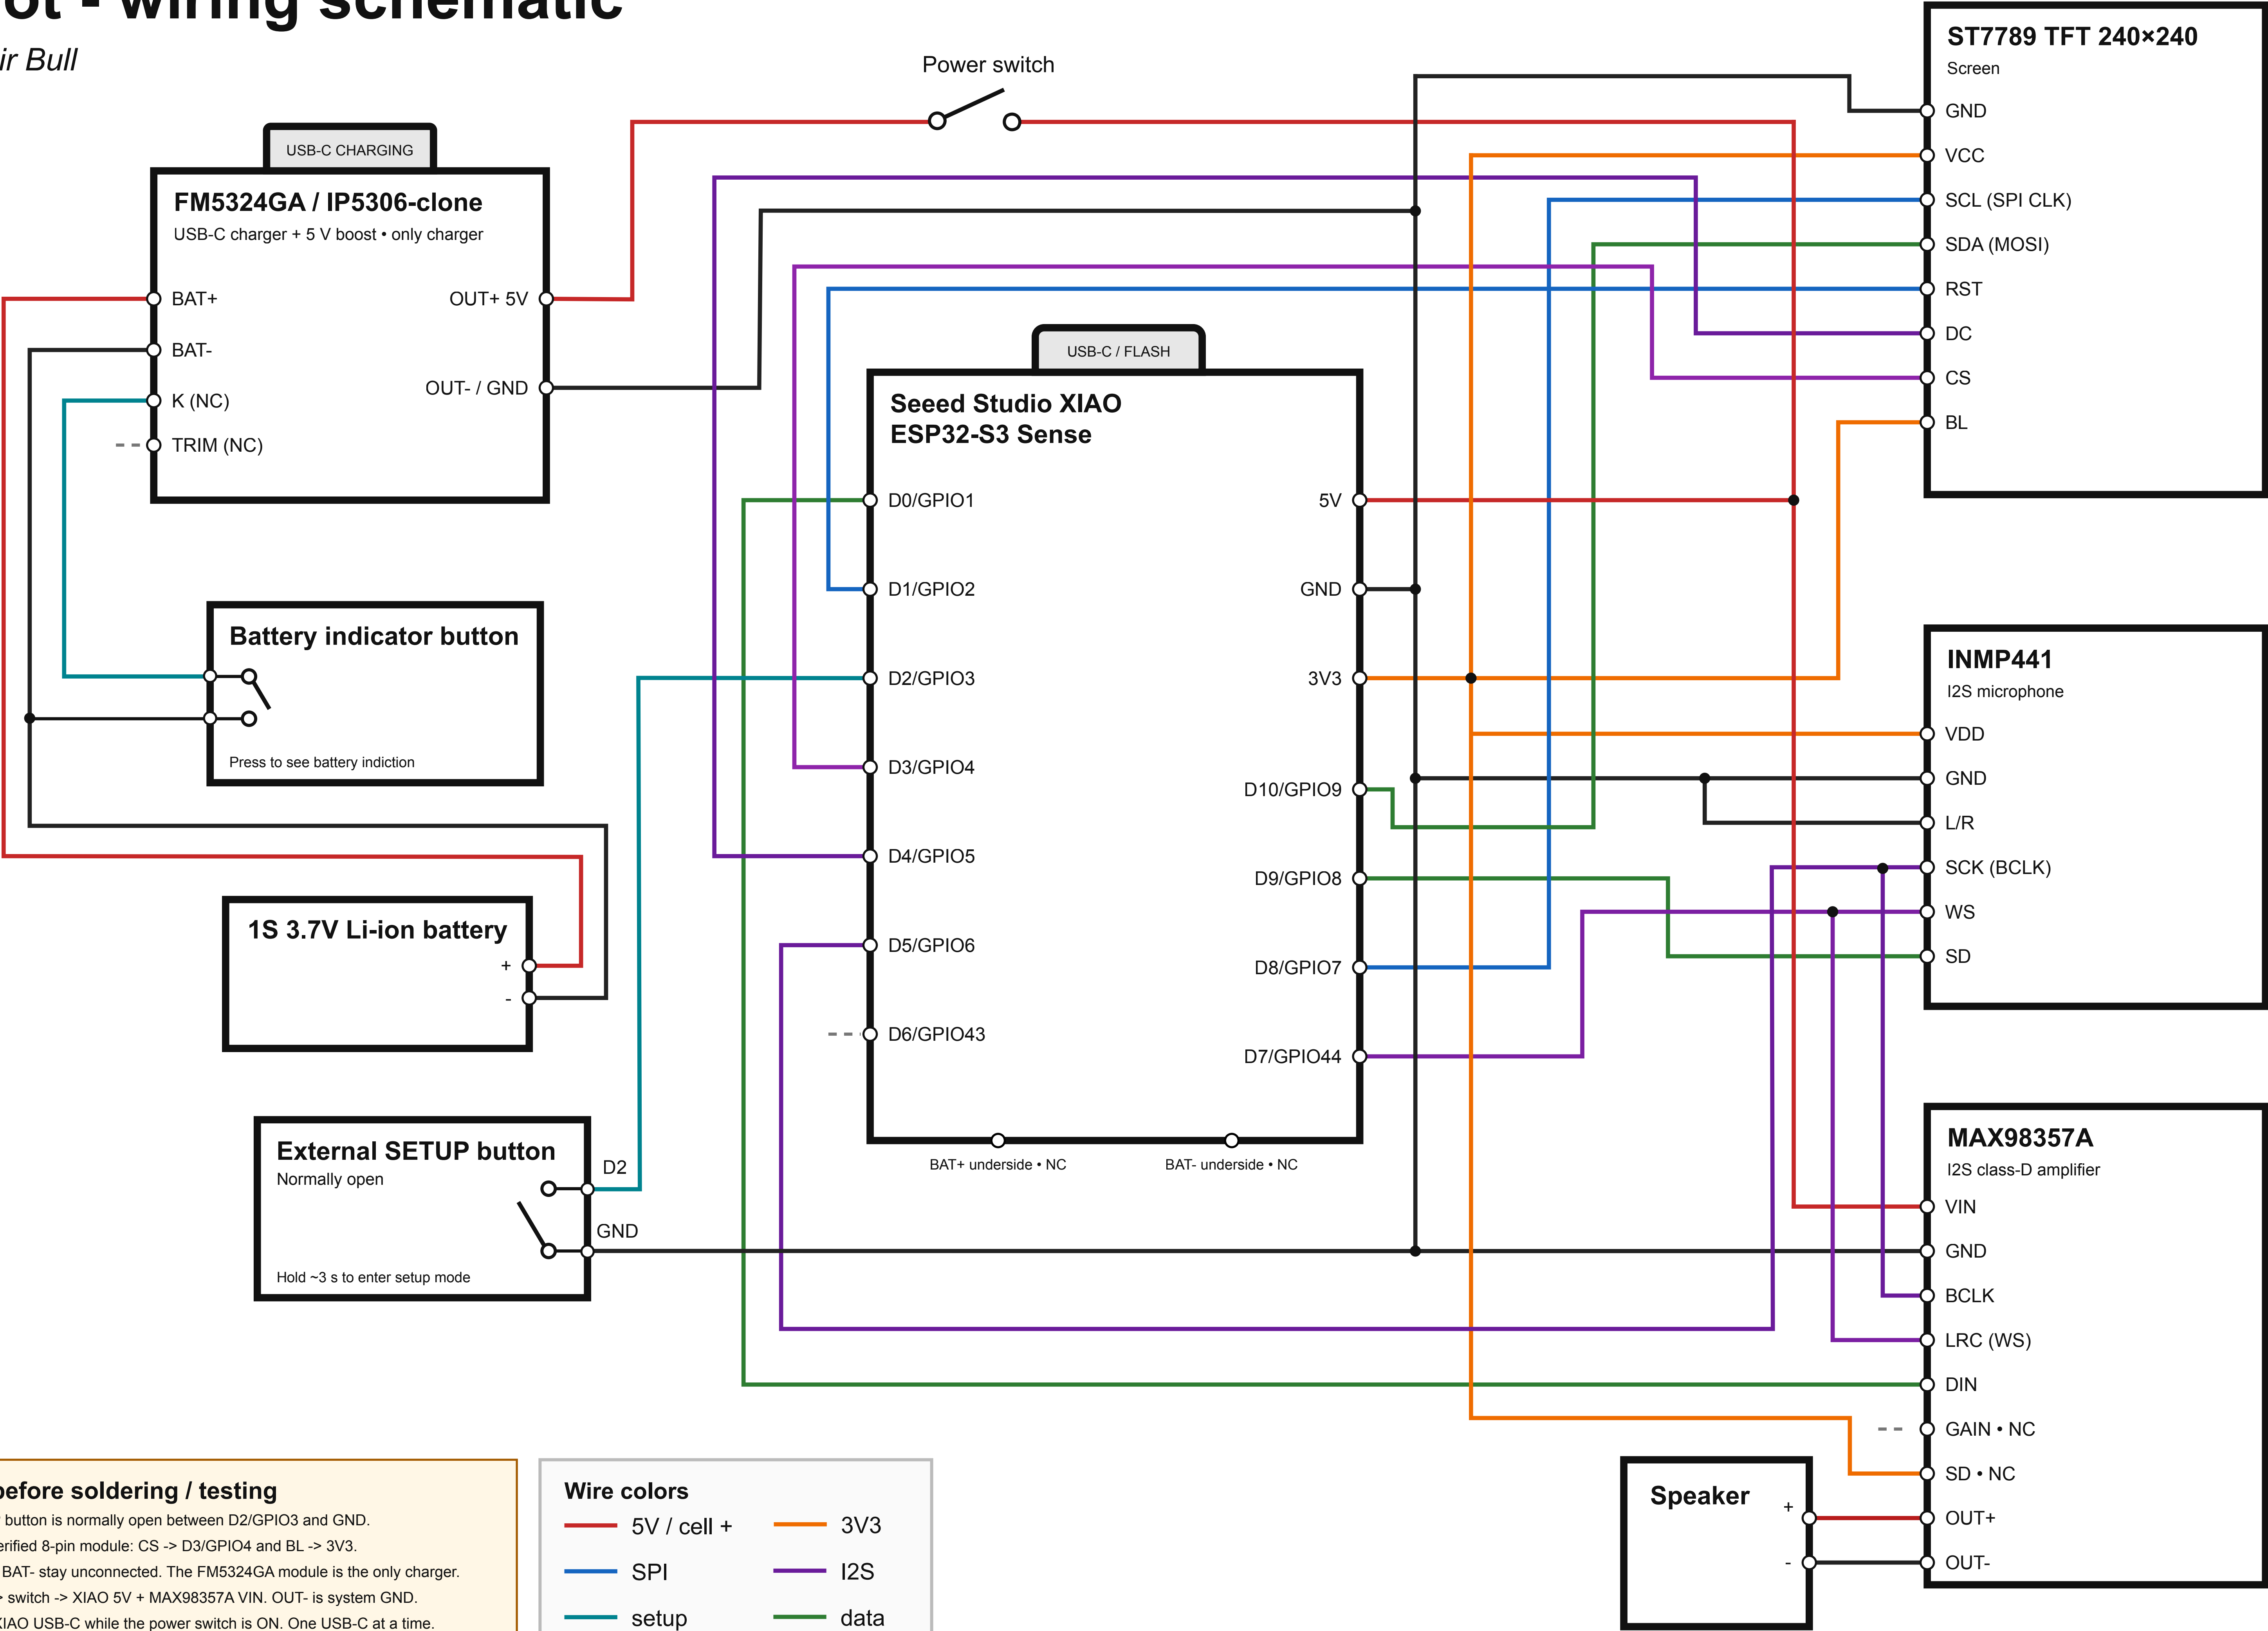

- Important before soldering / testing**
1. External SETUP button is normally open between D2/GPIO3 and GND.
 2. ST7789 is the verified 8-pin module: CS -> D3/GPIO4 and BL -> 3V3.
 3. XIAO BAT+ and BAT- stay unconnected. The FM5324GA module is the only charger.
 4. Module OUT+ -> switch -> XIAO 5V + MAX98357A VIN. OUT- is system GND.
 5. Never connect XIAO USB-C while the power switch is ON. One USB-C at a time.
 6. Speaker OUT+ and OUT- go only to the speaker.
 7. Keep the XIAO Sense SD-card slot empty; it shares GPIO7/8/9 with the display wiring.