

Picture Knits

**For all Punchcard and Electronic Knitting Machines
Also for Hand Knitting**



**By
Phyllis Waterhouse**



Front Cover: Marnie Eichelberger - Mandy Waterhouse

PHOTOGRAPHY

**Pictures by:
Parson's Photography
Wenatchee, Wash. 98802**

PICTURE KNITS
TABLE OF CONTENTS

	Page
Hints Section.....	5
Disk Drive, Floppy Disk and Error Messages.....	15
Metric Conversion Chart.....	20
Cut and Sew Neckband by David Miles.....	21
Stitch Gauge.....	23
Yarn Comparisons.....	24
Measurement Chart for Children and Young Adults.....	25
Acknowledgments.....	26
Photographs.....	27
"Snowmen".....	31
"Rhino".....	35
"Boy and Girl Dolls".....	40
"Butterflies".....	47
"Squirrels, Tree and Mountains".....	52
"Dolphins".....	57
"Fish and Sailboat".....	61
"Pixie".....	66
"Turtles".....	70
"Hannahs Dress".....	75
"Poodles".....	78
"Ducks and Cat-tails".....	83
Other available books.....	88

HINTS SECTION

This book is not intended to be an instruction book on how to use your machine or how to chart your garments. There are a lot of excellent books on the market for that. It is assumed that everyone has a basic knowledge of their knitting machine and how to set it up for pattern work. Therefore, there are a minimum of instructions on machine set up. When they are given, it is for the KH930/Comp3 only. All sweaters were knitted on the KH930.

One of the best books on the market today for charting on your Charting Device is by Mary Louise Norman of Denver, Colorado called "Nicely Knit Lines". We are very fortunate to have someone so capable of putting into words her ideas on charting for the charting devices.

Another excellent book for ladies that like to chart their garments mathematically is "Chartrite" by Norma Sweet of Tacoma, Wash. You can buy these books at your local Dealer or write directly to them. You will enjoy the wide variety of information in them. Contact them at the below addresses.

Mary Louise Norman (Nicely Knit Lines)
1310 Clermont St.
Denver, Colorado 80220
Tel. 303/388-1281

Norma Sweet (Chartrite)
7309 - 40th St. West
Gig Harbor, Wash. 98466
Tel. (206) 565-9397

I am sure there are many other excellent books on the market today for charting both with the charting device and mathematically, but I am not familiar with them.

A lot of the following tips are well known by experienced knitters, but keep in mind there is never just one way to accomplish a particular task, there are many ways; these are just some that I prefer. The hints are more for the beginning knitter that doesn't have a Dealer or knitting friend nearby to help her. Some of them I came by, by trial and error, others through the help of knitting friends.

Automatic cast on: This is used only for practicing or knitting a swatch. Weaving brushes in down position. Holding position buttons or levers in **off position**. Pull out your required number of needles to working position. Use your ruler and pull every other needle to holding position. Take the tail of your yarn and lay it over the needles in holding position, moving from right to left. Hold the yarn tail down on 1st row only and start knitting.

When you have a lot of written sizes on a pattern, it can be very

2nd page of Hints Section

confusing looking at all of the numbers. Use a fluorescent marking pen (at Office Supply Stores) to mark the pattern size that you will be using. They come in many different colors.

KH930/Comp3: If a design is to start immediately after ribbing, program in your pattern. Set your knit carriage outside the left turn mark. Set on Selector #1 or #2. Push in both Part buttons and knit 1 row to the right to set up your needles. Thread your yarns into the feeders, push in your MC button and you are ready to start knitting.

Most knitters have more than 1 machine. If you have a sweater with a lot of stripes, use 1 carriage on the left of your needlebed and the other on the right. Saves having to change yarn so often.

Definition of casting on with waste yarn and ravel cord. Weaving brushes down, cast on your required amount of stitches. Knit about an inch, then knit 1 row with ravel cord. Change to your main color yarn and start your sleeve, etc.

Your contrast color numbers will always be listed at the top of the 1st page of each pattern under **YARN:.**

STITCH GAUGE: You may have to take several stitch gauges before you arrive at the correct one. All machines are different and it's rare that you will have the same identical stitch gauge on your machine that I would have on mine. Weather changes, different colors, and even different dye lots of the same color will affect your gauge. If your gauge isn't correct, then your sweater isn't going to fit and it will most likely end up in a drawer. If your stitch gauge is correct but not your row gauge, adjust the tension on your upper tension rod. It may take a little longer but you will be happier with the finished sweater.

Yarn amounts used will be given only for the size sweater that was knitted. It is to be used only as a guide, so you will have to make the adjustments on yarn according to the size that you knit.

Punchcard: When you divide your neckline, record the row counter row, then record the punchcard pattern row on which you stopped. When you start the 2nd half of your pattern, re-set your row counter and your punchcard to the correct row numbers.

The following 4 tips apply only to the **KH930/Comp3.**

KH930/Comp3: M key means your memory key. When you reach your neckline, knit back the left side needles to out of work position with ravel cord. Press your M key when the number is flashing **and before you start to knit the 1st row** on the right side. This will memorize the row on which your neckline was started. To be on the safe side, also write down the number of the row in the memo window to compare it later. When finished with knitting the right side,

3rd page of Hints Section

bring your left side needles back into working or "B" position. **Garter Carriage:** Set **RC** to correct row. Set the machine on the **right side outside the turn mark**, then press your **M key** to begin your 2nd half. **Fairisle knitting:** Set your carriage on the **left side** of your needlebed **outside the turn mark**. Press **M key**. Set carriage on **KC 1 or 2**, push in both part buttons and knit 1 row to the right to set up your needles. Set **RC** to correct row. Thread both yarns into your feeders, push in your **MC** button and you are ready to knit your left half.

When you are knitting in pattern and hear the buzzer, knit 1 extra row for a complete pattern.

Watch your memo window for color changes. Change colors when the number is flashing.

Always set up your pattern 1 row before the row number given on your written directions. Example: Directions say to start on **RC 100**. You would then set up your pattern on **RC 099**. Always set your carriage outside the turn mark when you are programming in a pattern. You can program from either the right or the left side.

KH930/Comp3: When you are on any pattern that has empty rows, take out your yarn as soon as your pattern needles go back to "B" position. Hook your contrast yarn onto the end of your needlebed and knit with your main color yarn only. Your end needles will still come out each row, so push them back every row or your end stitches will fall off. When your pattern needles come out again, insert your contrast color back into feeder #2. By removing your contrast yarn on the empty rows, you will prevent the long floats across your needlebed.

SIZING: In our very large family, there are many children and young adults of all ages and sizes. My decision was not to go with any published measurements for children and young adults as they are all different and I couldn't find too many that matched our families sizes with the ease that I wanted. So all of these children and young adults were measured and measurements were recorded for each one. Measurements of children and young adults that were approximately the same ages were compared and an average taken.

You will have more ease in these sweaters than most. My preference is for more ease in a sweater, adults as well as children. Children grow so fast, so this will give them an extra 1 or 2 seasons of wear.

Adults will be able to wear some of these patterns such as the Poodle, Ducks and Cat-tails, Snowmen, butterflies, etc. You would have to add extra length for the mens sleeve. The average ladies arm is 22". Unless you have a longer than average arm you shouldn't have to adjust the length too much.

4th page of Hints Section

Armseye measurement for armhole depth: What I believe was most important was the armseye measurement. Slide measuring tape under the underarm and come up over the shoulder. Don't make it too snug. If it measures 14", then half it for a 7" drop on both front and back armholes.

Arm width: Measure your arm at the widest point which is at the underarm. When you add your ease which will be between 4" to 6" you should have the same measurement as the front and back armhole depths added together. Armhole depths front and back: 7" = armhole width: 14".

Arm length: Let them stand with their arm hanging normally, not stiffened. Measure from the bone in the shoulder straight down to the bone in their wrist. As children grow so fast, you can always add extra length in the ribbing. Have then turn it back for the 1st year. As they grow taller, then no more folding.

Chest measurement: Measure all the way around starting at the underarm. Add from 4" to 6" of ease, your choice.

Shoulder measurement: Measure from shoulder to shoulder for a child. Do not deduct anything from the child's shoulder measurement as they grow so fast. If you are knitting the sweater for an adult, deduct 10% from the shoulder width.

Neck measurement: Start at the top of the neck and with your eye, follow down toward the base of the neck where the neck starts becoming wider. At that point, use your ruler to measure your width. If your child measures 5", add 1" or more to that width when you knit your neckband.

Neckline depth: Back neckline, all sizes: 3/4". Front neckline: For the smallest, which is a size 2, use 2.50". For sizes 4 through 18, use 3" in depth.

Sweater length: Start at the bone at the back of the neck and measure down the back, following the curve of the back. Length was arrived at by the children's preference, not mine. They stood in front of a full length mirror and pointed to the area they wanted the sweater length to be. On some of the sweaters, special requests were made for oversize and longer sweaters so a few were knit this way. This will be noted at that special pattern. No matter how young they are, they have very definite ideas on what they like. Sometimes a measurement length was made longer for a more balanced look.

TO LENGTHEN A SWEATER OR A SLEEVE: If you want to lengthen a sweater or a sleeve, study the design first before you decide on which pattern you will make your change. On the sweater, make your changes before your underarm decreases. When you knit your extra rows, turn your row counter off. Record the amount of your extra

5th page of Hints Section

rows, then turn your row counter back on again. This way you will still be able to follow all of your Row Counter changes at the correct row. You may just need to knit extra rows on the ribbing.

To make a longer sleeve, study the photograph to get an idea on pattern placement. For just a little extra length, you may only need extra rows in the ribbing. If you have an area on the sleeve that is just stocking stitch, add your extra rows at that spot.

The measurement chart is to be used as a starting point. It's always wise to measure the person for whom the sweater is intended first, then compare their measurements (with ease added), to the measurements on the chart. The chart is the finished, not actual measurement.

SQUARE ARMHOLE: The following information is for the ladies that want to pick up their stitches from the armhole and knit from the top down. If you decide to knit your sleeve this way, on **KH930/Comp3** machines, push your #5 (upside down) button.

If you are knitting from the written pattern, pick up the amount of stitches called for. If you are knitting a different size, then use the information in the following paragraph.

When you pick up your stitches from the sweater armhole to knit from the top down, don't pick up every single loop without also picking up some knots. If you only pick up every loop, it causes the top of your sleeve to draw in too much. If you pick up too many stitches and knots out of the armhole, it causes a ballooning effect. Pick up every loop on the outside edge anywhere from 3 to 6 times before picking up a knot. After the knot is picked up, sometimes it is hard to see the next loop, but it is there so don't skip it. After all stitches are picked up, leave the stitches in the hooks of the needles, then pull all needles to holding position. Start with the tail of yarn on your left and with your main color yarn, latch tool on behind the needles going from left to right. This will hide any unsightly holes that may develop. If you are knitting in 2-color knitting, it will also hide different color stitches that have been picked up and will give it a more even look.

SWEATER CHANGES: Sometimes extra rows were added to the length of a sweater to make a design more balanced. Extra rows were sometimes needed because the design was extra long. A little more or a little less isn't going to make that much difference in a child's sweater. If the extra length is in a sleeve, just roll back the cuff until they grow into it. If the extra length is in the sweater body, blouse it up a little. If the sweater or sleeve was made a little shorter, then block it a little longer, which is very easy to do on an acrylic.

Charting Device: If you want to knit on the charting device, draw

6th page of Hints Section

your pattern after your measurements are taken. The difference between the shoulder measurement and the chest measurement, plus ease, is the amount you will cast off at the underarm. When using your charting device, take a **"dry run"**. Do this before you start your ribbing. Set your RC at 000 and set the row gauge on your charting device. Run your carriage back and forth until you come to your neckline, then record the number of rows. Compare the row amount with the row amount on the written directions of the pattern that you will be knitting. Make adjustments on pattern placement before beginning your pattern. To me, the charting device is the only way to knit. I have used it faithfully for many years. You will receive a more accurate fit using your charting device than any written pattern will give you.

MIRROR IMAGE: KH930/Comp3: When you are knitting mirror image, push Selector #2 with 2 repeats and push #2 mirror image. Your machine will automatically set your first needle position. If you are designing an animal, have the face facing toward the right. Then when you press mirror image you will have 2 heads facing each other, not 2 tails. However many blank stitches you have to the right of the head, that amount will double on mirror image.

MIRROR IMAGE: KH910 and KH950: This won't be repeated each time in the written patterns. To knit Mirror Image, put your #2 key in the up position, all others down. Pattern Selector at middle position. Program your pattern 1st as an A pattern, then again as a B pattern. Check your instruction book for programming A and B patterns.

SINGLE MOTIF: When you are knitting single motif on the KH930-Comp3, your contrast needles will come forward to D position when in pattern. Always wrap the first needle in B position that is adjacent to the Needle in D position, but on the carriage side only. Sometimes the B position needle will be the main color, other times it will be the contrast color. When you wrap this needle, try to use the same color wrapping yarn as the needle in B position on your needlebed. A different color will show through to the other side the majority of times.

If you are using a heavier ply yarn for your single motif sweaters, split it into single strands when you are wrapping the stitch on the back. It makes less bulk in the sweater.

Sometimes you have a yarn that won't knit properly on a lower stitch size. Using Lori-Lynn yarn spray on your yarn usually corrects the problem. Put your yarn into a plastic bag before you spray it to eliminate fumes coming into your room.

No matter how clean you keep your machine, if you use hold position to shape your neckline or shoulder stitches, you sometimes will get either a black line across the front of your sweater or some furring of the yarn on the purl side. When you are using a lighter color that will show these marks, use a ravel cord to knit your stitches back to out of work position. This usually takes care of the black line. It takes a little longer but it is worth it.

7th page of Hints Section

When you are short rowing your neckline, whether you choose to use hold position or knit it back out of work with ravel cord, don't knit more than 2 rows before pulling a stitch into non-working position, regardless of which method you use. If you knit more than 2 rows without putting at least 1 stitch into out of work position, it will cause a puckering at the neckline. Once you have knitted more than 2 rows without putting a stitch into out of work position, start using a permanent cast off.

When your carriage is on the side of your needles in hold position and your charting device or written pattern shows more than 1 stitch to be short rowed, pull out the required amount of stitches. Weave your yarn under and over the needles in hold position, finishing with the yarn coming over the top of the first needle in holding position (carriage side). Knit 1 row over all stitches when finished to get rid of the double stitches, then remove on waste yarn.

NECKLINE FINISHING: Close one shoulder. With the purl side facing you, pick up every loop from the outside edge, pick up several knots, plus neckline stitches that you have on waste yarn. Work from right to left. When you reach your 1st stitch on the waste yarn (main color, right side) put this stitch onto the last main color stitch picked up. When you have finished hanging your last stitch from the waste yarn, the very next main color stitch that you pick up, put it onto the last stitch hung from the waste yarn. This helps eliminate the holes we sometimes see on neckbands. Leave the stitches in the hooks of the needle and pull all needles to hold position. With the tail of the yarn on the left, latch tool on behind the stitches going from left to right. When finished, push your stitches in the hooks up against the latched on stitches.

No matter what stitch size you use on the 1st row of your band, go 2 full numbers higher on the 1st row only, then set your tension back to the correct stitch size. The higher stitch size on the 1st row makes it easier to pick up stitches above your ravel cord when you close your neckband. After you knit your first row, use a contrast color ravel cord and weave in and out between the needles by pulling the needles out slightly as you are weaving.

You are now ready to knit the 1st row of your band. Whatever your stitch size is on the body of the sweater, the majority of times you will start with that stitch size on the band. Example: 24 row band. Every 3 rows tension down 1 notch. Start with Stitch size 6: Knit 1 row s.s. 8, weave in your ravel cord, knit 2 rows s.s. 6, 3 rows s.s. 5.2. 3 rows s.s. 5.1, 6 rows s.s. 5, 3 rows s.s. 5.1, 3 rows s.s. 5.2, 3 rows s.s. 6.

When you close your neck-band, pick up each purl stitch above the colored ravel cord, plus each purl stitch between the 2 colored purl stitches of ravel cord. Pull all needles out until the

8th page of Hints Section

stitches just clear the latches, then latch tool off around the sinker posts.

For more elasticity in your neckband, latch tool off around 2 sinker posts at a time instead of one.

When you have finished knitting your front and back sweater panels, you will knit 1 row over all neckline stitches to get rid of the double stitches. If your neckband is going to be the same color as the yoke, then use your main color to knit the 1 row. If you are going to use a contrast color neckband, then on that final row, knit that one row in the contrast color, then remove on waste yarn. It looks much neater when you finish your neckband.

DECREASING ON NECKLINE EDGE: (-1-2-3) Means to decrease 1 stitch every 2 rows 3 times.

As you finish each panel, roll it into a tube lengthwise and give a few tugs to set your stitches into place. Give a few pulls from corner to corner. Let the panels rest for awhile before blocking.

BLOCKING: Most people will be happier with their finished results using a Jiffy steamer than they will be when using a steam iron. For years, my struggles with the steam iron produced very poor results on my blocking. For many years now, the Jiffy Steamer has been one of my most valuable accessories and it did solve my blocking problems.

From calls that I receive, some of the beginning knitters are using just a hot iron on the acrylics. **Never** put a hot iron directly onto an acrylic. You will melt the knit, plus damage your iron. If you must use an iron, make sure it is a steam iron. Even with a steam iron, you have to be very careful.

If you use too much pressure when you are blocking an acrylic, you will block the body out of it, plus you may block it too large. Once you do, it will be impossible to get it back to the correct measurements. The opposite is true of wool. You can use a lot of pressure on a wool and you will not damage it or block it out of shape.

Tube your garment, let it rest for awhile, then you are ready to start blocking. **Do not pin** your panel when you are blocking, and **do not pin** it when you are finished. When you pin it into place, you end up with a lot of little scallops that will be almost impossible to remove. On an acrylic, you may put the wand of your steamer directly onto your panel, but with **very little pressure**, just enough to block to the measurements that you need. Block in all directions, up, down, and across in both directions. Because you can't put too much pressure on an acrylic, let your panel get hot and steamy, then use your fingers to pat into place. As you are blocking, keep checking with your measuring tape to block to the correct measurements. Block from the wrong side first. Turn it over and touch up any area that needs it. Leave it alone until

9th page of Hints Section

completely dry. Sew your garment together, then give it one more light blocking, mainly touching up. **Never** steam ribbing.

ABBREVIATIONS: Very few abbreviations have been used as they sometimes tend to confuse the new knitter. Ones that were used, are: Row Counter: RC Stitch size: S.S. Contrast color: C.C.

GARTER CARRIAGE: As I do not use a ribber, the Garter carriage has become a life-saver to me. All sweater ribbing was knitted on the Garter carriage.

When you pull the pin out of your garter carriage, put a pencil eraser on the end. If the pin hits anything metal, you may blow a fuse on the little control box that sits on the back of your knitting machine. The Control box is part of your Garter Carriage.

When you re-insert the pin into the Garter Carriage, do not force it. If it doesn't go in easy, pull it out to re-position it, try again, but don't force it. If you force the pin into the Garter Carriage, it sometimes causes the receiving pin to fall down into the Garter Carriage, hence you will have a large repair bill.

The majority of times I knit my ribbing in contrast yarn on the Garter Carriage. You don't have to keep switching your contrast yarn back and forth from the right to the left side to use the G carriage. Just thread your yarn in the normal way through the left side of your yarn tension rod to rib on Garter carriage and save the right side for the main color yarn. As long as your G carriage lever is in the down position on the right side, your G carriage will work. The only drawback is if you run out of yarn, your lever isn't going to know it and your ribbing will fall on the floor. Just make sure you have enough yarn on your cone so this doesn't happen. Also, the right side lever can't detect knots if there isn't any yarn going through it.

SHOULDER FINISHING: Shoulder stitches or cuffs. When you put a garment piece back onto your machine, have the right side facing you. When you hang your stitches, leave them in the hooks of the needles, then remove the waste yarn. Have the wrong side facing you when you hang your second shoulder (right sides together) As you are hanging the 2nd stitch, pull the needle out slightly so the 1st stitch will slip behind the latch; keep your 2nd stitch in the hook of your needle. Remove the waste yarn when you have finished hanging your stitches. Use your ruler and push the needles back so the stitch in the hook of the needle will slip through the 1st stitch that is now behind the latch. Then pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

As you start each strand of contrast color, knit one row in fairisle, then weave the yarn tail in and out, over and under the needles in D position (if you have a machine where the needles come out to D position). Weave it over the needles of the same color as sometimes the wrong color will show on the knit side. Hang a small clip on the tail of the yarn to keep the carriage from

10 page of Hints Section

jamming when it passes over it, or hold the tail of the yarn down with your fingers, but don't pull on it. Knit 1 row, then clip the yarn. If the stitches in D position are the wrong color, then every 2 rows, "e" wrap the yarn over your end needle. Saves time by not having to sew in your ends later. Too much "e" wrapping on the end needles will distort the side seams when you sew your garment together, so use this method only when you don't have the correct color for weaving your yarn under and over the needles.

FLOATS: The following are several suggestions on dealing with floats. There are other ways but these are some of the ways that I prefer.


#1. The 1st way is to be finished after your panel is off your machine. Use your latch tool and latch the threads up the back of your design. To start, insert your latch tool under the 1st 2 threads. Let 1 thread slip behind the latch, keep the 2nd in the hook of the needle. Pull the thread in the hook through the thread behind the latch. You now have 1 thread in your hook. Pick up the next thread and repeat until you have reached the top of your design. Take a strand of yarn and catch the last loop and secure.

This will draw your design in a little, so wait and do your first blocking after you have finished securing the floats.

#2. As you are knitting, use your latch tool and latch tool the long floats (every 3-4 rows) using your latch tool the same way as the above method. Use care to hang the stitch on the same color yarn as sometimes a wrong color will show through to the other side.

#3. Start a separate strand of yarn for every 6-8 stitches. Pull your needle out just far enough to "e" wrap on, then push it back to working position. Keep your wrapping yarn the same color as the needle that you are wrapping. A different color will show through the majority of the time. Hang only a very light weight clip onto the yarn ends. Too much weight will cause a line on the right side which can be very hard or impossible to block out. You only need to wrap your needle every 2 rows. By timing some of the sweaters that had a lot of wrapping, extra time needed to knit the sweater was minimal.

DUPLICATE STITCHING: Don't pull your yarn too tight when you are doing the duplicate stitch. You have better results when you keep your yarn loose enough to lay on top of the stitch.

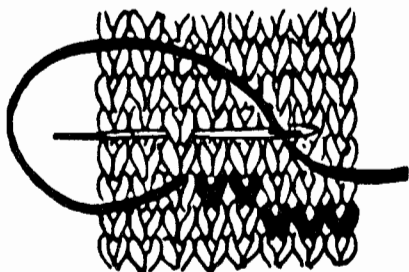

DISK DRIVE AND FLOPPY DISKS, ERROR MESSAGES, ETC.

Information for the Brother/Knitting Computer machines only.

Recently we have been having calls from Knitters that have needed more understanding of the Disk Drive and floppy disks, how to program a backup disk, and the meaning of error messages. They also wanted to know what Command numbers to use to call up a pattern and how to delete a pattern, etc. Hopefully, the following information will help these ladies understand these wonderful accessories and how they work, plus give them a better understanding of error messages.

DISK DRIVE: When you are programming a track into your knitting machine from your disk drive, everything that is in your knitting machines memory that you have input yourself will be erased (555 patterns are in permanently and cannot be erased). If you want to save any designs that are in your knitting machines memory, save them to a floppy disk before programming in another track.

Sometimes you will have more than 1 track for a pattern. When you hear the beep, that means you have 1 more row to knit of the pattern you have been working on. Regardless of what side of the machine your carriage is on, when you hear the beep, put your carriage outside the turn mark to program in your next track. Your old track (one you are working on) will be erased, but your needles for the last row of your old track are already in D or pattern position.

When the access lamp is on, do not take out the disk or pull out your interface cable. If you do, your knitting machine sometimes will not work. If this happens, turn off both your Disk Drive and Knitting Machine and start over again.

TIPS ON THE FLOPPY DISK - WARNING: If you are using the floppy disk, please try to keep them away from all magnets you may have around your knitting machine. Magnets can completely erase a whole disk, tracks only, or destroy just part of a pattern on a track. When you receive your disk in the mail it would be a good idea to program a back-up disk to store in a different area, then if one is damaged you will have one to fall back on. Keep your disks at least a foot, preferably more, away from anything magnetic. Hopefully this information will eliminate some of the problems with lost or missing tracks on your disks.

MAKING A BACKUP DISK: All disks are programmed in the KH930/Comp3 mode: #1. Turn on your knitting machine and disk drive. *** Put your programmed disk into the disk drive, then push down the Disk In/Out Bar. Press CE, #551, then Step. The pattern number light will come on. Your machine is asking you what Track you want to program into your knitting machine. Program in Track #1 and press Step. All lights will go out. When you hear a beep, Track #1 is in your knitting machine.

#2. Take out your programmed disk and insert your backup disk into

2nd page of Disk Drive

the disk drive. Press CE, then #552, then step. Your pattern number light will come on (this will be the Track number your patterns will be saved on, so please record it). Press Step. When you hear the beep, Track #1 will be on your backup disk. ***

Repeat between the stars on Steps #1 and #2 for each track.

After you have transferred your patterns onto the floppy disk, turn your disk over and check the position of the shutter, which is the little black square in the lower right hand corner. When the shutter is in the up position, the disk is not write-protected. Use this position to format disks, delete tracks, transfer pattern data from your knitting machine to the disk drive, transfer pattern data from the disk drive to the knitting machine. When the shutter is in the down position, it is write-protected which means your patterns are safe and you cannot accidentally erase the tracks on your floppy disk. You cannot transfer pattern data from your Knitting Machine to the Disk Drive (floppy disk) when the shutter is in the down (write-protect) position. You are still able to transfer your tracks from floppy disk to the knitting machine.

Before a disk can be used to store patterns, it has to be formatted.

Command numbers have to be used for your Knitting Computer to perform each function. The command numbers follow each function.

FORMAT DISK: #550

Turn on Knitting Machine, your ready light will come on.
Turn on your Disk Drive, then insert your floppy disk. Make sure the shutter on the floppy disk is in the top position or you will not be able to format your disk.
Press the CE key on your knitting machine.
Press 550.
Press Step key.
When you hear the beep, your disk will be formatted and ready to use.

LOAD A TRACK FROM THE DISK DRIVE TO THE KNITTING MACHINE: #551

You cannot load an individual pattern such as #901, #902, etc., into your knitting machine, you have to load the whole track. When you use the **Command number 551**, and your pattern light comes on, your Computer is asking you for the track number, not the pattern number.

Turn on your knitting machine and your Disk Drive.
The ready light on your knitting machine will come on.
Press the CE key on your knitting machine.
Press 551.
Press Step key.
Your pattern number light will come on. The computer is asking you

3rd page of Disk Drive

what track number you want to load into your knitting machine.
Enter your track number.
Press Step key.
All lights will go off.

When your track number has been loaded into your knitting machine, you will hear a beep. Loading is completed.

TRANSFER PATTERN DATA FROM KNITTING MACHINE TO FLOPPY DISK: #552

You have input your patterns into your knitting machine and you want to save them onto a floppy disk.
Turn on your Knitting Machine and Disk Drive.
Ready light on your knitting machine will come on.
Press the CE key on your knitting machine.
Press 552.
Press Step key.
A number will appear in the memo window. Your designs will be stored on this number which will now be the track number. Record this number so you can find your patterns later.
Press Step key.
All lights will go out.
When your patterns have been transferred onto the floppy disk, you will hear a beep. Pattern transfer is completed.

DELETE A TRACK FROM YOUR FLOPPY DISK: #553

If you want to delete all tracks from your floppy disk, just re-format the disk. To delete 1 or more tracks, follow directions below.

Turn on your Knitting Machine and your Disk Drive.
The ready light on your knitting machine will come on.
Press CE key.
Press 553.
Press Step key.
A "0" will show in the Memo display.
Your pattern number light will come on.
The Computer is asking you what track number, not pattern number, you want to delete.
Enter the track number you want to delete.
Press Step key.
All lights will go off.
When deletion is completed, you will hear a beep.
The memo display will still show the "0" and your pattern lamp will still be lit.
If you want to delete another track, press in the track number you want to delete and push "step" the same as before.
When you want to end your track deletion, press your Step key.
All lamps will be as they were before you pushed the CE key.

4th page of Disk Drive

ERROR MESSAGES AND THEIR MEANING

When you have an error message in the memo display, check the error number below to correct the problem. To get rid of the error message in your memo window, turn the power on your knitting machine off, then on again.

- #0. (a) Pattern data of KH940 cannot be saved if you formatted the disk on the KH930.
(b) Pattern data in the disc formatted by the KH930 cannot be deleted with the KH940.
- #1. (a) The floppy Disk Drive power switch is not on.
(b) Either no batteries have been fitted into the unit, or the AC Power Adaptor is not connected. Check the paragraph below marked with the **.
(c) The interface cable is not connected.
- #2. Floppy disk is not working properly.
(a) Remove the disk from the Disk Drive, turn off power switches on both Knitting Machine and Disk Drive. Turn both on again and insert the disk into the Disk Drive again. Start your programming again. If it shows error #2 again, it could be an error in either the floppy disk or the Disk Drive. There has never been a problem with my Disk Drive, it has always been a defective floppy disk.
- #3. The disk is not inserted into the unit.
- #4. The disk is write-protected.
- #5. You are trying to use a disk that has not been formatted.
- #6. Pattern data is not saved on the track number you programmed.
- #7. The programmed track has a flaw in it. (a) You may have set your disk too close to something that is magnetic. Check the "Tips on the Floppy Disk" Section on Disk Warning.
- #8. All space is taken up on the floppy disk. Use another disk.
- #9. Your disk cannot be formatted because it is defective.

** On older model Disk Drives, you could plug them into your power outlets without the batteries and they would work just fine. On the newer model Disk Drives, if you do not insert the 4 batteries, your Disk Drive will not always work properly. You will have error messages showing up. If an error message starts showing, check to make sure you have installed 4 batteries.

All patterns that you have in your Knitting Machines (KH930/Comp3) memory will fit onto 1 track of a floppy disk.

5th page of Disk Drive

The following 3 paragraphs are answers to some of the problems confusing some of our new knitters.

After you have transferred your patterns from your knitting machine to the floppy disk, the patterns will still stay in your knitting machines memory until you delete them. They do not disappear from your knitting machines memory because you have transferred them onto a track on the floppy disk.

Deleting a pattern from your Knitting Machines memory: Turn on your machine; the ready light will be come on. Press the **Input key**. The ready light goes off and the Input light goes on. Press the **CE key** to clear the display, then enter the number of the pattern you want to delete. Push the **"C" key**. The number disappears in the memo display and the Knitting Machine Computer deletes the stored pattern. When you have finished the pattern deletion, press the **Input key again**. The Memo Display will show the pattern program as it was before you started the deletion. If you want to delete **all patterns** in your Knitting Machines memory at one time (KH930/Comp3) press **CE, then 888**. If you want to save your patterns, transfer them first to a floppy disk.

After you have transferred your track number from the floppy disk into your Knitting Machine, all pattern data still remains on the same track on the floppy disk. **You do not have to transfer** the pattern data from your Knitting machine back onto the same track; the patterns are still on the track. Tracks can only be deleted of pattern data by using the **Command #553**, or re-formatting the disk.

Occasionally, the Disk Drive will not take a formatted disk. It will show an error message (5E) that says it wasn't formatted, or it will show a (7E) which would normally mean the disk has a flaw in it. If this should happen, follow this procedure.

1. Open the Floppy disk drive door by pushing the Eject button
2. Remove the floppy disk.
3. Close the Disk Drive door by pushing down on the Disk In/Out Bar
4. Turn the On/Off Switch first **ON, THEN OFF, THEN ON AGAIN**.
5. Open the disk door by again pushing the **EJECT BUTTON**.
6. Insert the floppy disk and close the disk door.

If this doesn't correct it the first time, then repeat the above.

With so many Authors publishing their books with accompanying floppy disks, we don't always have time to program our own as it is very time consuming. When you program your disks on the Brother Disk Drive, rarely will you get a 5E, which means that it wasn't formatted. Companies that duplicate disks for Authors don't have a Brother Duplicating Machine. Because of this, you will sometimes receive the 5E error message which means it wasn't formatted, when **it has been formatted**. This doesn't happen too often but when it does, return the disk to the Author for a replacement.

METRIC CONVERSION CHART

in	cm	in	cm	in	cm	in	cm	in	cm	in	cm
1	= 2.5	11	= 28	21	= 53.5	31	= 78.5	41	= 104	51	= 129.5
1 $\frac{1}{4}$	= 3	11 $\frac{1}{4}$	= 28.5	21 $\frac{1}{4}$	= 54	31 $\frac{1}{4}$	= 79.5	41 $\frac{1}{4}$	= 105	51 $\frac{1}{4}$	= 130
1 $\frac{1}{2}$	= 4	11 $\frac{1}{2}$	= 29	21 $\frac{1}{2}$	= 54.5	31 $\frac{1}{2}$	= 80	41 $\frac{1}{2}$	= 105.5	51 $\frac{1}{2}$	= 131
1 $\frac{3}{4}$	= 4.5	11 $\frac{3}{4}$	= 30	21 $\frac{3}{4}$	= 55	31 $\frac{3}{4}$	= 80.5	41 $\frac{3}{4}$	= 106	51 $\frac{3}{4}$	= 131.5
2	= 5	12	= 30.5	22	= 56	32	= 81.5	42	= 106.5	52	= 132
2 $\frac{1}{4}$	= 5.5	12 $\frac{1}{4}$	= 31	22 $\frac{1}{4}$	= 56.5	32 $\frac{1}{4}$	= 82	42 $\frac{1}{4}$	= 107.5	52 $\frac{1}{4}$	= 132.5
2 $\frac{1}{2}$	= 6	12 $\frac{1}{2}$	= 32	22 $\frac{1}{2}$	= 57	32 $\frac{1}{2}$	= 82.5	42 $\frac{1}{2}$	= 108	52 $\frac{1}{2}$	= 133.5
2 $\frac{3}{4}$	= 7	12 $\frac{3}{4}$	= 32.5	22 $\frac{3}{4}$	= 58	32 $\frac{3}{4}$	= 83	42 $\frac{3}{4}$	= 108.5	52 $\frac{3}{4}$	= 134
3	= 7.5	13	= 33	23	= 58.5	33	= 84	43	= 109	53	= 134.5
3 $\frac{1}{4}$	= 8.5	13 $\frac{1}{4}$	= 33.5	23 $\frac{1}{4}$	= 59	33 $\frac{1}{4}$	= 84.5	43 $\frac{1}{4}$	= 110	53 $\frac{1}{4}$	= 135.5
3 $\frac{1}{2}$	= 9	13 $\frac{1}{2}$	= 34.5	23 $\frac{1}{2}$	= 59.5	33 $\frac{1}{2}$	= 85	43 $\frac{1}{2}$	= 110.5	53 $\frac{1}{2}$	= 136
3 $\frac{3}{4}$	= 9.5	13 $\frac{3}{4}$	= 35	23 $\frac{3}{4}$	= 60.5	33 $\frac{3}{4}$	= 85.5	43 $\frac{3}{4}$	= 111	53 $\frac{3}{4}$	= 136.5
4	= 10	14	= 35.5	24	= 61	34	= 86.5	44	= 112	54	= 137
4 $\frac{1}{4}$	= 11	14 $\frac{1}{4}$	= 36	24 $\frac{1}{4}$	= 61.5	34 $\frac{1}{4}$	= 87	44 $\frac{1}{4}$	= 112.5	54 $\frac{1}{4}$	= 138
4 $\frac{1}{2}$	= 11.5	14 $\frac{1}{2}$	= 37	24 $\frac{1}{2}$	= 62	34 $\frac{1}{2}$	= 87.5	44 $\frac{1}{2}$	= 113	54 $\frac{1}{2}$	= 138.5
4 $\frac{3}{4}$	= 12	14 $\frac{3}{4}$	= 37.5	24 $\frac{3}{4}$	= 63	34 $\frac{3}{4}$	= 88.5	44 $\frac{3}{4}$	= 113.5	54 $\frac{3}{4}$	= 139
5	= 12.5	15	= 38	25	= 63.5	35	= 89	45	= 114.5	55	= 139.5
5 $\frac{1}{4}$	= 13	15 $\frac{1}{4}$	= 38.5	25 $\frac{1}{4}$	= 64	35 $\frac{1}{4}$	= 89.5	45 $\frac{1}{4}$	= 115	55 $\frac{1}{4}$	= 140.5
5 $\frac{1}{2}$	= 14	15 $\frac{1}{2}$	= 39.5	25 $\frac{1}{2}$	= 65	35 $\frac{1}{2}$	= 90	45 $\frac{1}{2}$	= 115.5	55 $\frac{1}{2}$	= 141
5 $\frac{3}{4}$	= 14.5	15 $\frac{3}{4}$	= 40	25 $\frac{3}{4}$	= 65.5	35 $\frac{3}{4}$	= 91	45 $\frac{3}{4}$	= 116	55 $\frac{3}{4}$	= 141.5
6	= 15	16	= 40.5	26	= 66	36	= 91.5	46	= 117	56	= 142
6 $\frac{1}{4}$	= 16	16 $\frac{1}{4}$	= 41.5	26 $\frac{1}{4}$	= 66.5	36 $\frac{1}{4}$	= 92	46 $\frac{1}{4}$	= 117.5	56 $\frac{1}{4}$	= 143
6 $\frac{1}{2}$	= 16.5	16 $\frac{1}{2}$	= 42	26 $\frac{1}{2}$	= 67.5	36 $\frac{1}{2}$	= 92.5	46 $\frac{1}{2}$	= 118	56 $\frac{1}{2}$	= 143.5
6 $\frac{3}{4}$	= 17	16 $\frac{3}{4}$	= 42.5	26 $\frac{3}{4}$	= 68	36 $\frac{3}{4}$	= 93.5	46 $\frac{3}{4}$	= 118.5	56 $\frac{3}{4}$	= 144
7	= 18	17	= 43	27	= 68.5	37	= 94	47	= 119.5	57	= 144.5
7 $\frac{1}{4}$	= 18.5	17 $\frac{1}{4}$	= 44	27 $\frac{1}{4}$	= 69	37 $\frac{1}{4}$	= 94.5	47 $\frac{1}{4}$	= 120	57 $\frac{1}{4}$	= 145.5
7 $\frac{1}{2}$	= 19	17 $\frac{1}{2}$	= 44.5	27 $\frac{1}{2}$	= 70	37 $\frac{1}{2}$	= 95	47 $\frac{1}{2}$	= 120.5	57 $\frac{1}{2}$	= 146
7 $\frac{3}{4}$	= 19.5	17 $\frac{3}{4}$	= 45	27 $\frac{3}{4}$	= 70.5	37 $\frac{3}{4}$	= 96	47 $\frac{3}{4}$	= 121.5	57 $\frac{3}{4}$	= 147
8	= 20.5	18	= 45.5	28	= 71	38	= 96.5	48	= 122	58	= 147.5
8 $\frac{1}{4}$	= 21	18 $\frac{1}{4}$	= 46.5	28 $\frac{1}{4}$	= 72	38 $\frac{1}{4}$	= 97	48 $\frac{1}{4}$	= 122.5	58 $\frac{1}{4}$	= 148
8 $\frac{1}{2}$	= 21.5	18 $\frac{1}{2}$	= 47	28 $\frac{1}{2}$	= 72.5	38 $\frac{1}{2}$	= 98	48 $\frac{1}{2}$	= 123	58 $\frac{1}{2}$	= 148.5
8 $\frac{3}{4}$	= 22	18 $\frac{3}{4}$	= 47.5	28 $\frac{3}{4}$	= 73	38 $\frac{3}{4}$	= 98.5	48 $\frac{3}{4}$	= 124	58 $\frac{3}{4}$	= 149
9	= 23	19	= 48.5	29	= 73.5	39	= 99	49	= 124.5	59	= 150
9 $\frac{1}{4}$	= 23.5	19 $\frac{1}{4}$	= 49	29 $\frac{1}{4}$	= 74.5	39 $\frac{1}{4}$	= 99.5	49 $\frac{1}{4}$	= 125	59 $\frac{1}{4}$	= 150.5
9 $\frac{1}{2}$	= 24	19 $\frac{1}{2}$	= 49.5	29 $\frac{1}{2}$	= 75	39 $\frac{1}{2}$	= 100.5	49 $\frac{1}{2}$	= 125.5	59 $\frac{1}{2}$	= 151
9 $\frac{3}{4}$	= 25	19 $\frac{3}{4}$	= 50	29 $\frac{3}{4}$	= 75.5	39 $\frac{3}{4}$	= 101	49 $\frac{3}{4}$	= 126.5	59 $\frac{3}{4}$	= 152
10	= 25.5	20	= 51	30	= 76	40	= 101.5	50	= 127	60	= 152.5
10 $\frac{1}{4}$	= 26	20 $\frac{1}{4}$	= 51.5	30 $\frac{1}{4}$	= 77	40 $\frac{1}{4}$	= 102	50 $\frac{1}{4}$	= 127.5	60 $\frac{1}{4}$	= 153
10 $\frac{1}{2}$	= 26.5	20 $\frac{1}{2}$	= 52	30 $\frac{1}{2}$	= 77.5	40 $\frac{1}{2}$	= 103	50 $\frac{1}{2}$	= 128.5	60 $\frac{1}{2}$	= 153.5
10 $\frac{3}{4}$	= 27.5	20 $\frac{3}{4}$	= 52.5	30 $\frac{3}{4}$	= 78	40 $\frac{3}{4}$	= 103.5	50 $\frac{3}{4}$	= 129	60 $\frac{3}{4}$	= 154

All cm. measurements have been adjusted to the nearest 0.5 cm.

CUT AND SEW NECKBAND

By David Miles

This is an easy cut and sew neckband that will look like a double crewneck. Works great when using the garter carriage, fairisle and patterns that are difficult to shape the neckline with.

Back: Knit the same as directions but eliminate any neck shaping. Scrap off shoulder stitches. Knit one row over neck stitches and bind off.

Front: Knit the same as back. Seam one shoulder.

1. Make template of neck shaping. For a size you will use frequently, make a template out of cardboard so it can be used many times.

2. With front piece lay template on right side of garment where neckline is to be. With chalk or thread mark neckline around template. Make sure you can see your mark so it will make the sewing easier.

3. Use a sewing machine, zig-zag stitch two rows over your marked neckline. Straight stitching may also be used. Sergers work great for this also. I do one row of zig-zag over top of the other.

4. Now about 1/8 to 1/4 inch above your stitched neckline cut out your neckline.

5. Hold your neckline up to your machine, do not stretch. Gently push onto the sinker or gate post to give you an idea of how many stitches to cast on. Make a note of the number of stitches. Take neckline off gate post.

6. Cast on the number of stitches you made a note of in 1x1 2x2 rib. Rib for 24 rows or desired length at normal rib tension.

7. Transfer ribber stitches to mainbed. Take off on garter bar or scrap off. Garter bar is the quickest.

8. With right side facing you. Use a transfer tool to hang your neckline on the same needles. Pick up below the stitching about 1/8 inch. Work any fullness in to make a smooth neckline.

9. Pull all needles to E position. Now rehang your neckband stitches from the garter bar or scrap. Keep the stitches in the latches.

10. Close the latches (be sure all are closed). Use back of garter bar or ribber comb to help knit all neckband stitches thru at once. Be sure all stitches have knit thru completely and smoothly.

2nd page of David Miles Cut and Sew Neckband

11. Hang a hem from your ribbed neckband cast on edge. I prefer to hang on every stitch but every other stitch will also work.
12. Latch tool bind off going around two gate or sinker post.
13. Take off machine, set neckband stitches.
14. Seam second shoulder and seam neckband.

Practice on a swatch your first time. Then try on a sweater. With practice you will use frequently and find this to be a useful alternative on a neckline.

Copyright 1988 by David H. Miles

Re-printed in this book by permission of David Miles. Printed in its entirety exactly as David has written it.

At this years Seattle Seminar I had the opportunity to meet David Miles. David not only has many great ideas and designs, he does beautiful custom knitting. For more information, contact:

Attention: David Miles
% Derbytown Designs
12306 Shelbyville Rd.
Louisville, Kentucky 40243
Tel. (502) 244-5648

STITCH GAUGE

The stitch gauge has to be the most important task to undertake before beginning a garment. Without a correct stitch and row gauge, there isn't any way your garment is going to fit correctly. With all of the countless hours that you spend on a garment, your time will be wasted if it doesn't fit properly. The time spent on knitting your stitch gauge is well worth it.

If you are using acrylics, cottons, or the superwash wools, treat the swatch as you would your finished garment. If you are going to wash it in the washing machine, then do the same for your swatch. If you are going to dry it in your dryer, then also dry your swatch but with a load of clothes, as you normally would not dry just 1 sweater alone. Block your swatch the same as you will be blocking your finished garment.

Cast on 40 stitches each side of 0 with your weaving brushes down.

Knit approximately 3 inches, **always** in the pattern that you will be knitting.

Knit 2 rows of contrast color yarn.

Put a marker thread on the 21st stitch on each side of 0.

Set Row Counter on 000

Knit 60 rows.

Knit 2 rows of contrast color yarn.

Knit approximately 3 inches in pattern.

Scrap off machine.

Roll your stitch gauge into a tube (vertical) and pull a couple of times to set the stitches. Pull it several times from corner to corner. Let it rest for awhile before blocking.

Thread your contrast color yarn into a needle and following your 21st stitch, sew a contrast color between the top and bottom contrast color yarns.

Block, then let it dry overnight for a more accurate gauge.

Studio Dealers and Distributors have a green ruler that is used with their charting device. This same ruler is great for giving you your stitch gauge on stitches and rows. The measurement you read will be for 4", not 1". You will have a more accurate stitch and row gauge taking it over 4" instead of 1". Use this when you will be following the written patterns.

When you take your readings, take it in 3 to 4 different places between your contrasting yarns. You will probably have different readings each time; then take the average of the readings.

2nd page of Stitch Gauge

If you will be using your charting device, then measure your stitch gauge with the ruler that comes with your charting device.

You will use the S (for stitches) side of your ruler and measure the stitches between your 21st needles on each side of 0. If your ruler says 30, that means your gauge is 30 stitches equals 4". Divide by 4 and that will give you 7.50 stitches per inch.

When you measure your rows, have the R (for rows) side facing to the left, then measure between the two contrasting yarns. If your reading says 48, then that means 48 rows equals 4". Divide by 4 and that will give you 12 rows per inch.

YARN COMPARISONS

The following yarns knit to approximately the same gauge as the yarns used in this book. Distributor's ads and telephone numbers are listed in "The Machine Knitters Source".

As I am not familiar with various yarns, the Yarn Distributor's were very helpful in giving me yarn comparisons. The yarns sound beautiful.

A big Thank You to Sherry Davis of Knitarama for her help on yarn comparisons for Yarn Country Yarns.

Another big Thanks to Lois Sanders of June's Knit Shop for yarn comparisons on Nomis - Amberyarn - Tamm.

DENYS BRUNTON: De-Lux 4-ply, Magicolor.

MILLOR: Tepeyac, Vellon, Trenzado, Andino, Pupe', Natural.

NOMIS: Beacon Hill, Phantasy, 3/15, Rain Master, Lustro Print.

TAMM: Diamonte, Estilo, Trenzi, 3 ply Astracryl which is a softer yarn. Can-Cun and Rayito are a little heavier yarns.

AMBERYARN: Academy, Fairaisle, Lurex, Natureza.

YARN COUNTRY: Softball, Newlite, 4 Seasons which is a little lighter weight, Serenaide (use approximately S.S. 6 for same gauge), (3/24 - use 3 strands) Roma, Kola, which is 100% wool.

BRENTWOOD YARNS: Mini Flashdance, Monte Carlo, Mini-Rayco, Mini-Germaine, Mini-Splash.

MEASUREMENT CHART FOR CHILDREN AND YOUNG ADULTS

Sizes below are finished measurements.

How to measure: Read pages 3 and 4 of the Hints Section

Neckband stitches that are picked up is only a guide. More or less may be picked up, your choice.

	<u>2</u>	<u>4</u>	<u>6</u>	<u>8</u>	<u>10</u>
<u>Back/Front</u>					
<u>Neck Width</u>	5	6	6	6	6
<u>Front</u>					
<u>Depth:</u>	2.50	3	3	3	3
<u>Back</u>					
<u>Depth:</u>	.75	.75	.75	.75	.75
<u>Shoulder</u>					
<u>Width:</u>	11	12.50	13	13.50	13.50
<u>Armhole</u>					
<u>Depth:</u>	5.50	6.50	7	7	7.50
<u>Chest</u>					
<u>Width:</u>	26	29	32	34	35
<u>Sweater</u>					
<u>Length:</u>	13	15	16	17	17.50
<u>Sweater</u>					
<u>Ribbing:</u>	2	2	3	3	3
<u>Arm</u>					
<u>Width:</u>	11	13	14	14	15
<u>Arm</u>					
<u>Length:</u>	10	11.50	13	15	16
<u>Arm</u>					
<u>Ribbing:</u>	3	3	3	3	3
<u>Pick up</u>					
<u>Nkbnd. sts.</u>	104	108	110	112	114

	<u>12</u>	<u>14</u>	<u>16</u>	<u>18</u>
<u>Back/Front</u>				
<u>Neck Width</u>	6	6	6.25	6.50
<u>Front</u>				
<u>Depth:</u>	3	3	3	3
<u>Back</u>				
<u>Depth:</u>	.75	.75	.75	.75
<u>Shoulder</u>				
<u>Width</u>	14	14	14.50	15
<u>Armhole</u>				
<u>Depth:</u>	8	8.50	8.50	9
<u>Chest</u>				
<u>Width:</u>	36	37	38	40
<u>Sweater</u>				
<u>Length:</u>	18	19	21	23
<u>Sweater</u>				
<u>Ribbing:</u>	3	3	3	3
<u>Arm</u>				
<u>Width:</u>	16	17	17	18
<u>Arm</u>				
<u>Length:</u>	17.50	19	19.50	19.50
<u>Arm</u>				
<u>Ribbing:</u>	3	3	3	3
<u>Pick Up</u>				
<u>Nkbnd. sts.</u>	116	118	120	122

ACKNOWLEDGMENTS

Time sure does fly. It seems only yesterday that the Indian books, then the Nursery Rhyme books came onto the Market, now another book is finished.

Our son, Dan, has been working with us for just about a year now. Because of his hard work and dedication, it has been easier for me to design and write books. It has speeded up things considerably. He manages to do all of the dreaded bookkeeping, buys and sells fruit, packages all orders, and gives very wise advice on advertising and selling. He has made himself indispensable.

My husband, Hal, is always there for me, encouraging me every step of the way. There are never any complaints about late meals; a home that gets vacuumed and dusted once a week now, instead of every day as before. His love and support are really appreciated.

The darling little "Pixie" was drawn by Mary Louise Norman. A friend found it in an old issue of "Alles Machine Knitting News and Views" and we both fell in love with it. As always, Mary Louise graciously consented to letting me use the Pixie in this book. Many thanks, Mary Louise, I'm sure others will love your little "Pixie" as much as we do. Mary Louise has many other wonderful books. Her address is listed in the Hints Section.

We feel very fortunate that we have found some ladies that do an excellent job of knitting. They are as picky about their knitting as I am. Two are my close friends of many years, Resi Raber and June Fitzpatrick. Heidi Abbot is a young lady with children still at home, but manages to find the time to do excellent work. Judy Ragsdale lives out of State so we have packages going back and forth. A great big Thank You to all of these ladies, your help is very valuable to me.

Courtesy of Brother International: Sailboat, tree, ribbon.

In the two Nursery Rhyme books, names of pattern sets were given that were drawn by my friend of many years, Paula Franklin. Space doesn't allow me to list them again. At that time, there weren't too many people that were into the drawing of patterns, so I hired Paula to draw some punchcard pattern sets for me. The sets were first sold about 18 years ago under the name "Phyllis' Ski Wear". They were all pretty special. They haven't been sold or advertised by me for about 15 years now so they should be new to most of you. At the time I was selling only the punchcard sets, not written patterns. The following drawings are by Paula. Rhino, Boy and Girl Dolls, butterfly, squirrel, dolphins, fish, turtles, poodles and ducks. Because of lack of space each sweater was not listed individually. Thank you again, Paula. You're very special!

Hugs and kisses to my nieces and nephew for modeling: Megan, Christy, Rudy and Marnie. Another bundle of hugs and kisses to my grandchildren Jennifer, Mandy, Julie, Brandon, Hannah and Cindy. Good job, kids! This time, all of you seem to be much more relaxed and beginning to enjoy this job called modeling.

SNOWMEN

Ribbing: Stitch size 3 on Garter carriage

Body and sleeves: Stitch size 4 Upper tension dial: -2

SIZES: 2-4-6-8-10-12-14-16-18

YARN: Denys Brunton Main color: #10 - royal - 6 ozs.

1st C.C.: #3 white - 1.50 ozs.

2nd C.C.: #4 red - .50 oz.

3rd C.C.: #18 baby blue - 4 ozs.

4th C.C.: #21 jade - .50 oz.

5th C.C.: #10 royal

Yarn amounts given are for size 6

STITCH GAUGE: 7.38 stitches and 12.25 rows per 1".

Stitch gauge taken in stocking stitch

KH930/Comp3: Pattern #910 - Selector #1

Pattern #911 - Selector #2 with 3 repeats

Punchcard: Pattern #910 - All over pattern

Pattern #911 - 3 single motifs

Check Hints Section on finishing techniques, blocking and floats.

Neck ribbing in baby blue, sweater and cuffs in royal blue.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern. Watch your memo window for color changes. Change colors when number is flashing.

Punchcard: The color numbers are listed in the memo column to the left of the printed design. Please mark your card accordingly.

Duplicate stitch: When you are finished with your panels, duplicate stitch the scarf on each snowman in jade.

Program in Track #3

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 96 (108,118,126,130,134,136,140,148) stitches with royal. Rib in 2 x 2 with Garter carriage for 20 (20,30,30,30,30,30,30,30) rows.

RC 000 Knit 6 rows in royal blue.

RC 006 Pattern #911 (Snowmen) **All machines, knit 3 single motifs.**


KH930/Comp3: Watch your memo window for color changes. Knit 50 rows.

RC 56 Knit 34 (52,60,70,70,70,80,99,119) rows royal blue.

RC 090,108,116,126,126,126,136,155,175 Pattern #910 (border,25




Hannah Waterhouse – "Picot edged dress".

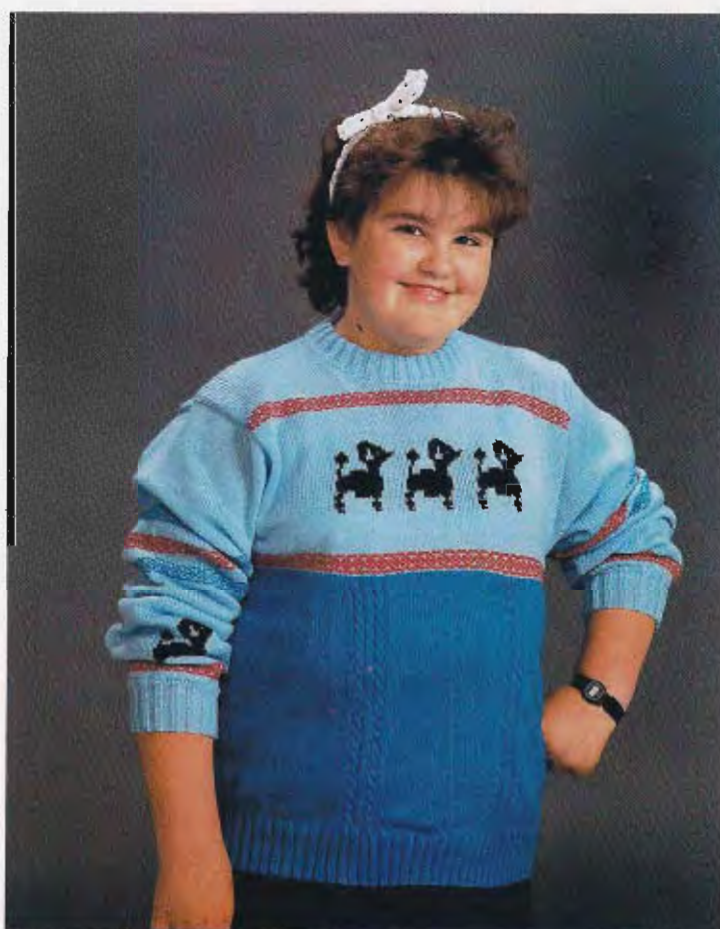

Cindy Waterhouse – "Poodlies".



Jennifer Waterhouse – "Ducks and Cat-tails".

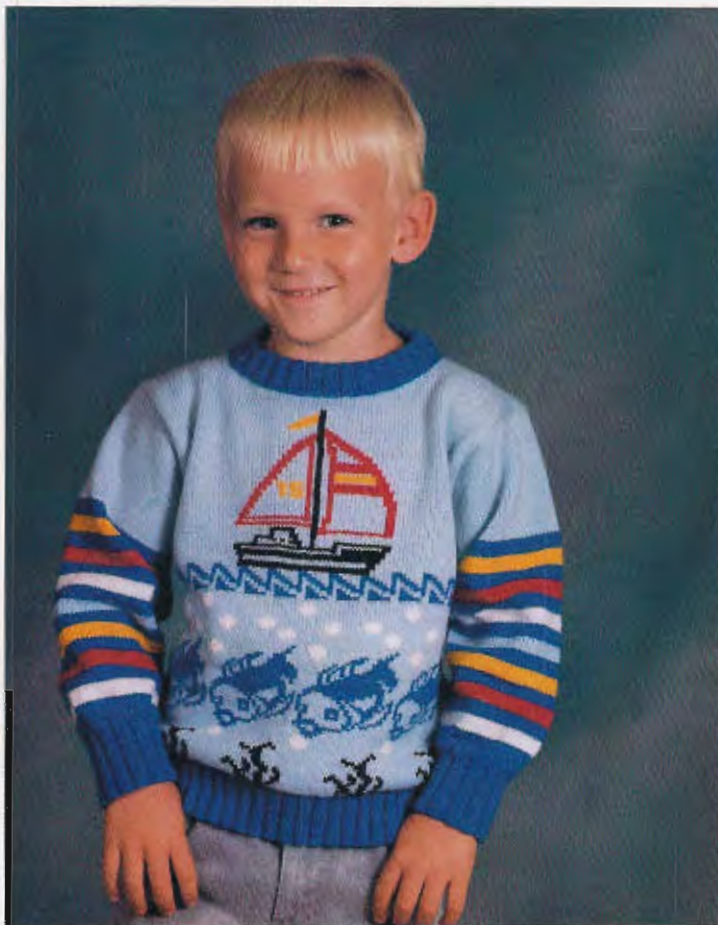


Brandon Waterhouse - "Fish and Sailboat".




Jennifer Waterhouse - "Pixies".




Marnie Eichelberger - "Turtles".

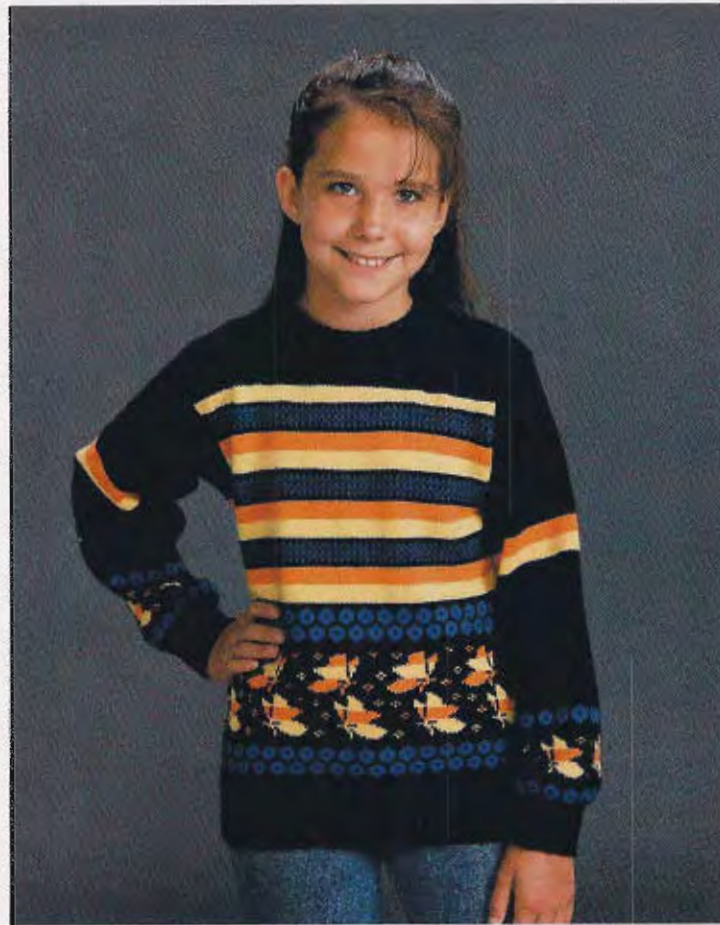

Julie Waterhouse – "Butterflies".

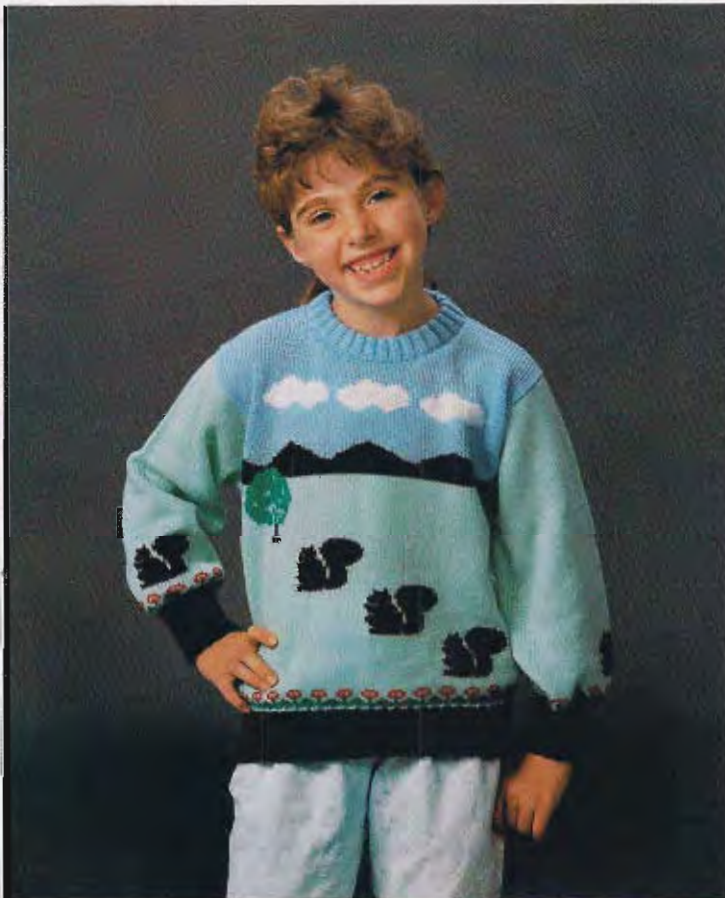

Mandy Waterhouse – "Squirrels, Mountains and Clouds".

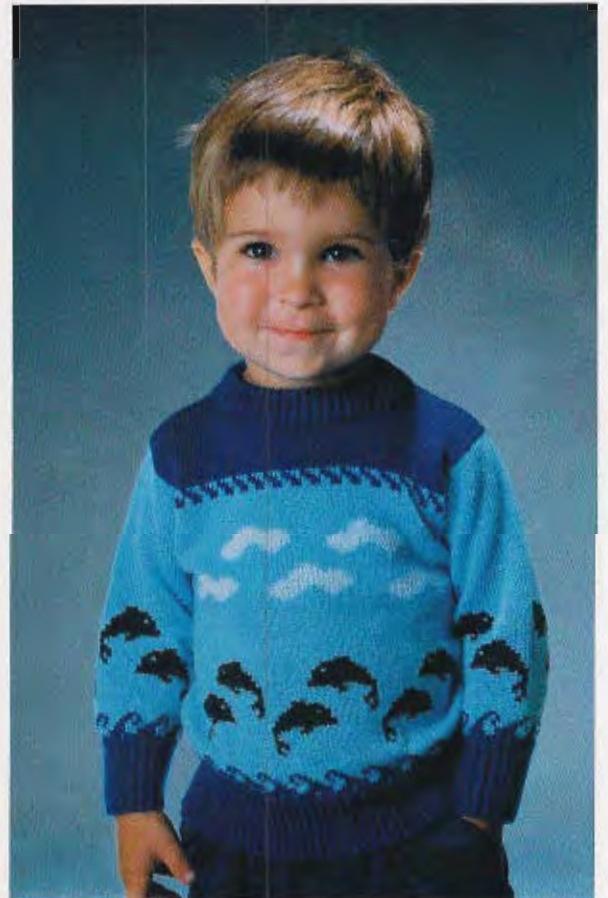

Rudy Bankson – "Dolphins and Clouds".



Mandy Waterhouse – "Snowmen".



Megan Eichelberger – "Rhino".



Christy Trimble – "Boy and Girl Dolls".

2nd page of Snowmen

rows) **Change to white in feeder #1, royal blue in feeder #2.** Knit the first 8 rows with royal blue as contrast color, 2 rows white, the next 5 rows with red as contrast color, 2 rows white, the next 8 rows with baby blue as contrast color.

RC 092,104,110,124,124,124,128,154,172 Cast off 7 (8,11,15,15,15,16,16,18) stitches each side for underarm.

RC 115,133,141,151,151,151,161,180,200 **Change to baby blue in feeder #1.** Knit 7 (13,17,21,27,33,33,40,44) rows.

RC 122 Size 2: Follow the same directions as below but knit back 8 stitches 1 time, then (-2-1-2) (-1-1-7) (19 neck stitches decreased). When finished, knit to RC 160.

RC 146,158,172,178,184,194,220,244 **Sizes 4-6-8-10-12-14-16-18** Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-2) (-1-1-12). (24 neck stitches decreased) When finished knit straight until RC 184 (196,210,216,222,232,258,282).

RC 160,184,196,210,216,222,232,258,282 Take off 22 (24,26,26,28,30,30,30,32) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches in baby blue, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 150 (174,188,200,206,212,222,248,272).

RC 150 Size 2: Follow same directions as below but knit back 10 stitches 1 time, then (-1-1-9). At RC 160, take shoulder stitches off on waste yarn.

RC 174,188,200,206,212,222,248,272 **Sizes 4-6-8-10-12-14-16-18:** Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 15 stitches 1 time, then (-1-1-9) At RC 184 (196,210,216,222,232,258,282) take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with baby blue, then take off on waste yarn.

SLEEVE: Cuffs: Cast on 50 (50,56,60,60,64,68,70,74) stitches in royal blue with Garter carriage. Rib in 2 x 2 for 20 (20,30,30,30,30,30,30,30) rows. Take off machine with waste yarn or Garter bar.

Cast on 60 (70,80,90,90,94,96,96,100) stitches with waste yarn and ravel cord.

3rd page of Snowmen

RC 000 Knit 59 (75,93,119,111,129,149,153,153) rows in royal blue.

RC 014,012,014,012,008,010,012,016,006 Increase 1 stitch each side every 9 (9,12,23,16,16,14,14,13) rows 11 (13,11,7,11,12,15,15,17) times You will have 82 (96,102,104,112,118,126,126,134) stitches when you are finished increasing.

RC 059,075,093,119,111,129,149,153,153 Pattern #910 Knit 25 rows in pattern, following same color changes as the front. When finished, turn off your pattern and finish your sweater in baby blue.

RC 084,100,118,144,136,154,174,178,178 Knit 40 (40,40,40,60,60,60,60,60) rows baby blue.

RC 124,140,158,184,196,214,234,238,238 Take sleeve off on waste yarn.


NECKBAND: When you knit your neckband, start at Stitch Size 4. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 104 (108,110,112,114,116,118,120,122) stitches for neckband. Knit 28 rows in baby blue by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


SLEEVE FINISHING: Hang cuff back onto your machine on 50 (50,56,60,60,64,68,70,74) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 10 (20,24,30,30,30,28,26,26) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

With the right side facing you, hang sweater back onto the machine on 82 (96,102,104,112,118,126,126,134) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

Tube all pieces as they come off the machine. Let rest for awhile, then block. Let dry, preferably overnight before sewing together.

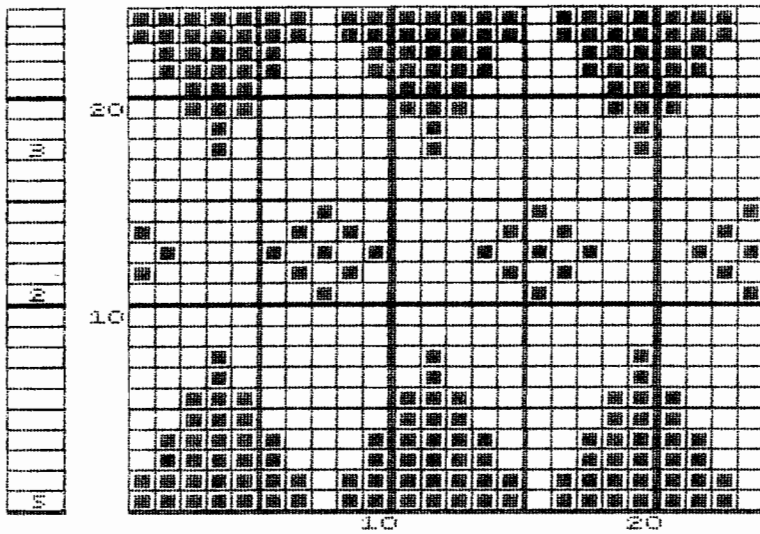

Track #3 - Pattern #910
24 stitches by 25 rows

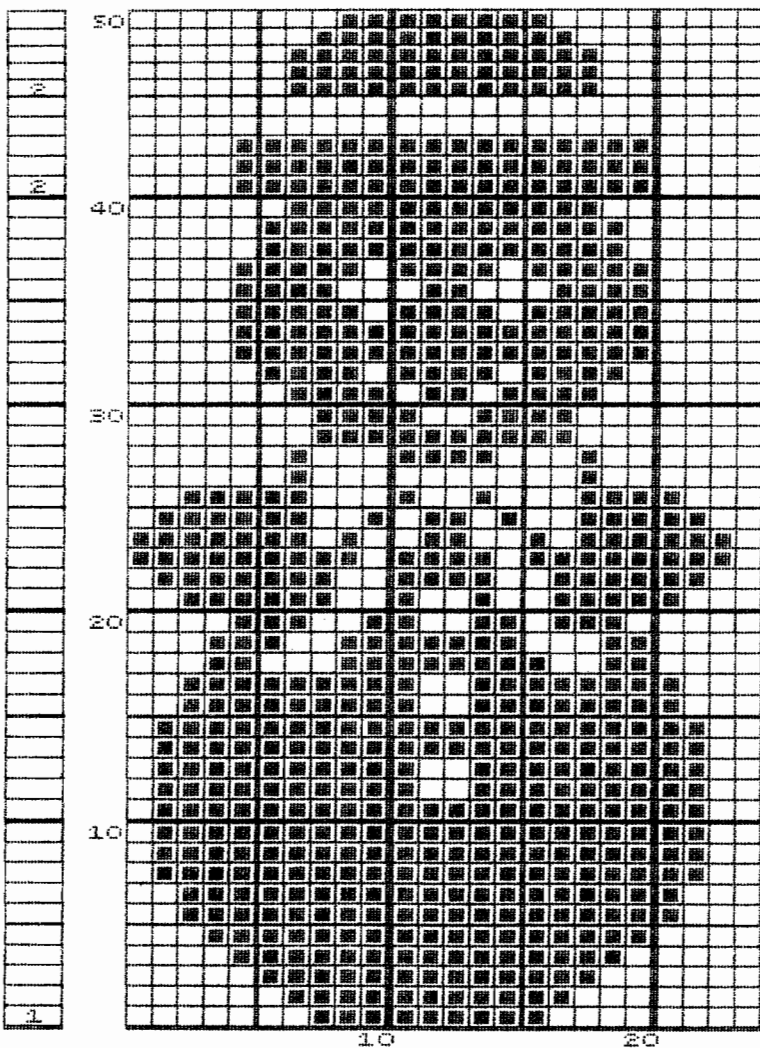

Track #3 - Pattern #911
24 stitches by 50 rows

RHINO

Ribbing: Stitch size 4 or 5 on Garter carriage

Body and sleeves: Stitch size 6 Upper tension dial: -1

SIZES: 4-6-8-10-12-14-16-18

YARN: Trenzado Main color: #10 - White - 6 ozs.
1st C.C.: #39A - Congoles (deep gold) 1 oz.
2nd C.C.: #34 - Zafiro (royal blue) 1 oz.
3rd C.C.: #26 - (black) 3 ozs.
Yarn amounts given are for size 6

STITCH GAUGE: 7.50 stitches and 12.63 rows per 1".
Gauge taken in Stocking Stitch

KH930/Comp3: Patterns #910-912 - Selector #1
Pattern: #911 - (pocket) Directions at pocket

Punchcard: Patterns #910-912 - All over pattern
Pattern: #911 - (pocket) Directions at pocket

Check Hints Section on finishing techniques, blocking and floats.

All ribbing, including neckband in black.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern. Watch your memo window for color changes. Change colors when number is flashing.

Punchcard: The color numbers are listed in the memo column to the left of the printed design.

Program in Track #1

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 110 (120,128,132,136,140,144,150) stitches with white. Rib in 2 x 2 with Garter carriage for 24 (24,30,30,30,30,30,30) rows.

RC 000 Knit 2 rows white.

RC 002 Pattern #910 (border) Knit 12 rows following your color changes. Color numbers are marked under **YARN**.

RC 014 Knit 4 (4,4,4,4,4,8,8) rows white.

RC 018,018,018,018,018,018,022,022 Pattern #911 (Rhino) **KH930/Comp3:** Carriage outside turn mark. Start on Row #11 of the pattern design. **Sizes 2-4-6:** Change 1st needle position to **Yellow 36**. **Sizes: 8 through 18:** Change your 1st needle position to **Yellow 46**. Knit 19 rows of the Rhino. **Punchcard: All Sizes:** Knit

2nd page of Rhino Sweater

1 single motif of Rhino over needles **13-36** on the left of your needlebed.

RC 037,037,037,037,037,037,041,041 Knit 28 (28,28,38,38,48,58,77) rows white.

RC 065,065,065,075,075,085,099,118 Knit 6 rows blue, 6 rows white, 6 rows gold, 6 rows white, 6 rows black. You will be on **RC 95 (95,95,105,105,115,129,148)** when you have finished the stripes.

RC 108,114,126,126,126,132,158,178 Cast off 8 (11,13,15,15,17,17,18) stitches on each side for underarm.

RC 095,095,095,105,105,115,129,148 Knit 57 (69,81,77,85,87,99,106) rows white.

RC 152,164,176,182,190,202 **Sizes 4-6-8-10-12-14:** Divide for front neckline. Knit all stitches to the left of 0 back to out of work position. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9). (23 neck stitches decreased) When finished knit straight until **RC 190 (202,214,220,228,240)**.

RC 228,254 **Sizes 16-18:** Divide for front neckline. Follow same directions as above except knit back 10 stitches 1 time, then (-2-1-3) (-1-1-8) (24 neck stitches decreased) Knit to **RC 266 (292)**.

RC 190,202,214,220,228,240,266,292 Take off 24 (26,28,28,30,30,31,33) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with black yarn, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until **RC 180 192,204,210,218,230,256,282**.

RC 180,192,204,210,218,230 **Sizes 4-6-8-10-12-14:** Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 14 stitches 1 time, then (-1-1-9) At **RC 190 (202,214,220,228,230,)** take shoulder stitches off on waste yarn.

RC 256,282 **Sizes 16-18** Divide for back neckline. Follow same directions as above except knit back 15 stitches 1 time, then (-1-1-9) At **RC 266 (292)**, take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with black yarn, then take off on waste yarn.

3rd page of Rhino Sweater

SLEEVE: Cuffs: Cast on 50 (56,60,60,64,68,70,74) stitches in black with Garter carriage. Rib in 2 x 2 for 20 (30,30,30,30,30,30,30) rows. Take off machine with waste yarn or garter bar.

Cast on 70 (80,80,90,94,96,96,100) stitches with waste yarn and ravel cord.

RC 000 Knit 2 rows white.

RC 002 Pattern #911 (Rhino) Knit the border in all over pattern. Knit 1 single motif of the Rhino. Knit 29 rows following your color changes. **KH930/Comp3:** (Optional) Push #1 reverse button for the 2nd sleeve so both rhinos will face to the front when assembled.

RC 008,010,010,010,016,018,010,016 Increase 1 stitch each side every 9 (11,13,15,15,13,14,12) rows 14 (13,13,12,13,16,16,18) times You will have 98 (106,106,114,120,128,128,136) stitches when you are finished increasing.

RC 031 Knit 38 (48,61,67,77,86,90,90) rows white.

RC 069,079,092,098,108,117,121,121 Knit 6 rows blue, 6 rows white, 6 rows gold, 6 rows white, 6 rows black. You will be at RC 99 (109,122,128,138,147,151,151) when you are finished with your stripes.

RC 099,109,122,128,138,147,151,151 Knit 39 (47,60,66,76,85,87,87) rows white.

RC 138,156,182,194,214,232,238,238 Pattern #912 (border) Knit 6 rows with gold as your contrast color.

RC 144,162,188,200,220,238,244,244 Knit 2 rows white.

RC 146,164,190,202,222,240,246,246 Take sleeve off with waste yarn.

NECKBAND: When you knit your neckband, start at Stitch Size 5. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 108 (110,112,114,116,118,120,122) stitches for neckband. Knit 28 rows in black by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.

4th page of Rhino Sweater

SLEEVE FINISHING: Hang cuff back onto your machine on 50 (56,60,60,64,68,70,74) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 20 (24,20,30,30,28,26,26) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

With right side facing you, hang sweater back onto the machine on 98 (106,106,114,120,128,128,136) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

POCKET: Stitch size 6 Cast on 18 stitches left of 0 and 17 stitches right of 0 with waste yarn and ravel cord.


KH930/Comp3: Pattern #911 Press Selector #1 for the border. For the Rhino, press Selector #2 with 1 repeat.

Punchcard: Pattern #911 All over pattern for the border. 1 single motif of the Rhino.


RC 000 Knit 2 rows white.

RC 002 Pattern #911 Stitch size 6 Machine settings are listed above. White in feeder #1, gold in feeder #2. Knit 6 rows with gold as contrast color. Have your 4 empty rows between border and Rhino. Change your settings and knit 19 rows of the Rhino. Turn off pattern and knit 5 rows in white. **Change to black in feeder #1 and change to stitch size 4.1.** Knit 1 row black, then weave in your marker thread. Knit 15 more rows. Pick up your stitches above your marker thread and close your hem. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts. Put a small dowel through the hem and give a few pulls to remove any flare. Block the pocket and let dry before attaching to the sweater. Sew pocket onto the right hand side of your sweater. Check pocket placement on this sweater.


As you finish each piece, tube it then let it rest for awhile. Block and let dry thoroughly before seaming together. Especially the sleeves, as once the wrinkles are in, it is almost impossible to remove them once the cuffs are on.

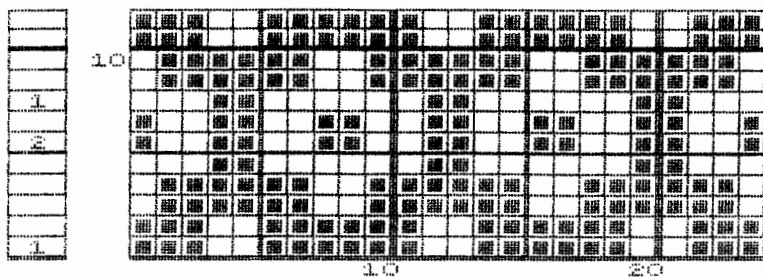

Track #1 - Pattern #910
24 stitches by 12 rows
(Sweater and sleeve
border)

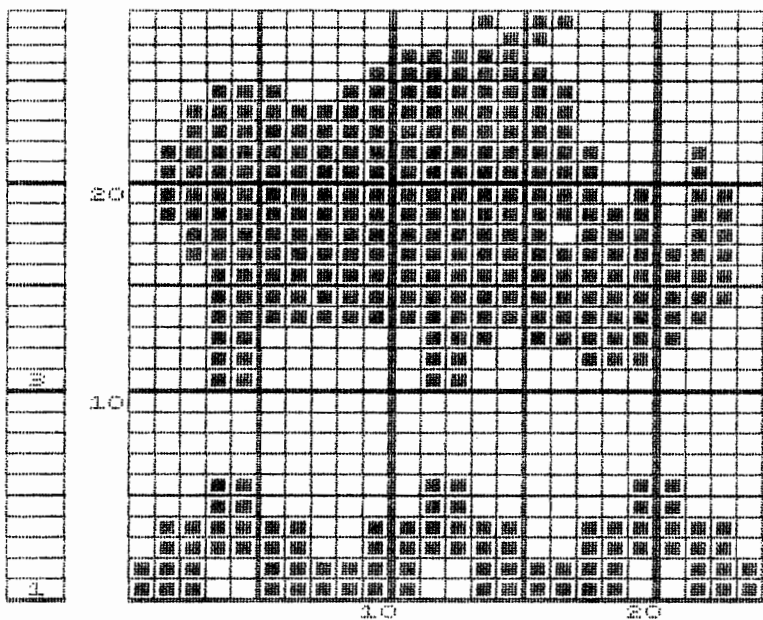

Track #1 - Pattern #911
24 stitches by 29 rows

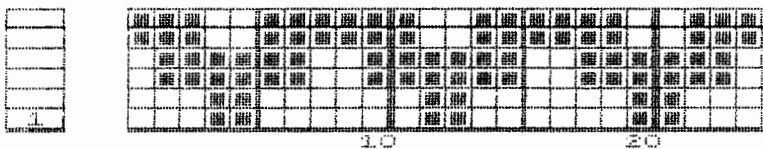

Track #1 - Pattern #912
24 stitches by 6 rows
(Border for top of sleeve)

BOY AND GIRL DOLLS

Ribbing with cables: Stitch size 7 on Garter carriage for cuffs and sweater bands.

Body and sleeves: Stitch size 6 Upper tension dial: -1

SIZES: 8-10-12-14 Sizes 12 and 14 were each made 3" longer than measurement chart by special request. If you do not want them this long, you can delete knit rows before and after the border designs.

YARN: Trenzado Main color: #48 (Rosa) pale pink - 8 ozs.
1st C.C.: #15 black - 1 oz.
2nd C.C.: #04 (Tulipan) deep rose - 3 ozs.
3rd C.C.: #14 (Morado) violet - 1 oz.
Yarn amounts given are for size 12

STITCH GAUGE: 7.50 stitches and 12.13 rows per 1".

KH930/Comp3: Pattern #906 - Selector #1
Patterns 907-908-909 - Selector #2 with 1 repeat

Punchcard: Pattern #906 - All over pattern
Patterns 907-908-909 - 1 single motif

Check Hints Section on finishing techniques, blocking and floats.

All ribbing, including neckband in pale pink and cables.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern. Watch your memo window for color changes. Change colors when number is flashing.

Punchcard: The color numbers are listed in the memo column to the left of the printed design.

Duplicate stitch: **Pattern #907** (girl doll) Row #44 Duplicate stitch #6 and #13 in rose. Duplicate stitch the eyes, nose and mouth in rose. **Pattern #908** (boy doll) Row #44 Duplicate stitch, stitch #21 in black.

Program in Track #2

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Hem is cabled. Stitch size 7 Follow Pattern #911 for cables. Cast on 128 (132,136,140) stitches in rose with Garter Carriage. Facing you, you will have 2 knit stitches, then 4 purl stitches repeated across the needlebed. Cross 2 stitches over 2 stitches on the purl needles. **RC 000** Knit 3 rows, then start cables. Cross cables every 6 rows 5 times. After the 5th cable, knit 3 rows. Total: 36 rows. Change to pink in feeder #1.

RC 000 Knit 4 rows pink.

2nd page of Boy and Girl Doll

RC 004 Pattern #909 (house) Knit 1 single motif **KH930/Comp:** Change 1st needle position to **Yellow 36**. **Punchcard:** Work on needles **13 through 36** on the **left side of your needlebed**. Knit 19 rows with black as contrast color.

RC 023 Knit 40 (46,54,66) rows in pale pink.

RC 063,069,077,089 Pattern #906 (border) Knit 12 rows following your color changes as shown above.

RC 075,081,089,101 Knit 10 (10,8,8) rows pink.

RC 122,122 **Sizes 8 and 10:** Cast off 13 (15) on each side for underarm.

The boy and girl doll are not centered on the design sheet. This is so you will have 3 extra stitches on the inside of each doll when you seam your 2 sides together. If you plan on knitting only 1 doll, then when you punch your card, center the doll. For those of you that have the **floppy disk**, Pattern 912 (girl doll) and Pattern #913 (boy doll) will be centered on the **floppy disk**.

RC 085,091,097,109 Pattern #907 (girl doll) **KH930/Comp3:** **Both dolls:** Selector #2 with 1 repeat. Change 1st needle position to **Yellow 24**. You will be dividing your work so the 2 dolls will be side by side. Starting at **needle #1 on the right side** of your machine, take all stitches off on waste yarn. You will be working on the left side of your needlebed. Bring your first empty needle on the right into working position and do an "e" loop cast on. You will use this stitch later for seaming. Set Carriage on the right outside turn mark. Push both Part buttons in, set on KC 2, and knit 1 row to the left (free move) to set up needles. Push in MC button and knit 58 rows in pattern following your color changes. Take off machine on waste yarn. Hang your right side back onto your machine, moving from right to left and finishing on the 1st stitch to the right of 0. Bring your first empty needle on the left into working position and again do an "e" loop cast on. **KH930 Comp3: Pattern #908** (boy doll) Change your 1st needle position to **Green 1**. Follow same directions on machine set up as above on the Girl Doll. Knit 58 rows following your color changes. Take off on waste yarn.

Punchcard Machines: Start with **Needle #1** and take all stitches to the right off on waste yarn. Take left side off on waste yarn. Hang your **left side back onto the machine first**. Hang the 1st stitch on the right side of your panel onto the 12th needle on the right side of your needlebed, moving from right to left. Follow your machines instructions for free move to set pattern. Use same instructions as in above paragraph. When finished, take off on waste yarn. **Hang your right side** back onto the machine. Hang the 1st stitch on the left side of your panel onto the 12th needle on the left side of your needlebed. Again, follow same directions as the Electronic for knitting the **boy doll**. Take off on waste yarn.

3rd page of Boy and Girl Doll

Seam the center section, then hang sweater back onto the machine on the same needles you were on before taking the panels off on waste yarn. You will now be at RC 143 (149,155,167).

RC 143,149,155,167 Knit 10 (10,8,8) rows pink.

RC 158,164 Sizes 12 and 14: Cast off 15 (17) stitches each side for underarm.

RC 153,159,163,175 Pattern #906 (border) Knit 12 rows.

RC 165,171,175,187 Knit 7 (7,14,15) rows pink. Sizes **8 and 10**, move ahead to your neckline decreases. There aren't enough rows left for the house.

RC 189,202 Sizes 12 and 14 only: Pattern #909 (house) 1 single motif Knit 19 rows with black as C.C. **KH930/Comp3:** Change 1st needle position to **Green 12**. **Punchcard:** Work on needles **13 through 36** on the **right of your needlebed**.

RC 208,221 Sizes 12 and 14 only: Knit 12 (11) rows pink.

RC 172,178,220,232 Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9). (23 neck stitches decreased) When finished knit straight until RC 208 (214,256,268).

RC 208,214,256,268 Take off 28 (28,30,30) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with rose yarn, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 198 (204,246,258).

RC 198,204,246,258 Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 14 stitches 1 time, then (-1-1-9) At RC 208 (214,256,268) take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with rose yarn, then take off on waste yarn.

SLEEVE: Cuffs: Stitch size 7 for the cables. Extra stitches are cast on because cables draw in. Cast on 70 (70,74,78) stitches in rose with Garter carriage. Pattern #911 for cables. Knit 36 rows while following the directions for cables on the front of the

4th page of Boy and Girl Doll

sweater. Take off machine with waste yarn or Garter bar.

Cast on 80 (90,94,96) stitches with waste yarn and ravel cord.

RC 000 Knit 4 rows pink.

RC 004 Pattern #906 (border) Knit 12 rows following same color changes.

RC 014,014,016,010 Increase 1 stitch each side every 12 (14,14,13) rows 13 (12,13,16) times You will have 106 (114,120,128) stitches when you are finished increasing.

RC 016 Knit 4 rows pink.

RC 020 Pattern #909 (house) 1 single motif Knit 19 rows with black as C.C.

RC 039 Knit 56 (62,71,80) rows in pink.

RC 095,101,110,119 Follow this stripe sequence of 30 rows. Knit 6 rows violet, 6 rows pink, 6 rows rose, 6 rows pink, 6 rows black. You will be at RC 125 (131,140,149) when you are finished.

RC 125,131,140,149 Knit 57 (63,72,81) rows pink.

RC 182,194,212,230 Take sleeve off machine with waste yarn.

Close 1 shoulder. With the wrong side facing you, pick up 122 (124,126,128) stitches for neckband. After you have knitted the 1st row of your neckband, weave in 1 row of ravel cord.

Please read the neckband written directions through carefully before you start knitting. It varies considerably from previous neckband patterns. It was knitted several times at different tensions and the only way it would lay flat is the following method so please follow it carefully. Increase and decrease your tension exactly as shown or the neckband will not lay flat.


NECKBAND: Pattern #911 Start at Stitch Size 8, knit 3 rows, then start tensioning down 1 dot every 3 rows 1 more time, then every 2 rows 5 times. Then knit at tension 5.2 until RC 023. At the same time, at RC 003, start crossing your cables every 6 rows 4 times. Your 4th and last cable will be on RC 021. Knit 2 more rows, then turn off pattern. **RC 023.** Stitch size 4 Finish your neckband in Stocking stitch. Increase your stitch size 1 dot every 2 rows 3 times, then increase 1 dot for the last 3 rows. Total neckband rows will be 32. When finished, pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.

5th page of Boy and Girl Doll


SLEEVE FINISHING: Hang cuff back onto your machine on 70 (70,74,78) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 10 (20,20,18) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

With the right side facing you, hang sweater back onto the machine on 106 (114,120,128) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.


Tube all pieces as they come off the machine. Let rest for awhile, then block. Let dry, preferably overnight before sewing together.

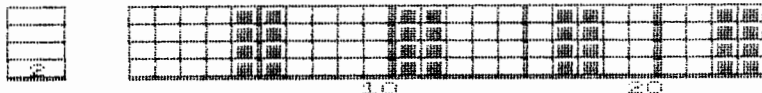


Track #2 - Pattern #911
24 stitches by 4 rows

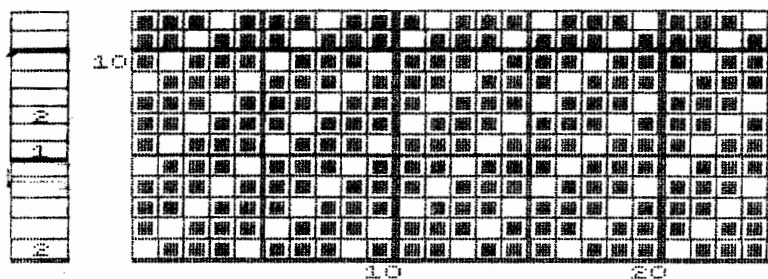


Track #2 - Pattern #906
24 stitches by 12 rows

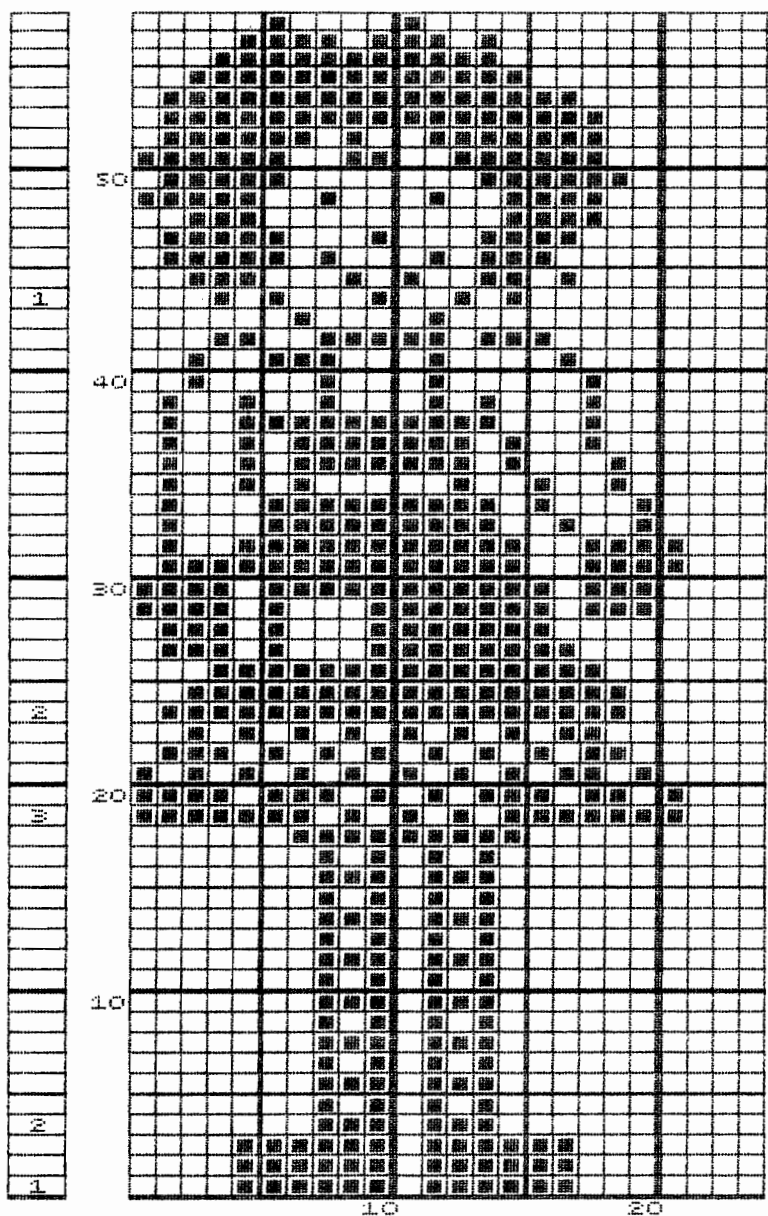

Track #2 - Pattern #907
24 stitches by 58 rows
(Girl doll)

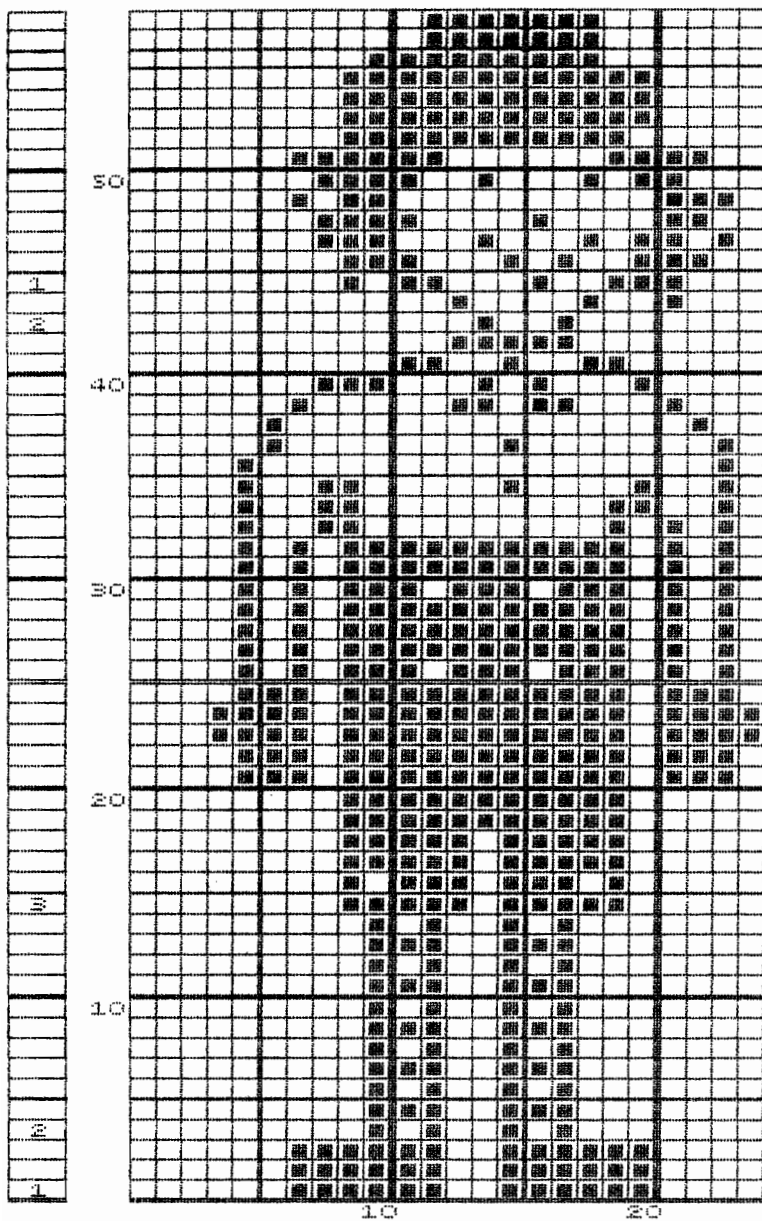

Track #2 - Pattern #908
24 stitches by 58 rows
(Boy doll)

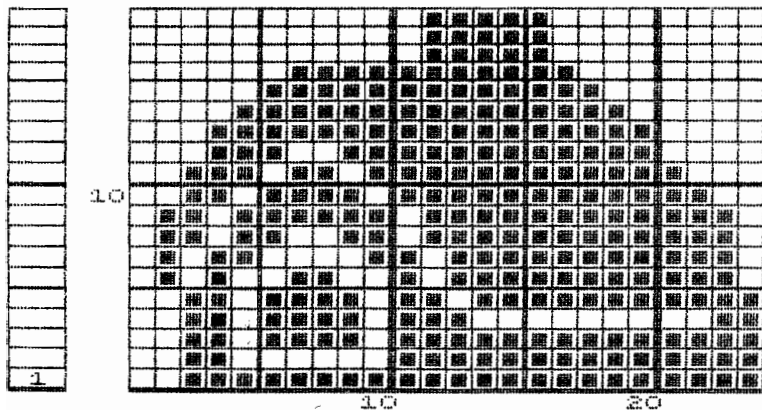

Track #2 - Pattern #909
24 stitches by 19 rows
(Playhouse)

BUTTERFLIES

Ribbing: Stitch size 5 on Garter carriage

Body and sleeves: Stitch size 6 Upper tension dial: -1

SIZES: 2-4-6-8-10-12-14 Extra rows were added to some sweaters for balance.

YARN: Trenzado: Main color: #15 Black - 7 ozs.
1st C.C.: #34 (zafiro) Blue - 1.50 ozs.
2nd C.C.: #44 (amarillo) Yellow - 2 ozs.
3rd C.C.: #38 (mandarina) Orange - 2 ozs.
Yarn amounts given are for size 10

STITCH GAUGE: 7.50 stitches and 12.63 rows per 1".
Stitch gauge taken in stocking stitch

KH930/Comp3: Patterns 902-903-905 - Selector #1
Pattern #904 - **Sizes 2-4-6:** Selector #2 with 4 repeats
Sizes 8-10-12-14: Selector #2 with 5 repeats

Punchcard: Patterns 902-903-905 - All over pattern
Pattern #904 - **Sizes 2-4-6:** 4 single motifs
Sizes 8-10-12-14: 5 single motifs

Check Hints Section on finishing techniques, blocking and floats.

All ribbing, including neckband in black.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern. Watch your memo window for color changes. Change colors when number is flashing.

Punchcard: The color numbers are listed in the memo column to the left of the printed design. Mark your card accordingly.

Program in Track #3

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 100 (110,120,128,132,136,140) stitches in black.
Rib in 2 x 2 with Garter carriage for 20 (20,30,30,30,30,30) rows.

RC 000 Knit 2 rows black.

RC 002 Pattern #902 (border) Knit 15 rows with blue as C.C.

RC 017 Knit 4 rows black.

RC 021 Pattern #904 (butterflies) Knit 40 rows following your color changes as noted above.

RC 061 Knit 4 rows black.

RC 065 Pattern #902 (border) Knit 15 rows with blue as C.C.

2nd page of Butterflies

RC 080 Knit 2 rows black.

RC 082 Knit 8 rows yellow.

RC 090 Knit 8 rows orange.

RC 094,108,114,130,126,126,136 Cast off 8 (8,11,13,15,15,17) stitches each side for underarm.

RC 098 Knit 2 rows black.

RC 100 Pattern #903 Knit 8 rows with blue as contrast color.

RC 108 Knit 2 rows black.

RC 110 Knit 8 rows yellow.

RC 118 Knit 8 rows orange.

RC 126 Knit 6 (2,2,2,2,2,2) rows black. **Size 2: Move ahead to neckline decrease.**

RC 128 Pattern #903 **Sizes 4-6-8-10-12-14** Knit 8 rows with blue as C.C.

RC 136 **Sizes 4-6-8-10-12-14** Knit 2 rows black.

RC 138 **Sizes 4-6-8-10-12-14** Knit 8 rows yellow.

RC 146 **Size 4:** Knit 6 rows black, then move ahead to neckline decrease.

RC 146 **Sizes 6-8-10-12-14:** Knit 8 rows orange.

RC 154 **Sizes 6-8-10-12-14:** Knit 10 (2,2,2,2) rows black. **Size 6: Move ahead to neckline decrease.**

RC 156 **Sizes 8-10-12-14:** Pattern #903 Knit 8 rows with blue as contrast color.

RC 164 **Sizes 8-10-12-14** Knit 2 rows black.

RC 166 **Sizes 8-10-12-14:** Knit 8 rows yellow.

RC 174 **Sizes 8-10:** Knit 6 (8) rows black. **Sizes 8 and 10, move ahead to neckline decreases.**

RC 174 **Sizes 12-14:** Knit 8 rows orange.

RC 182 **Sizes 12-14:** Knit 8 (2) rows black. **Size 12, move ahead to neckline decrease.**

RC 184 **Size 14:** Pattern #903 Knit 8 rows with blue as C.C.

3rd page of Butterflies

RC 192 Size 14: Knit 2 rows black, 8 rows yellow, 4 rows black. You will be at your neckline decrease.

RC 132 Size 2: Follow same directions as below for neckline, but knit back 8 stitches 1 time, then (-2-1-2) (-1-1-7) (19 neck stitches decreased). Knit straight until RC 164.

RC 152,164,180,182,190,206 Sizes 4-6-8-10-12-14: Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9). (23 neck stitches decreased) When finished knit straight until RC 190 (202,218,220,228,244).

RC 164,190,202,218,220,228,244 Take off 23 (24,26,28,28,30,30) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches in black, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 154 (180,192,208,210,218,234).

RC 154 Size 2: Follow same directions as below but knit back 10 stitches 1 time, then (-2-1-2) (-1-1-5). At RC 164, take shoulder stitches off on waste yarn.

RC 180,192,208,210,218,234 Sizes 4-6-8-10-12-14: Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 14 stitches 1 time, then (-1-1-9) At RC 190 (202,218,220,228,244) take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with black yarn, then take off on waste yarn.

SLEEVE: Cuffs: Cast on 50 (50,56,60,60,64,68) stitches in black with Garter carriage. Rib in 2 x 2 for 20 (20,30,30,30,30,30) rows. Take off machine with waste yarn.

Cast on 60 (70,80,80,90,94,96) stitches with waste yarn and ravel cord.

RC 000 Knit 2 rows black.

RC 002 Pattern #905 Knit 8 rows with blue as contrast color.

RC 008,008,010,010,010,016,018 Increase 1 stitch each side every 9 (9,11,13,15,15,13) rows 12 (14,13,13,12,13,16) times You will have 84 (98,106,106,114,120,128) stitches when you are finished increasing.

RC 010 Knit 4 rows black.

4th page of Butterflies

RC 014 Pattern #904 (butterflies) **All machines:** Knit 2 single motifs. Knit 20 rows only following same color changes as the front. **KH930/Comp3:** Push your start button before you begin 2nd sleeve.

RC 034 Knit 4 rows black.

RC 038 Pattern #905 Knit 8 rows with blue as contrast color.

RC 046 Knit 32 (42,51,64,70,80,89) rows black.

RC 078,088,097,110,116,126,135 **All sizes:** Knit 8 rows yellow, 8 rows orange.

RC 094,104,113,126,132,142,151 Knit 32 (42,51,64,70,80,89) rows black.

RC 126,146,164,190,202,222,240 Take sleeve off on waste yarn.


NECKBAND: When you knit your neckband, start at Stitch Size 5. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 104 (108,110,112,114,116,118) stitches for neckband. Knit 28 rows in black by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


SLEEVE FINISHING: Hang cuff back onto your machine on 50 (50,56,60,60,64,68) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 10 (20,24,20,30,30,28) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

With the right side facing you, hang sweater back onto the machine on 84 (98,106,106,114,120,128) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.


Tube all pieces as they come off the machine. Let rest for awhile, then block. Let dry, preferably overnight before sewing together.

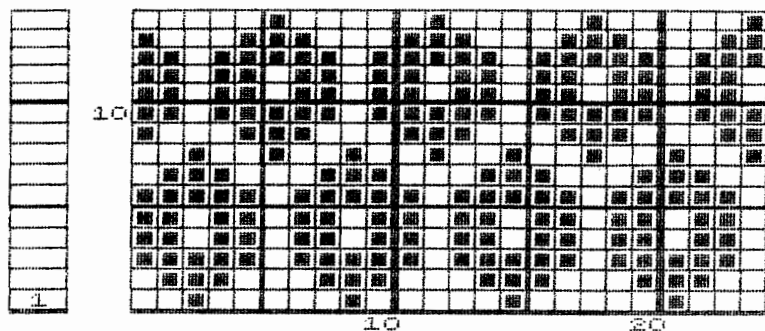


Track #3 - Pattern #902
24 stitches by 15 rows

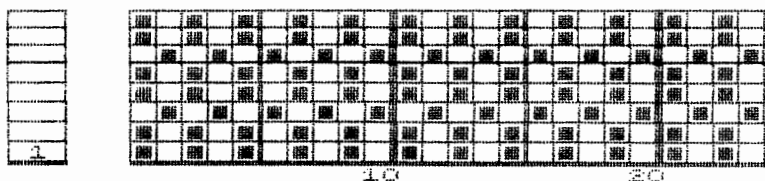

Track #3 - Pattern #903
24 stitches by 8 rows

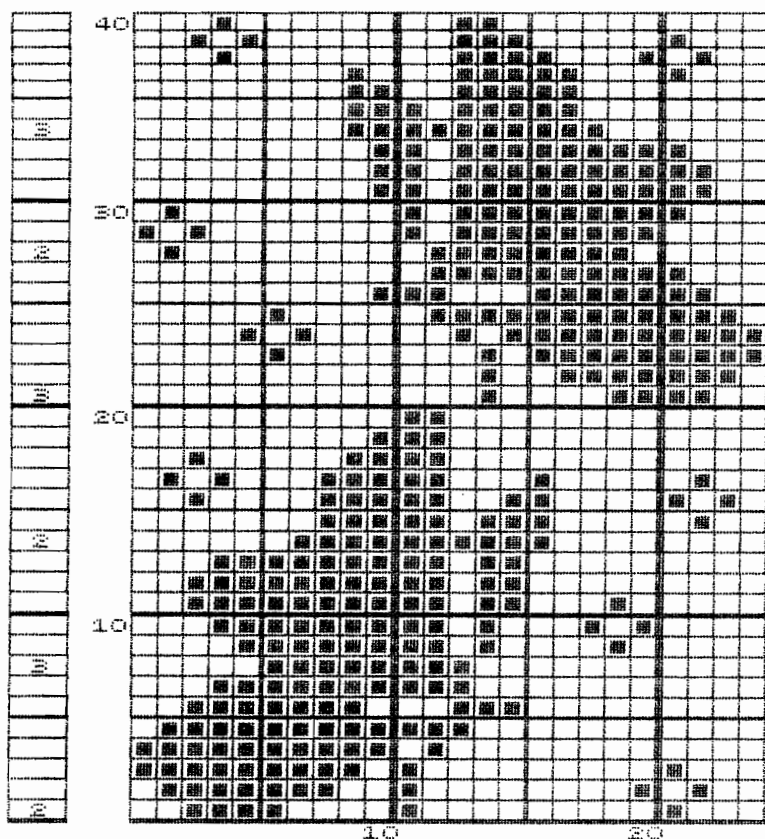

Track #3 - Pattern #904
24 stitches by 40 rows

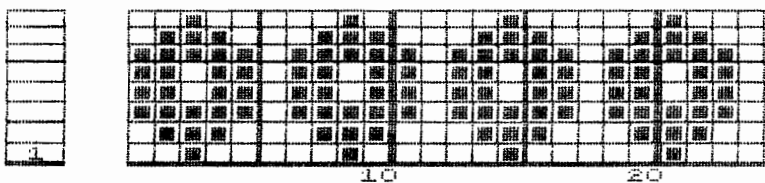

Track #3 - Pattern #905
24 stitches by 8 rows

SQUIRRELS, TREE AND MOUNTAINS

Ribbing: Stitch size 3 on Garter carriage

Body and sleeves: Stitch size 4 Upper tension dial: -2

SIZES: 4-6-8-10-12

YARN: Denys Brunton Main color: #12 Mint - 4 ozs.

1st C.C.: #21 Jade - 1 oz.

2nd C.C.: #4 Red - .50 oz.

3rd C.C.: #15 Brown - 1 oz.

4th C.C.: #28 Bottle green - 2 ozs.

5th C.C.: #3 White - .50 oz.

6th C.C.: #18 Baby blue - 3 ozs.

Yarn amounts given are for size 6

STITCH GAUGE: 7.38 stitches and 12.25 rows per 1".

Stitch gauge taken in stocking stitch

KH930/Comp3: Patterns #901-904 - Selector #1

Patterns #902-903-905 - Selector #2 with 1 repeat

Punchcard: Patterns #901-904 - All over pattern

Patterns #902-903-905 - Single motif

Check Hints Section on finishing techniques, blocking and floats.

When you are knitting, wrap on each side of each mountain the same as you do on just 1 single motif. This will keep the stitches from parting as they sometimes do when there is a large area with floats. Time involved is minimal and you will have a much neater sweater.

Neckband ribbing in baby blue. Cuffs and sweater ribbing in bottle green.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern. Watch your memo window for color changes. Change colors when number is flashing.

Punchcard: The color numbers are listed in the memo column to the left of the printed design.

Duplicate stitch: Pattern #903 (tree) (Optional) Duplicate stitch in brown the darkened areas on the tree trunk, starting on Row #9. It would make the tree stand out a little more.

Program in Track #2

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 108 (118,126,130,134) stitches in bottle green. Rib in 2 x 2 with Garter carriage for 20 (30,30,30,30) rows.

2nd page of Squirrels, Tree and Mountains

RC 000 Knit 4 (2,4,4,4) rows mint.

RC 004,002,004,004,004 Pattern #901 (flowers) Knit 9 rows following your color changes as listed above.

RC 013,011,013,013,013 Knit 4 (4,6,8,8) rows mint.

Size 4 will knit 1 single motif of the squirrel 2 times. Sizes 6-8-10-12 will knit 1 single motif of the squirrel 3 times.

Sizes 4-6-8: This paragraph is only meant to be an explanation of how to program the next squirrel when you do not have any extra rows of color between the squirrels. (Patterns may be programmed from either the right or the left side) **KH930/Comp3:** When you hear the beep, that means your last row of the squirrel you are now knitting is already in D or pattern position. At this same time when you hear the beep, set your carriage outside the turn mark. Keep your machine on Selector #2 with 1 repeat. Start programming your next squirrel but change your 1st needle position. Keep carriage setting on KC 2 and knit 1 row to set up the needles for the next squirrel, etc. Move ahead to the 1st squirrel.

RC 017,015,019,021,021 (All sizes) Pattern #902 (1st squirrel) Knit 1 single motif **KH930/Comp3:** Change 1st needle position to **Yellow 46.** **Punchcard:** Work on needles **13 through 36** on the **left of your needlebed.** Knit 21 rows with brown as contrast color.

RC 042,042 **Sizes 10 and 12 only:** Knit 2 (4) rows mint.

RC 038,036,040,044,046 (All sizes) Pattern #902 (2nd squirrel) 1 single motif **KH930/Comp3:** Change 1st needle position to **Yellow 23.** **Punchcard:** Work on needles **12 left through 12 right** on your needlebed. Knit 21 rows. **Size 4: Advance to RC 059.**

RC 065,067 **Sizes 10 and 12 only:** Knit 2 (4) rows mint.

RC 057,061,067,071 **Sizes 6-8-10-12 only** Pattern #902 (3rd squirrel) 1 single motif **KH930/Comp3:** Change 1st needle position to **Green 1.** **Punchcard:** Work on needles **13 through 36** on the **right side of your needlebed.** Knit 21 rows.

RC 059,078,082,088,092 Knit 4 (4,6,6,8) rows mint.

RC 063,082,088,094,100 Pattern #903 (tree) 1 single motif **KH930 Comp3:** Change your 1st needle position to **Green 24.** **Punchcard:** There isn't enough room to stagger the tree so center it on needles **12 left and 12 right** on your needlebed. **All machines:** Knit the 1st 8 rows of the tree with brown as C.C., knit 20 rows of the tree with jade as C.C. **After you have knitted 28 rows, change to bottle green in feeder #1, keep jade in feeder #2** and knit your last 5 rows of the tree. You will be at RC 96 (115,121,127,133) when you are finished. All machines, break contrast yarn. **KH930/Comp3:** Set carriage outside your turn mark, program in Pattern #904,

3rd page of Squirrels, Tree and Mountains

(mountain) Selector #1; set carriage to **KC 1**; knit 1 row to the right. **Punchcard:** Set your punchcard for mountain and knit 1 row to the right in bottle green. This is an all over pattern. All machines are now at RC 097 (116,122,128,134).

RC 104,110,124,124,124 Cast off 8 (11,15,15,15) stitches each side for underarm.

RC 097,116,122,128,134 All machines, change to baby blue in feeder #1, bottle green in feeder #2. Pattern #904 (mountain) Knit 9 rows. Turn off pattern and break contrast yarn.

RC 106,125,131,137,143 Knit 20 (15,21,21,21) rows in baby blue.

RC 126,140,152,158,164 Pattern #905 (cloud) **KH930/Comp3:** Selector #2 with 3 repeats. **Punchcard:** Knit 3 single motifs centered on your needlebed. Knit 14 rows with white as contrast color.

RC 140,154,166,172,178 Knit 10 (8,10,10,10) rows baby blue.

RC 150,162,176,182,188 Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-2) (-1-1-10). (22 neck stitches decreased) When finished knit straight until RC 188 (200,214,220,226).

RC 188,200,214,220,226 Take off 24 (26,26,28,30) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with blue yarn, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 178 (190,204,210,216).

RC 178,190,204,210,216 Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 13 stitches 1 time, then (-2-1-2) (-1-1-5) At RC 188 (200,214,220,226), take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with blue yarn, then take off on waste yarn.

SLEEVE: Cuffs: Cast on 50 (56,60,60,64) stitches in bottle green with Garter carriage. Rib in 2 x 2 for 30 (30,30,30,30) rows. Take off machine with waste yarn or garter bar.

4th page of Squirrels, Tree and Mountains

Cast on 70 (80,90,90,94) stitches with waste yarn and ravel cord.

RC 000 Knit 2 rows mint.

RC 002 Pattern #901 (flowers) Knit 9 rows following same colors.

RC 011 Knit 4 rows in mint.

RC 015 Pattern #902 (squirrel) Knit 21 rows with brown as C.C. Turn off pattern.

RC 010,014,018,008,010 Increase 1 stitch each side every 9 (12,22,16,16) rows 13 (11,7,11,12) times You will have 96 (102,104,112,118) stitches when you are finished increasing.

RC 036 Knit 104 (122,148,160,178) rows in mint.

RC 140,158,184,196,214 Take sleeve off on waste yarn.


NECKBAND: When you knit your neckband, start at Stitch Size 4. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 108 (110,112,114,116) stitches for neckband. Knit 28 rows in baby blue by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


Always block your sleeves and let dry thoroughly before attaching the cuffs. Once you attach the cuffs, it is almost impossible to remove any wrinkles in the sleeves.

SLEEVE FINISHING: Hang cuff back onto your machine on 50 (56,60,60,64) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 20 (24,30,30,30) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.


With the right side facing you, hang sweater back onto the machine on 96 (102,104,112,118) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

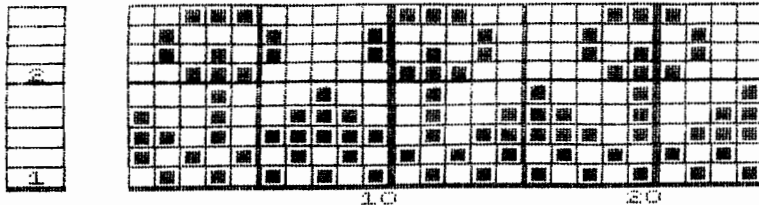

Track #2 - Pattern #901
24 stitches by 9 rows

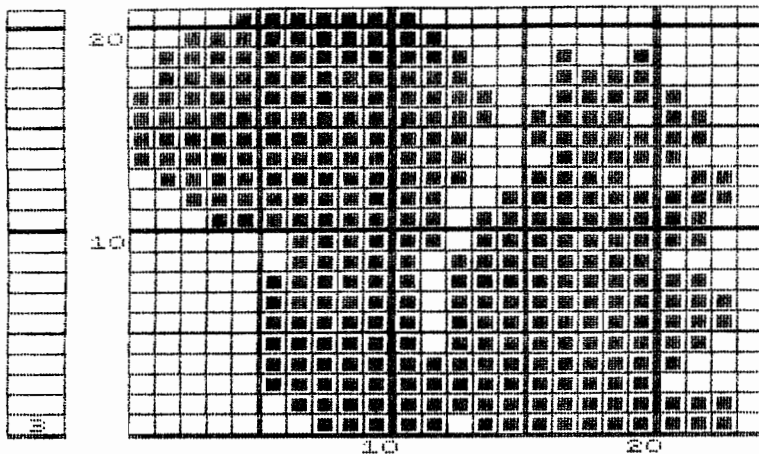


Track # 2 - Pattern #902
24 stitches by 21 rows

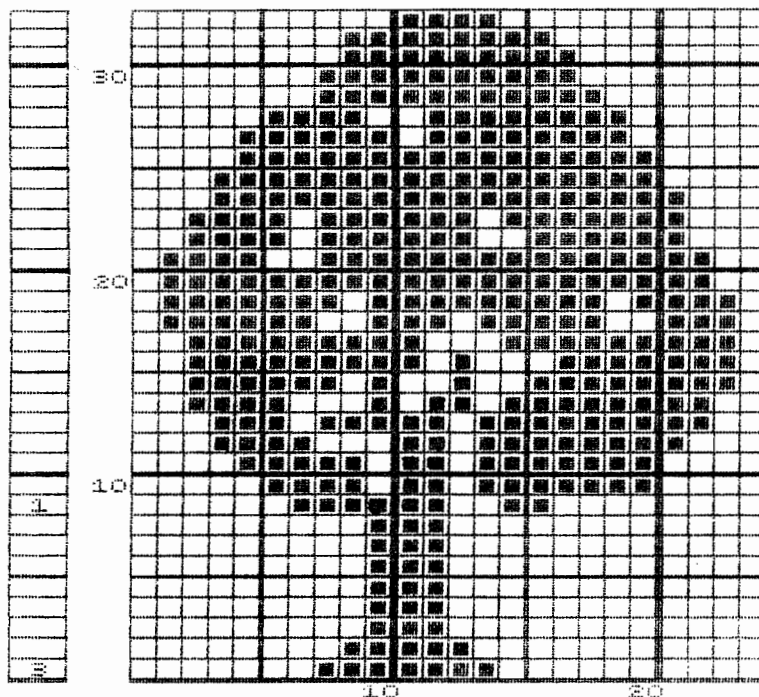

Track #2 - Pattern #903
24 stitches by 33 rows

Track #2 - Pattern #905
24 stitches by 14 rows

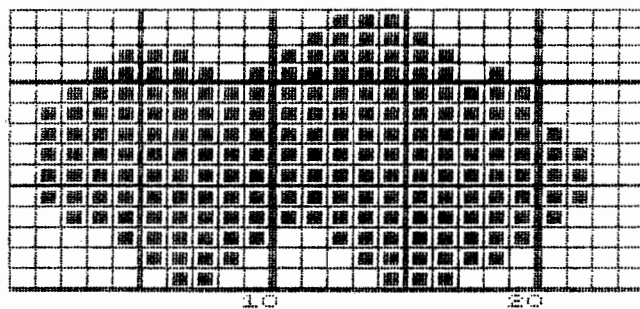

Track #2 - Pattern #904
24 stitches by 9 rows

DOLPHINS

Ribbing: Stitch size 4 on Garter carriage

Body and sleeves: Stitch size 5 Upper tension dial: -2

SIZES: 2-4-6-8-10 - Rudy is so small, a size 2 is too large for him, so a size 1 was knitted for him to model. Because his size is so much smaller, there weren't enough rows left at the top of the sleeve for the border pattern. The top of the sleeves on sizes 2 through 10 will have the same look as the yoke on the sweater.

YARN: Denys Brunton Main color #18 - baby blue - 3.50 ozs.

1st C.C.: #10 - royal blue - 1.50 ozs.

2nd C.C.: #2 - dark grey - 1/2 oz.

3rd C.C.: #3 - white - 1/2 oz.

Yarn amounts given are for size 1

STITCH GAUGE IN FAIRISLE: 7.38 stitches and 10.63 rows per 1"

KH930/Comp3: Patterns #908 and #909: Selector #1

Punchcard: Patterns #908 and #909: All over pattern

Pattern #907 All machines All sizes, knit all over pattern for waves only. When you reach the dolphins, change to single motif. Size 2: 3 single motifs Sizes 4-6: 4 single motifs. Sizes 8-10: 5 single motifs. Black also looks good on the dolphins.

When you are knitting, wrap on each side of each dolphin the same as you do on just 1 single motif. This will keep the stitches from parting as they sometimes do when there is a large area with floats. Time involved is minimal and you will have a much neater sweater. Check Hints Section for additional Hints on single motif.

All ribbing, including neckband in royal blue.

Program in Track #1

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 96 (108,118,126,130) stitches in royal blue. Rib in 2 x 2 with Garter carriage for 20 (20,30,30,30) rows.

Your pattern is to start immediately after the ribbing. **All machines:** Turn off row counter, program your pattern and set your carriages for free move to start the pattern on the right. After carriage is on the right, turn row counter back on to **RC 000**.

RC 000 Pattern #907 (waves and dolphins) **KH930/Comp3:** Carriage on the left outside turn mark, program your pattern, set carriage on KC 1, push both part buttons in and move 1 row to the right to set up your needles. Push in MC button. **All machines:** Light blue in feeder #1, royal blue feeder #2. Knit 41 rows following your color changes. Waves-royal blue, dolphins, dark grey or black.

RC 041 Knit 25 (36,38,48,54) rows baby blue.

2nd page of Dolphins

RC 066,077,079,089,095 Pattern #908 (clouds) All machines **Sizes 2-4-6:** 3 single motifs **Sizes 8-10:** 4 single motifs Knit 25 rows with white as contrast color. **KH930/Comp3:** For looks, the top cloud is staggered. Have 1 less cloud motif (check Dolphin photograph) on the top than on the bottom. On each outside edge, when you see the beginning of another cloud, push 1 group of needles on **each side** back to "B" position or you will have 1/2 of a cloud.

RC 091,102,104,114,120 Knit 12 (15,15,15,15) rows baby blue.

RC 094,104,110,120,120 Cast off 7 (8,11,13,15) stitches on each side for underarm.

RC 103,117,119,129,135 Pattern #909 (border) Knit 5 rows with royal blue as contrast color.

RC 108,122,124,134,140 **Change to royal blue in feeder #1.** Knit 16 (20,28,28,28) rows.

RC 124 Size 2: Divide for front neckline. Follow same directions as below except decrease 8 stitches 1 time, then (-2-1-2) (-1-1-7) (19 neck stitches decreased). Knit straight until RC 152.

RC 142,152,162,168 Sizes 4-6-8-10: Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-8). (22 neck stitches decreased) When finished knit straight until RC (174,184,194,200).

RC 152,174,184,194,200 Take off 22 (24,26,28,28) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with royal blue, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 144 (166,176,186,192).

RC 144 Size 2: Divide for back neckline. Follow same directions below except decrease 10 stitches 1 time, then (-2-1-2) (-1-1-5). At RC 152, take 22 shoulder stitches off on waste yarn.

RC 166,176,186,192 Sizes 4-6-8-10: Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 13 stitches 1 time, then (-2-1-2) (-1-1-5) At RC (174,184,194,200), take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with royal blue, then take off on waste yarn.

3rd page of Dolphins

SLEEVE: Cuffs: Cast on 50 (50,56,60,60) stitches in royal blue with Garter carriage. Rib in 2 x 2 for 20 (20,30,30,30) rows. Take off machine with waste yarn or garter bar.

Cast on 60 (70,80,80,90) stitches with waste yarn and ravel cord.

RC 000 Pattern #907 Set your carriages for free move to set up your pattern. Start knitting from the right side. Baby blue in feeder #1, royal blue in feeder #2. Knit 41 rows following same color changes as the front of your sweater.

RC 016,018,006,016,014 Increase 1 stitch each side every 7 (7, 10,11,13) rows 11 (13,12,12,11) times. You will have 82 (96,104, 104,112) stitches when you are finished increasing.

RC 041 Knit 27 (40,55,77,87) rows baby blue.

RC 068,081,096,118,128 Pattern #909 Knit 5 rows with royal blue as contrast color.

RC 073,086,101,123,133 **Change to royal blue in feeder #1.** Knit 33 (36,37,37,37) rows.

RC 106,122,138,160,170 Take sleeve off on waste yarn.


NECKBAND: When you knit your neckband, start at Stitch Size 5. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 104 (108 110,112,114) stitches for neckband. Knit 28 rows in royal blue by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


SLEEVE FINISHING: Hang cuff back onto your machine on 50 (50,56, 60,60) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 10 (20,24,20,30) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

With right side facing you, hang sweater back onto the machine on 82 (96,104,104,112) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

Track #1 - Pattern #907
24 stitches by 41 rows

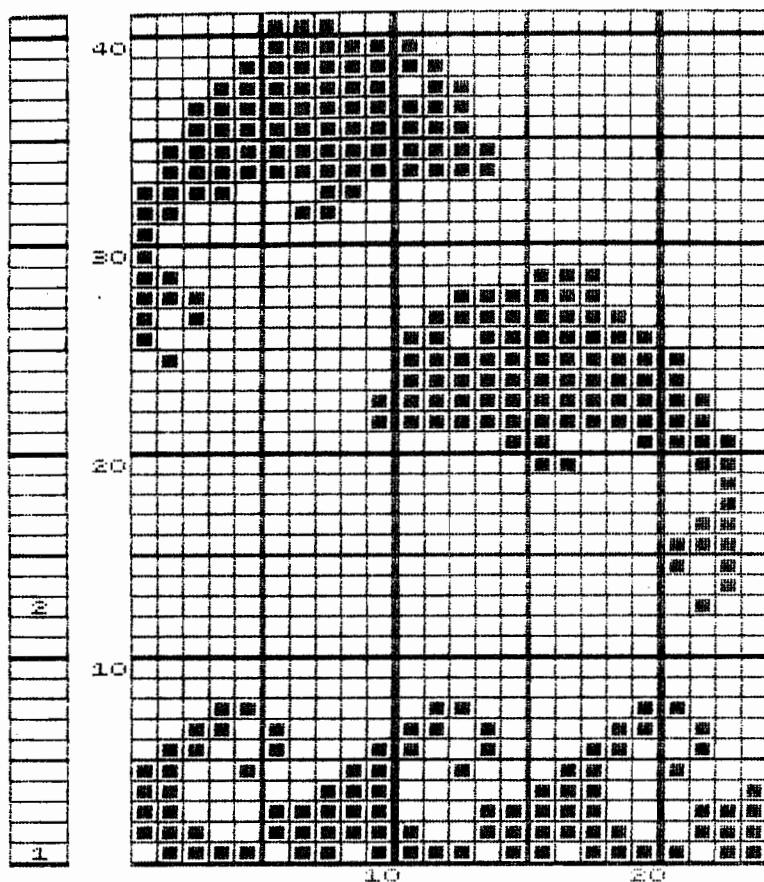

Track #1 - Pattern #908
24 stitches by 25 rows

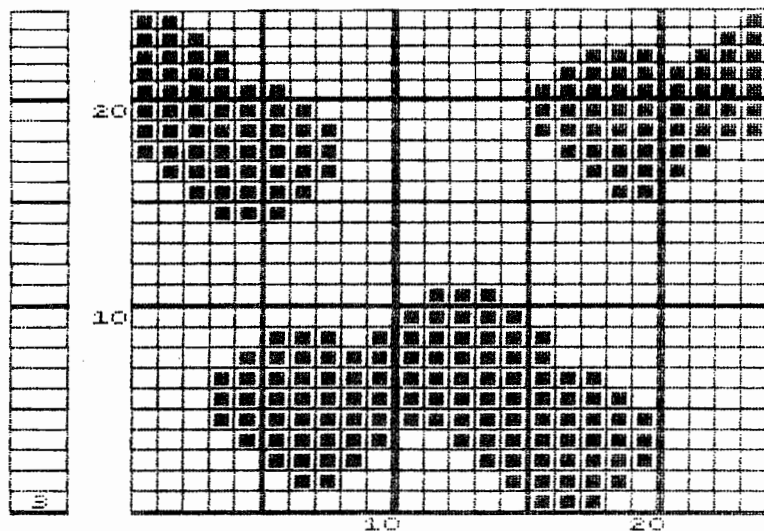

Track #1 - Pattern #909
24 stitches by 5 rows



FISH AND SAILBOAT

Ribbing: Stitch size 5 on Garter carriage

Body and sleeves: Stitch size 6 for sleeves and body Upper tension dial: -1

SIZES: 4-6-8-10 Yarn amounts given are for size 4

YARN: Trenzado Main color: #20 - Cielo (light blue) 4 ozs.
1st C.C.: #34 - Zafiro (royal blue) 3 ozs.
2nd C.C.: #15 - Negro (black) 1 oz.
3rd C.C.: #10 - Blanco (white) 1 oz.
4th C.C.: #29 - Escarlata (deep red) 1 oz.
5th C.C.: #39A - Congoles (deep gold) 1 oz.

STITCH GAUGE: Fairisle: 7.50 stitches and 12.13 rows per 1"

Stocking stitch: 7.50 stitches and 12.63 rows per 1"

KH930/Comp3: Patterns #901-903-905 - Selector #2

Patterns #902-904 - Selector #1

Punchcard: Patterns #901-903-905 - Single motif

Patterns #902-904 - All over pattern

All ribbing, including neckband in royal blue.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern. Watch your memo window for color changes. Change colors when number is flashing.

Punchcard: The color numbers are listed in the memo column to the left of the printed design. Mark your cards accordingly.

Duplicate stitching: Pattern #901 Duplicate stitch the 1st bubble above the fish in white. Pattern #903 Duplicate stitch the top row of the cabin in black (Row #14 on the design). Duplicate stitch the pole extending down from the flag in black. Duplicate stitch the middle stripe on the sail in yellow. Leave the 2 outside stitches of the stripe in red, leave 1 inside stitch of the stripe in red. Duplicate stitch the #75 on the sail in yellow. If you are in doubt about where to do the duplicate stitching, it will help to check the Photograph which is very clear.

Program in Track #1

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 110 (122,128,132) stitches in royal blue. Rib in 2 x 2 with Garter carriage for 20 (30,30,30) rows.

RC 0000 Pattern #901 (fish) All machines. The 1st 3 rows will be in all over pattern, then change your machine settings to Single motif for the fish and bubbles. **Size 4:** Knit 4 single motifs.

Sizes 6-8-10: Knit 5 single motifs. Knit 72 (84,88,88) of pattern design following your color changes.

RC 072,084,088,088 Knit 2 (2,2,4) rows blue.

2nd page of Fish and Sailboat

RC 074,086 Sizes 4-6 Pattern #902 (wave) Knit 9 rows with royal blue as C.C.

RC 090,092 Sizes 8-10 Pattern #904 (wave) Knit 14 rows with royal blue as C.C.

RC 083,095,104,106 Pattern #903 (boat) Knit 56 rows, following your color changes.

RC 104,110,122,122 Cast off 8 (12,13,15) stitches each side for underarm.

RC 139,151,160,162 Knit 9 (9,12,16) rows in light blue.

RC 148,160,172,178 Divide for neckline. Knit all stitches to the left of 0 back to out of work position. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9). (23 neck stitches decreased) When finished knit straight until RC (184, (196,208,214).

RC 184,196,208,214 Take off 24 (26,28,28) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with royal blue yarn, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 174 (186,198,204).

RC 174,186,198,204 Divide for back neckline. Knit all stitches to the left of 0 back to out of work position. To the right of 0, knit back 14 stitches 1 time, then (-1-1-9) At RC 184 (196,208, 214) take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with royal blue yarn, then take off on waste yarn.

SLEEVE: Cuffs: Cast on 50 (56,60,60) stitches in royal blue with Garter carriage. Rib in 2 x 2 for 20 (30,30,30) rows. Take off machine with waste yarn or Garter Bar.

Sleeve: Cast on 70 (80,80,90) stitches with waste yarn and ravel cord.

RC 000 Follow this sequence of stripes. Knit 6 rows of each color. ****Royal blue, white, royal blue, red, royal blue, yellow, royal blue, light blue****. Repeat between the stars 1 more time. When finished, knit in pale blue to RC 140 (164,190,196).

RC 016,020,018,014 At the same time, increase 1 stitch each side every 8 (10,12,14) rows 14 (13,13,12) times. You will have 98 (106,106,114) stitches when you are finished increasing.

3rd page of Fish and Boat


RC 140,164,190,196 Take off 98 (106,106,114) stitches on waste yarn.

NECKBAND: When you knit your neckband, start at Stitch Size 5.1. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 108, (110,112,114) stitches for neckband. Knit 30 rows in royal blue by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


SLEEVE FINISHING: Hang cuff back onto your machine on 50 (56, 60,60) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 20 (24,20,30) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.


With right side facing you, hang sweater back onto the machine on 98 (106,106,114) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

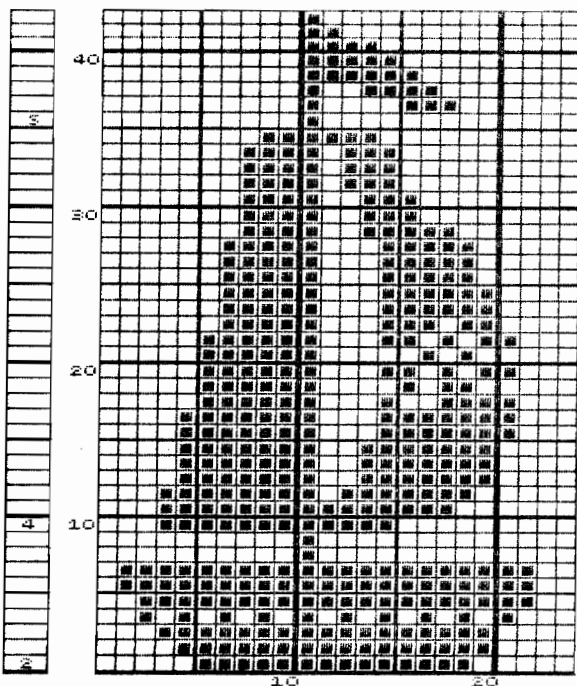

Track #1 - Pattern #905
24 stitches by 43 rows.
Punchcard machines: If you don't want to duplicate stitch the larger boat, then use this pattern. Use either 1 single motif or use all over pattern.



Track #1 - Pattern #901
24 stitches by 88 rows.

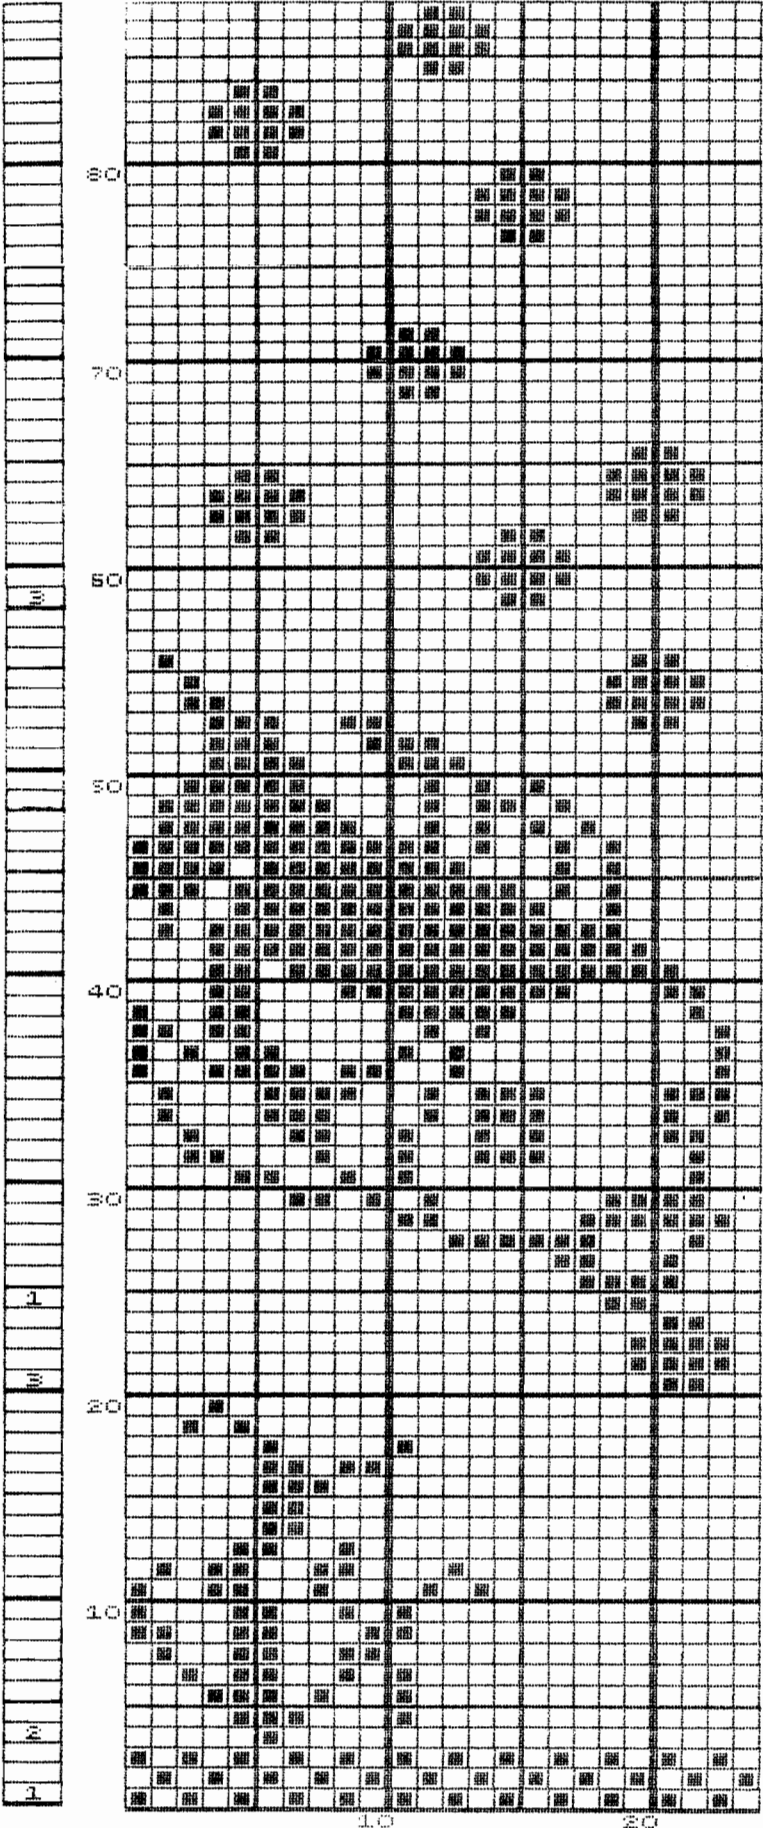

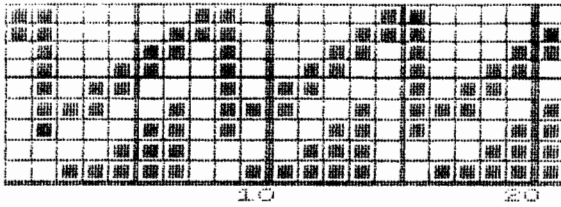

Track #1 - Pattern #902
21 stitches by 9 rows.

Track #1 - Pattern #903
37 stitches by 56 rows.

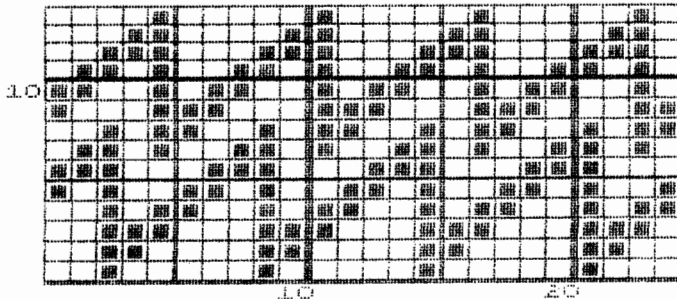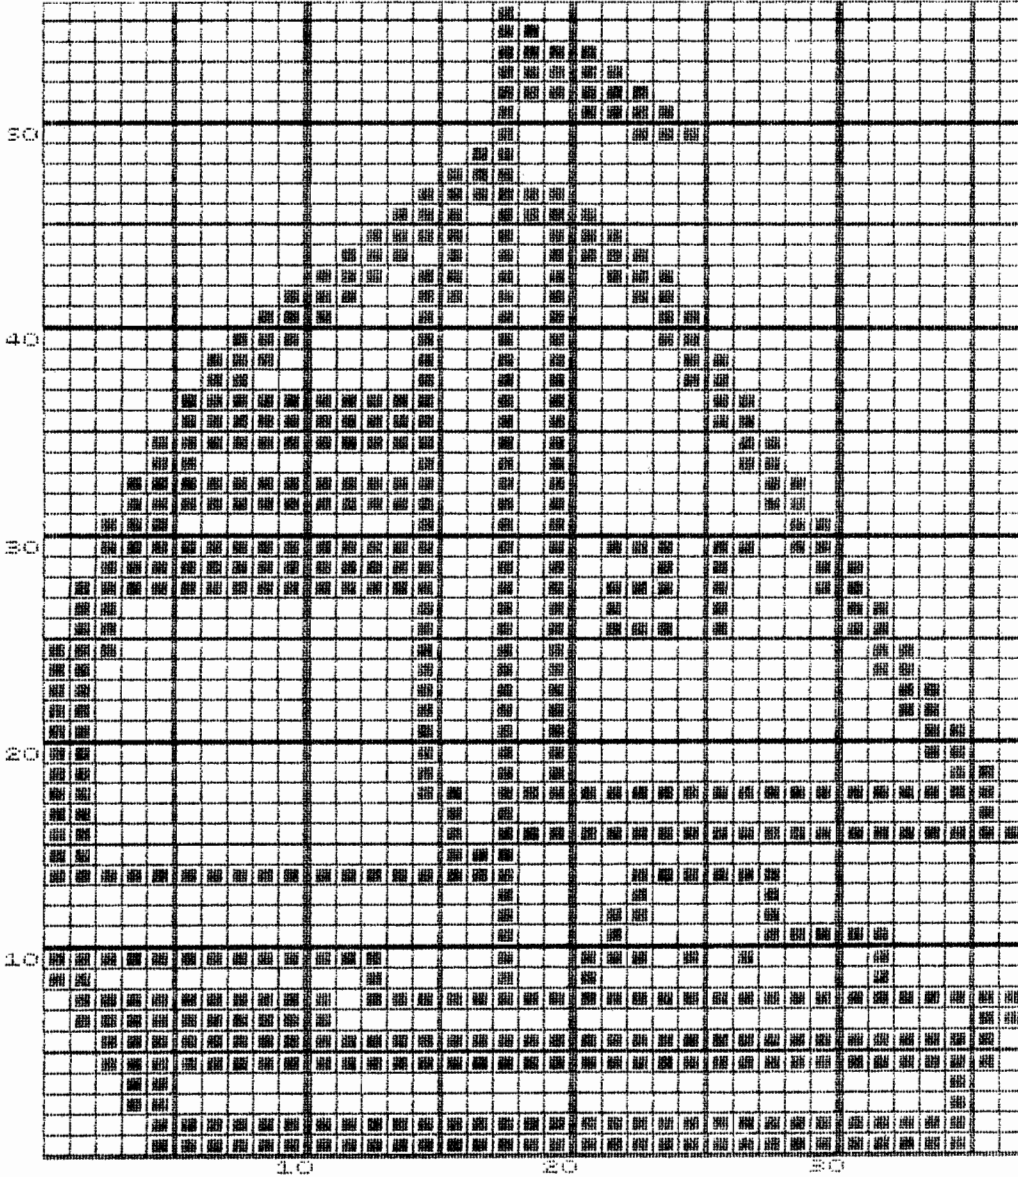

Track #1 - Pattern #904
24 stitches by 14 rows.

PIXIE

Ribbing: Stitch size on Garter carriage

Body and sleeves: Stitch size 6 Upper tension dial: -1

SIZES: 8-10-12-14 These sizes were all made 4" longer.

YARN: Trenzado Main color: #09 (Hueso) off white - 9 ozs.
1st C.C.: #14A (Obispo) purple - 4 ozs.
2nd C.C.: #15 black - 2 ozs.
3rd C.C.: #86 (Palmera) green - 1 oz.
Yarn amounts given are for size 12

STITCH GAUGE: 7.50 stitches and 12.13 rows per 1"

KH930/Comp3: Pattern #906 - Selector #2 with 3 repeats
Pattern #913 - Selector #1

Punchcard: Pattern #906 - 3 single motifs
Pattern #913 - All over pattern

Check Hints Section on finishing techniques, blocking and floats.

When you are knitting, wrap on each side of each Pixie the same as you do on just 1 single motif. This will keep the stitches from parting as they sometimes do when there is a large area with floats. Time involved is minimal and you will have a much neater sweater.

Ribbing on sweater bottom and cuffs in purple. Neckband in white with fairisle pattern in purple.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern. Watch your memo window for color changes. Change colors when number is flashing.

Punchcard: The color numbers are listed in the memo column to the left of the printed design.

Duplicate stitch: Duplicate stitch the mouth in red at the marked area on the design pattern. Duplicate stitch the eyes and nose in black.

Program in Track #1

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 128 (132,136,140) stitches. Rib in 2 x 2 with Garter carriage for 30 (30,30 30) rows.

RC 000 Knit 2 (2,4,2) rows white.

RC 002,002,004,002 Pattern #913 - Knit 88 (88,88,104) rows follow-

2nd page of Pixie

ing your color changes.

RC 090,090,092,106 Knit 10 (12,14,12) rows white.

RC 100,102,106,118 Pattern #906 (Pixie) Knit 3 single motifs. Knit 67 rows with green as contrast color.

RC 167,169,173,185 Knit 10 (12,14,12) rows white.

RC 172,172,172,176 Cast off 13 (15,15,17) stitches on each side for underarm.

RC 177,181,187,197 Pattern #913 Knit 40 rows in pattern.

RC 217,221,227,237 Turn off pattern and finish sweater in white. Knit 5 (7,7,7) rows to front neckline.

RC 222,228,234,244 Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9). (23 neck stitches decreased) When finished knit straight until RC 258 (264,270,280).

RC 258,264,270,280 Take off 28 (28,30,30) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with white yarn, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 248 (254,260,270).

RC 248,254,260,270 Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 14 stitches 1 time, then (-1-1-9) At RC 258 (264,270,280) take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with white yarn, then take off on waste yarn.

SLEEVE: Cuffs: Cast on 60 (60,64,68) stitches in purple with Garter carriage. Rib in 2 x 2 for 30 (30,30,30) rows. Take off machine with waste yarn.

Cast on 80 (90,94,96) stitches with waste yarn and ravel cord.

RC 000 Knit 2 (4,4,2) rows

3rd page of Pixie

RC 014,014,016,010 Increase 1 stitch each side every 12 (14,14,13) rows 13 (12,13,16) times. You will have 106 (114,120,128) stitches when you are finished increasing.

RC 002,004,004,002 Pattern #913. Knit 184 (184,200,232) rows.

RC 186,188,204,234 Knit 2 (4,4,2,) rows white.

RC 188,192,208,236 Take sleeve off machine on waste yarn.


NECKBAND: When you knit your neckband, start at Stitch Size 4.2. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 110 (112,114,116) stitches for neckband. Knit 4 rows in white. Pattern #913. With purple as contrast, knit 1st 8 rows of pattern. Turn off pattern and knit 22 rows of white. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.

SLEEVE FINISHING: Hang cuff back onto your machine on 60 (60,64,68) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 20 (30,30,28) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.


With the right side facing you, hang sweater back onto the machine on 106 (114,120,128) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

Block all pieces and let dry before you sew them together. If you attach the sleeve to the cuff before it is dry, it will be almost impossible to get the wrinkles out.

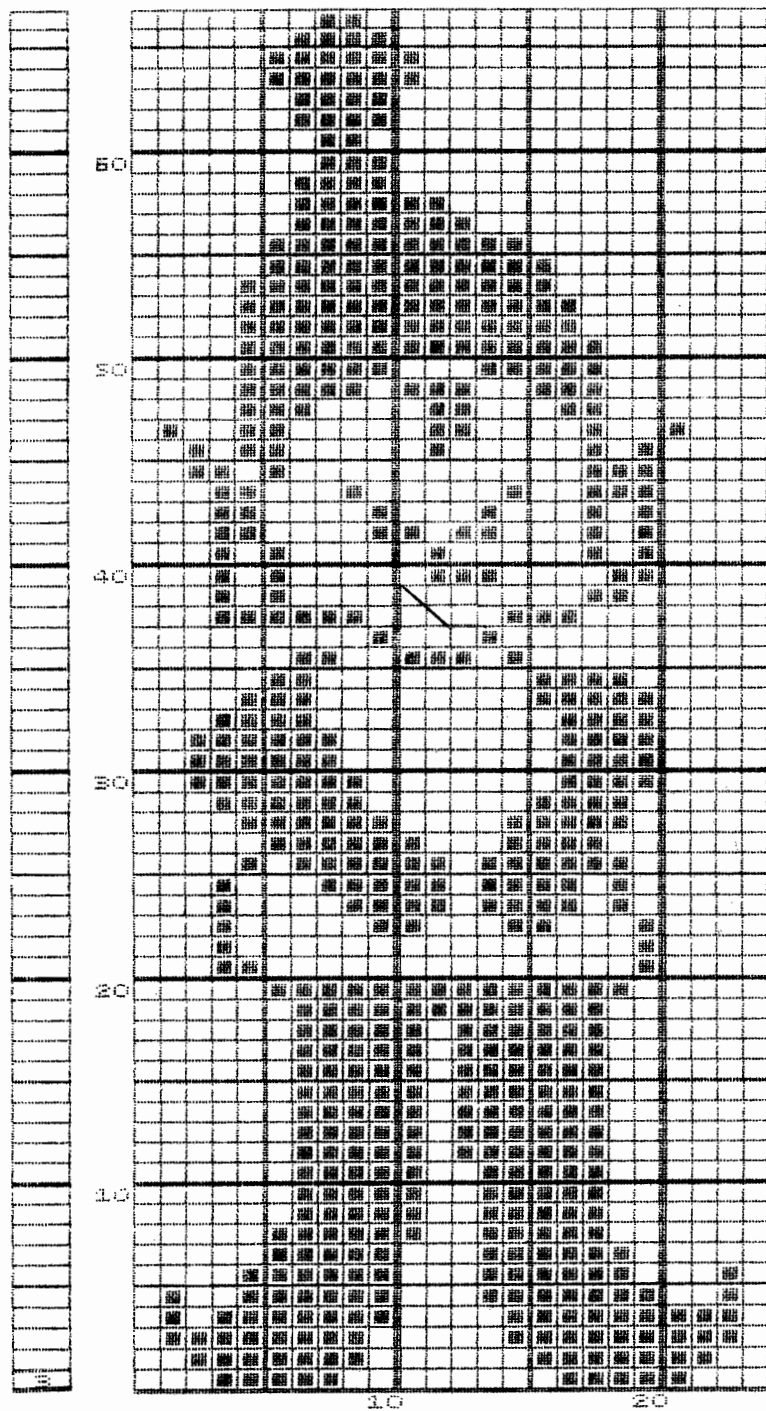

Track #1 - Pattern #906
24 stitches by 67 rows

Rows 38 and 39. Where you see the slash mark, make a running back stitch through these 2 stitches in red for the mouth.

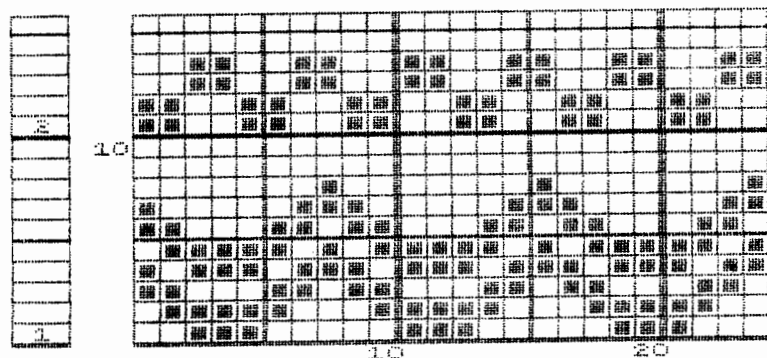

Track # 1 - Pattern #913
24 stitches by 16 rows

TURTLES

Ribbing: Stitch size 5 on Garter carriage

Body and sleeves: Stitch size 6 Upper tension dial: -1

SIZES: 2-4-6-8-10-12-14-16-18

YARN: Trenzado: Main color: #14A Obispo (dark purple) 1 cone
1st C.C.: #23 Esmeralda (green) 1 oz.
2nd C.C.: #10 White - 4 ozs.
3rd C.C.: #39A Congoles (deep gold) .50 oz.
Yarn amounts given are for size 8

STITCH GAUGE: 7.50 stitches and 12.63 rows per 1".
Gauge taken in stocking stitch

KH930/Comp3: Pattern #916 - Selector #2 with 2 repeats
Pattern #917 - Selector #2 with 2 repeats
#2 Mirror image

Punchcard: Pattern #916 - 2 single motifs
Pattern #917 - 2 single motifs

Check Hints Section on finishing techniques, blocking and floats.

When you are knitting wrap on each side of each turtle the same as you do on just 1 single motif. This will keep the stitches from parting as they sometimes do when there is a large area with floats. Time involved is minimal and you will have a much neater sweater.

All ribbing, including neckband in purple.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern.

Program in Track #2

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 98 (110,120,128,132,136,140,144,150) stitches in purple. Rib in 2 x 2 with Garter carriage for 20 (20,30,30,30,30,30,30,30) rows.

RC 000 Knit 19 (29,35,41,41,45,45,58,68) rows purple.

RC 019,029,035,041,041,045,045,058,068 Knit 6 rows green, 2 rows white, 6 rows green.

RC 033,043,049,055,055,059,059,072,082 Knit 19 (29,35,41,41,45,45,58,68) rows purple.

RC 052,072,084,096,096,104,104,130,150 Knit 6 rows white, 2 rows purple, 6 rows white, 2 rows purple.

2nd page of Turtles

RC 068,088,100,112,112,120,120,146,166 Knit 6 (6,6,6,6,6,12,12,12) rows white.

RC 074,094,106,118,118,126,132,158,178 Pattern #916 (fence)
KH930/Comp3: Selector #2 with 2 repeats. **Punchcard:** 2 single motifs over needles **24 left through 24 right**. White in feeder #1, deep gold in feeder #2. Knit 10 rows, then turn off pattern.

RC 084,104,116,128,128,136,142,168,188 Knit 6 (6,6,6,6,6,6,6,10) rows white.

RC 094,108,114,126,126,126,132,158,178 Cast off 7 (8,11,13,15,15,17,17,18) stitches each side for underarm.

Punchcard: Because you do not have mirror image, you will have to punch 2 cards. Punch 1 card the way it is shown (**Card #1**), punch the 2nd one in reverse (**Card #2**). 2 heads will be facing each other. When you reach the turtle, starting with the 1st needle on the right side of 0, take all stitches off onto waste yarn. Now take off all stitches on the left onto waste yarn. Hang the right side back onto the machine. Use **Card #2**. *** Hang the 1st stitch on the left onto the 12th needle on the left of your needlebed. Pull out your 1st empty needle on the left and do an "e" loop cast on. You will use this extra stitch later to seam your 2 sides together. 1 single motif over needles **12 left and 12 right of 0**. Knit 28 rows of your turtle, then take off on waste yarn. *** Hang your left side back onto the machine. Use **Card #1**. Repeat between the stars (***), but in reverse. When finished, take off machine. Seam together, then hang back onto the machine on same needles as before. Set your RC on #118 (138,150,162,162,170,176,202,226).

RC 090,110,122,134,134,142,148,174,198 Pattern #917 (turtle)
KH930/Comp3: Selector #2 with 2 repeats. Push #2 mirror image. Knit 28 rows with green as C.C.

RC 118,138,150,162,162,170,176,202,226 Knit 14 (14,14,14,20,20,26,26,28) rows white.

RC 132 Size 2: Follow same directions as below, except knit back 8 stitches 1 time with ravel cord, then (-2-1-2) (-1-1-7) (19 neck stitches decreased). When finished, knit to RC 164.

RC 152,164,176,182,190,202 Sizes 4-6-8-10-12-14 Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9). (23 neck stitches decreased) When finished knit straight until RC 190 (202,214,220,228,240).

RC 228,254 Sizes 16-18: Divide for front neckline. Knit back 10 stitches 1 time, then (-2-1-3) (-1-1-8) 24 neck stitches decreased Knit to RC 266 (292).

RC 164,190,202,214,220,228,240,266,292 Take off 23 (24,26,28,28,

3rd page of Turtles

30,30,31,33) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with purple yarn, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 154 (180,192,204,210,218,230,256,282).

RC 154 Size 2: Follow same directions as below except knit back 10 stitches 1 time with ravel cord, then (-2-1-2) (-1-1-5). At RC 164, take shoulder stitches off on waste yarn.

RC 180,192,204,210,218,230 Sizes 4-6-8-10-12-14: Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 14 stitches 1 time, then (-1-1-9) At RC 190 (202,214,220,228,240) take shoulder stitches off on waste yarn.

RC 256,282 Sizes 16-18: Divide for back neckline. Knit back to out of work position 15 stitches 1 time, then (-1-1-9) At RC 266, (292), take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with purple yarn, then take off on waste yarn.

SLEEVE: Cuffs: Cast on 50 (50,56,60,60,64,68,70,74) stitches in purple with Garter carriage. Rib in 2 x 2 for 20 (20,30,30,30,30,30,30,30) rows. Take off machine with waste yarn or garter bar.

Cast on 60 (70,80,80,90,94,96,96,100) stitches with waste yarn and ravel cord.

RC 000 Knit 53 (63,72,85,88,96,100,100,100) rows purple.

RC 008,008,010,010,010,016,018,010,016 Increase 1 stitch each side every 9 (9,11,13,15,15,13,14,12) rows 12 (14,13,13,12,13,16,16,18) times You will have 84 (98,106,106,114,120,128,128,136) stitches when you are finished increasing.

RC 053,063,072,085,088,096,100,100,100 Knit 6 rows green, 2 rows white, 6 rows green.

RC 067,077,086,099,102,110,114,114,114 Knit 19 (29,38,51,57,66,70,70,70) rows purple.

RC 086,106,124,150,159,176,184,184,184 Knit 6 rows white, 2 rows purple, 6 rows white, 2 rows purple.

RC 102,122,140,166,175,192,200,200,200 Knit 24 (24,24,24,27,30,40,46,46) rows white.

4th page of Turtles

RC 126,146,164,190,202,222,240,246,246 Take sleeve off machine on waste yarn.


NECKBAND: When you knit your neckband, start at Stitch Size 5. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 104 (108,110,112,114,116,118) stitches for neckband. Knit 28 rows in by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


SLEEVE FINISHING: Hang cuff back onto your machine on 50 (50,56,60,60,64,68,70,74) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 10 (20,24,20,30,30,28,26,26) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

With the right side facing you, hang sweater back onto the machine on 84 (98,106,106,114,120,128,128,136) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

Tube all pieces as they come off the machine. Let rest for awhile, then block. Let dry, preferably overnight before sewing together.

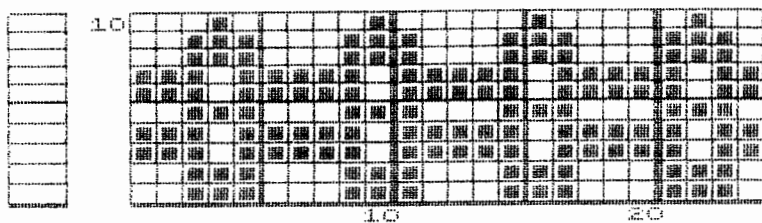

Track #2 - Pattern #916
24 stitches by 10 rows

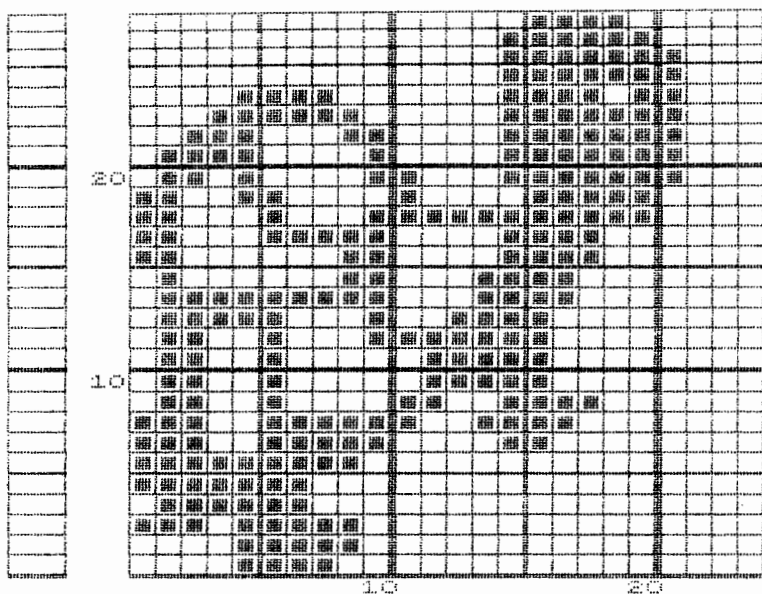

Track #2 - Pattern #917
24 stitches by 28 rows

HANNAHS' DRESS

Hem: Stitch size 3 on Garter carriage

Body and sleeves: Stitch size 4 Upper tension dial: -2

SIZE: Newborn. There will only be 1 size. Hannah was born 2 weeks early and we didn't want her to be left out of the book. Dress size was taken from a Newborn dress that Hannah wears. This is an extra pattern for the book as the written patterns in this book start with a size 2. Hannah Maryann Waterhouse (**nickname "Precious"**) was two weeks and 3 days old when her picture was taken. Birthdate: June 28, 1991 in Wenatchee, Washington. Proud parents: Dan and Sharon Waterhouse.

YARN: Denys Brunton: Main color: #8 light Pink - 4 ozs.
1st C.C.: #24 Fashion pink - .50 oz.

STITCH GAUGE: 8 stitches and 13 rows per 1".
Gauge taken in stocking stitch.

KH930/Comp3: Pattern #913 - Selector #1
Pattern #914 - Selector #2 with 1 repeat

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern.

Program in Track #3

FRONT: Hem: Stitch size 3 Cast on 104 stitches with waste yarn and ravel cord. Change to light pink. Knit 8 rows. Transfer every other stitch to the adjacent needle, starting with the 3rd stitch from the right. Knit 7 rows. Pick up your 1st row of light pink from the ravel cord and close hem.

RC 000 Stitch size 4 Knit 3 rows.

RC 003 Pattern #913 Knit 26 rows in pattern with fashion pink as contrast color.

RC 029 Change to pale pink and knit to RC 092.

RC 092 Take off machine onto waste yarn. Hang back onto the machine on 80 needles while decreasing 24 stitches evenly across.

RC 092 Change to fashion pink. Knit 3 rows. Transfer every 3rd stitch to the adjacent needle. Knit 2 rows fashion pink. You will also be starting your underarm decrease on RC 092. See below.

RC 092 Cast off 4 stitches on each side for underarm. Then decrease 1 stitch on each side every row 4 times. You will now have 64 stitches left.

RC 097 Knit 11 rows in pale pink.

RC 108 Pattern #914 Knit 7 rows with fashion pink as C.C.

RC 115 Knit 5 rows pink to neckline.

2nd page of Hannahs Dress

RC 120 Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-6). (20 neck stitches decreased) When finished knit straight until RC 144.

RC 144 Take off 12 shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with fashion pink, then remove on waste yarn.

BACK: Knit same as the front until RC 120.

RC 120 Divide for back neckline. On the left side knit back all stitches to out of work position with ravel cord. On the right side, knit straight until RC 134. Knit 12 stitches on the left back to out of work position with ravel cord. Then knit back 1 stitch every row 8 times. At RC 144, take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with fashion pink, then take off on waste yarn. You may either crochet around the opening or leave as is. If you don't do anything it will curl to the inside. When the dress is finished, sew on either a snap or a button on the back neckline. If you use a button, crochet a loop on opposite side.

SLEEVE: Cast on 64 stitches with waste yarn and ravel cord.

Hem: Stitch size 3 Change to pale pink and knit 8 rows. Transfer every other stitch to the adjacent needle. Knit 7 rows. Pick up your stitches from the ravel cord and close hem.

RC 000 Stitch size 4 Knit 5 rows. (Optional) At RC 000, you may want to substitute the fashion pink, picots and cording same as the dress front. If you do, follow same directions as the front.

RC 006 Decrease 4 stitches each side for underarm. Then decrease 1 stitch each side every 3 rows 12 times. You will have 32 stitches left. At RC 046, cast off your sleeve with a permanent cast off.

NECKBAND: Close 1 shoulder. With the wrong side facing you, pick up 76 stitches for neckband from the largest area. Use fashion pink. Stitch size 4. I didn't tension down on this band. Knit 1 row, then weave in your ravel cord. Knit 7 more rows. Transfer every other stitch to the adjacent needle. Knit 7 rows. Pick up all stitches above your ravel cord and close neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. 2nd half: Pick up all stitches from waste yarn and knit same as above. When finished, put a dowel through your neckbands and give a couple of tugs to remove any flare. Close 2nd shoulder.

3rd page of Hannahs Dress


Tube all pieces as they come off the machine. Let rest for awhile, then block. Let dry, preferably overnight before sewing together.

Notions: 1 snap for the back of the neckline. 1/8" elastic.


FINISHING: Sew your dress together. **Sleeves:** You may use your sewing machine for this. From the purl side of your sleeve, sew a strip of the elastic onto the back of your sleeve by stretching it out as you sew. Sew just above the hemline. When you finish it will pull the bottom of the sleeve into gathers. Gather the top of your sleeves down to 2 inches in width, then secure. Sew the bottom of your sleeves together. Turn your dress wrong side out. Turn your sleeves right side out. Set sleeves into the dress by pinning into place with straight pins. Back stitch all around.

Cord for dress: Stitch size 4 Use Fashion pink. Cast on 4 stitches with waste yarn and ravel cord. Knit about an inch. Change to fashion pink and cast on 4 stitches with an "e" wrap cast on. Knit carriage on the right. Push in your right Part button. Pull down on the yarn hard so it will knit. Knit 290 rows. Transfer each outside stitch to the inside, then do a permanent cast off. Sew in the yarn ends. Weave the cord in and out through the picot holes in the dress. Tie a bow in the front.

Pattern #913 from Brother Stitch World Pattern Book

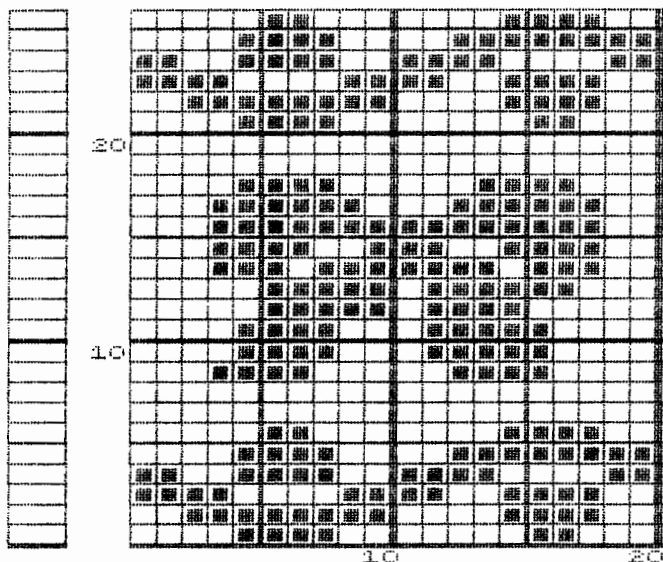

Track #3 - Pattern #913
20 stitches by 26 rows

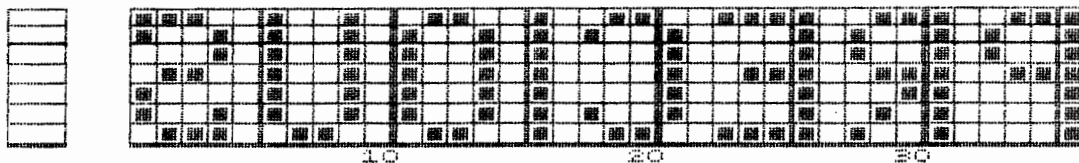

Track #3 - Pattern #914
36 stitches by 7 rows

POODLES

Ribbing: Stitch size 3 on Garter carriage

Body and sleeves: Stitch size 4 Upper tension dial: -2
Denys Brunton yarn is very soft, so when you reach Pattern #914, increase your stitch size 2 dots. When you are finished with the border, go back to stitch size 4.

On the original pattern, there wasn't any border above the poodles; it was accidentally put there by the lady who knitted the sweater. The written instructions are left as originally written. If you do prefer the extra border, please feel free to knit it. 1 single border is knitted for sizes 2 & 4, double borders for larger sizes.

SIZES: 2-4-6-8-10-12-14-16-18

YARN: Denys Brunton Main color: #7 electric blue - 4 ozs.

Yoke: #18 Baby blue - 8 ozs.

1st C.C.: #4 red - 1 oz.

2nd C.C.: #1 black - 1 oz.

Yarn amounts given are for size 14

STITCH GAUGE: 7.38 stitches and 12.25 rows per 1".

Gauge taken in stocking stitch

KH930/Comp3: Pattern #914 - Selector #1

Pattern #915 - Selector #2 with 3 repeats

Punchcard: Pattern #914 - All over pattern

Pattern #915 - 3 single motifs on yoke

Check Hints Section on finishing techniques, blocking and floats.

Neck and cuff ribbing in baby blue. Sweater ribbing in electric blue.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern.

Program in Track #2

When only 1 row counter number is given, then that number is the same for all sizes.

Cables: 0 = needle out of work

X = cable over these needles

1 = stitches in working position between the cables

Spaces are shown between the X's, 0's and 1's only to allow you to visualize the cables better.

00 XXXX 00 111 00 XXXX 00 - Left side of needlebed - Cable over needles 18-19-20-21 and 29-30-31-32

11111111111111111111111111111111 (30 knit stitches between the cables)

2nd page of Poodles

00 XXXX 00 111 00 XXXX 00 - Right side of needlebed - cable over needles 18-19-20-21 and 29-30-31-32

All Sizes: Cable over needles as shown above.
Cross 2 stitches over 2 stitches. Cable every 6 rows.

FRONT: Cast on 104 (116,126,134,138,142,144,148,156) stitches in electric blue. Rib in 2 x 2 with Garter carriage for 20 (20,30,30,30,30,30,30,30) rows.

Before you start your cables, transfer the 0 stitches to adjacent needles. 16-17 - 22-23 - 27-28 - 33-34 on both sides of the needlebed. Push these needles back to out of work position.

RC 000 Knit 2 rows.

RC 002 Start your cables. Your last cable will be on RC 056 (080, 080,080,086,092,092,104,128).

RC 056,080,080,080,086,092,092,104,128 Knit 4 rows.

RC 060,084,084,084,090,096,096,108,132 Take your sweater off the machine onto waste yarn. **Push 4 needles on each side** back to out of work position. You will now be working on 96 (108,118,126,130,134,136,140,148) needles. Pull the empty needles between the cables back into working position.

Hang your sweater back onto the machine. When you come to one of the floats on each side of the cables, don't hang the float yet, but leave **1 needle empty and in working position** for hanging the float later. Your float is now considered **1 stitch, not 2**. Use your latch tool (check page 10 of Hints Section on how to latch) start with the 1st float and latch up a single chain of purl stitches. When you get to the top, hang that stitch on the empty needle. Repeat for the other 7 columns of floats.

All sizes: Set your carriage outside the left turn mark. Program your pattern, set for free move (doesn't knit on free move) and move 1 row to the right. Re-set your RC to the correct number for the size you are working on. Set machine for pattern work.

RC 060,084 **Sizes 2 and 4:** **Change to baby blue in feeder #1.** Pattern #914 (Border) Knit 7 rows with red as contrast color.

RC 084,084,090,096,096,108,132 **Sizes 6-8-10-12-14-16-18:** Pattern #914 (Border) Electric blue is still in feeder #1. Knit 7 rows with red as contrast color. After you have knitted 7 rows, change to **baby blue in feeder #1**, keep red in **feeder #2**, then knit 7 more rows in pattern. (Total: 14 rows in pattern) Turn off pattern.

RC 067,091,098,098,104,110,110,122,146 **All sizes:** Knit 10 (10,12,18,18,18,18,20,20) rows baby blue.

RC 077,101,110,116,122,128,128,142,166 Pattern #915 (Poodle) Center 3 single motifs Knit 33 rows with black as contrast color.

3rd page of Poodles

RC 092,104,110,124,124,124,128,154,172 Cast off 7 (8,11,15,15,15,16,16,18) stitches each side for underarm.

RC 110,134,143,149,155,161,161,175,199 Knit 12 (12,15,23,23,23,33,45,45) rows baby blue.

RC 122 Size 2: Divide for front neck. Follow same instructions as below but knit back 8 stitches 1 time, then (-2-1-2) (-1-1-7) (19 neck stitches decreased). When finished, knit to **RC 160**.

RC 220 Size 16: Divide for front neck. Knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9) (23 neck stitches decreased).

RC 244 Size 18: Divide for front neck. Knit back 10 stitches 1 time, then (-2-1-3) (-1-1-8) (24 neck stitches decreased).

RC 146,158,172,178,184,194 Sizes 4-6-8-10-12-14: Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-2) (-1-1-10). (22 neck stitches decreased) When finished knit straight until RC 184 (196,210,216,222,232).

RC 160,184,196,210,216,222,232,258,282 Take off 22 (24,26,26,28,30,30,31,32) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with baby blue yarn, then remove on waste yarn.

BACK: Knit same as the front but continue knitting until RC 150 (174,188,200,206,212,222,248,272).

RC 150 Size 2: Follow same directions as below but knit back 10 stitches 1 time, then (-1-1-9) Knit until RC 160. Take shoulder stitches off on waste yarn.

RC 174,188,200,206,212,222,248, Sizes 4-6-8-10-12-14: Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 13 stitches 1 time, then (1-1-9) At RC 184 (196,210,216,222,232) take shoulder stitches off on waste yarn.

RC 248 Size 16: Divide for back neckline. Knit back 14 stitches 1 time, then (-1-1-9) (23 neck stitches decreased) At RC 258, take shoulder stitches off on waste yarn.

RC 272 Size 18: Divide for back neckline. Knit back 15 stitches 1 time then (-1-1-9) (24 neck stitches decreased) At RC 282, take shoulder stitches off on waste yarn. Repeat for left side, except reverse neck shapings.

SLEEVE: Cuffs: Cast on 50 (50,56,60,60,64,68,70,74) stitches in baby blue with Garter carriage. Rib in 2 x 2 for 20 (20,30,30,30,30,30,30,30) rows. Take off machine with waste yarn.

4th page of Poodles

Cast on 60 (70,80,90,90,94,96,96,100) stitches with waste yarn and ravel cord.

RC 000 Knit 4 rows baby blue.

RC 004 Pattern #914 (Border) Knit 7 rows with red as contrast color.

RC 011 Knit 6 rows baby blue.

RC 014,012,014,012,008,010,012,016,006 Increase 1 stitch every 9 (9,12,23,16,16,14,14,13) rows 11 (13,11,7,11,12,15,15,17) times. You will have 82 (96,102,104,112,118,126,126,134) stitches when you are finished increasing.

RC 017 Pattern #916 (poodle) Knit 1 single motif. **KH930/Comp3:** (Optional) Push the #1 reverse key for the 2nd sleeve. Knit 33 rows with black as contrast color. When you sew in the sleeves, have both poodles facing toward the front.

RC 050 Knit 20 (28,37,50,56,65,76,76,76) rows baby blue.

RC 070,078,087,100,106,115,126,126,126 Pattern #914 (1st border) Knit 7 rows with electric blue as contrast color.

RC 077,085,094,107,113,122,133,133,133 Knit 7 rows baby blue.

RC 084,092,101,114,120,129,140,140,140 Pattern #914 (2nd border) Knit 7 rows with red as contrast color.

RC 091,099,108,121,127,136,147,147,147 Knit 7 rows baby blue.

RC 098,106,115,128,134,143,154,154,154 Pattern #914 (3rd border) Knit 7 rows with electric blue as C.C.

RC 105,113,122,135,141,150,161,161,161 Knit 19 (27,36,49,55,64,73,77,77) rows with baby blue.

RC 124,140,158,184,196,214,234,238,238 Cast off sleeve on waste yarn.

NECKBAND: When you knit your neckband, start at Stitch Size 5. This dye lot of Denys Brunton yarn was so soft it had to be knitted a little different to make it lay flat. Tension down 1 dot every 3 rows 2 times, every 2 rows 4 times, then 1 row 1 time. You are at the halfway mark. Now start increasing the same as above but in reverse, starting with increase 1 row 1 time, etc. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 104 (108,110,112,114,116,118,120,122) stitches for neckband. Knit 30 rows in baby blue by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more


5th page of Poodles

elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


SLEEVE FINISHING: Hang cuff back onto your machine on 50 (50,56,60,60,64,68,70,74) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 10 (20,24,30,30,30,28,26,26) stitches evenly across from the cast on edge. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

With the right side facing you, hang sweater back onto the machine on 82 (96,102,104,112,118,126,126,134) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.

Tube each piece as it comes off the machine. Let rest for awhile, then block. Let the sleeves dry thoroughly before attaching the cuff to prevent wrinkles.

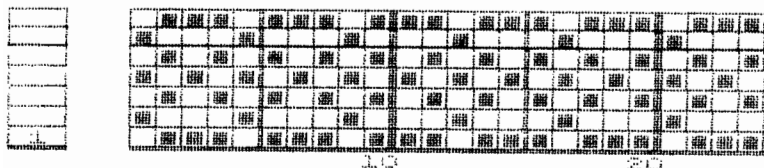

Track #2 - Pattern #914
24 stitches by 7 rows

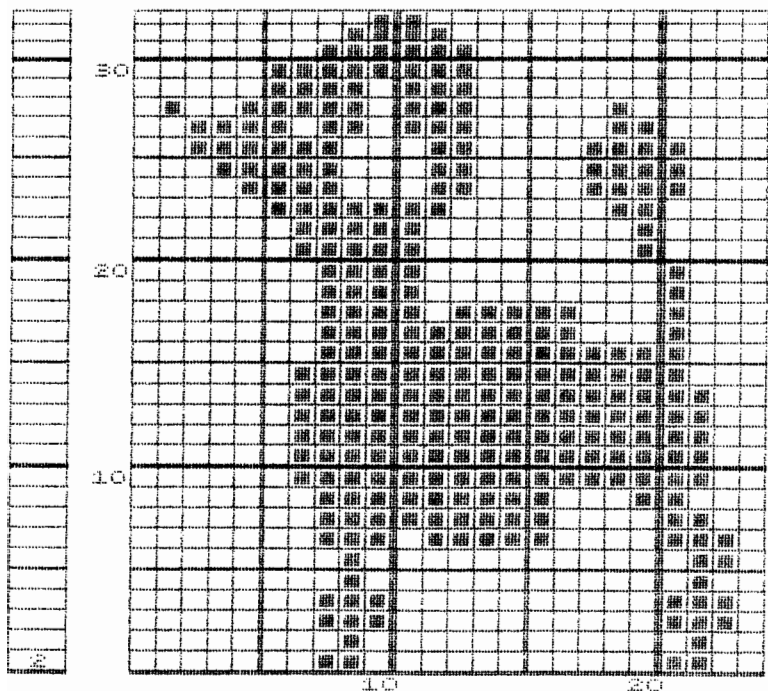

Track #2 - Pattern #915
24 stitches by 33 rows

DUCKS AND CAT-TAILS

Ribbing: Stitch size 5 on Garter carriage

Body and sleeves: Stitch size 6 Upper tension dial: -1

SIZES: 8-10-12-14-16-18

YARN: Trenzado: #11 (Chabacano) beige - 2 ozs.

#03 - (Cocoa) dark brown - 1 oz.

#20 - (Cielo) pale blue - 5 ozs.

#16 - (Terracota) dark orange - 1 oz.

#17 - (Verde Botella) dark green - 1 oz.

#10 - (Blanco) white 1/2 oz.

#28 - (Plumbago) blue - 7 ozs.

Yarn amounts given are for size 16.

STITCH GAUGE: For sweater body, gauge taken in fairisle. 7.50 stitches and 12.13 rows per 1". Sleeves: Gauge taken in stocking stitch: 7.50 stitches and 12.63 rows per 1"

KH930/Comp3: Pattern #906 - Selector #1
Patterns 907-908 - Single motif

Punchcard: Pattern #906 - All over pattern
Patterns 907-908 - Single motif

Check Hints Section on finishing techniques, blocking and floats.

KH930/Comp3: When you hear the buzzer, knit 1 more row for a complete pattern.

Program in Track #3

When only 1 row counter number is given, then that number is the same for all sizes.

FRONT: Cast on 128 (132,136,140,144,150) stitches in beige. Rib in 2 x 2 with Garter carriage for 30 rows.

RC 000 Knit 2 rows beige.

RC 002 Pattern #906 (cat-tails) Knit 20 rows with brown as contrast color.

RC 022 Change to pale blue (Cielo) in feeder #1. Keep brown in feeder #2. Knit 14 more rows. Turn off pattern.

RC 036 Knit 16 (18,20,16,20,28) rows pale blue.

RC 052,054,056,052,056,064 Pattern #907 (ducks) **KH930/Comp3:** Selector #2 with 2 repeats. Change 1st needle position to **Yellow 60**. **Punchcard:** Place 2 single motifs on **needles 13 through 60** on the left of your needlebed. Knit 28 rows with dark orange as contrast color.

2nd page of Ducks and Cat-tails

RC 080,082,084,080,084,092 Knit 14 (16,18,14,18,28) rows pale blue.

RC 094,098,102,094,102,120 Pattern #907 (ducks) **KH930/Comp3:** Selector #2 with 2 repeats. Change 1st needle position to **Green 13. Punchcard:** Place 2 single motifs on **13 through 60** on the right of your needlebed. Knit 28 rows with orange as your contrast color.

RC 122,122,122,128,152,170 Cast off 13 (15,15,17,17,18) stitches each side for underarm.

RC 122,126,130,122,130,148 Knit 10 (12,14,10,12,16) rows pale blue.

RC 132,138,144,132,142,164 Pattern #906 (cat-tails) Knit 4 rows only with black as contrast color.

RC 136,142,148,136,146,168 Change to (Plumbago) blue in feeder #1. Change to brown in feeder #2. Knit last 30 rows in pattern.

RC 166,172,178,166,176,198 Knit 6 (6,6,8,16,18) rows blue. **Sizes 8-10-12:** Adding the cloud would make the sweater very long. Move ahead to neckline.

RC 174,192,216 **Sizes 14-16-18:** Pattern #908 (cloud) **KH930/Comp3:** Selector #2 with 4 repeats. **Punchcard:** Knit 4 single motifs centered on your needlebed. Knit 14 rows with white as contrast color.

RC 188,206,230 **Sizes 14-16-18:** Knit 8 (14,14) rows blue.

RC 172,178,184,196 **Sizes 8-10-12-14:** Divide for front neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 8 stitches 1 time, then (-2-1-3) (-1-1-9). (23 neck stitches decreased) When finished knit straight until RC 208 (214,220,232).

RC 220,244 **Sizes 16-18:** Divide for front neckline. Follow same directions as above but knit back 10 stitches 1 time, then (-2-1-3) (-1-1-8) (24 neck stitches decreased) When finished, knit to RC 256 (280).

RC 208,214,220,232,256,280 Take off 28 (28,30,30,31,33) shoulder stitches on waste yarn.

Knit left side same as the right except reverse all neck shapings. When finished bring neckline stitches back into working position, knit 1 row over all stitches with blue yarn, then remove on waste yarn.

3rd page of Ducks and Cat-tails

BACK: Knit same as the front but continue knitting until RC 198 (204,210,222,246,270).

RC 198,204,210,222 Sizes 8-10-12-14: Divide for back neckline. Knit all stitches to the left of 0 back to out of work position with ravel cord. To the right of 0, knit back 14 stitches 1 time, then (-1-1-9) At RC 208 (214,220,232) take shoulder stitches off on waste yarn.

RC 246,270 Sizes 16-18: Divide for neckline. Follow same directions as above but knit back 15 stitches 1 time, then (-1-1-9). At RC 256 (280), take shoulder stitches off on waste yarn.

Repeat for left side, except reverse neck shapings. When finished, bring neck stitches back into working position, knit 1 row over all stitches with blue yarn, then take off on waste yarn.

SLEEVE: Cuffs: Cast on 60 (60,64,68,70,74) stitches in (Plumbago) dark blue with Garter carriage. Rib in 2 x 2 for 30 rows. Take off machine with waste yarn or garter bar.

Cast on 80 (90,94,96,96,100) stitches with waste yarn and ravel cord.

RC 000 Change to dark blue and knit 188 (200,220,240,246,246) rows. Sleeve increases are listed in next paragraph.

RC 014,014,016,010,010,016 Increase 1 stitch each side every 12 (14,14,13,14,12) rows 13 (12,13,16,16,18) times You will have 106 (114,120,128,128,136) stitches when you are finished increasing.

RC 188,200,220,240,246,246 Take sleeve off on waste yarn.

NECKBAND: When you knit your neckband, start at Stitch Size 5. Every 3 rows, tension down 1 dot. At the halfway point, start increasing 1 dot every 3 rows until you are back at your beginning stitch size. After you have knitted the 1st row, weave in 1 row of ravel cord.

Close 1 shoulder. With the wrong side facing you, pick up 112 (114,116,118,120,122) stitches for neckband. Knit 28 rows in dark blue by following the instructions in preceding paragraph. Pick up all stitches above your ravel cord and close your neckband. Pull all needles out until the stitches just clear the latches, then latch tool off around 2 sinker posts for more elasticity in your neckband. Put a dowel through your neckband and give a couple of tugs to remove any flare. Close 2nd shoulder.


SLEEVE FINISHING: Hang cuff back onto your machine on 60 (60,64,68,70,74) needles. With wrong side facing you, hang sleeve back onto these same needles while decreasing 20 (30,30,28,26,26) stitches evenly across from the cast on edge. Pull all needles out

4th page of Ducks and Cat-tails


until the stitches just clear the latches, then latch tool off around the sinker posts.

With the right side facing you, hang sweater back onto the machine on 106 (114,120,128,128,136) needles, while centering the shoulder seam. Wrong side facing you (right sides together), hang sleeve back onto these same needles. Let the 1st stitch slip behind the latch, keep the 2nd stitch in the hook of the needle. When you are finished, use your ruler and push the needles back until the 2nd stitch slips through the 1st. Pull all needles out until the stitches just clear the latches, then latch tool off around the sinker posts.


Tube all pieces as they come off the machine. Let rest for awhile, then block. Let dry, preferably overnight before sewing together.

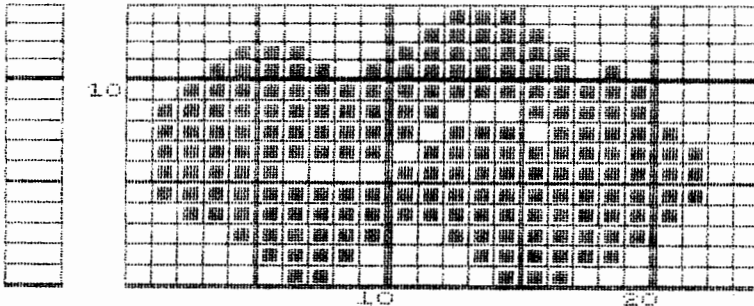

Track #3 - Pattern #908
24 stitches by 14 rows

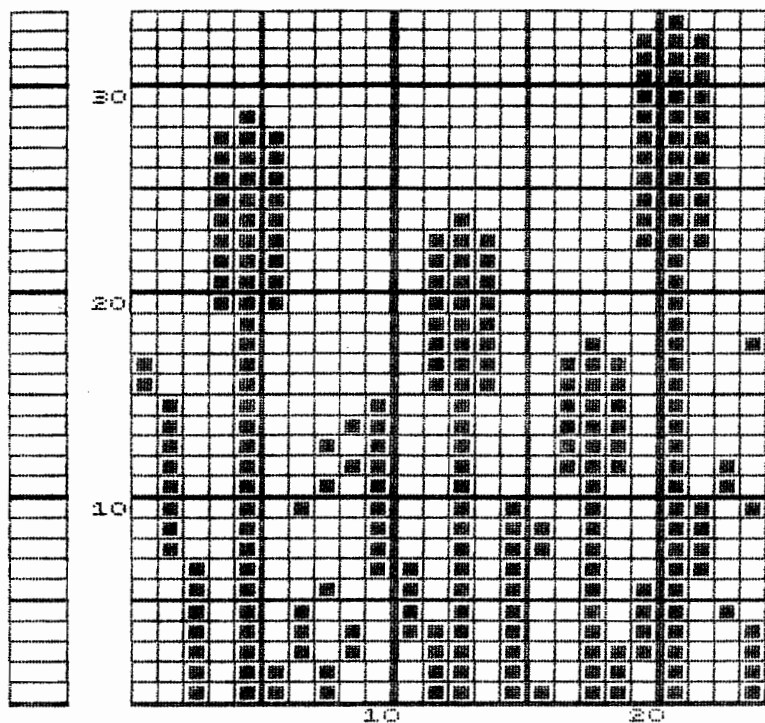

Track #3 - Pattern #906
24 stitches by 34 rows

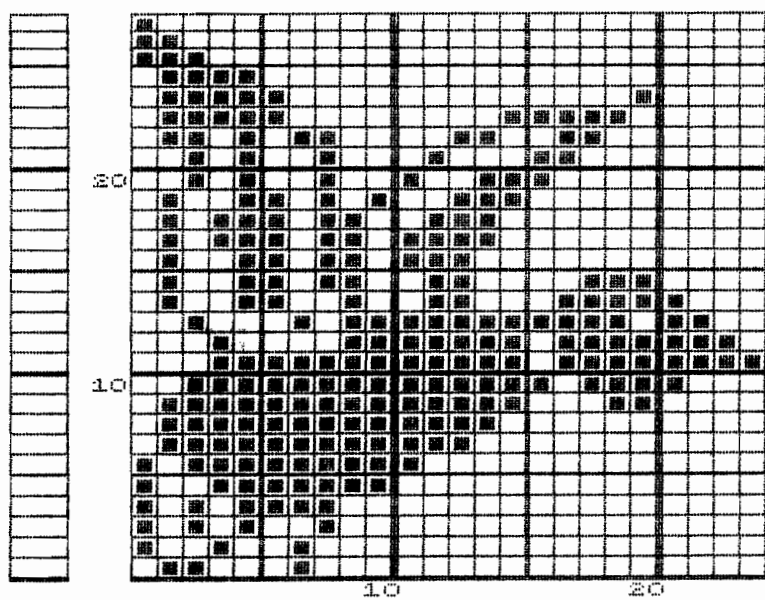

Track #3 - Pattern #907
24 stitches by 28 rows

More Books by Phyllis Waterhouse

Long time knitter, demonstrator and author, Phyllis Waterhouse is known for her classic styles and easy-to-follow instructions.

Available for immediate download from :



- North American Indian Designs 1 Classic Knits 1
- North American Indian Designs 2 Classic Knits 2
- Nursery Rhyme Knits 1 Fisherman Ganseys 1
- Nursery Rhyme Knits 2 Fisherman Ganseys 2
- Picture Knits Norwegian Sweaters
- Sailing with the Garter Carriage



