

Sailing With The Garter Carriage

14 Unisex patterns for all Brother Electronic and Punchcard Knitting Machines



NOTE:

Most of the yarns used in this book are no longer available.

Please visit www.tammyarns.com for comparable acrylic and acrylic blend yarn on cones.

Please visit www.knititnow.com for the web's largest selection of yarn on cones

ACKNOWLEDGMENTS

This year we lost a few models due to moves out of town, but we have also gained a few. My first grand-daughter, Jennifer, has been added to our list of models. At the wonderful age of 13, she did a great job. My very close friend, Joan Stone, modeled for the back cover after a little arm twisting. Donna Parsons was persuaded to model and looked very beautiful. Denise is newly married so we latched onto her new husband, Stan. The modeling was a 1st for Joan, Jennifer, Donna and Stan. We hope all of you enjoyed the modeling as much as we enjoyed standing in the background watching you be photographed. A big Thank You to all of you for the time and support that you have given me. It is appreciated so much.

Another Thank You goes out to my loving family that is always there for me. To my neat husband Hal, my lovely nieces and granddaughter Jennifer, my supportive sons. All of you are loved very much, not only for your willingness to always help me out but because you're you.

Front Cover: Mark and Rick Waterhouse - Donna Parsons

Back Cover: Mark and Rick Waterhouse - Joan Stone

PHOTOGRAPHY

Pictures by:
Parsons Photography
Wenatchee, Wash. 98802

**SAILING WITH THE
GARTER CARRIAGE
TABLE OF CONTENTS**

Acknowledgments.....	2
Warning.....	4
Photographs.....	5
Hints and tips.....	9
Stitch gauges.....	13
Yarns and amount needed for sweaters.....	13
Schematics.....	14
P.P.D. and book changes.....	15
Pattern #1.....	16
Pattern #2.....	20
Pattern #3.....	22
Pattern #4.....	26
Pattern #5.....	29
Pattern #6.....	32
Pattern #7.....	35
Pattern #8.....	38
Pattern #9.....	44
Pattern #10.....	49
Pattern #11.....	52
Pattern #12.....	55
Pattern #13.....	61
Pattern #14.....	66
Other books by Phyllis.....	75
Blank page for notes.....	76

WARNING

Get rid of all magnets that you may be using around your knitting machine, disk drive and floppy disk. Magnets can cause all kinds of odd things to happen. They will cause problems even if they are within 3 feet of your work area. They can completely erase a pattern on a track, then substitute it with a pattern from another track. They can erase only part of a pattern so that you have a totally different look. They can erase the whole disk and make every track look like it has a bunch of chicken tracks on it. When a disk leaves your Author, Dealer or Distributor it can be alright, but if the customer has magnets near his or her work area, then it can be partially damaged or completely destroyed at anytime. Because it is possible to overlook something that you do not realize is magnetized, it is a good idea when you receive your disk to program a back-up disk and store them in different areas, then if one is damaged you will have one to fall back on. (Even your staple puller is magnetized).


Do not place a disk near any magnetic field, since this erases all information stored on the disk. Television sets, telephones, large appliances, and stereo speakers are common objects that emit magnetic fields. Keep your disks at least a foot, preferably more, away from such devices.

The information in the above paragraph came from a book on computers. They say to keep a foot away but I have found you will still have problems up to 3 feet. Also, it doesn't always erase the whole disk, sometimes only different tracks will be affected.


Computers, computerized knitting machines and disk drives all have a protective shield so you don't have to worry about disks being damaged.

Before any of my patterns are transferred from the knitting machine onto a floppy disk, the sweater or dress may have been knitted several or more times. Later, when all patterns are completed and on the floppy disk, it doesn't stop there. Before transferring from the master disk to the disks that will be for sale, I usually spend the greater part of a day transferring the patterns from the floppy disk back into the knitting machine, setting it up for fairaisle, then knitting the pattern again in 2 colors to make sure everything is correct. This way, if there are any errors they will be found, also you are sure that each pattern is on the correct track. When anyone that is working with disks takes every precaution to make sure that the disk is correct, then it can be really frustrating to have something happen because you didn't know about the magnets.

The above information may seem quite long but I am sure all of us at one time or another have experienced odd things happening when we start to program our patterns from our disk into the knitting machine, set it up, then find out the pattern isn't as it should be. It can be very frustrating, not only to the customer, but all the way back to Dealer, Distributor and Author. I hope that this information will be helpful to all of you.

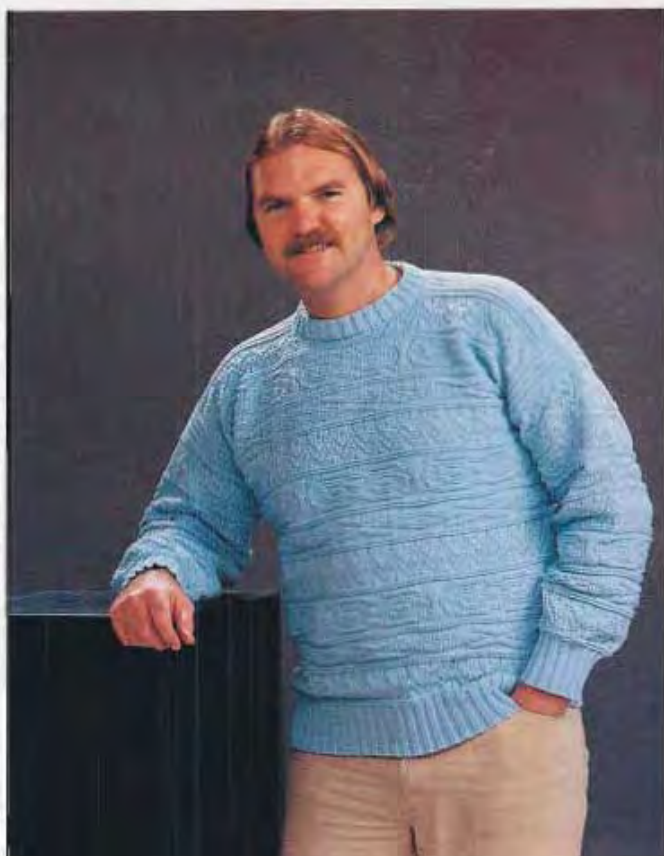


Mark Waterhouse — Pattern #11.

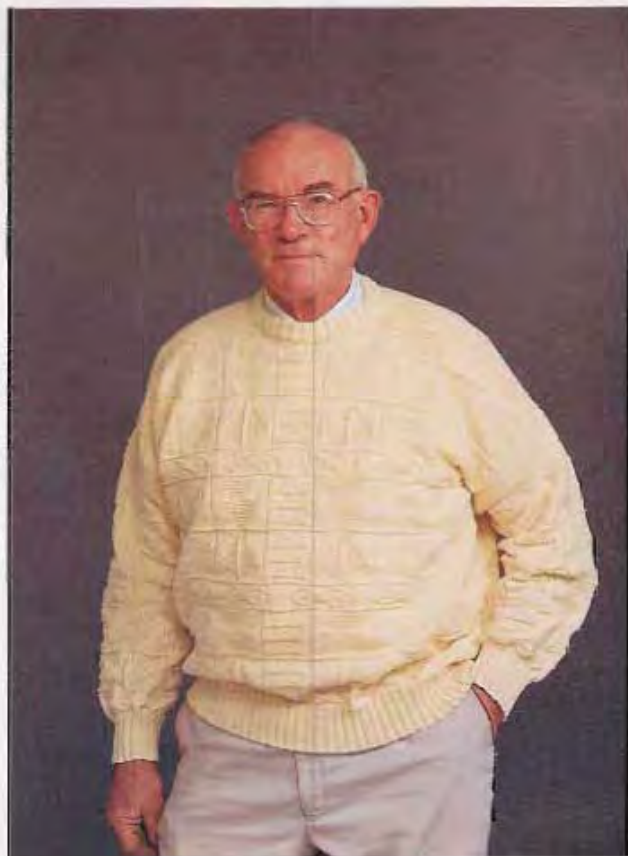


Hal Waterhouse — Pattern #12.

Hal Waterhouse — Pattern #13.

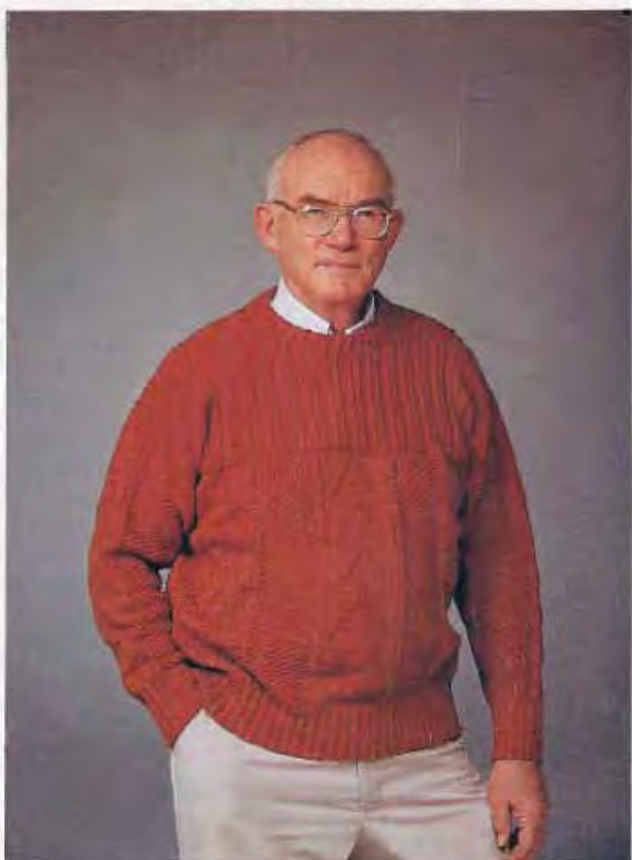

Dan Waterhouse — Pattern #14.



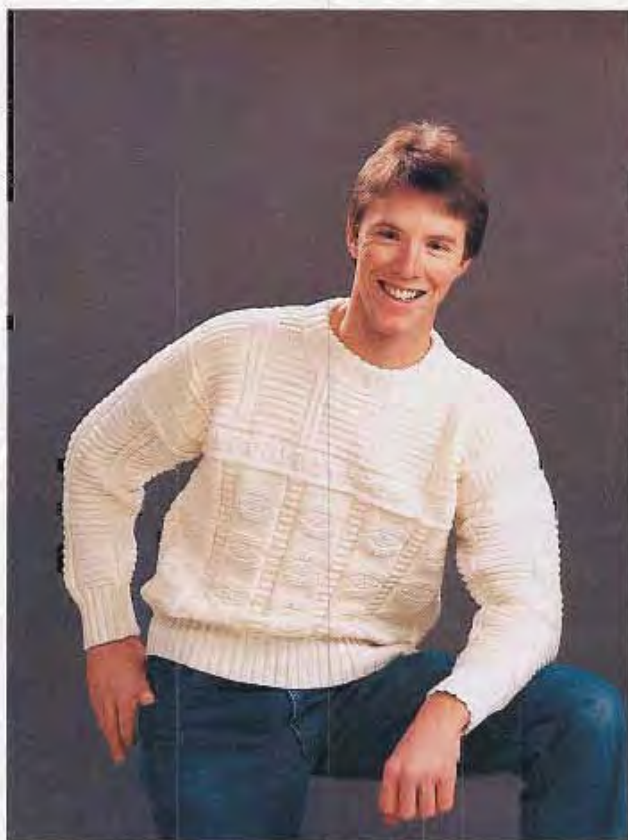

Dan Waterhouse — Pattern #7.



Laurie Eickelberger — Pattern #8.



Stan Marr — Pattern #9.



Laurie Eickelberger — Pattern #10.




Denise Marr — Pattern #4.



Denise Marr — Pattern #3.

Donna Parsons — Pattern #6.

Mark Waterhouse — Pattern #5.

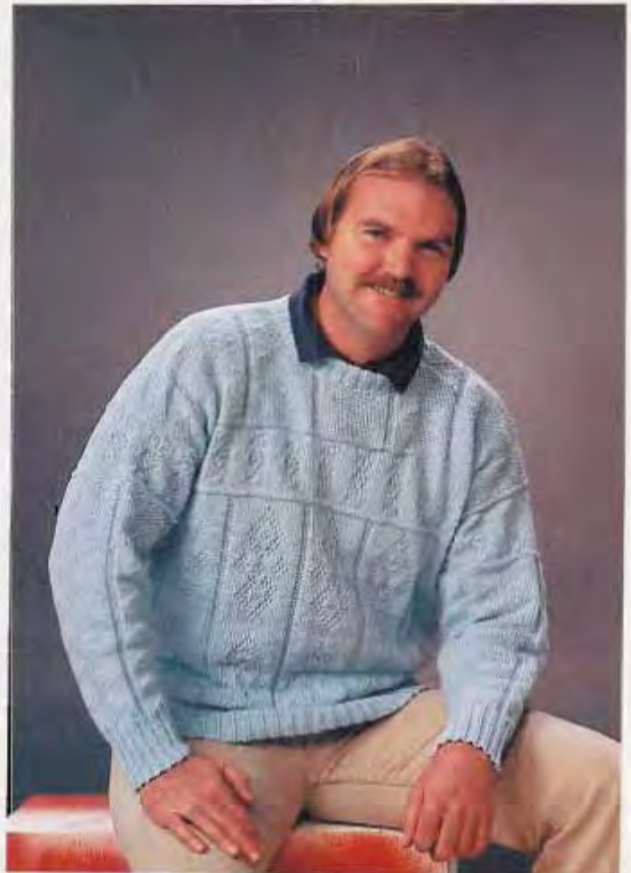



Danny Waterhouse — Pattern #1.

Jennifer Waterhouse — Pattern #2.



HINTS & TIPS ON KNITTING GANSEYS

If you are using Piropo, always spray with a yarn spray before knitting. Put the yarn into a small plastic bag and spray inside the bag to keep fumes out of the room.

If your G carriage starts dropping stitches, check to see if fluff has built up inside the G carriage. Also, it could be a bent garter carriage needle or main bed needle. When a stitch is dropping on different needles across the needle bed, it is the garter carriage needle. When it continually drops on just 1 needle, it will be a knitting machine needle.

When you are using Piropo and come to the end of the cone, it sometimes will cause a drag on the machine. When this starts happening, start a new cone of yarn. It's easier to use a large cone for the larger pieces, then rewind your small cones and use for the sleeves.

When you are designing your garment with a band on the yoke area, try to line up the patterns so that your vertical line patterns are on the same needles. This will keep your design looking more balanced. Example: You are using needles 1 through 18 below the band area. Even though you may be using a different pattern on the yoke, put the pattern on needles 1 through 18 so they will line up right.

When you start to shape your left neckline, change your row counter tripper to the left side to keep the row counter working.

When you have designed your garment with larger patterns such as a large diamond, tree, etc., sometimes too many or too few pattern repeats will give you a sweater that is too long or too short. It looks nicer to finish your sweater with a complete pattern repeat; try not to finish when you are only half way through. To get extra length that you may need, knit your complete pattern, then finish your sweater at the shoulder or neckline area with either single, double or triple purl (garter stitch) bars. If you have purl bars in your band area, try to keep the bars at the shoulder or neckline area the same width for balance. Also, you can adjust your length in the ribbing area. Knit either more or less rows to adjust for length that is needed.

When you are designing your band and come up with an uneven number of rows in it, you don't want your G carriage ending up on the left side of your knitting. Put a blank row on either the very 1st or the last row of your pattern. The blank row shows up as a knit stitch on the right side and doesn't show. Example: Your band is 23 rows, put in a blank row to make it 24 rows.

With garter carriage knitting, a large amount of (garter stitches) in a sweater will draw it up, sometimes as much as several inches. For this reason, sometimes my row length will be determined while the sweater is still on my machine. Keep a measuring tape by your

2nd page of Hints and tips

machine and if it appears to be too short, measure it, then add the extra rows that are needed for your length. This is going to make a difference on where your design ends, so you'll have to make adjustments. You'll make your adjustments for length in the ribbing areas or with purl bars at the neck or shoulder edge.

If you are using a band on your sweater, try to keep approximately the same amount of garter stitches as in the body of your sweater. If it is too much less, the band seems to spread wider than the body. A good example is Pattern #6. The band was knitted on a stitch size 10 which made it spread because there wasn't as many garter stitches as in the sweater body. (The written pattern will tell you to use a stitch size 9). If you have the look that you want in your band, go down 1 full stitch size, then it usually corrects the problem. Example: If your sweater is knitted on a stitch size 10, then use a stitch size 9 for the band.

On any sweater, it will look much neater if you match the pattern on your shoulders. Unravel the scrap yarn as the stitches are easier to see. As long as you have steamed it a little, the stitches will not unravel unless you pull on the tail of the yarn. When you are matching your pattern, sometimes you will end up with an extra stitch on each side. Just double up the stitch. When your sweater is completed, it doesn't show.

The majority of the time, the patterns that you see in this book are numbered 901, 902, 903, etc. When you are transferring your patterns from your machine to the floppy disk, the floppy disk will pick up every pattern that is stored in your knitting machine memory (it will not pick up the 555 patterns) starting with the highest number. For this reason, before you program a new sweater pattern, you should close out your previous patterns first if you don't want them on the same track. If I have 4 different patterns for one sweater, I want them all stored on the same track. The floppy disk will program all variation switches on the highest number only, so if you want variation switches programmed for each one of your patterns, then each pattern would have to go on a separate track.

Norma Sweet of Tacoma, Washington, gave me this tip on finishing necklines many years ago. It hides a multitude of sins. This is on every machine knit neckline that I do.

NECKLINE FINISHING: After picking up your neckline stitches, leave the stitches in the hooks of the needles. Pull all of the needles to holding position. Make sure the end or tail of your yarn is on the right. Pull out enough yarn so that you don't run out. Starting from left to right, latch tool on behind your neckline stitches. When finished, with your ruler push your neckline stitches back against your latch tooled on stitches (2 stitches will now be on each needle). Again, with your ruler, push your needles back just far enough so that the latches stay open. Be-

3rd page of Hints and tips

cause Piropo is too heavy for the G carriage to knit 2 stitches at a time, you will have to hand knit the stitches back. With your yarn that is on the left, hand knit each stitch back by putting the yarn in the hook of the needle, and with your thumb pulling the needle back to working position, try to make the hand knit stitch about the same size as your G carriage stitch would be. The yarn will now be on the right side and you're ready to start knitting the band with the G carriage. To close the band, pick up the 1st row of rib stitches. It isn't necessary to use a marking thread as the stitches are very easy to see.

Please combine these directions with the NECKLINE FINISHING on all of the patterns. It was too lengthy to include on each pattern.

Thank You again, Norma, for this tip.

When you are finished with the programming (input) on your KH930 or KH940, instead of using the Check key to check your pattern, cast on the amount of stitches needed for pattern width, set your machine for 2 color knitting and knit 1 full pattern repeat. If there is a mistake, it is very easy to find and correct, and it saves time by not having to go through each pattern row by row which can be very time consuming if the pattern is a very long one.

Note: A lot of the patterns in this book can also be used for 2 color knitting. You will have long floats on some, but it is very easy to latch tool them up.

After numerous stitch gauges I found that my G carriages knit to within 1-2" of each other in both width and length. Once I became familiar with this, I stopped taking stitch gauges to save time. The sweaters can be worn either oversized or body fitting, so 1-2" doesn't make too much difference to me. Until you become familiar with how your G carriage knits in Piropo (for size) or for other yarns you may use, it would be a good idea to take a stitch gauge. After you finish your stitch gauge, go one more step and try drawing your pattern measurements onto your knitleader sheet.

As almost everyone's arm length is different, it is very important to take your measurements before beginning your sweater. Be sure to subtract the amount of drop over the shoulder from your arm length, so the sleeve won't be too long.

Don't try to change a needle on your knitting machine while the Garter Carriage is on the needle bed. When you pull out the needle bar, the needles pop up and catch underneath the Garter Carriage. It took me about 30 minutes to pry them loose.

You will notice on some of the sweaters that the sleeve is very full right above the cuff. When time is running short, and I don't want to spend time increasing, I cast on the full amount of stitches that you will have at the top of the sleeve, then knit stra-

4th page of Hints and tips

ight. Your cuff will be knitted separately, then taken off your machine with waste yarn or a garter bar. Instructions will be listed with patterns that are showing a full sleeve.

You will see on a few patterns that I will knit an uneven number of rows, press the memo button, then knit one row to the right before starting the band. The reason for this is because the 1st row of the band is always garter stitches. If you have a lot of garter stitches in the row preceding the 1st row of the band, it will make the band look very uneven. On your KH930 or KH940, by pressing the memo button, it makes a knit stitch on the right side, (front) but doesn't show. It makes the band look more neat. To get stockinet stitch on the 910 and 950 machines, knit with the pattern case turned off. For the punchcard machines, put a blank card into the machine and lock on row 1.

One size was included with each pattern because it is very easy to make a larger or smaller size by increasing or decreasing stitches. To make a smaller or a larger size, either increase or decrease 6 to 6.1/2 stitches per inch for width. To make a longer or shorter sweater, either increase or decrease 9 to 10 rows per inch. When you do this, keep in mind the pattern length itself so that you will have a complete pattern when you are finished. You can then adjust your sweater length by changing the amount of rows in the ribbing on either the sleeve or sweater body.

Programming mirror image on the KH930. Example: Pattern width is 60 stitches wide. Press #2 Mirror image and use Selector #2 with 2 repeats. When you program mirror image on your machine, your machine automatically sets the 1st needle position at 60, because that is the stitch width of your pattern. Anything that you cast on beyond the width of 60 stitches each side will be knit stitches on the front. This makes it very easy to enlarge any mirror image pattern.

If your G carriage should jam, unravel the row or rows needed, press the CR key, enter the number of unraveled rows, then press the CR key again. Even though you have followed the proper procedure, your G carriage will pick up wrong stitches unless you first place the carriage outside the right turn mark to re-memorize the row.



When a new track number is programmed into your machine, it automatically erases all patterns that are in your knitting machines memory. It will erase only the patterns that you have input into the machine yourself, whether by hand or floppy disk. (555 patterns cannot be erased). If you have patterns in your machines memory that you want saved, transfer them first onto a floppy disk.

Use the green ruler that comes with the Knit Radar from Studio to get your stitch gauge. Use the S side for stitches and the R side for rows. Take your regular stitch gauge as listed in all knitting



5th page of Hints and tips

machine instruction books, which will be 40 stitches wide and 60 rows long. When you measure this swatch, the measurement that you get will be for 4", so divide it by 4 for stitches and rows per 1 inch.



Directions for all patterns are given for the KH930 only. A minimum of instructions are given for the 910 and 950 machines as all sweaters were knitted on the KH930 or the Punchcard machines. Please check your instruction manuals for 910 and 950 programming. Instructions were not given for the Punchcard machines as they are always the same, which is all over programming.

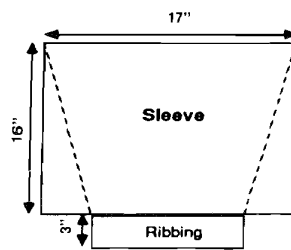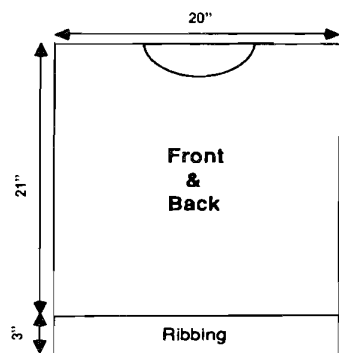



Small

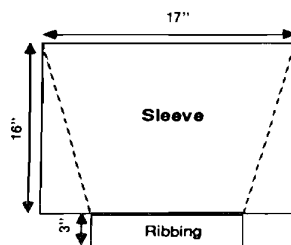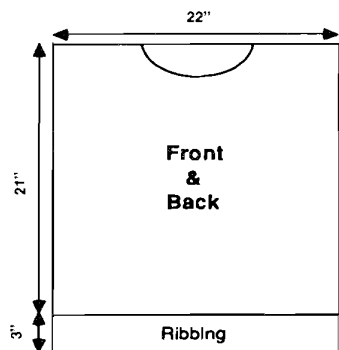



Medium

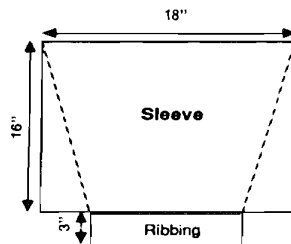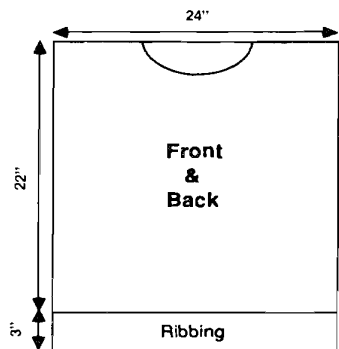

Large

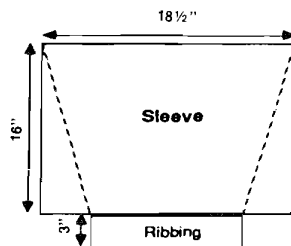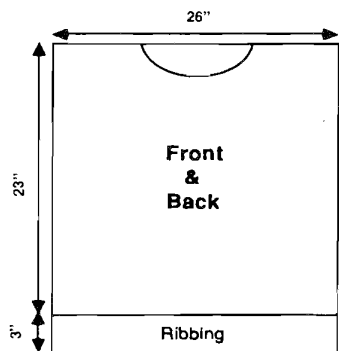

X Large

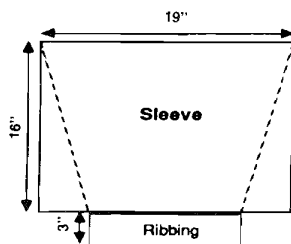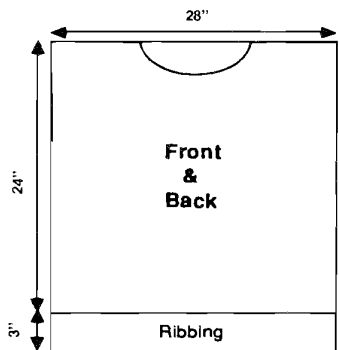

X X Large

P.P.D. AND BOOK CHANGES

The Millor Seminar in Oregon sponsored by Marge Bandlow of Knitcraft turned out to be a great learning experience for me in which I learned how to use my P.P.D. What a wonderful accessory for the Brother KH930 and KH940. The designing capabilities are limitless. Because the designing is so much faster, this lady got carried away with designing some larger patterns.

In this book on Garter Carriage patterns, there are a few of the traditional Fisherman Gansey sweaters. The many wonderful letters that I have received from you gave me the inspiration to go beyond the Gansey's. My hope is that you will enjoy them as much as you have enjoyed the Gansey's.

The P.P.D. prints a page only 50 stitches by 75 rows. Whenever possible, if the pattern isn't too much longer than the 75 rows, they have been pasted together to make the patterns easier to follow when you are inputting these patterns into the knitting machine yourself.

On the longer patterns, always check the printing order when inputting your own for exact placement. (Printing order is shown on the bottom of this page).

Neck decreases were simplified in this book to make it easier for you on the decreasing. They look just as good and it doesn't take nearly as long.

In this book, armholes have been made with less ease. The original Schematics from the Gansey books were left as before for the ladies that still want the wider sleeves. To make the sleeve as full as it shows on the Schematics, add about 2 to 3 extra inches of ease. This will mean a change in the increases, which can easily be accomplished with your adding machine or calculator. From all of the letters that I have been receiving, it's running about 50-50 as to women's preference on wide or more narrow armholes.

Your blank cards for punchcard machines will always start with 2 rows of punched holes. **ALWAYS** start recording your pattern on the very 1st row after the 2 punched holes. Repeat each punchcard pattern exactly as shown until you have at least 32 rows so you will be able to clip your card together. However many times you have to repeat the pattern, **ALWAYS** begin and end exactly as shown. After you have finished your last complete pattern repeat, punch 2 full rows of holes. Cut off the remaining card above your 2 punched rows.

Variations of the longer patterns were made for the 24 stitch wide Punchcard machines. If you have the floppy disk, **ALL PUNCHCARD PATTERNS** are also programmed on the disk.

PLEASE FOLLOW THE PRINTING ORDER WHEN YOU ARE INPUTTING THESE PATTERNS INTO THE KNITTING MACHINE YOURSELF. 1-1, 1-2, 2-1, 2-2, 3-1, 3-2 are all separate pages of the same pattern. Each page holds only 50 stitches by 75 rows. Example: Your pattern will be 110 stitches wide and 100 rows long. Stitches 1 through 50 will be on page 1-1. The 51st stitch will start on 2-1, the 101 stitch will start on 3-1, etc. 75 rows will be on 1-1. The 76th row will start on 1-2, 2-2 and 3-2, etc.

1-2	2-2	3-2
Top of pattern		
Bottom of pattern		
1-1	2-1	3-1

Pattern #1

DIAMONDS AND TREE OF LIFE

All ribbing: Stitch size 8

Body & sleeves: Stitch size 10 Size: Medium Yarn: Piropo

KH930 and KH940 - #2 Selector - Set for single motif with 1 repeat.
KH910 - Program your pattern width starting with stitch #12 through stitch #68 only. Only your side pattern will be eliminated.

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

BACK: Cast on 130 stitches. Rib in 2 x 2 for 32 rows.

RC000 - Pattern #901 At RC 118 put in markers for beginning of underarm. Continue knitting to RC 173. KH930 Press memo button. Knit 1 row. Cancel memo button. KH910 - Turn off pattern case. Knit 1 row. Turn back on.

RC 000 Pattern #902 - KH930 and KH940 Selector #1 - KH910, use all over patterning. Knit 42 rows.

At completion, starting with stitch #24, scrap off for shoulder. Scrap off 46 stitches for center neckline (23 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as for the back until you are finished with Pattern #901.

NECKLINE SHAPING: RC000 - Pattern #902 - With ravel cord, knit all stitches to the left of 0 back to out of work position. To the right of 0, knit back 8 stitches, then 1 stitch every row until 23 stitches are in out of work position. Knit straight until RC 42. Take your shoulder off with waste yarn.

Back to G carriage and beginning neckline shaping. KH930 Carriage outside right turn mark. KH910 Start back on row #1. RC000 Shape left side same as for the right, except reverse all shapings. At RC 42, scrap off with knit carriage. Bring all neckline stitches into working position and scrap off with waste yarn.

SLEEVE: Cast on 64 stitches. Rib in 2 x 2 rib for 32 rows.

RC000 Pattern #901 - Increase 1 stitch each side when ribbing is completed, then 1 stitch every 6 rows until 114 stitches. You will still be increasing into your next pattern. KH930 Knit until RC 131. Push memo button and knit 1 row. Cancel memo button. KH910 Knit 1 row with pattern case turned off.

RC000 Pattern #902 - Knit 29 rows. Scrap off with knit carriage. Sleeve length: 161 rows.

FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 116 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows.


2nd page of Pattern #1

At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Rehang the body of sweater, starting at markers for underarm. With the right side facing you, hang on 114 needles and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove waste yarn, then pull the new stitch in the hook through the needles on sweater. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.


Block very little, mainly the seam area as you don't want to block out your pattern. Block just enough to shape.

DISC No. = 3 TRACK No. = 1 PAGE No. = 1 PATTERN No. = 902
STITCHES = 4 ROWS = 7 PRINTING ORDER (1- 1)

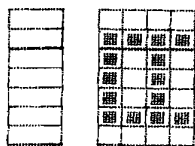

DISC No. = 3 TRACK No. = 1 PAGE No. = 1 PATTERN No. = 901
STITCHES = 79 ROWS = 84 PRINTING ORDER (1- 1)

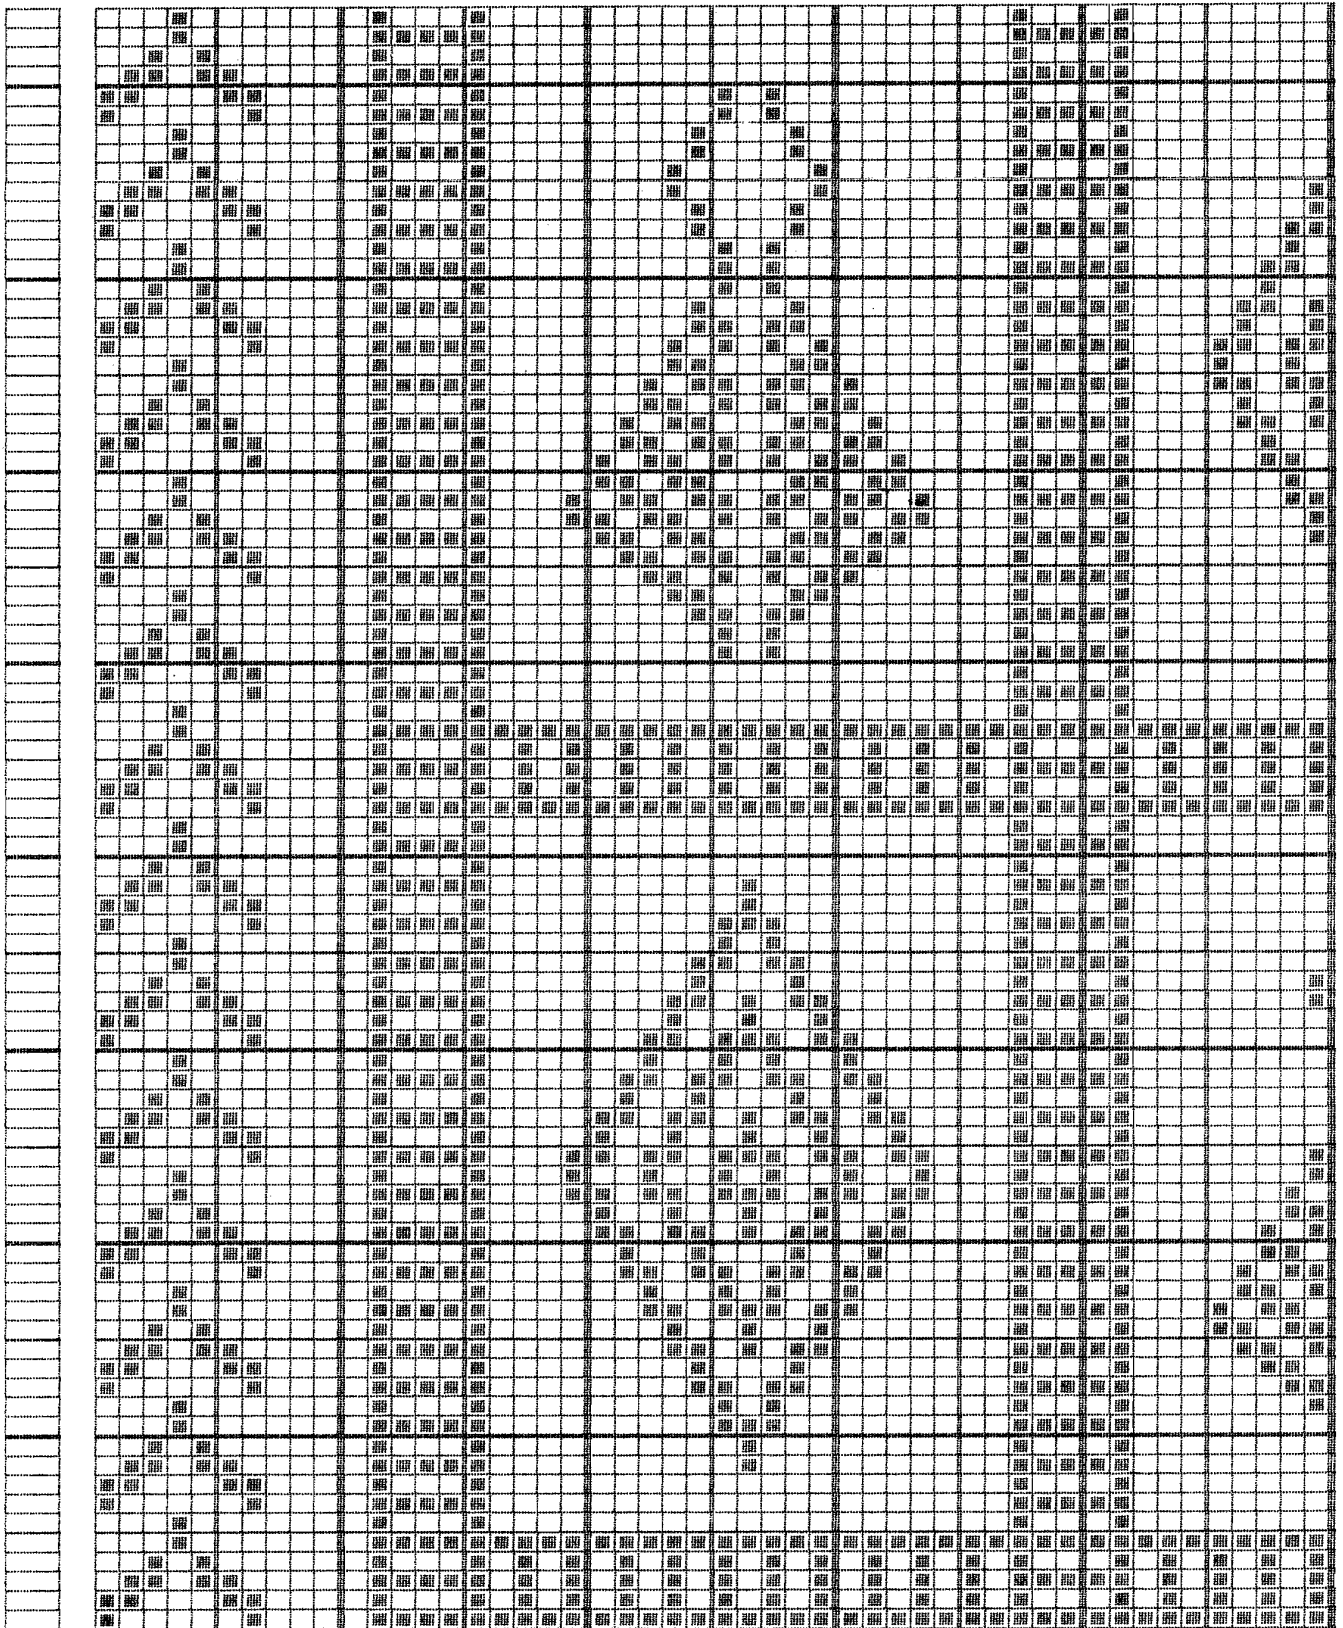

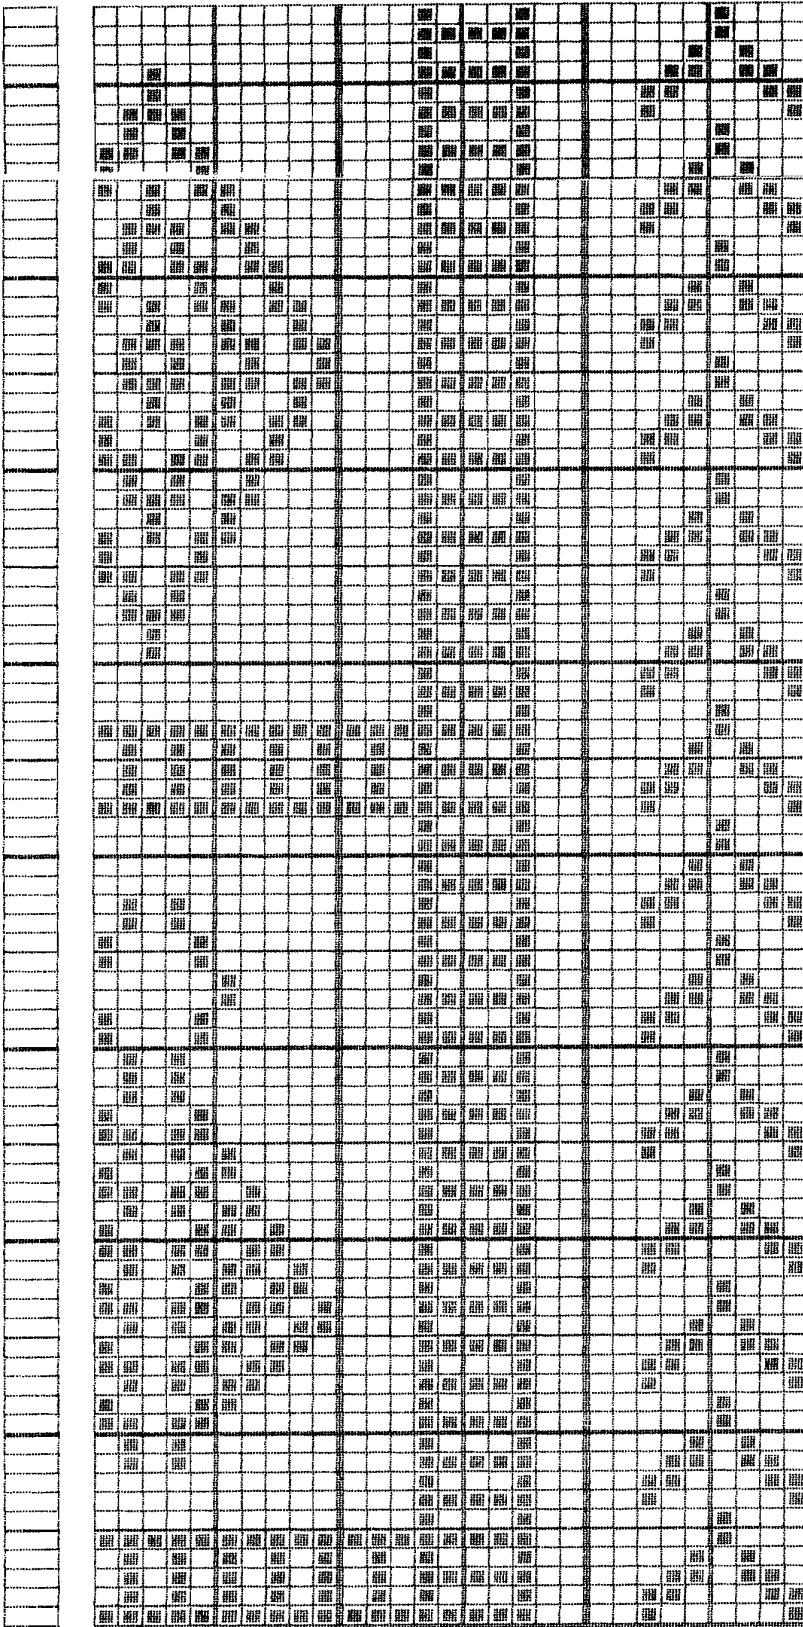

Pattern #2

SEED STITCH AND DIAMONDS

All ribbing: Stitch size 8

Body & Sleeves: Stitch size 10 Size: Ex. Small Yarn: Piropo

KH930 - Selector #1 - KH910 and Punchcard machines, use all over patterning. Electronic machines - change 1st needle position to Yellow 20

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

BACK: Cast on 116 stitches. Rib in 2 x 2 for 32 rows. When ribbing is completed, decrease 1 stitch on the right side only.

RC000 - Electronics, use Pattern #901 - Punchcard machines, use Pattern #902. Knit to RC 98. Put in markers for beginning of underarm. Continue knitting to RC 192.

At completion, starting with stitch #24, scrap off shoulder. Scrap off 46 stitches for center neckline (23 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as for the back until RC 158.

NECKLINE SHAPING: KH930 Push M button. KH910 - Mark your row on mylar sheet at L window on left side. With ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 8 stitches, then 1 stitch every row until 23 needles are out of work. Knit straight until RC 192. With knit carriage, scrap off right shoulder.

Using your G carriage again, start at beginning of neckline shaping. Set RC at 158. Push M button. KH910 - make sure your mark shows at L window before you start your 2nd half. Shape neckline same as for the right except reverse all shapings. At completion, scrap off with knit carriage. Bring all neckline stitches into working position and scrap off with knit carriage.

SLEEVE: Cast on 64 stitches. Rib in 2 x 2 for 32 rows.

RC 000 Electronics, use Pattern #901. Punchcard machines, use Pattern #902. Increase 1 stitch when ribbing is completed, then 1 stitch each side every 6 rows until 106 stitches. Knit straight until RC128. Take off with scrap yarn. This sleeve is 17" long. (Note: The shorter length is because of the height of my granddaughter). 19" length: Increase 1 stitch each side when ribbing is completed, then 1 stitch each side every 6 rows 11 times, then 1 stitch each side every 7 rows 10 times. Scrap off at RC 144. Knit 36 rows for the cuff instead of 32.

FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 112 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows,


2nd page of Pattern #2

then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Close 2nd shoulder.


Starting at your underarm markers, rehang the body of sweater on 106 needles. Have the right side facing you and center your shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When you are finished hanging the stitches, remove your waste yarn, then pull the new stitch in the hook through the needles on sweater. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.

Block very little, mainly the seam area as you don't want to block out your pattern.

DISC No. = 3 TRACK No. = 2 PAGE No. = 2 PATTERN No. =901
STITCHES = 34 ROWS = 16 PRINTING ORDER (1- 1)

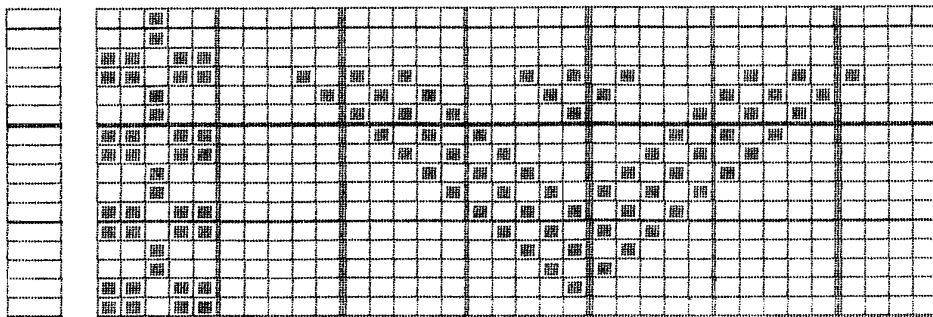

DISC No. = 3 TRACK No. = 2 PAGE No. = 2 PATTERN No. =902
STITCHES = 24 ROWS = 16 PRINTING ORDER (1- 1)

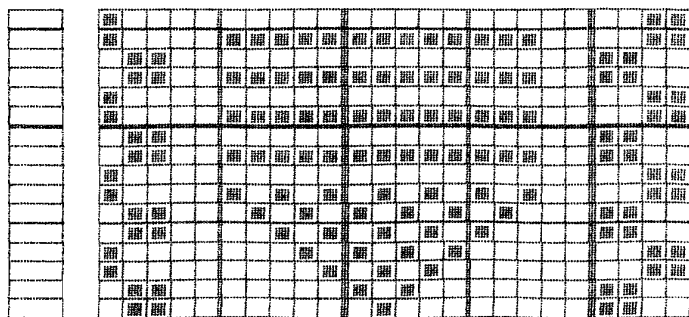

Pattern #3

DIAMONDS AND CABLES

All ribbing: Stitch size 8

Body & sleeves: Stitch size 10 Size: Small - Medium.

Yarn: Piropo

KH930 and KH940 - Selector #1. KH910 - Set for all over patterning. All machines, change 1st needle position to Yellow 41.

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

Before you start your cables, by looking at the printout, it will be easier to understand the placement. Your cables will **ALWAYS** start on the 4th row **AFTER** the 2 garter stitch rows.

SWEATER LENGTH: Modeled sweater is 27" long as written with 6 pattern repeats. For Shorter Length: 23" long, use 5 pattern repeats. Set your garter carriage outside the right turn mark, set row counter at 38. Use your up arrow button until Pattern row 39. If you want more than 23" in length, knit 10 or more extra rows in the ribbing. Now proceed with your written directions.

BACK: Cast on 136 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #901 - Knit 230 rows. (You will start your 1st series of cables on Row Counter #6). Each box that you see to the left and right of the large diamonds will be your cables. In each box, each of the 4 cables will be 4 stitches wide. When you cross your cables, always replace the right hand stitches first, then knit 6 rows. You will cross your cables 6 times within each box.

At RC 138, put in markers for beginning of underarm. Continue knitting to RC 230.

(Series #1) Left of 0 - cable on needles

18-19-20-21 - 23-24-25-26 - 28-29-30-31 - 33-34-35-36

Right of 0 - cable on needles

17-18-19-20 - 22-23-24-25 - 27-28-29-30 - 32-33-34-35

After your 1st series of cables are complete, knit to Row Counter 44.

(Series #2) Left of 0 - cable on needles 2-3-4-5 - 7-8-9-10

44-45-46-47 - 49-50-51-52 - 54-55-56-57 - 59-60-61-62

Right of 0 - cable on needles

1-2-3-4 - 6-7-8-9 - 43-44-45-46 - 48-49-50-51 - 53-54-55-56

58-59-60-61

After you finish each block of cables, knit to:

Row counter 82 - follow Series #1

Row counter 120 - follow Series #2

Row counter 158 - follow Series #1

Row counter 196 - follow Series #2

2nd page of Pattern #3

At completion, starting with stitch #24, scrap off for shoulder. Scrap off 46 stitches for center neckline (23 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit as for back until RC 190 of Pattern #901.

NECKLINE SHAPING: KH930 Push M button. Using a ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back to A position 8 stitches, then 1 stitch every row until 23 stitches are in out of work position. While shaping your neckline, continue crossing your cables every 6 rows. At RC 230, scrap off right shoulder with waste yarn.

Back to the G carriage and beginning neckline shaping. Set RC at 190. Push M button. Shape left neckline same as the right, except reverse all shapings. Scrap off shoulder stitches. Bring all neckline stitches into working position and scrap off with waste yarn.

SLEEVE: Cast on 64 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #902 - Selector #1 - KH910 - Use all over patterning. Change 1st needle position to Yellow 15. Knit 154 rows. Increase 1 stitch each side after ribbing is completed, then 1 stitch each side every 6 rows until 112 stitches. At RC 154, scrap off with waste yarn.

FINISHING & NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 116 stitches from front and back neckline. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Starting at your underarm markers, rehang the body of the sweater on 112 needles with the right side facing you and centering the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the the stitches just clear the latches, then latch tool off around the sinker posts.

3rd page of Pattern #3


BLOCKING: Do not put any pressure on your sweater with your iron or steamer. When you are blocking, steam 1 section at a time. Let the steam hover over the cables until hot, then with your fingers pinch the cables together. Steam the diamonds until hot, then with your fingers, pat the yarn surrounding the diamonds in an outwards motion, patting in the direction of the cables. The way you block it makes the swirls down the front.

DISC No. = 3 TRACK No. = 3 PAGE No. = 3 PATTERN No. =902

STITCHES = 26 ROWS = 38 PRINTING ORDER (1- 1)

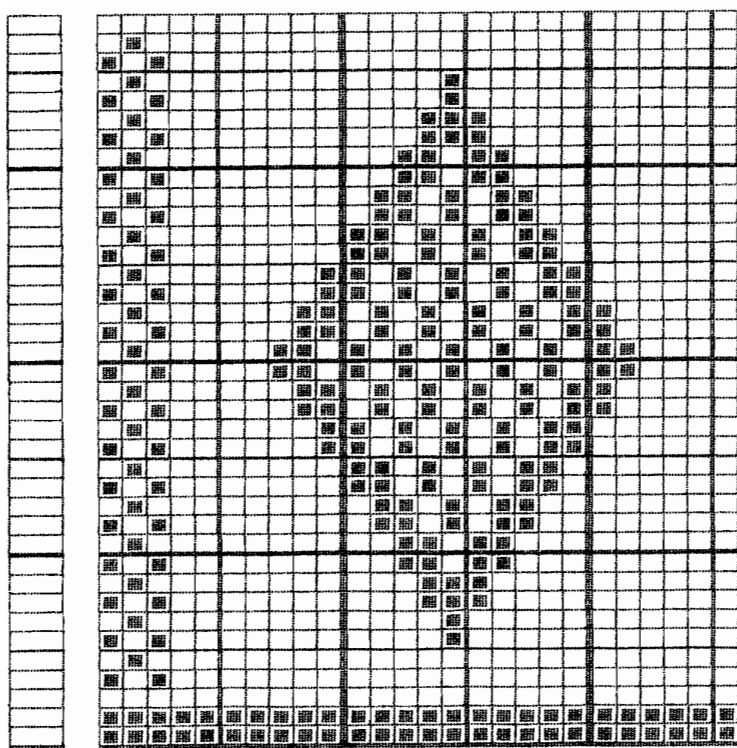

DISC No. = 3 TRACK No. = 3 PAGE No. = 3 PATTERN No. =901
STITCHES = 52 ROWS = 76 PRINTING ORDER (1- 1)

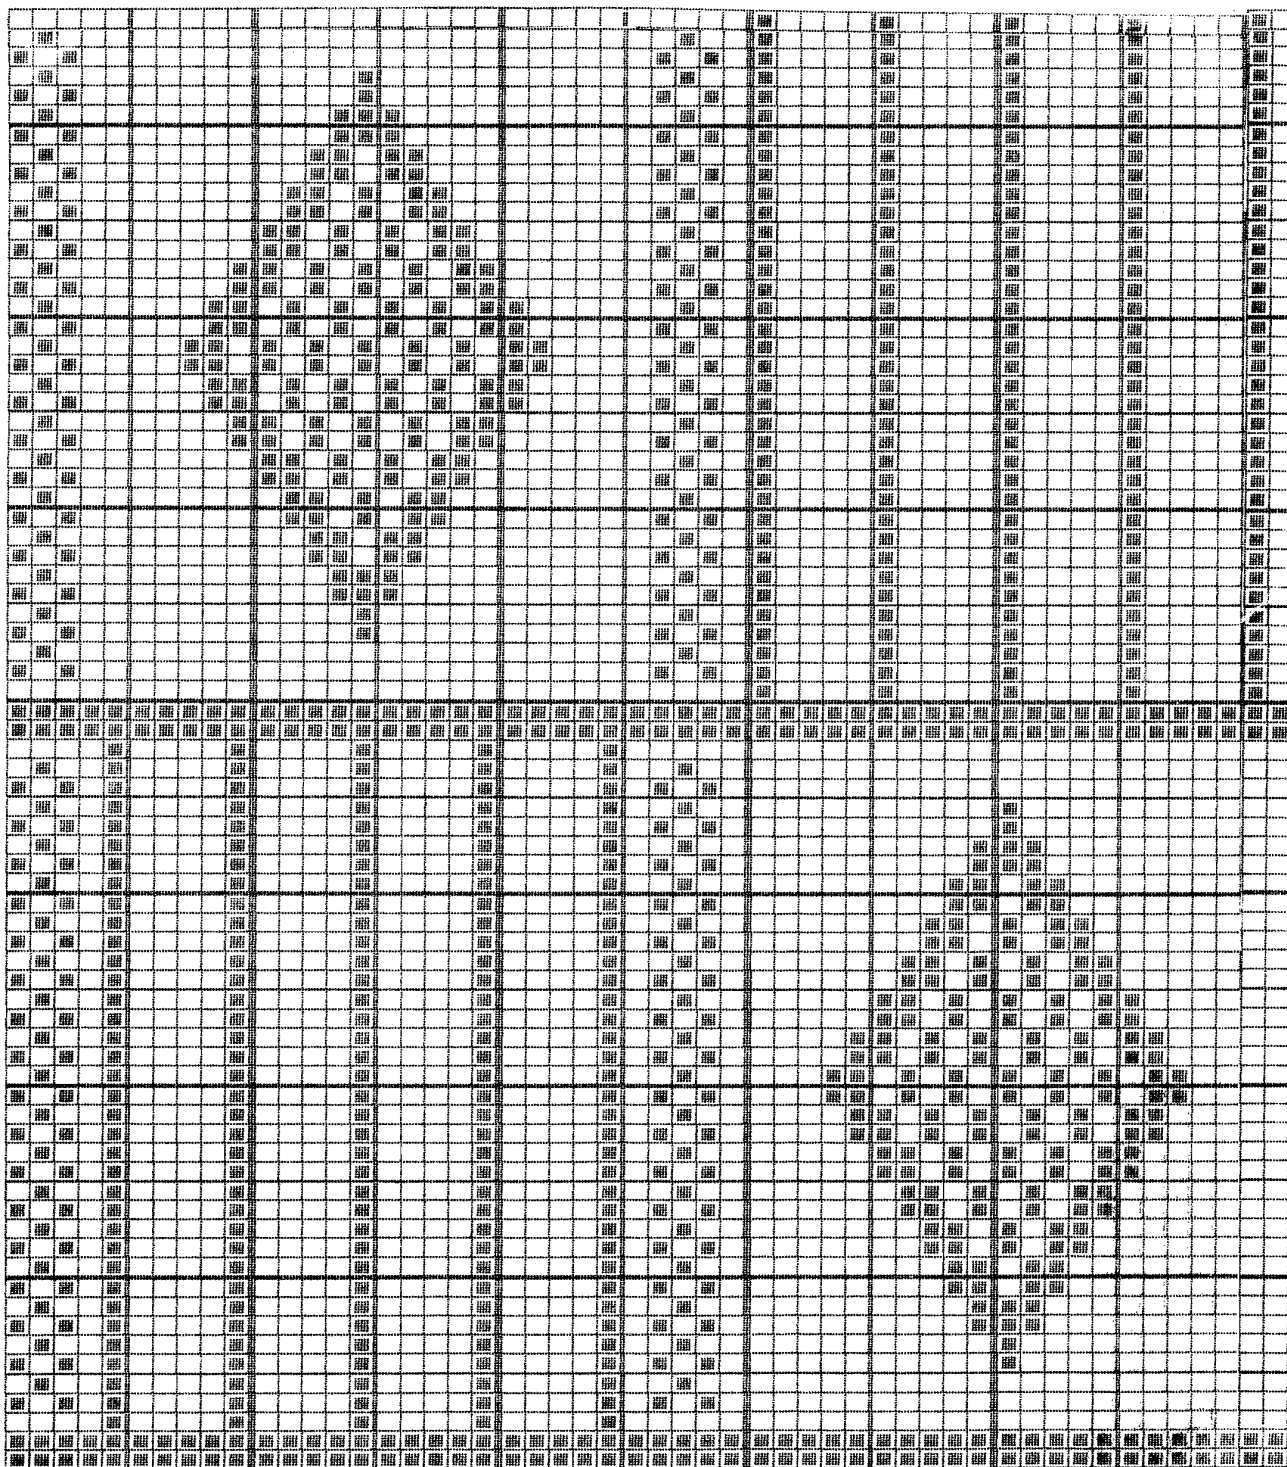

Pattern #4

HEARTS - BOXES

Ribbing: Stitch size 8

Body and sleeves: Stitch size 10 Size: Med. Yarn: Piropo

KH930 - Selector #1 - KH910 and punchcard machines, use all over patterning.

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

BACK: Cast on 132 stitches. Rib in 2 x 2 for 32 rows. After ribbing, decrease 1 stitch on the right side only.

RC000 Pattern #901 - Knit 156 rows for a length of 27.1/2" long. Knit 130 rows for a length of 24.3/4" long. (Modeled sweater length is 27.1/2" long).

RC000 Pattern #902 - (Band) Put in markers for beginning of underarm. Knit 26 rows.

RC000 Pattern #903 - Knit 64 rows.

At completion, starting with stitch #24, scrap off shoulder. Scrap off 46 stitches for center neckline (23 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as for the back until RC 30 of Pattern #903.

NECKLINE SHAPING: KH930 Push M button. With ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 8 stitches, then 1 stitch every row until 23 stitches are in out of work position. Knit straight until RC 64. Take shoulder off with waste yarn.

Using G carriage again, start at beginning of neckline shaping. Set RC at 30. KH930 - push M button. Shape neckline same as for the right, except reverse all shapings. At RC 64, scrap off with knit carriage. When finished, bring all neckline stitches into working position and scrap off.

SLEEVE: Make 2 cuffs. Cast on 64 stitches. Rib in 2 x 2 for 32 rows. Take off machine with either waste yarn or garter bar.

Make 2: With waste yarn, cast on 108 stitches. Knit about an inch, then knit 1 row of ravel cord. Proceed with directions below for sleeves.

RC 000 - Pattern #903 KH930 and KH940, with main yarn, knit 127 rows. Push memo button, knit 1 row, cancel memo button. Punchcard machines, knit 128 rows.

RC000 - Pattern #902 (Band) Knit 26 rows. Take off with waste yarn. Sleeve length: 154 rows.

2nd page of Pattern #4


Steam your sleeves very lightly, mainly the seam area. With the right side facing you, decrease 44 stitches evenly across from the cast on edge, then remove the waste yarn. You now have 64 stitches. Put rib cuff back onto these same needles. Pull the needles out until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.

FINISHING AND NECKBAND: Join front and back shoulder seam. With the wrong side facing you, pick up 112 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Start at your underarm markers and have the right side facing you. Hang the body of the sweater on 108 needles and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Scrap off with knit carriage. Repeat for 2nd sleeve.

Block very little, mainly the seam area as you don't want to block out the pattern. Block just enough to shape.


DISC No. = 3 TRACK No. = 4 PAGE No. = 4 PATTERN No. = 903
STITCHES = 24 ROWS = 16 PRINTING ORDER (1- 1)

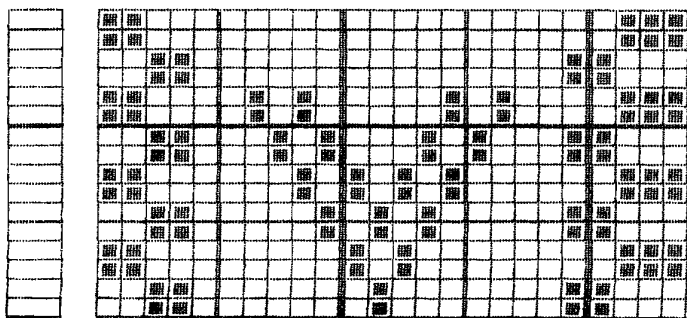

DISC No. = 3 TRACK No. = 4 PAGE No. = 4 PATTERN No. =901
 STITCHES = 24 ROWS = 52 PRINTING ORDER (1- 1)

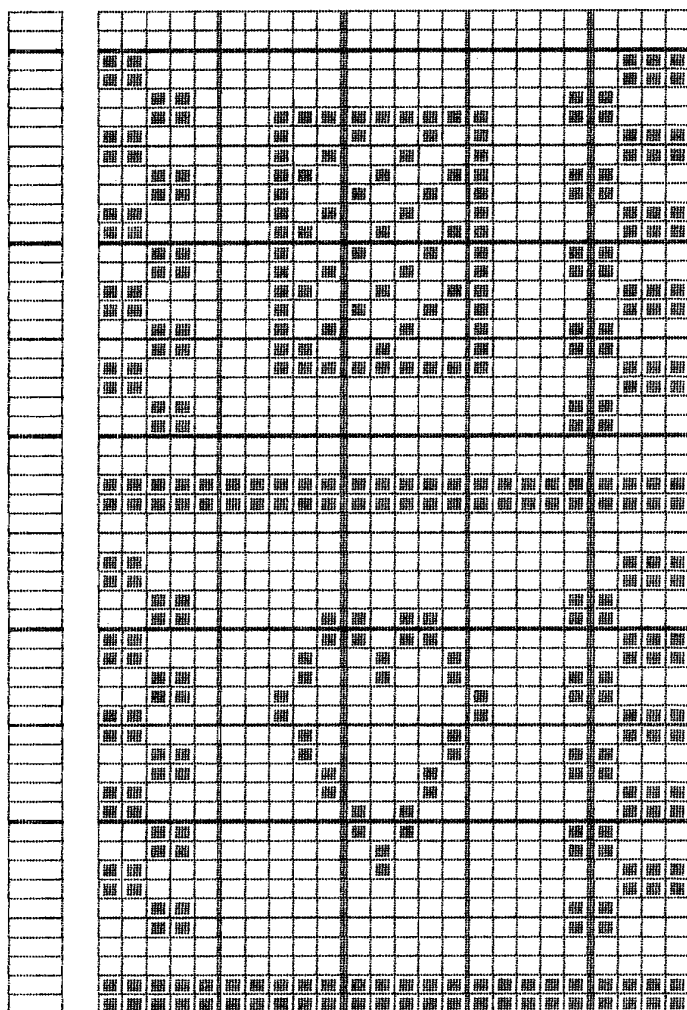

DISC No. = 3 TRACK No. = 4 PAGE No. = 4 PATTERN No. =902
 STITCHES = 24 ROWS = 26 PRINTING ORDER (1- 1)

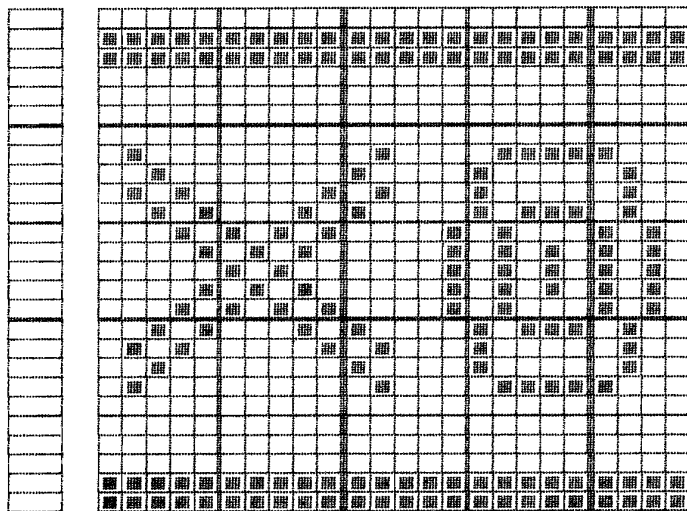

Pattern #5

DIAMONDS - ZIG ZAGS

All ribbing: Stitch size 8

Body and Sleeves: Stitch size 10 Size: Large Yarn: Piropo

KH930 - Selector #1 - KH910 and Punchcard machines - use all over patterning.

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

BACK: Cast on 144 stitches. Rib in 2 x 2 for 32 rows.

RC000 - Pattern #901 - KH930 Knit 119 rows. Press memo button. Knit 1 row. Cancel memo button. Other machines, knit 120 rows.

RC000 - Pattern #902 - (Band) Put in markers for beginning of underarm. Knit 36 rows.

RC000 - Pattern #903 - Knit 72 rows.

At completion, starting with stitch #25, scrap off shoulder with knit carriage. Scrap off 48 stitches for center neckline (24 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit the same as the back until RC 32 of Pattern #903.

NECKLINE SHAPING: KH930 and KH940 Push M button. KH910 - Mark your row on mylar sheet at L window on left side. Using a ravel cord, knit back to A position all needles to the left of 0. To the right of 0, knit back 8 stitches, then 1 stitch every row until 24 stitches are in A position. Knit straight until 72 rows on row counter. Remove shoulder on waste yarn.

Using G carriage again, start at beginning of neckline shaping. Set RC at 32. Push M button. 910 - make sure your mark shows by the L window before you start your 2nd half. Shape neckline same as the right except reverse all shapings. Scrap off shoulder stitches. Bring all neckline stitches into working position and scrap off.

SLEEVE: Cast on 68 stitches. Rib in 2 x 2 for 32 rows.

RC000 - Pattern #903 - Knit 126 rows. Increase 1 stitch each side when ribbing is completed, then 1 stitch each side every 6 rows until 118 stitches. You will still be increasing as you go into the band.

RC000 - Pattern #902 - (Band) Knit 36 rows. Scrap off with waste yarn. Sleeve length: 162 rows.

FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 118 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until


2nd page of Pattern #5

14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Close 2nd shoulder.


Rehang the body of the sweater on 118 needles starting at the 1st row of the band. Have the right side facing you and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.

Block very little, mainly the seam area as you don't want to block out your pattern. Block just enough to shape.


DISC No. = 3 TRACK No. = 5 PAGE No. = 5 PATTERN No. = 902
STITCHES = 24 ROWS = 36 PRINTING ORDER (1- 1)

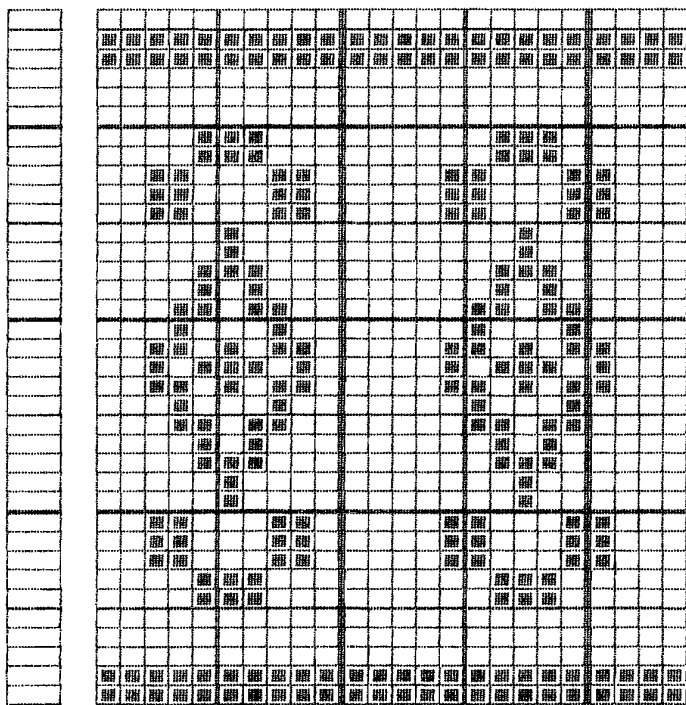

DISC No. = 3 TRACK No. = 5 PAGE No. = 5 PATTERN No. = 901
 STITCHES = 24 ROWS = 60 PRINTING ORDER (1- 1)

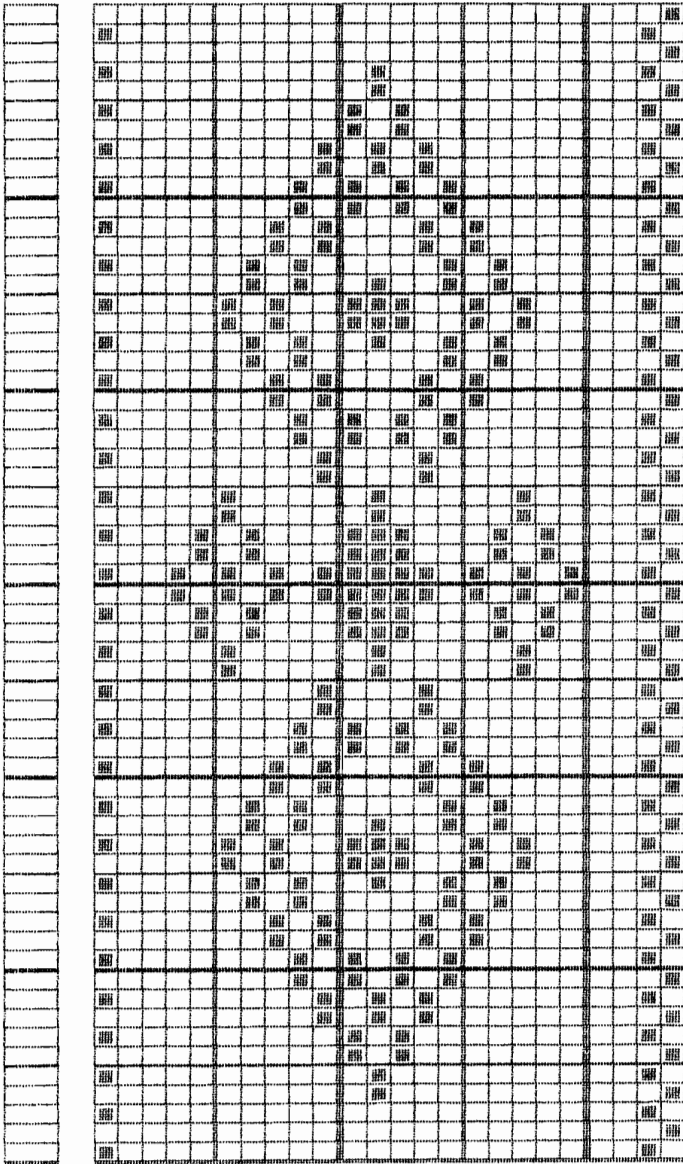

DISC No. = 3 TRACK No. = 5 PAGE No. = 5 PATTERN No. = 903
 STITCHES = 24 ROWS = 16 PRINTING ORDER (1- 1)

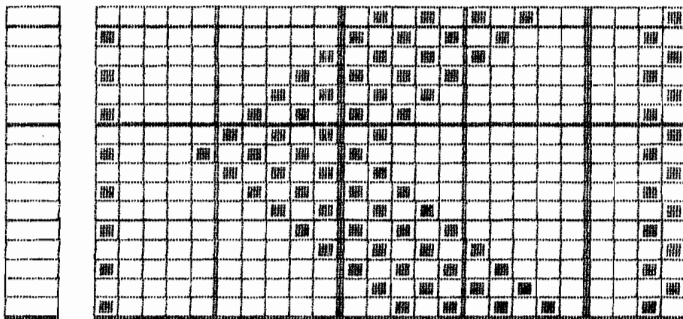

Pattern #6

DIAMONDS AND BARS

All ribbing: Stitch size 8

Body & sleeves: Stitch size 10 Size: Small Yarn: Piropo

KH930 - Selector #1 - KH910 and Punchcard machines - use all over patterning.

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

BACK: Cast on 120 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #901 KH930 and KH940 - Knit 119 rows. Push memo button. Knit 1 row. Cancel memo button. Other machines, knit 120 rows.

RC000 (Band) Use STITCH SIZE 9. Pattern #902 Put in markers for beginning of underarm. Knit 30 rows.

RC000 Pattern #903 Knit 70 rows. At the same time, start cables on the 4th row. Always replace the right hand stitches first.

To the Left and Right of 0, cable on needles 5-6-7-8 - 17-18-19-20
29-30-31-32 - 41-42-43-44 - 53-54-55-56

At completion, starting with stitch #24, scrap off shoulder. Scrap off 46 stitches for center neckline (23 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as for back until RC 32 of Pattern #903.

Keep cabling on the same needles as above.

NECKLINE SHAPING: KH930 - Push M button. Using a ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back to A position 8 stitches, then 1 stitch every row until 23 stitches are in out of work position. Knit straight until RC 70. Scrap off shoulder with knit carriage.

Using G carriage again, start at beginning of neckline shaping. Set RC at 32. Push M button. Shape neckline same as for the right, except reverse all shapings. Scrap off shoulder stitches. Bring all neckline stitches into working position and scrap off.

SLEEVE: Cast on 64 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #901 Knit 120 rows. At the same time, increase immediately after ribbing is finished, then 1 stitch each side every 6 rows until 108 stitches.

RC000 Pattern #902 (Band) Stitch size 9. Knit 30 rows. scrap off with waste yarn. Sleeve length: 150 rows.

FINISHING AND NECKBAND: Join front and back shoulder seam. With


2nd page of Pattern #6

the wrong side facing you, pick up 112 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Start at your underarm markers with the right side facing you. Rehang the body of the sweater on 108 needles and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove your waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Scrap off with knit carriage. Repeat for 2nd sleeve.

Block very little, mainly the seam area as you don't want to block out the pattern. Block just enough to shape.


DISC No. = 3 TRACK No. = 6 PAGE No. = 6 PATTERN No. =901
STITCHES = 24 ROWS = 24 PRINTING ORDER (1- 1)

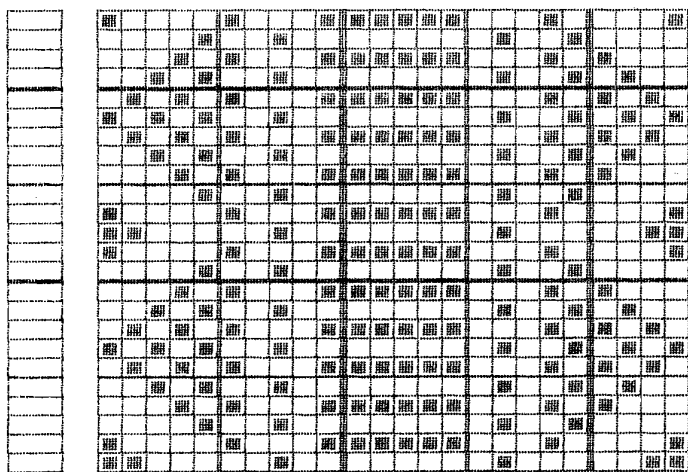

DISC No. = 3 TRACK No. = 6 PAGE No. = 6 PATTERN No. =902
 STITCHES = 24 ROWS = 30 PRINTING ORDER (1- 1)

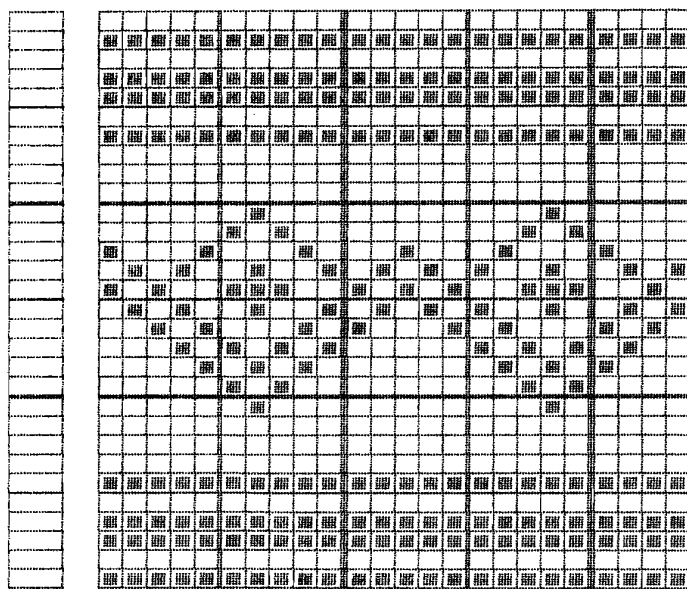

DISC No. = 3 TRACK No. = 6 PAGE No. = 6 PATTERN No. =903
 STITCHES = 24 ROWS = 24 PRINTING ORDER (1- 1)

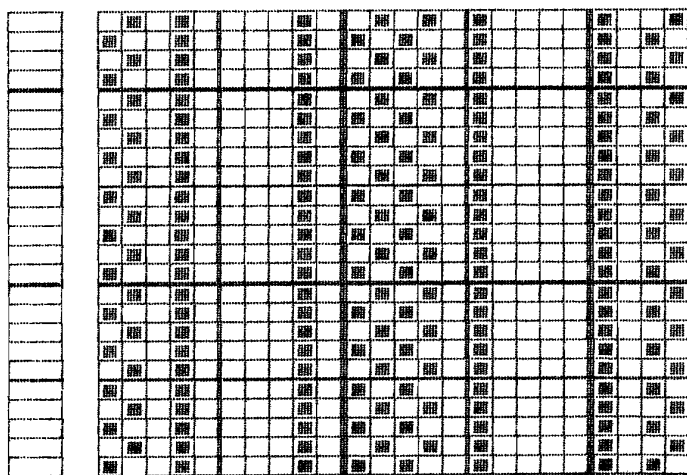

Pattern #7

BARS - HALF DIAMONDS

All Ribbing: Stitch size 8

Body & Sleeves: Stitch size 10 Size: Medium-Large

Yarn: Piropo

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

KH930 - Selector #1. KH910 and Punchcard machines: Use all over patterning.

BACK: Cast on 144 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #901 KH930 and KH940 Knit 125 rows. Press memo button. Knit 1 row. Push memo button. All other machines, knit 126 rows.

RC000 Pattern #902 (Band) Put in markers for underarm. Knit 22 rows.

RC000 Pattern #903 Knit 82 rows.

At completion, starting with stitch #25, scrap off shoulder. Scrap off 48 stitches for center neckline (24 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit as for back until RC 46 of Pattern #903.

NECKLINE SHAPING: KH930 - Push M button. With ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 8 stitches, then 1 stitch every row until 24 stitches are in out of work position. Knit straight until RC 82. Take off on waste yarn.

Using G carriage again, start at beginning of neckline shaping. Set RC at 46. Push M button for KH930. Shape neckline same as for the right except reverse all shapings. Scrap off shoulder stitches. Bring all neckline stitches into working position and scrap off with knit carriage.

SLEEVE: Cast on 68 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #903 KH930 knit 151 rows. Other machines, knit 152 rows. All machines, on RC 6, start increasing 1 stitch each side every 6 rows until 118 stitches. KH930 and KH940, at RC 151 press memo button. Knit 1 row. Press memo button.

RC000 Pattern #902 (Band) Knit 22 rows. Take off with waste yarn. Sleeve length: 174 rows.

FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 116 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows,


2nd page of Pattern #7

then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Close 2nd shoulder.


Start at your underarm markers and rehang the body of the sweater on 118 needles. Have the right side facing you and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.

Block very little, mainly the seam area as you don't want to block out your pattern. Block just enough to shape.


DISC No. = 3 TRACK No. = 7 PAGE No. = 7 PATTERN No. =901
 STITCHES = 24 ROWS = 25 PRINTING ORDER (1- 1)

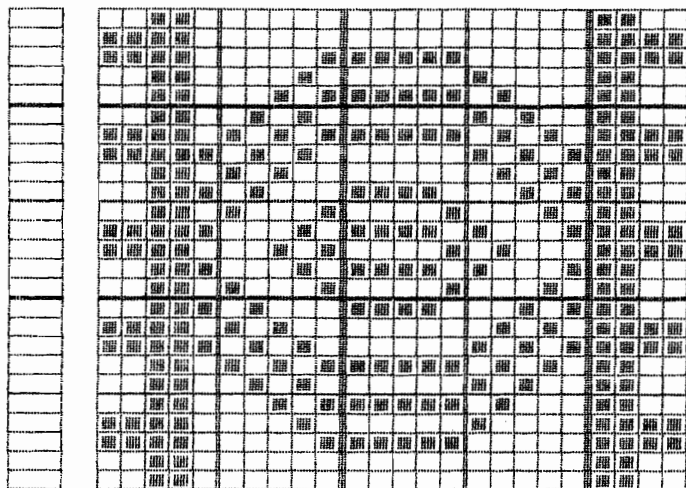

DISC No. = 3 TRACK No. = 7 PAGE No. = 7 PATTERN No. =902
 STITCHES = 24 ROWS = 22 PRINTING ORDER (1- 1)

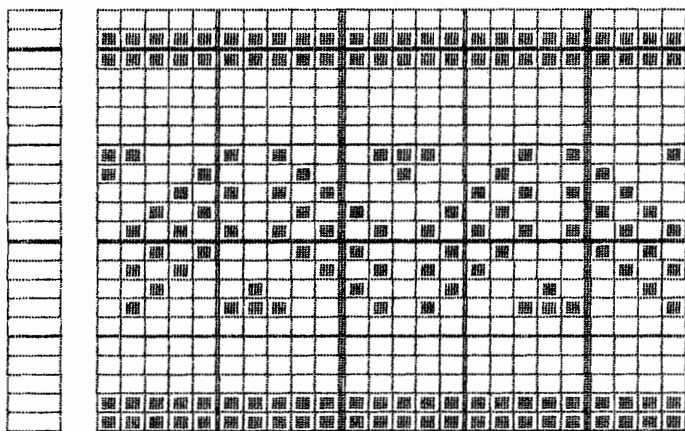

DISC No. = 3 TRACK No. = 6 PAGE No. = 7 PATTERN No. =903
 STITCHES = 24 ROWS = 10 PRINTING ORDER (1- 1)

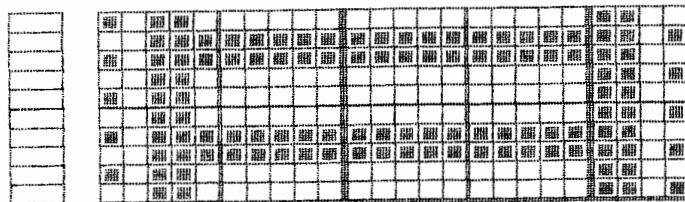

Pattern #8 SINGLE MOTIF WITH BARS - CABLES

All ribbing: Stitch size 8

Body & sleeves: Stitch size 10 Size: Ex. Small Yarn: Piropo

KH930 - Selector #1

To enlarge this sweater, set on Selector #2 (single motif with 1 repeat). Anything that you cast on beyond the 120 stitches will be knit stitches from the front.

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

BACK: Cast on 120 stitches. Rib in 2 x 2 for 32 rows. When ribbing is completed, increase 1 stitch on the right side only.

RC000 Pattern #902 Knit 60 rows. At the same time, starting with the 6th row, cable every 6 rows. Always replace the right side stitches first. Left of 0, cable on needles 48-49-50-51 and 53-54-55-56. Right of 0, cable on needles 49-50-51-52 and 54-55-56-57.

RC000 Pattern #901 At RC 72, put in markers for beginning of underarm. Continue knitting to RC 92.

RC000 Pattern #902 Put garter carriage outside the right turn mark. Push the up arrow key to start on Pattern Row #3. Knit 66 rows.

At completion, starting with stitch #23, scrap off shoulder. Scrap off 44 stitches for center neckline (22 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as back until RC 28 of Pattern #902.

NECKLINE SHAPING: KH930 Push M button. Using a ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 7 stitches, then 1 stitch every row until 22 stitches are in out of work position. Knit straight until RC 66. With knit carriage, scrap off with waste yarn.

Back to the G carriage and beginning neckline shaping. KH930 - Push M button. Set RC at 28 of Pattern #902. Shape left neckline same as for the right except reverse all shapings. When finished scrap off shoulder with waste yarn. Bring all neckline stitches into working position and scrap off.

SLEEVE: For a 20" long sleeve, follow this pattern as written below with 6 pattern repeats. For a shorter sleeve - 19" long, use 5 pattern repeats. Start your sleeve with 6 rows of Pattern #905, then start Pattern #903. You will start your cables on the 6th row of Pattern #903 and follow your pattern increases as already listed in the sleeve pattern. After your 5th pattern repeat, end with

2nd page of Pattern #8

Pattern Row #4, knit 6 rows of Pattern #905, then scrap off with waste yarn.

Make 2 cuffs. Cast on 64 stitches. Rib in 2 x 2 for 32 rows. Remove on waste yarn or garter bar.

Make 2: Cast on 80 stitches with waste yarn. Knit 1", then 1 row with ravel cord. When finished, proceed with directions below.

RC000 Pattern #903 With main yarn, knit 166 rows. At RC 6, start cables. To the Left of 0, cable on needles 10-11-12-13 and 33-34-35-36. To the Right of 0, cable on needles 11-12-13-14 and 34-35-36-37. Always replace the right hand stitches first. Start your increases on the 12th row. Increase 1 stitch each side every 12 rows 12 times until 104 stitches. At RC 166, take off with waste yarn. Repeat for 2nd sleeve.


Steam sleeves very lightly. Only let the steam hover over the top and pat into place with your fingers. With the right side facing you, decrease 16 stitches evenly across on the cast on edge for a total of 64 stitches. Remove waste yarn, then hang cuff onto these same needles. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.

FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 112 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.

Rehang the body of the sweater on 104 needles, starting at your markers for underarm. Have the right side facing you and center the shoulder seam. Keep all needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.


Block very little, mainly the seam area as you don't want to block out your pattern. Block just enough to shape.

40

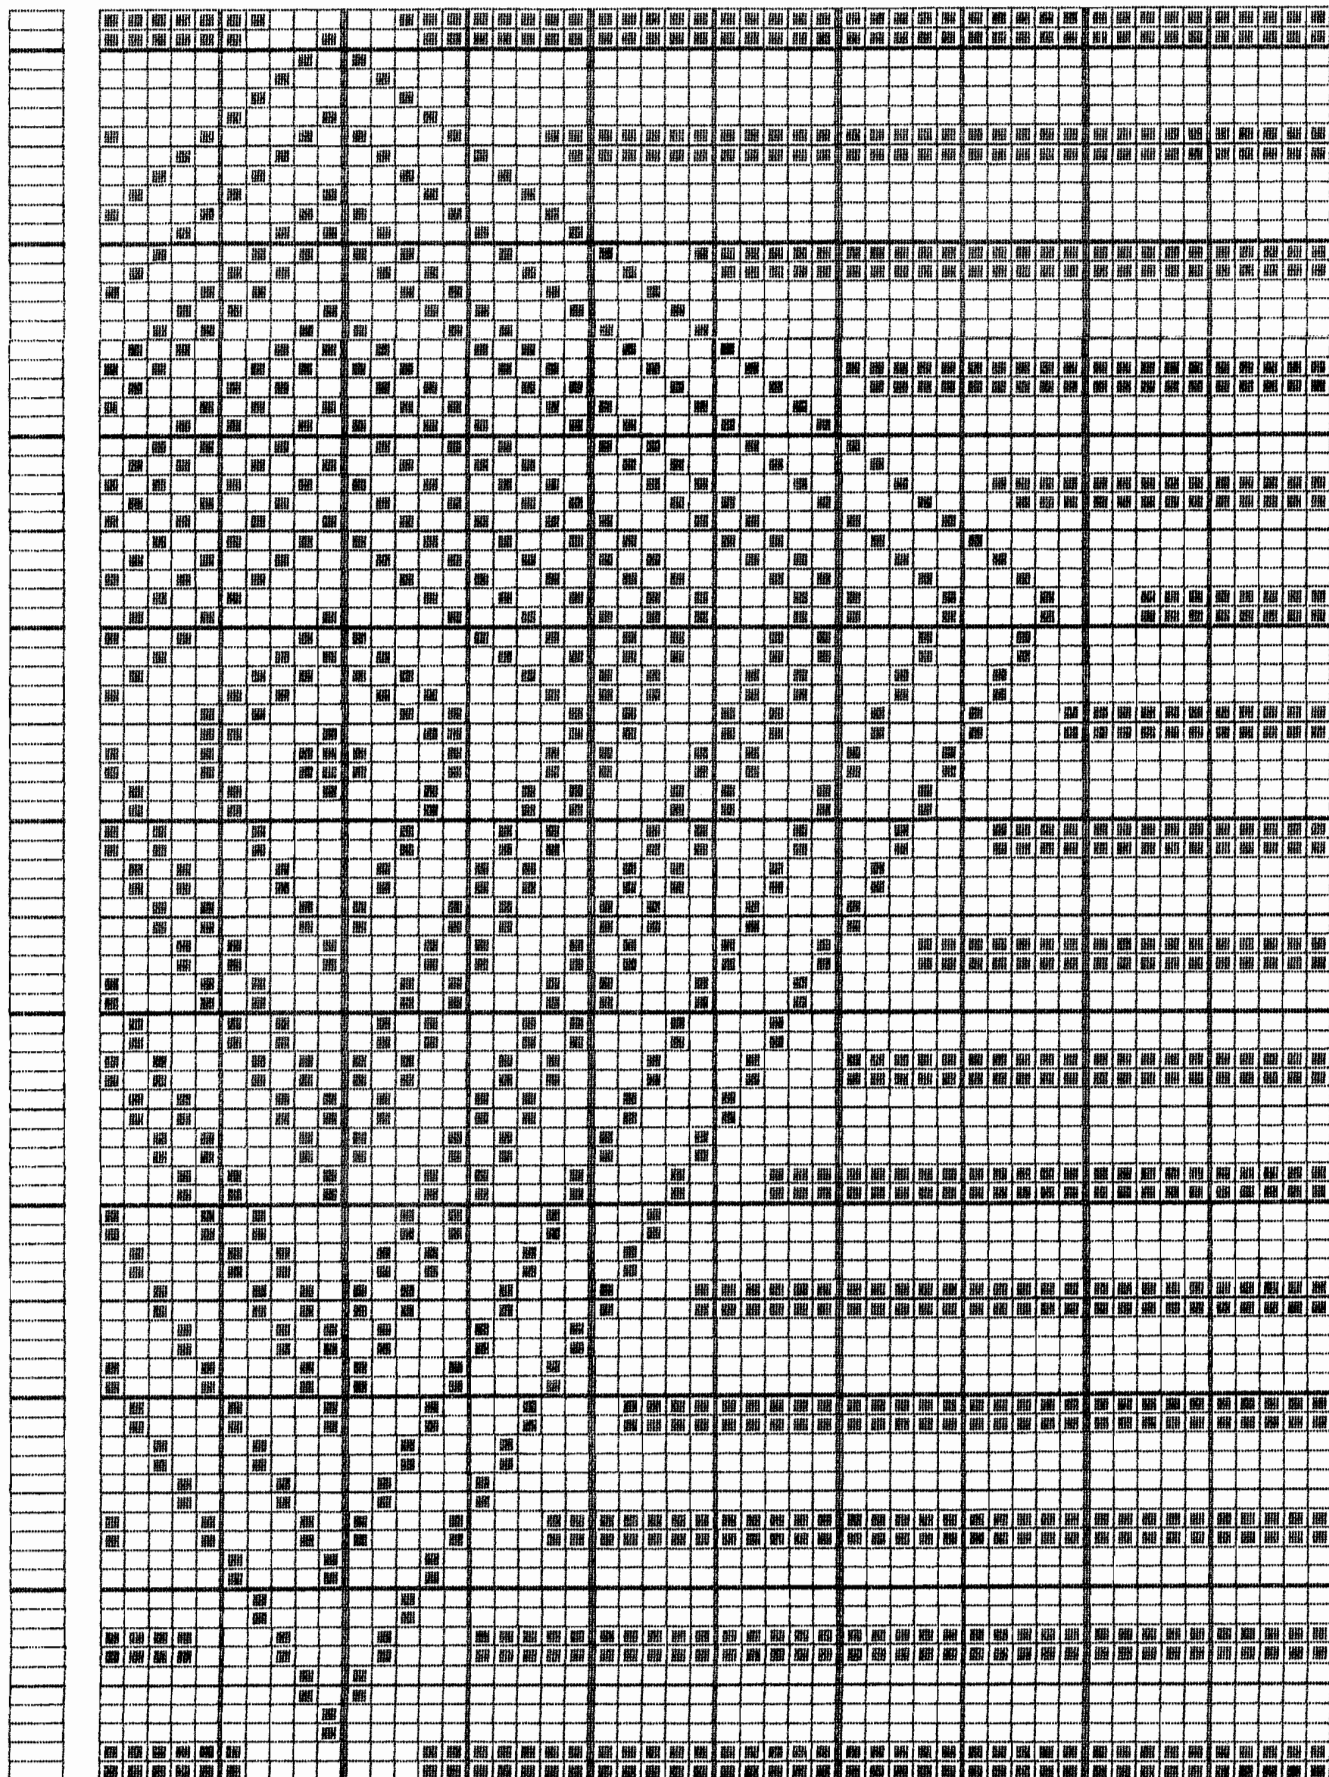


DISC No. = 3 TRACK No. = 8
STITCHES = 119 ROWS = 92

PAGE No. = 8 PATTERN No. = 901
PRINTING ORDER (3- 1)

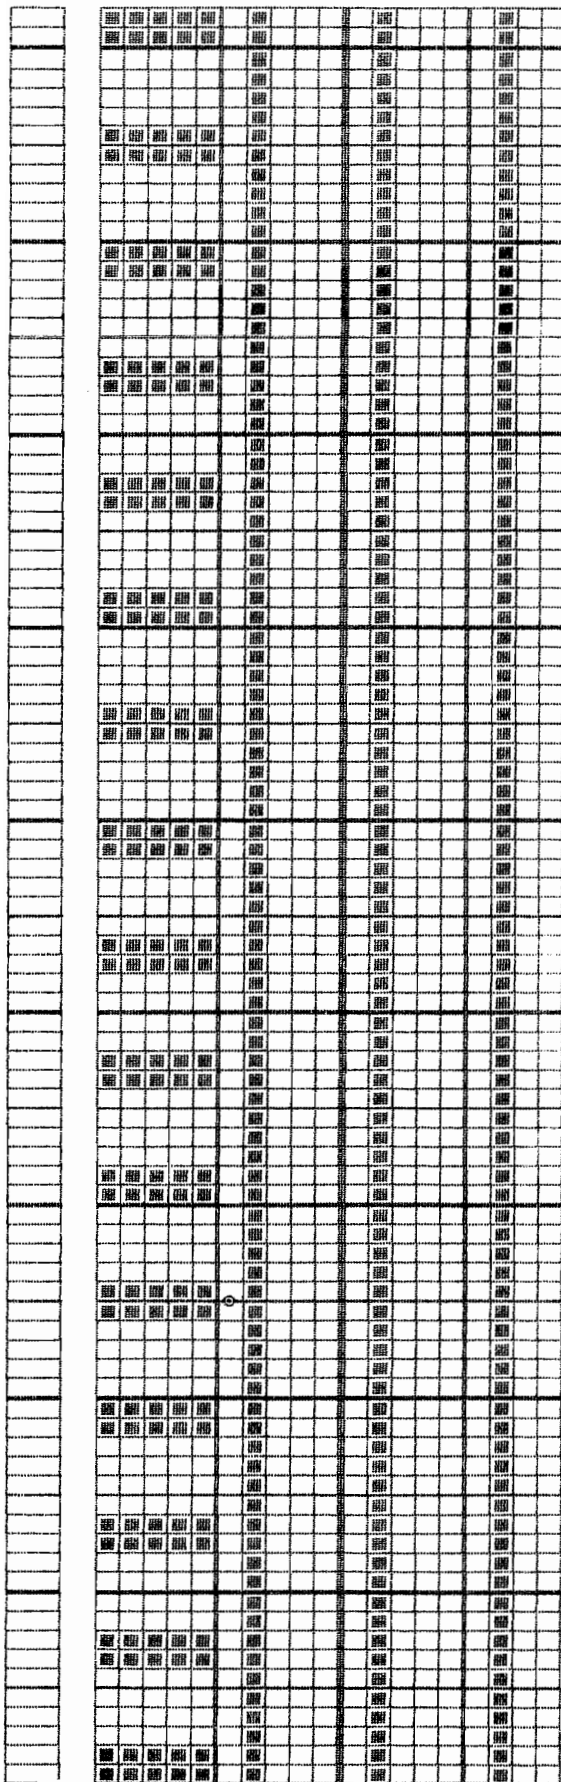


PATTERN No. = 903

DISC No. = 3 TRACK No. = 8
STITCHES = 23 ROWS = 27

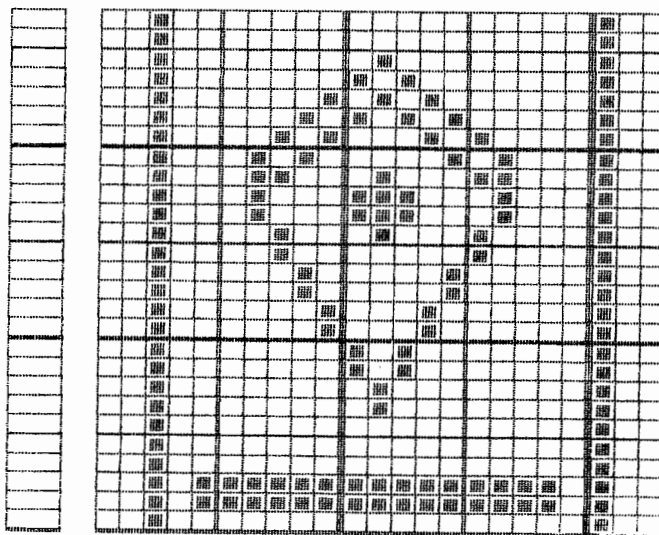

DISC No. = 3 TRACK No. = 8
STITCHES = 4 ROWS = 6

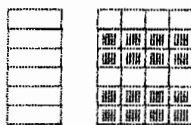

Use Pattern #905
to make a shorter
sleeve.

[illegible][illegible][illegible]

Pattern #9 **SEED STITCH WITH LARGE SINGLE MOTIF**

All ribbing: Stitch size 8

Body & sleeves: Stitch size 10 Size: Med.-Lg. Yarn: Piropo

STITCH GAUGE: 5.1/2 stitches per inch - 10 rows per inch

KH930 - Selector #1

BACK: Cast on 128 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #902 Knit 60 rows.

RC000 Pattern #901 At RC 64, put in markers for beginning of underarm. Continue knitting to RC 92. Start cables on RC 31 (carriage will be on your left). To the left of 0, cable on needles 1-2, then 4-5-6-7. To the right of 0, cable on needles 1-2, then 4-5-6-7. Cross cables for the last time on RC 61 and continue knitting to RC 92.

RC000 Pattern #902 - Knit 32 rows.

RC000 Pattern #903 Knit 44 rows.

At completion, starting with stitch #24, cast off shoulder. Scrap off 46 stitches for center (23 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as the back until RC 4 of Pattern #903

NECKLINE SHAPING: Push M button. Using a ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 8 stitches, then 1 stitch every row until 23 stitches are in out of work position. Knit straight to RC 44. Take off shoulder with waste yarn.

Back to G carriage and beginning neckline shaping. Set RC at 4 of Pattern #903. Push M button. Shape left side same as for the right except reverse all shapings. At RC 44, scrap off left shoulder. Bring all neckline stitches into working position and scrap off with knit carriage.

SLEEVE: Cast on 68 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #903 Knit 44 rows. Start your 1st increase after ribbing is completed, then increase 1 stitch each side every 6 rows until 112 stitches. You will still be increasing as you go into your next patterns.

RC000 Pattern #902 Knit 80 rows.


RC000 Pattern #903 Knit 44 rows. Take off with waste yarn.
Sleeve Length: 168 rows.

FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 114 stitches from front and back neckline. At the same time, starting with stitch size 10, rib in 2 x 2 for 28 rows. Tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Rehang the body of the sweater on 112 needles, starting at your markers for underarm. Have the right side facing you and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Anytime you have a lot of purl stitches in a pattern, it is going to spread quite a bit. There are a lot of knit stitches on the outside of the single motif, so it is not going to spread like the purl stitches surrounding it; it will tend to draw in. As you block each piece, let the knit stitches surrounding the single motif get hot and steamy. Then with your fingers, pat it into the correct shape (never put an iron or wand directly onto an acrylic). When it dries, it will stay the way that you blocked it.


DISC No. = 3 TRACK No. = 9 PAGE No. = 9 PATTERN No. = 902
STITCHES = 2 ROWS = 2 PRINTING ORDER (1- 1)




DISC No. = 3 TRACK No. = 9 PAGE No. = 9 PATTERN No. = 903
STITCHES = 2 ROWS = 14 PRINTING ORDER (1- 1)

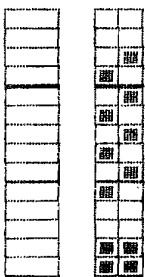

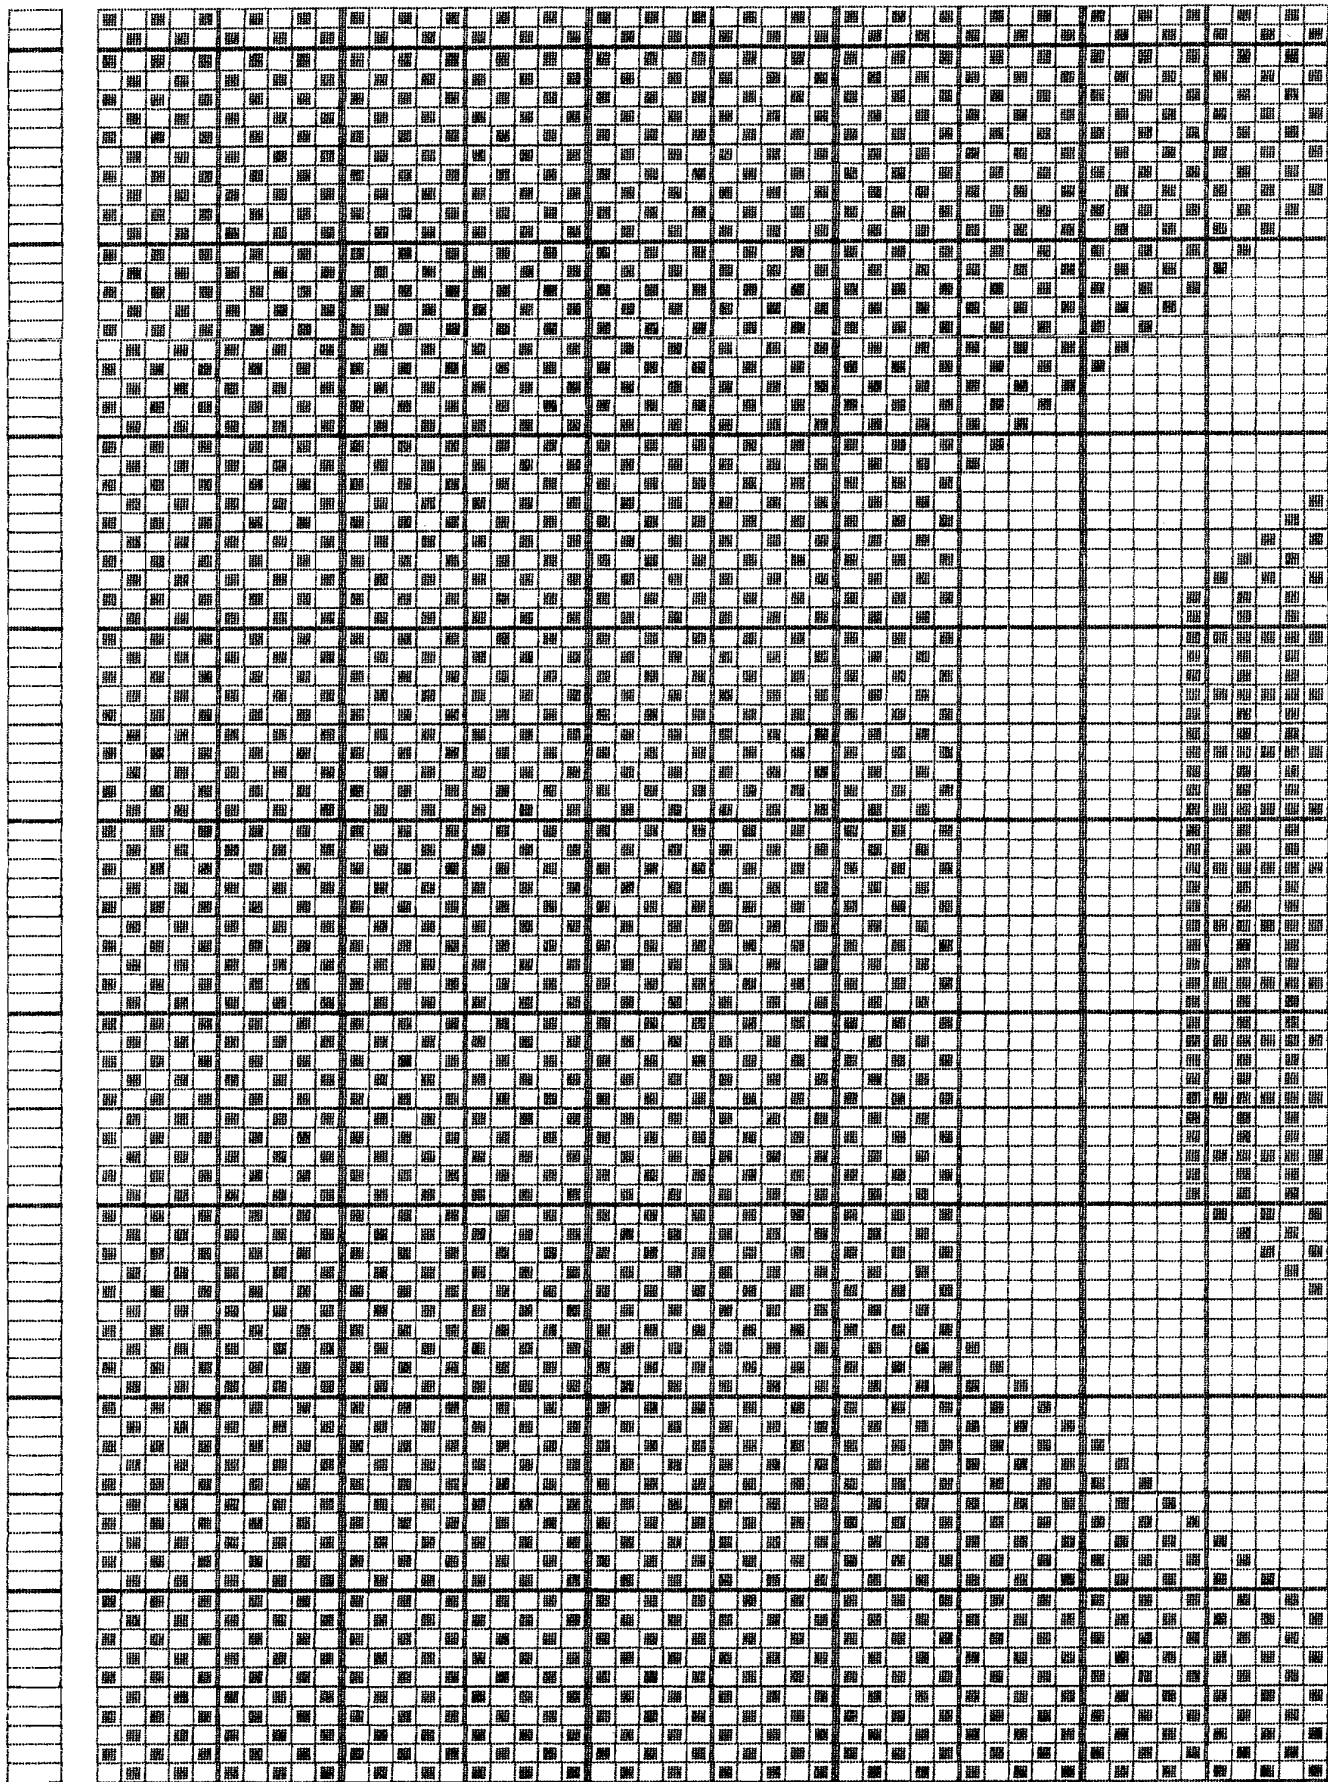

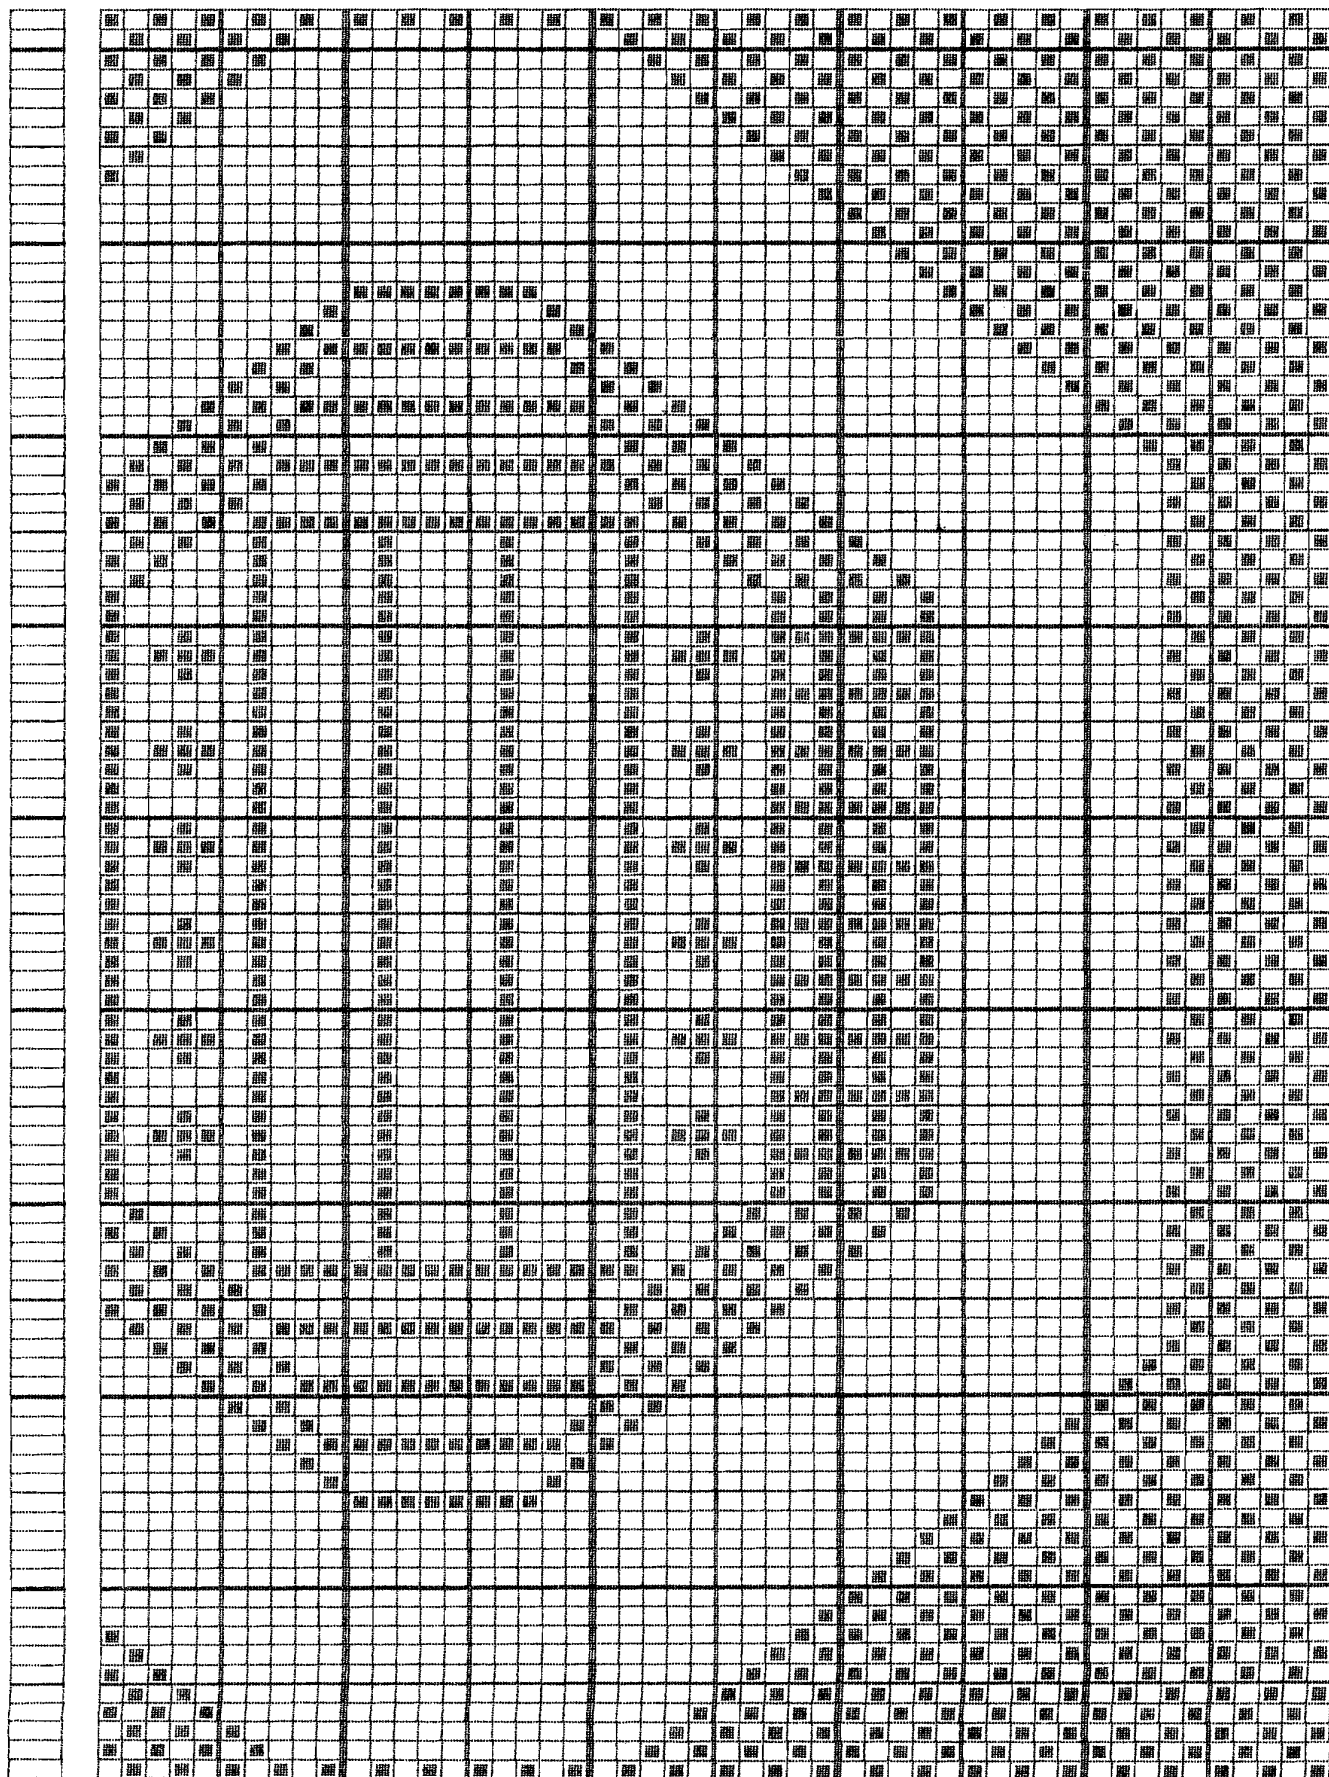

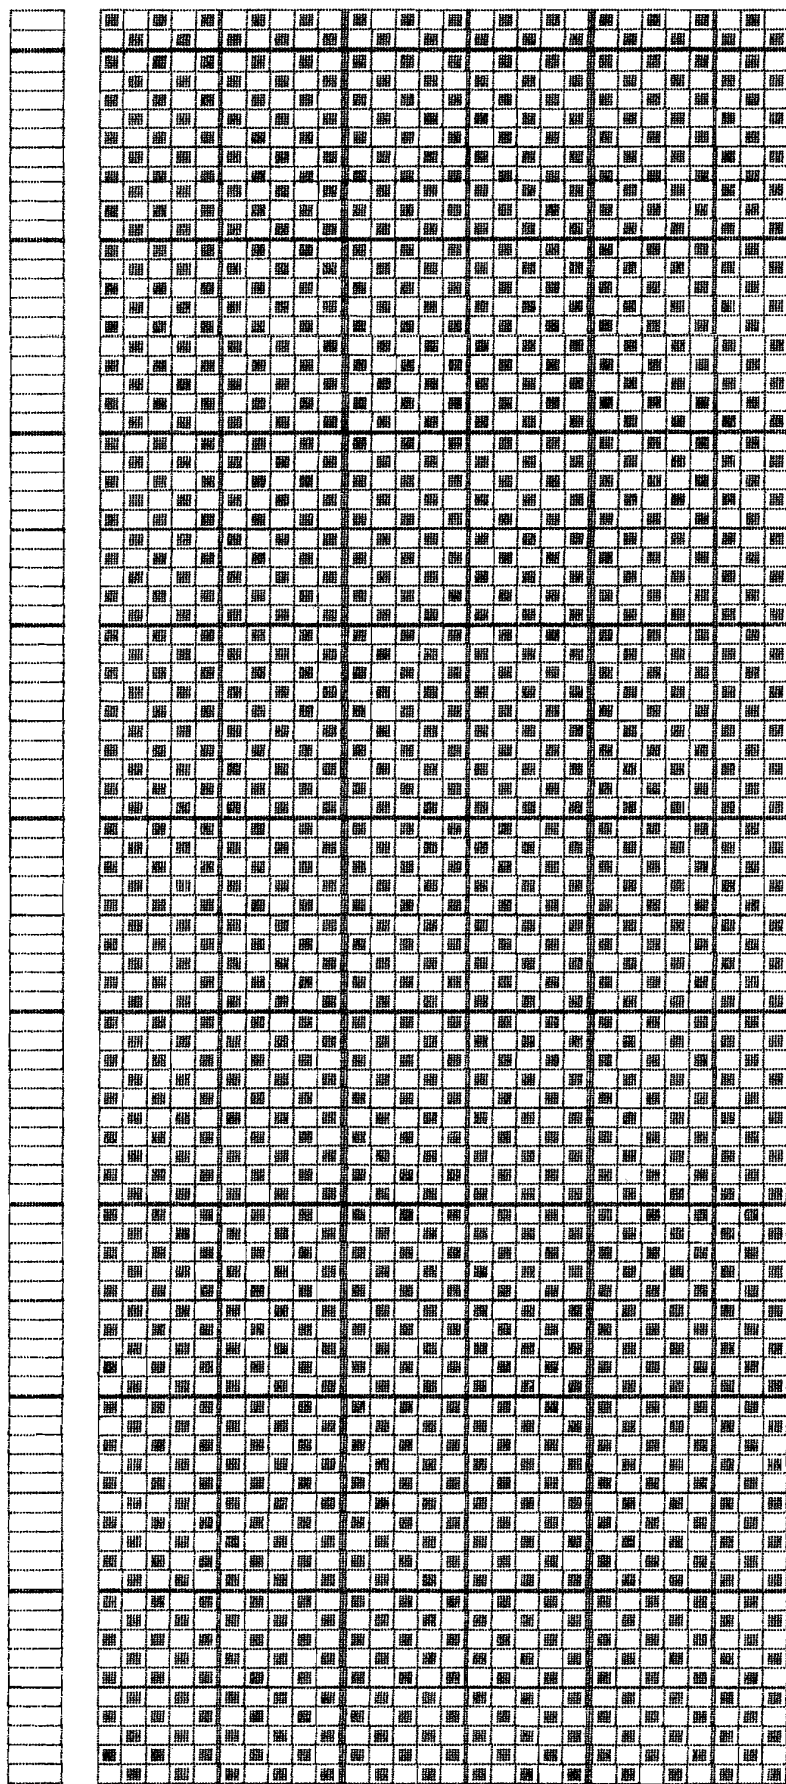

Pattern #10

DIAMONDS - CROSSES

All ribbing: Stitch size 8

Body & Sleeves: Stitch size 10 Size: Small Yarn: Piropo

KH930 - Selector #1 - KH910 and Punchcard machines - Use all over patterning.

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

BACK: Cast on 120 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #901 Knit 114 rows. At the same time, start cables on RC 4. To the left and right of 0, cable on needles 11-12-13-14 and 35-36-37-38. Always replace the right hand stitches first.

RC000 Pattern #902 (Band) Put in markers for beginning of underarm. Knit 26 rows.

RC000 Pattern #903 Knit 72 rows. Start cables on the 2nd row. To the left and right of 0, cable on needles 11-12-13-14 and 35-36-37-38. Always replace the right hand stitches first.

At completion, starting with stitch #23, scrap off shoulder. Scrap off 44 stitches for center neckline (22 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as the back until RC 34 of Pattern #903.

NECKLINE SHAPING: KH930 - Push M button. Using a ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 7 stitches, then 1 stitch every row until 22 stitches are in out of work position. Knit straight until RC 72 while still cabling every 6 rows. Take off with waste yarn.

Back to G carriage and beginning neckline shaping. KH930 - Push M button. Set RC at 34. Shape left neckline same as for the right except reverse all shapings. AT RC 72, scrap off. Bring all neckline stitches into working position and scrap off with knit carriage.

SLEEVE: Cast on 64 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #903 Knit 130 rows. Increase 1 stitch each side every 6 rows until 108 stitches. At the same time, start cables on the 4th row. To the left and right of 0, cable on needles 11-12-13-14. Always replace the right hand stitches first. On RC 58, while still cabling on same above needles, start cabling to the left and right of 0 on needles 35-36-37-38.

RC000 Pattern #902 (Band) Knit 26 rows. Scrap off with waste yarn. Sleeve Length: 156 rows. Repeat for 2nd sleeve.

2nd page of Pattern #10


FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 112 stitches from front and back neckline. At the same time, starting with stitch size 10, rib in 2 x 2 for 28 rows. Tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.

Rehang the body of the sweater on 108 needles, starting at the underarm markers. Have the right side facing you and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Block very little, mainly the seam area as you don't want to block out your pattern. block just enough to shape.

DISC No. = 3 TRACK No. = 10 PAGE No. = 10 PATTERN No. = 901


STITCHES = 24 ROWS = 38 PRINTING ORDER (1- 1)

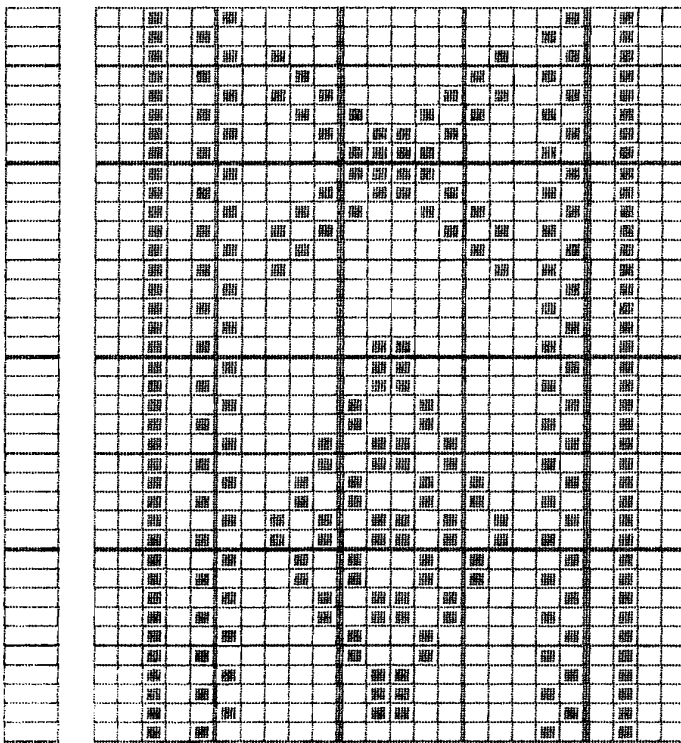


DISC No. = 3 TRACK No. = 10 PAGE No. = 10 PATTERN No. = 902
 STITCHES = 24 ROWS = 26 PRINTING ORDER (1- 1)

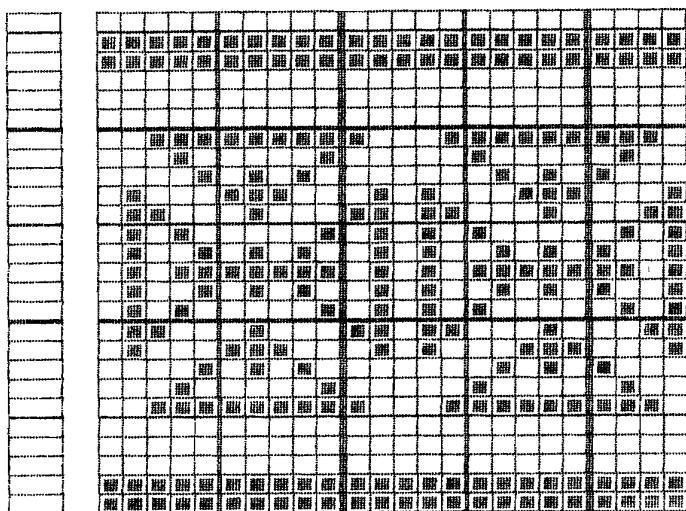

DISC No. = 3 TRACK No. = 10 PAGE No. = 10 PATTERN No. = 903
 STITCHES = 24 ROWS = 16 PRINTING ORDER (1- 1)

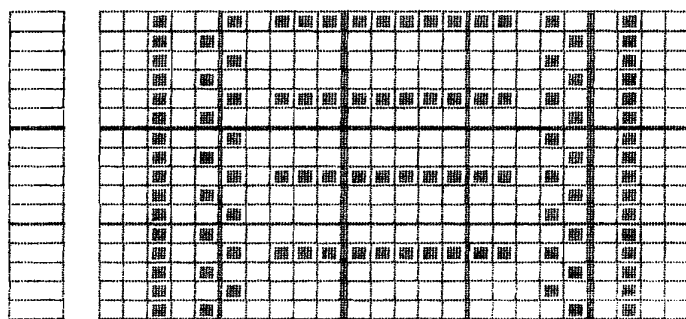

DISC No. = 3 TRACK No. = 10 PAGE No. = 10 PATTERN No. = 904
 STITCHES = 24 ROWS = 16 PRINTING ORDER (1- 1)

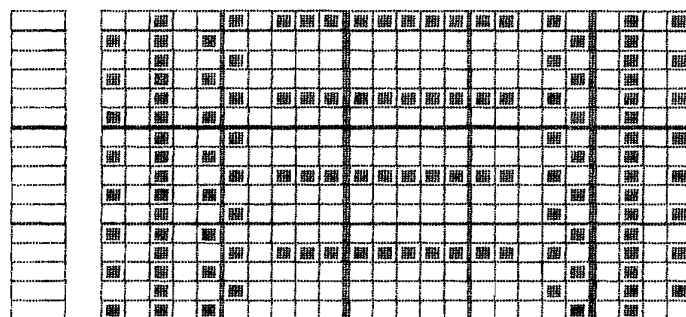

For those of you that don't
 want cables on the yoke and
 sleeves, please use Pattern
 #904

Pattern #11

VARIOUS SHAPES

Ribbing: Stitch size 6

Body and sleeves: Stitch size 8 Size: Medium-Large

Yarn: Bramwell's Roslan - This size takes 1 lb. 3 oz.

STITCH GAUGE: 6.1/2 stitches per inch and 9.1/2 rows per inch.

KH930 Selector #1 KH910 - All over patterning

BACK: Cast on 140 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #901 At RC 182 put in markers for beginning of underarm. Continue knitting to RC 262.

RC000 Pattern #902 Knit 18 rows.

At completion, starting with stitch #25, scrap off shoulder. Scrap off 48 stitches for front neckline (24 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as the back until RC 236 of Pattern #901.

NECKLINE SHAPING: KH930 Push M button. With ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 8 stitches, then 1 stitch every row until 24 stitches are in out of work position. Knit straight to RC 262. Change to Pattern #902 and knit 18 rows. Scrap off shoulder with waste yarn.

Using G carriage again, start at beginning of neckline shaping. Set RC at 236. Change back to Pattern #901, then push M button. Shape neckline the same as for the right, except reverse all shapings. Again, at RC 262, change to Pattern #902 and knit 18 rows. When finished, scrap off shoulder stitches. Bring all neckline stitches into working position and scrap off.

SLEEVE: Make 2 cuffs: Cast on 68 stitches. Rib in 2 x 2 for 32 rows. Remove on either waste yarn or garter bar.

Make 2: Cast on 90 stitches with waste yarn. Knit about 1", then 1 row of ravel cord. Proceed with sleeve directions below.

RC000 Pattern #901 With main yarn, knit 184 rows. At the same time, starting at row #14, increase 1 stitch each side every 14 rows until you have 114 stitches. Change to Pattern #902 and knit 18 rows. Scrap off with waste yarn. Sleeve length: 202 rows.

When finished, steam very lightly. Just let the steam hover over the top, do not put onto the fabric. With the right side facing you, decrease 22 stitches evenly across on the cast on edge, then remove waste yarn. You will now have 68 stitches. Put cuff back onto these same needles. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.


2nd page of Pattern #11


FINISHING AND NECKBAND: Join front and back shoulder seam. With the wrong side facing you, pick up 120 stitches from front and back necklines. Starting with stitch size 8, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.

Starting at your underarm markers and with the right side facing you, rehang the body of the sweater on 114 needles. Center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Scrap off with knit carriage. Repeat for 2nd sleeve.

Block very little, mainly seam area as you don't want to block out your pattern. Block just enough to shape.

DISC No. = 3 TRACK No. = 11 PAGE No. = 11 PATTERN No. = 902
STITCHES = 1 ROWS = 5 PRINTING ORDER (1- 1)

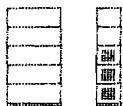

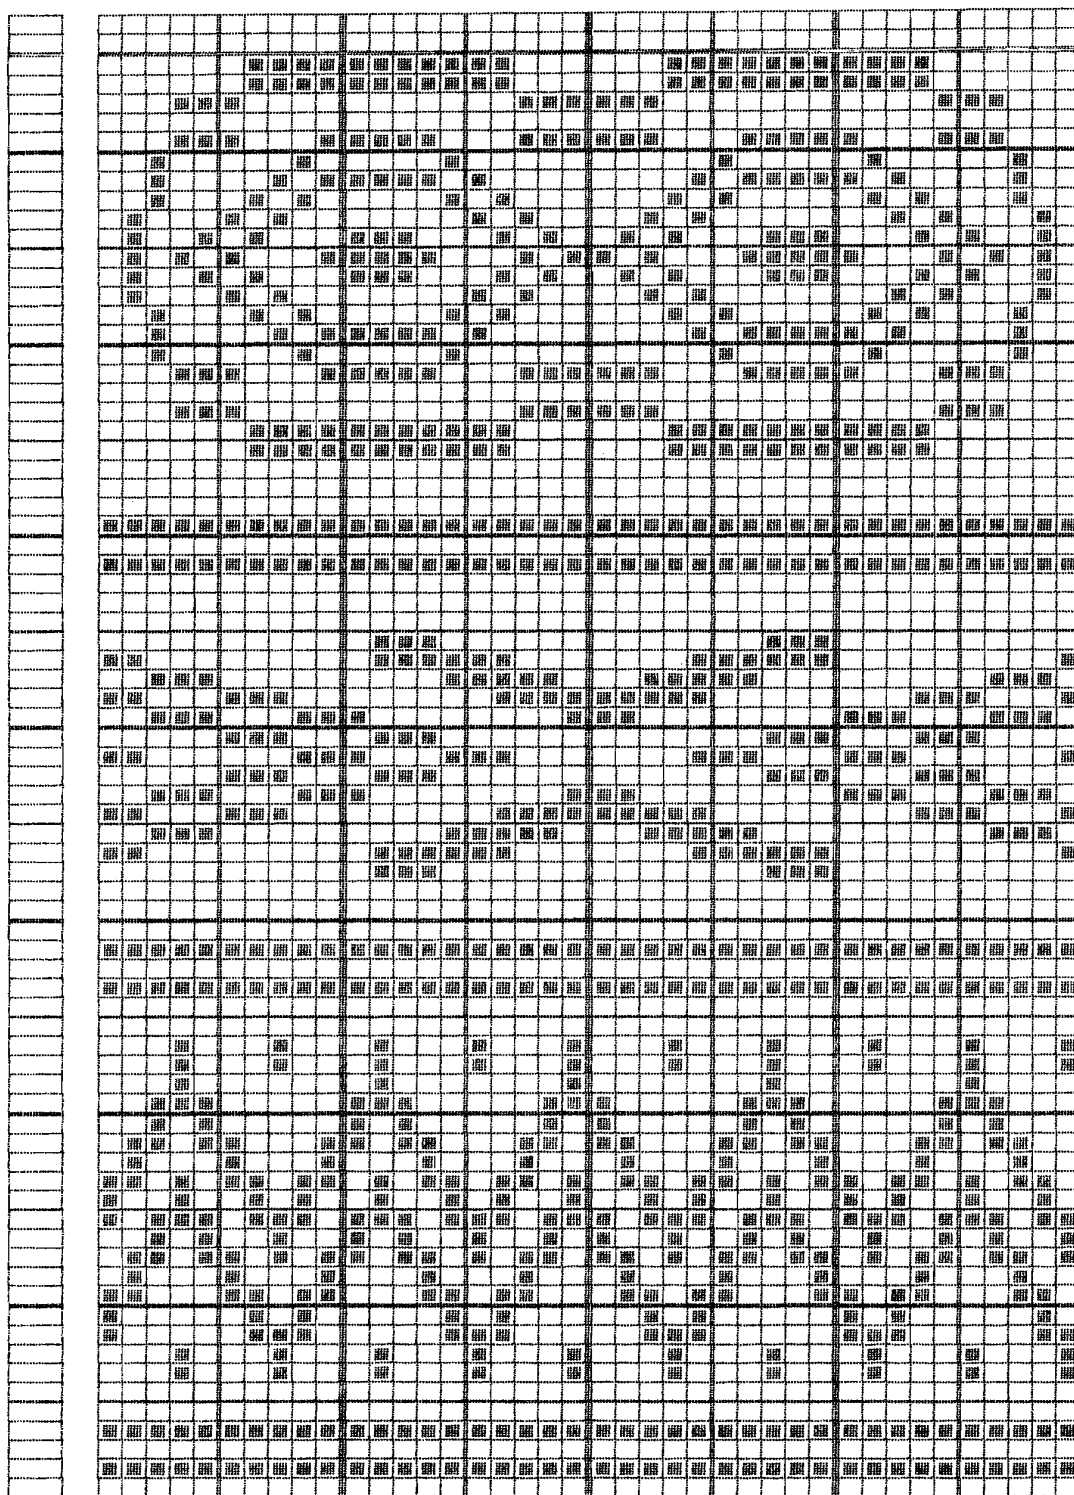

Pattern #12

TREE OF LIFE - DIAMONDS

All ribbing: Stitch size 6

Body and Sleeves: Stitch size 8 Size: XX Large

Yarn: Bramwell's Roslan - this size takes 1 lb. 9 oz.

STITCH GAUGE: 6.3/4 stitches per inch and 10 rows per inch.

KH930 - Selector #1

Change 1st needle position to Yellow 90

KH910 - Pick out an area 60 stitches or smaller to draw onto your mylar sheet. Example: Use #1 stitch through #39. On Row #4, starting with your 1st pattern, use only 1 motif and center it. Change your 1st needle position to Yellow 9 to center the diamond. An example is given on Track #16, Pattern #901. Use this same idea to frame any area that you like.

BACK: Cast on 180 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #901 At RC 174 put in markers for beginning of underarm. Continue knitting to RC 258.

RC000 Pattern #902 Knit 25 rows.

At completion, starting with stitch #26, scrap off shoulder. Scrap off 50 stitches for center neckline (25 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as back until RC 242 of Pattern #901.

NECKLINE SHAPING: KH930 Push M button. With ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 9 stitches, then 1 stitch every row until 25 stitches are in out of work position. At the same time, at RC 258, change to Pattern #902 and knit 25 rows. Scrap off shoulder.

Using G carriage again, start at beginning of neckline shaping. Set RC at 242. Change back to Pattern #901 and push the M button. Shape neckline same as the right, except reverse all shapings. At RC 258 change to Pattern #902 and knit 25 rows. Scrap off shoulder stitches. When finished, bring all neckline stitches into working position and scrap off with knit carriage.

SLEEVE: Make 2 cuffs. Cast on 70 stitches. Rib in 2 x 2 for 32 rows. Take off with waste yarn or garter bar.

Make 2: Cast on 100 stitches with waste yarn. Knit approximately 1", then knit 1 row with ravel cord. Proceed with sleeve directions below.

RC000 Pattern #901 Change to main color yarn. Change 1st needle position to Yellow 90. Knit 178 rows. At the same time, increase 1 stitch each side every 13 rows 13 times, starting with the 13th

2nd page of Pattern #12

row until you have 126 stitches.

RC000 Pattern #902 Knit 20 rows. Scrap off with knit carriage.
Sleeve length: 198 rows.

Steam your sleeve very lightly. With the right side facing you, decrease 30 stitches evenly across on your cast on edge for a finished total of 70 stitches. Remove waste yarn, then hang cuff onto these same needles. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


FINISHING AND NECKBAND: Join front and back shoulder seams. With the wrong side facing you, pick up 126 stitches from front and back necklines. Starting with stitch size 8, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Close 2nd shoulder.


Starting at your markers for underarm, rehang the body of the sweater on 126 needles with the right side facing you and centering the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Repeat for 2nd sleeve.


Block very little, mainly the seam area as you don't want to block out the pattern. Block just enough to shape.


DISC No. = 3 TRACK No. = 12 PAGE No. = 12 PATTERN No. = 902
STITCHES = 1 ROWS = 5 PRINTING ORDER (1- 1)



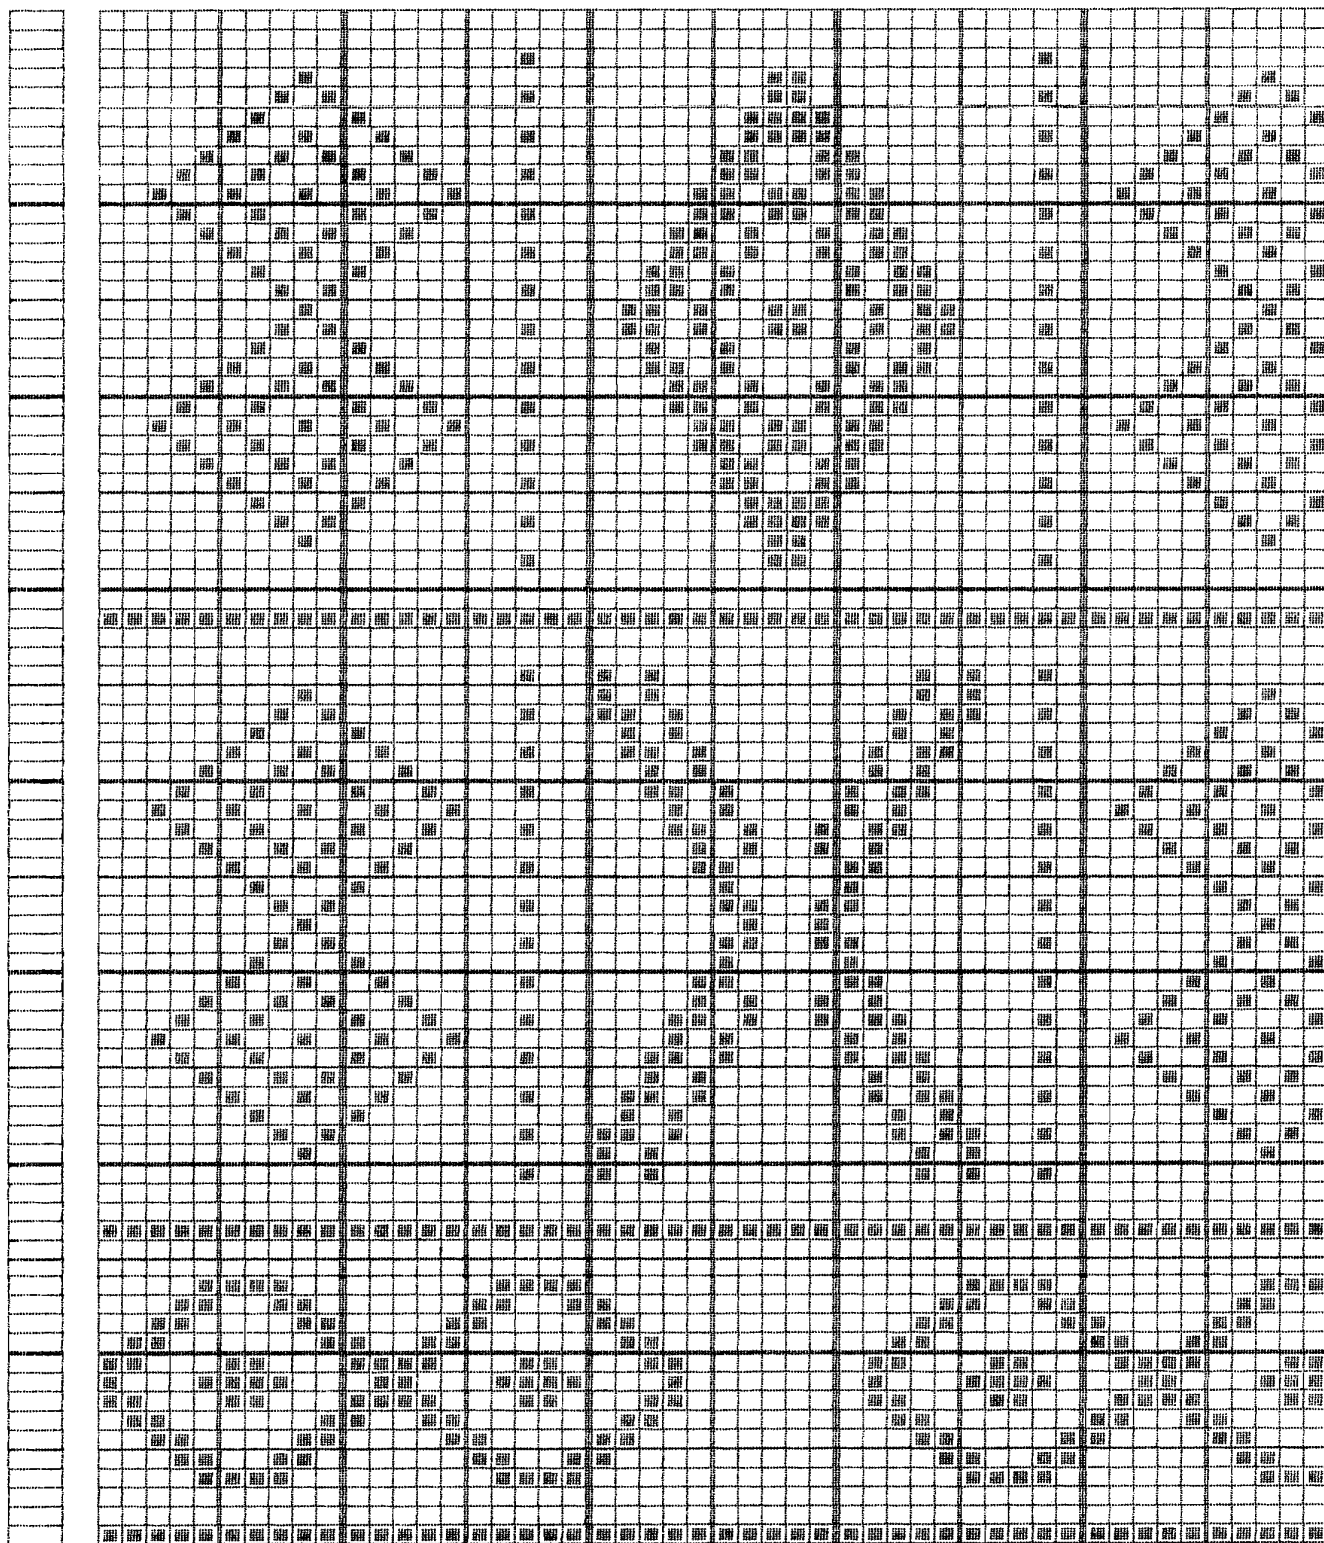

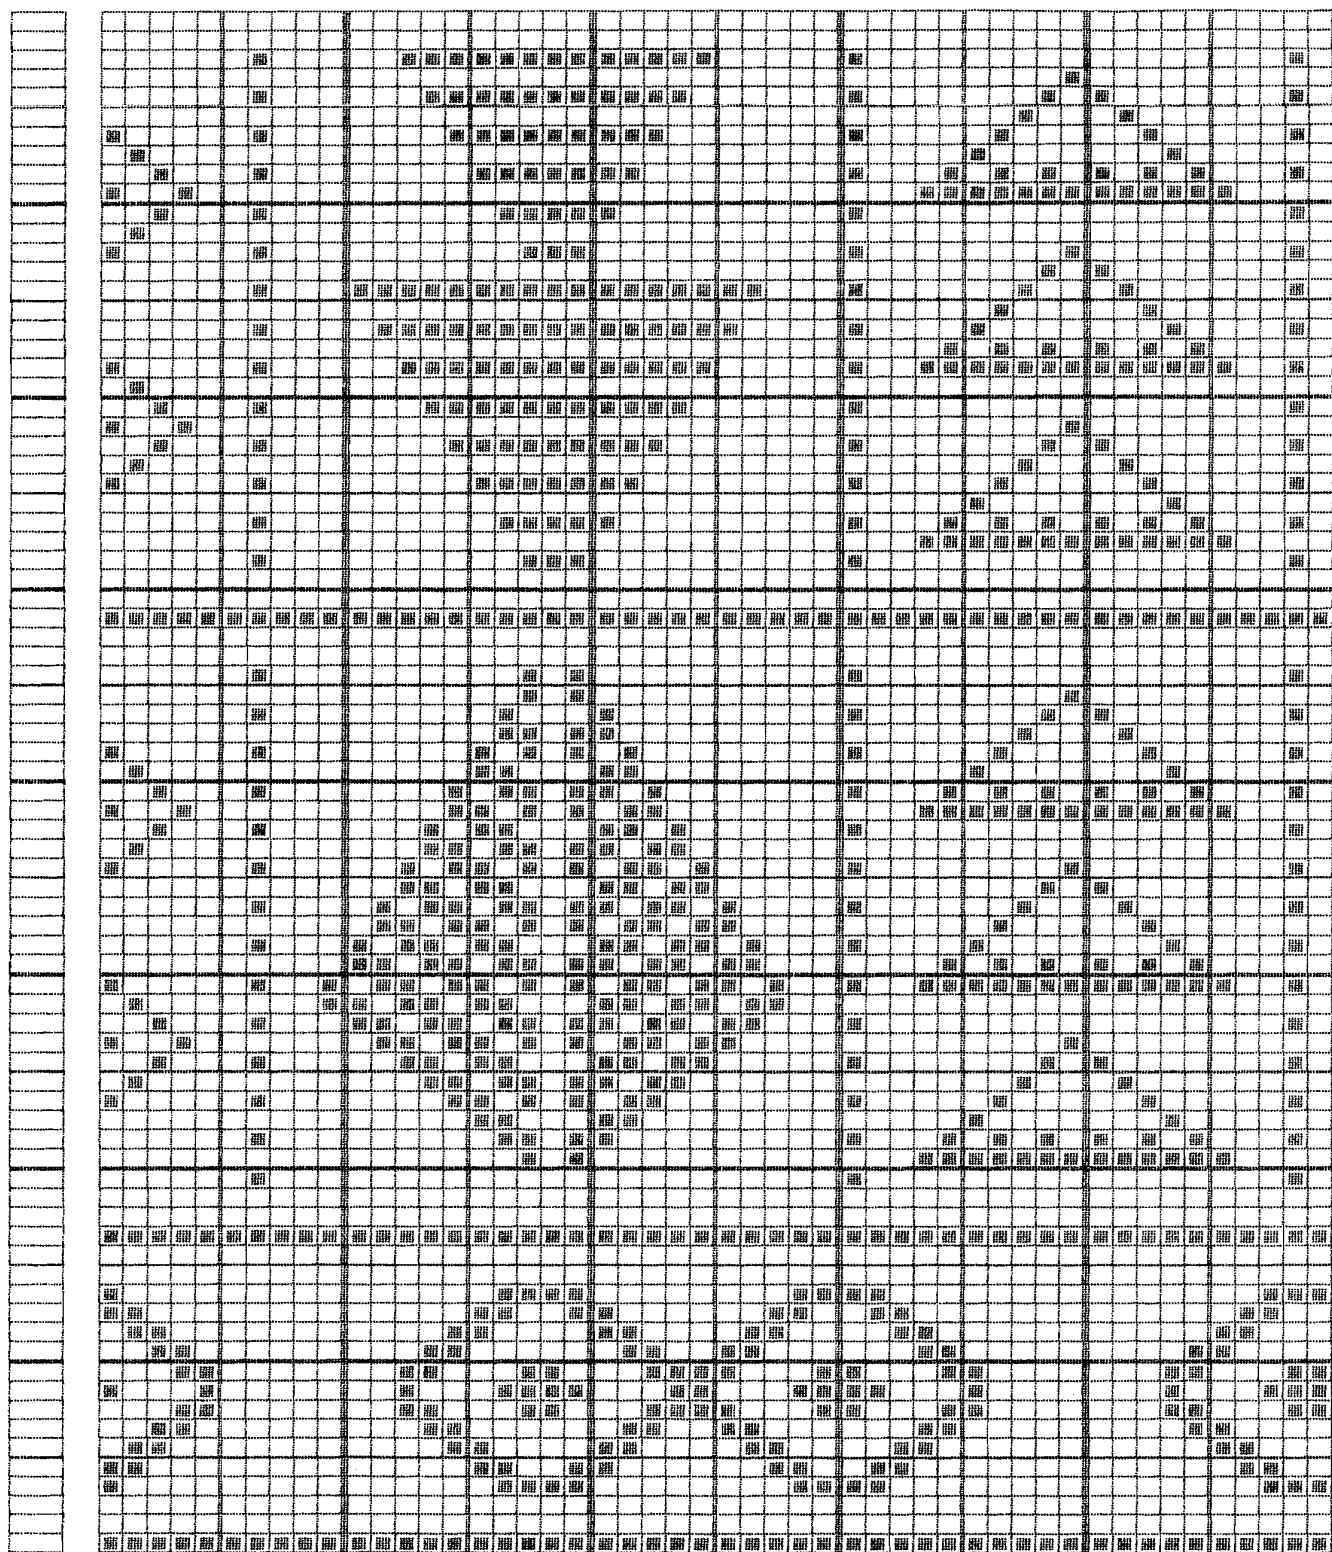

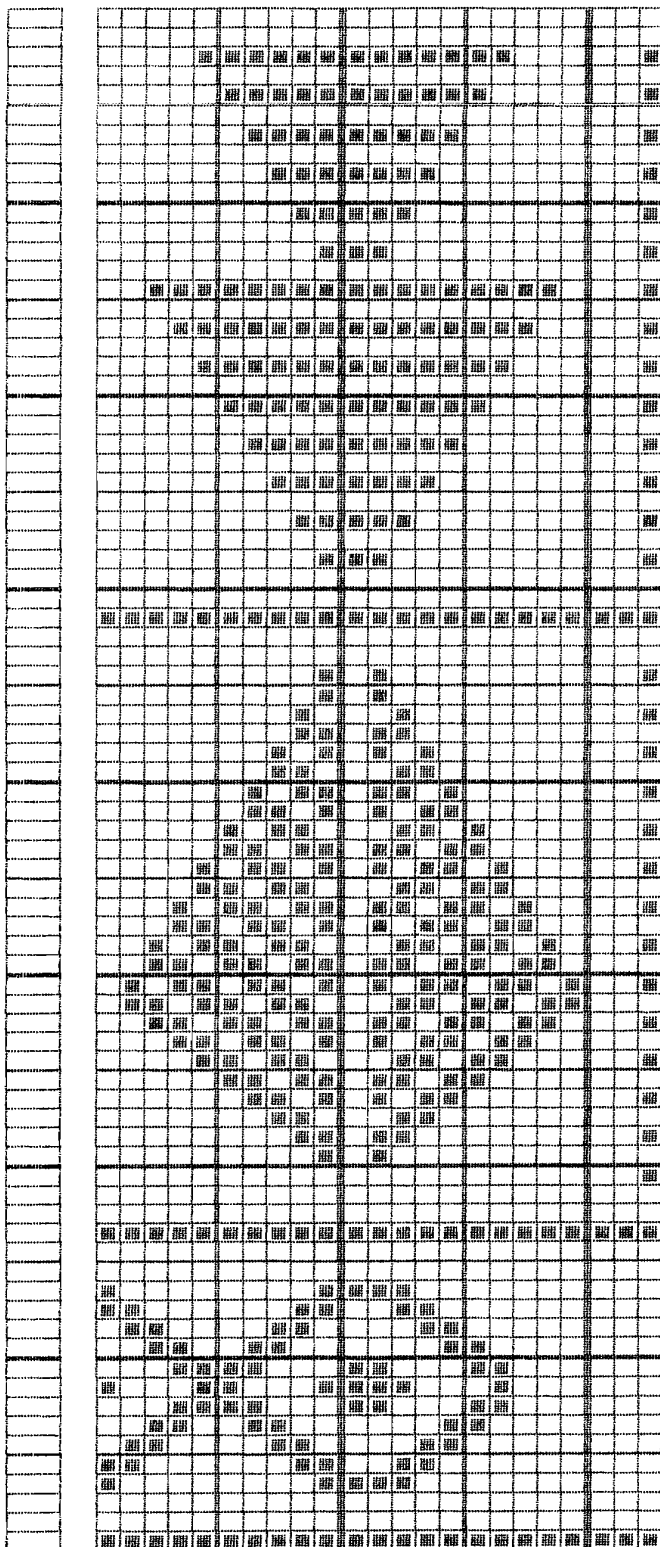

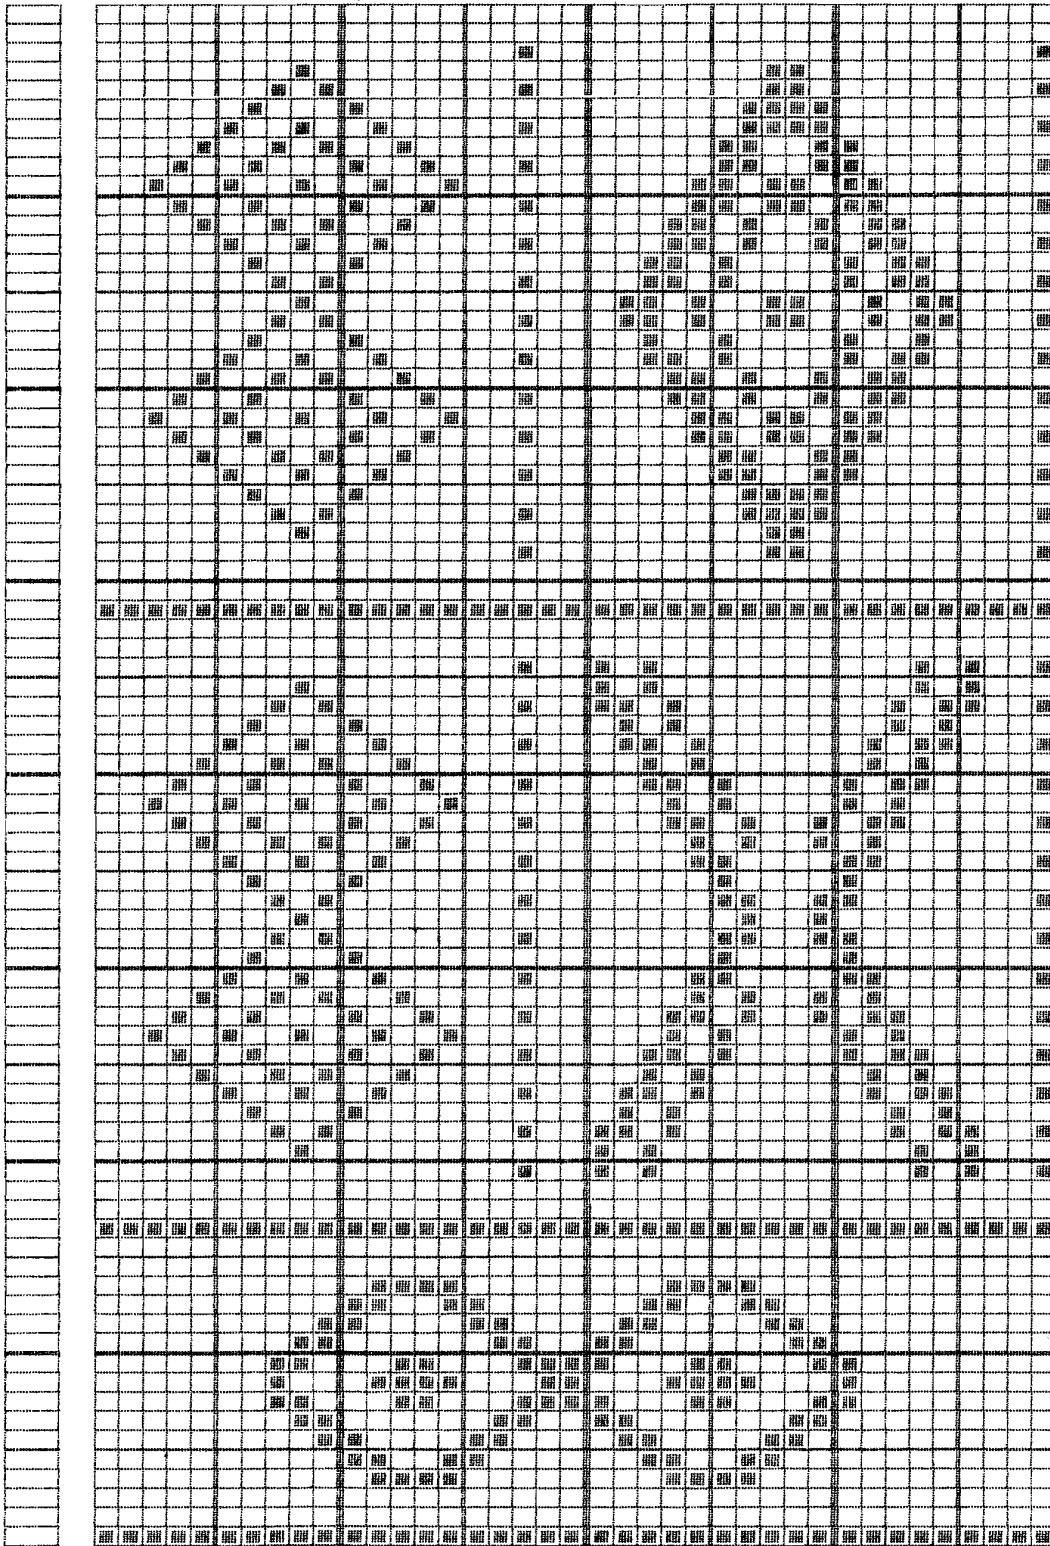

Pattern #13 SEED STITCH - 1/2 DIAMONDS

All ribbing: Stitch size 8

Body & sleeves: Stitch size 10 Size: X Large - XX Large

Yarn: Piropo

KH930 - Selector #1 ----- KH910 - Use all over patterning.
Change 1st needle position to Yellow 40.

Punchcard machines - Use Pattern #905 for sweater body and Pattern #906 for yoke.

STITCH GAUGE: 6.6-1/2 stitches per inch - 9-10 rows per inch.

BACK: Cast on 164 stitches. Rib in 2 x 2 for 32 rows.

RC000 KH930 - Use Pattern #903 and Punchcard machines use Pattern #905. Knit 144 rows. All machines - Change to Pattern #904 and knit 6 rows.

RC000 KH930 use Pattern #902 and Punchcard machines use Pattern #906. Put in markers for beginning of underarm. Knit 90 rows.

At completion, starting with stitch #26, scrap off shoulder. Scrap off 50 stitches for neckline (25 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as back until RC 50 of Pattern #902.

NECKLINE SHAPING: KH930 Push M button. With ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 9 stitches, then 1 stitch every row until 25 stitches are in out of work position. Knit straight to RC 90. When finished, scrap off shoulder with knit carriage.

Using G carriage again, start at beginning of neckline shaping. Set RC at 50 of Pattern #902. KH930, push M button. Shape left neckline same as for the right, except reverse all shapings. Scrap off shoulder. Bring all neckline stitches into working position and scrap off with knit carriage.

SLEEVE: KH930 - Cast on 68 stitches. Rib in 2 x 2 for 32 rows.
Punchcard machines - Cast on 68 stitches. Rib in 2 x 2 for 26 rows.

RC000 Pattern #903 KH930 - Knit 168 rows. Use Pattern #905 for Punchcard machines. Knit 174 rows. At RC 6, start increasing 1 stitch each side every 6 rows until 120 stitches. With knit carriage, scrap off with waste yarn. Repeat for 2nd sleeve.

FINISHING AND NECKBAND: Join front and back shoulder seam. With the wrong side facing you, pick up 120 stitches from front and back necklines. Starting at stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows,

2nd page of Pattern #13

then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Starting at your underarm markers and with the right side facing you, rehang the body of the sweater on 120 needles and center the shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts. Scrap off with knit carriage. Repeat for 2nd sleeve.

Block very little, mainly seam area as you don't want to block out the pattern. Block just enough to shape.


DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. = 902
STITCHES = 8 ROWS = 4 PRINTING ORDER (1- 1)




DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. = 904
STITCHES = 1 ROWS = 6 PRINTING ORDER (1- 1)

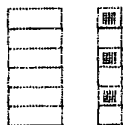


DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. =901
 STITCHES = 54 ROWS = 24 PRINTING ORDER (1- 1)

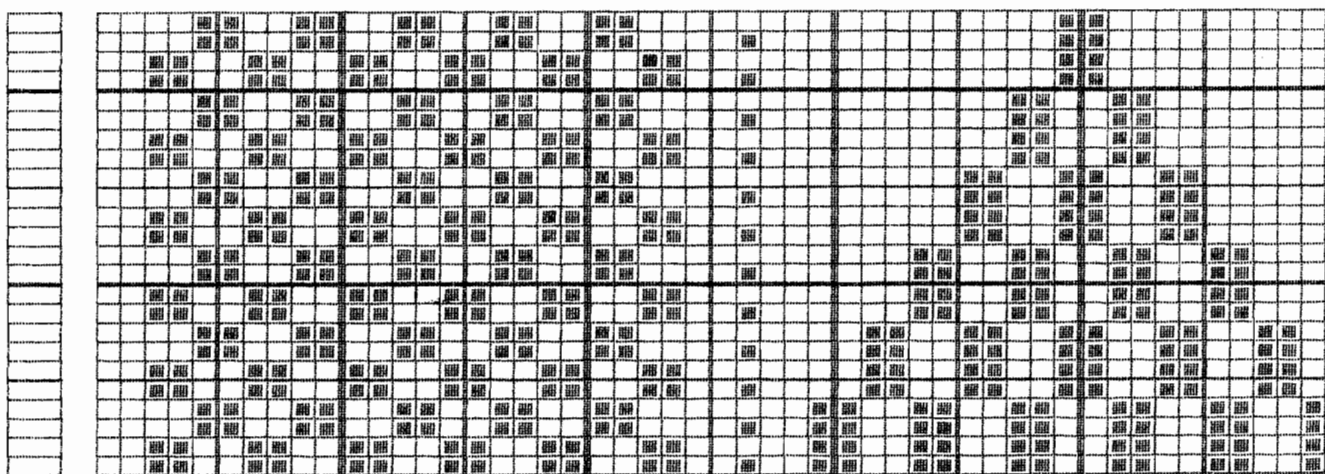


DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. =901
 STITCHES = 54 ROWS = 24 PRINTING ORDER (2- 1)

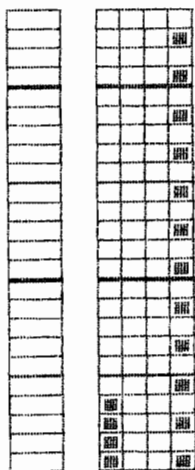


DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. =903
 STITCHES = 54 ROWS = 24 PRINTING ORDER (1- 1)

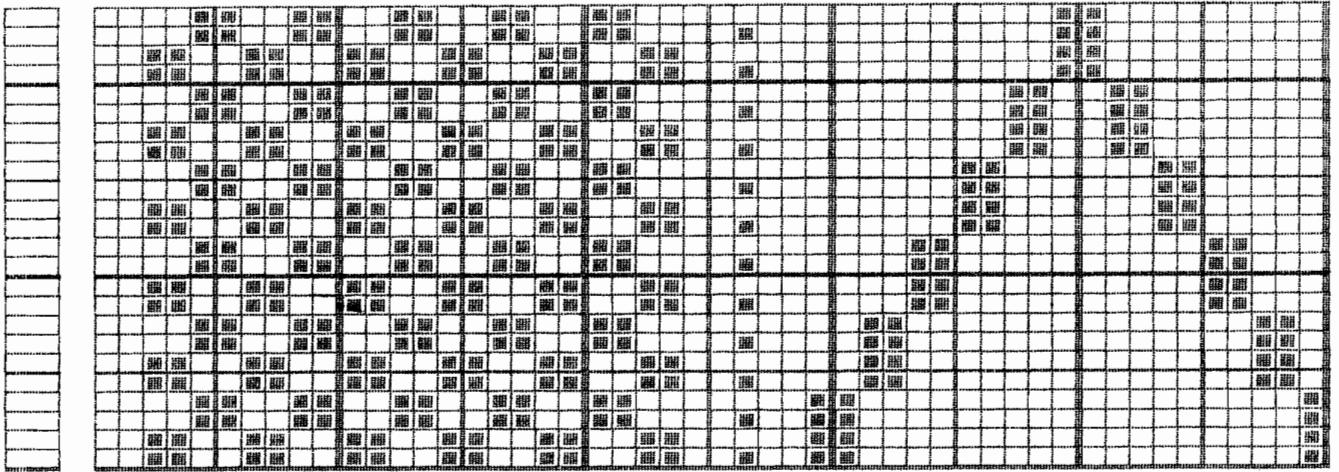

DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. =903
 STITCHES = 54 ROWS = 24 PRINTING ORDER (2- 1)

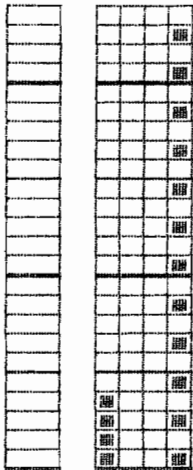

DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. =905
 STITCHES = 24 ROWS = 36 PRINTING ORDER (1- 1)

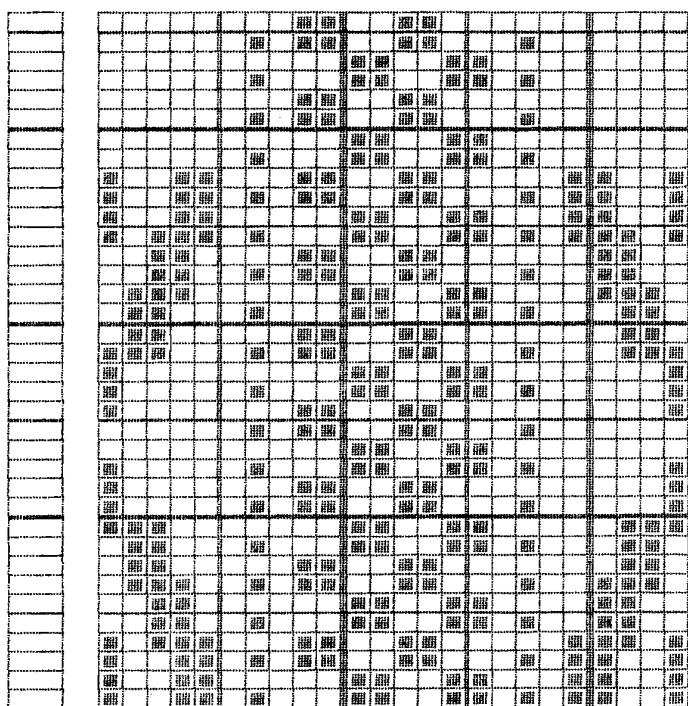

Punchcard machines: Use
 Pattern #905 for sweater
 body and sleeves.

DISC No. = 3 TRACK No. = 13 PAGE No. = 13 PATTERN No. =906
 STITCHES = 24 ROWS = 4 PRINTING ORDER (1- 1)



Punchcard machines: Use
 Pattern #906 for Yoke.

Pattern #14

STARFISH - ANCHORS - SHIP

All ribbing: Stitch size 8

Body and sleeves: Stitch size 10 Size: Large Yarn: Piropo

STITCH GAUGE: 6.6-1/2 stitches per inch. 9-10 rows per inch.

KH930 - Selector #1

KH910 - Use all over patterning. Because your mylar sheet is only 60 stitches wide, you cannot use the whole pattern. You can program stitch 1 thru 50, change your 1st needle position to Yellow 27 to center the Starfish or program stitch 51 through 88, then change your 1st needle position to Yellow 15 so that the Starfish will be centered. However many stitches you choose to cast on, the pattern will just repeat itself across your needle bed. If you choose group #1 through 50 on sweater body, choose the same group of needles for the yoke, so that your vertical lines will line up right. Example: 1st stitch through stitch #50 on sweater body. On yoke, also use 1st stitch through the 50th stitch.

KH930-KH940 To enlarge this pattern, use Selector #2 with 1 repeat of single motif. Anything you cast on beyond the 130 stitches will be a knit stitch from the front. You want your garter stitch on the top of the yoke to repeat the width of your sweater, so when you get to the yoke (Track #15 - Pattern #901) finish on RC 60 of Pattern #901, put your garter carriage outside the right turn mark, then program Pattern #537 from Stitch World Pattern Book into your machine and knit 10 rows. Remove on waste yarn. For a smaller size, use a stitch size 8 or a 9. Use stitch size 7 for the ribbing.

BACK: Cast on 130 stitches. Rib in 2 x 2 for 32 rows. After ribbing, increase 1 stitch on the right side only.

RC000 Pattern #901 **USE TRACK #14** Knit 134 rows.

RC000 Pattern #902 (Band) Put in markers for beginning of the underarm. Knit 26 rows.

RC000 **USE TRACK #15 FOR THE YOKE ONLY.** (Yoke) Pattern #901 Knit 70 rows. Start your cables on RC 4, then cable every 6 rows. Cable on the following needles:

Left of 0: On needles 15-16-17-18, replace your right hand stitches 1st. On needles 20-21-22-23, replace your left hand stitches first.

Right of 0: On needles 16-17-18-19, replace your right hand stitches first. On needles 21-22-23-24, replace your left hand stitches first.

2nd page of Pattern #14

At completion, starting with stitch #26, scrap off shoulder. Scrap off 50 stitches for center neckline (25 each side of 0). Scrap off 2nd shoulder.

FRONT: Knit same as for the back until RC 36 of Pattern #901.

NECKLINE SHAPING: KH930 - Push M button. With ravel cord, knit back to A position all stitches to the left of 0. To the right of 0, knit back 9 stitches, then 1 stitch every row until 25 stitches are in out of work position. Knit straight to RC 70, then scrap off right shoulder. While shaping your neckline, keep cabling on rows 34, 40, 46, 52, 58.

Using G carriage again, start at beginning of neckline shaping. Set RC at 36. Push M button. Shape neckline same as for the right except reverse all shapings. Scrap off shoulder stitches. Bring all neckline stitches into working position and scrap off with knit carriage.

SLEEVES: Cast on 68 stitches. Rib in 2 x 2 for 32 rows.

RC000 Pattern #903 Knit 153 rows. Push Memo button. Knit 1 row. Cancel memo button. At the same time, increase 1 stitch each side when ribbing is finished, then 1 stitch every 6 rows 5 more times. Then increase 1 stitch each side every 7 rows 18 times. When finished with increasing, you will have 116 stitches. At RC 154, change to Pattern #537.

RC000 Pattern #537 from Stitch World Pattern Book. Put garter carriage outside right turn mark. Push up arrow key to start on Row #2. Knit 14 rows. Scrap off with knit carriage. Sleeve length: 168 rows.

FINISHING AND NECKBAND: Join front and back shoulder seam. With the wrong side facing you, pick up 114 stitches from front and back necklines. Starting with stitch size 10, rib in 2 x 2 for 28 rows. At the same time, tension down 1 click every 2 rows until 14 rows, then increase by 1 click every 2 rows until 28 rows. Pick up the 1st row of rib stitches to close the band. A marking thread isn't needed as the stitches are very easy to see. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Rehang the body of the sweater on 116 needles, starting at your markers for beginning underarm. Have the right side facing you and center your shoulder seam. Keep the needles in working position. Rehang the top of the sleeve on the same needles with the wrong side facing you (right sides together). Pull the needle out slightly as you are hanging the stitch so that the 1st stitch will be behind the latch and new stitch will be in the hook of the

3rd page of Pattern #14

needle. When finished hanging the stitches, remove the waste yarn, then pull the new stitch in the hook through the needles on sweater body. Pull out all needles until the stitches just clear the latches, then latch tool off around the sinker posts.


Block very little, mainly the seam area as you don't want to block out your pattern. Block just enough to shape.

DISC No. = 3 TRACK No. = 14 PAGE No. = 14 PATTERN No. = 903
STITCHES = 26 ROWS = 38 PRINTING ORDER (1- 1)

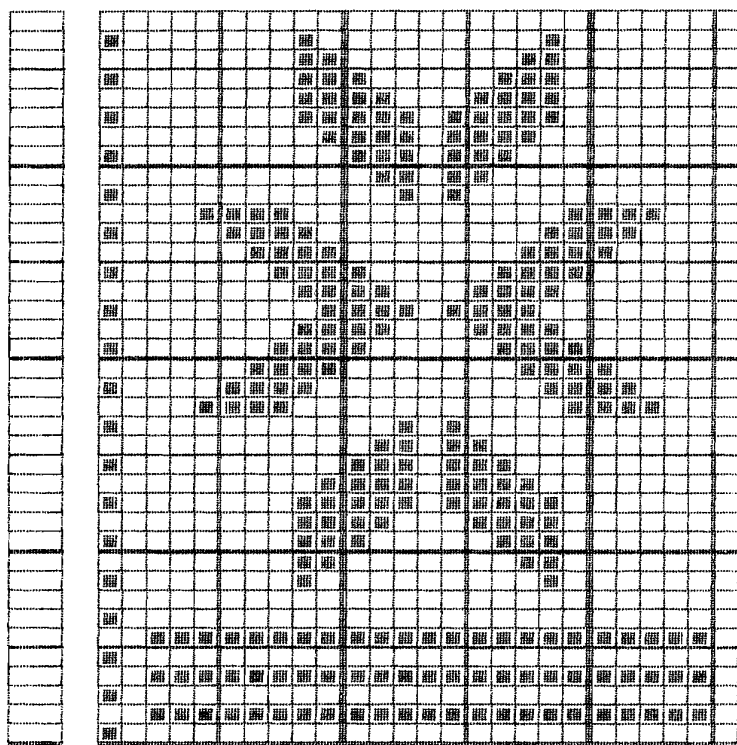


PATTERN No. = 902


DISC No. = 3 TRACK No. = 14
STITCHES = 12 ROWS = 26

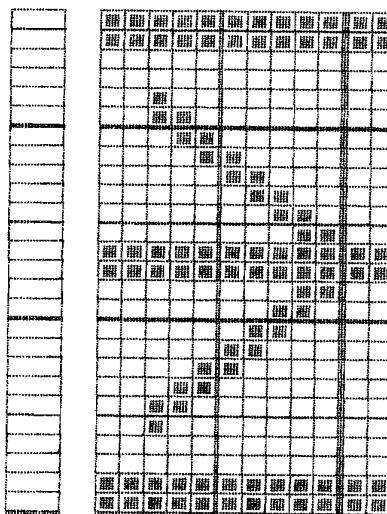


DISC No. = 3 TRACK No. = 14 PAGE No. = 14 PATTERN No. = 901
STITCHES = 129 ROWS = 84 PRINTING ORDER (1- 1)

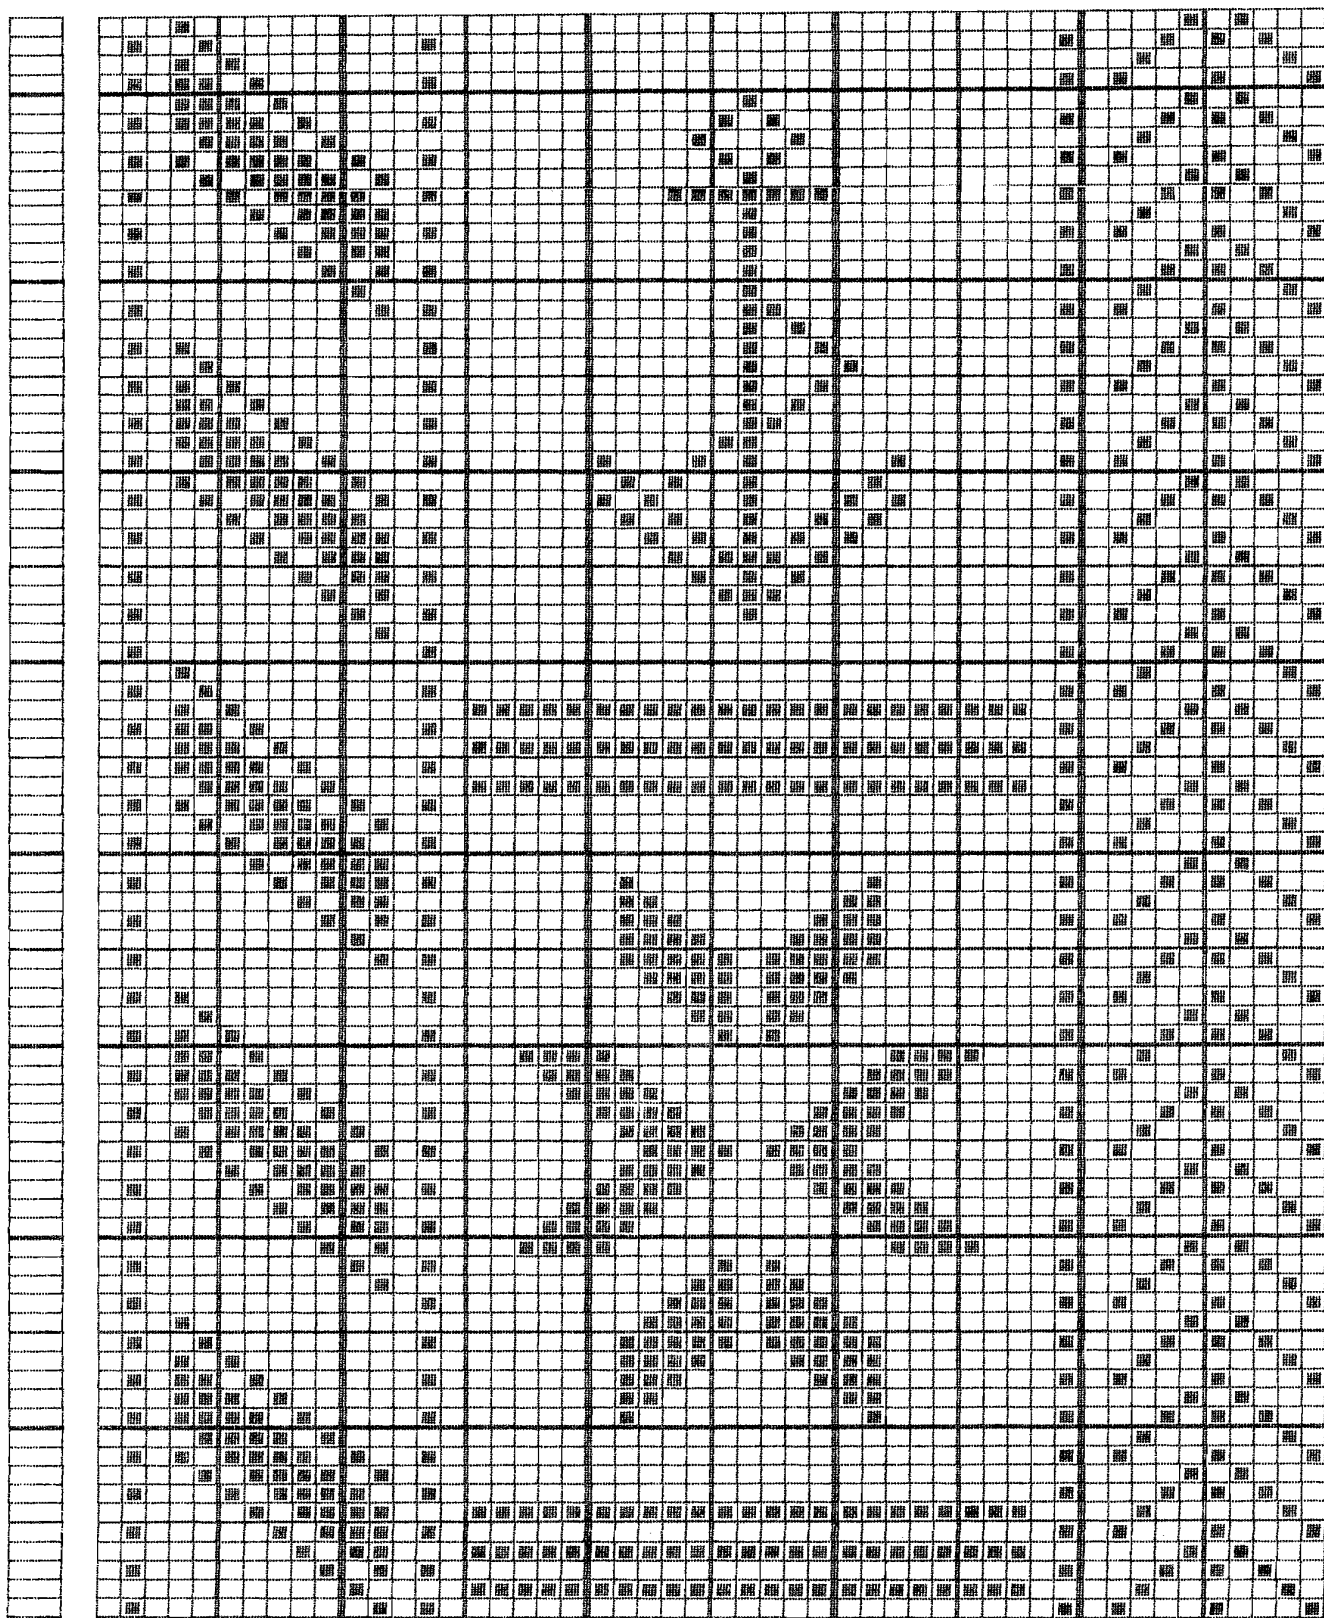


DISC No. = 3 TRACK No. = 14 PAGE No. = 14 PATTERN No. = 901
 STITCHES = 129 ROWS = 84 PRINTING ORDER (2- 1)

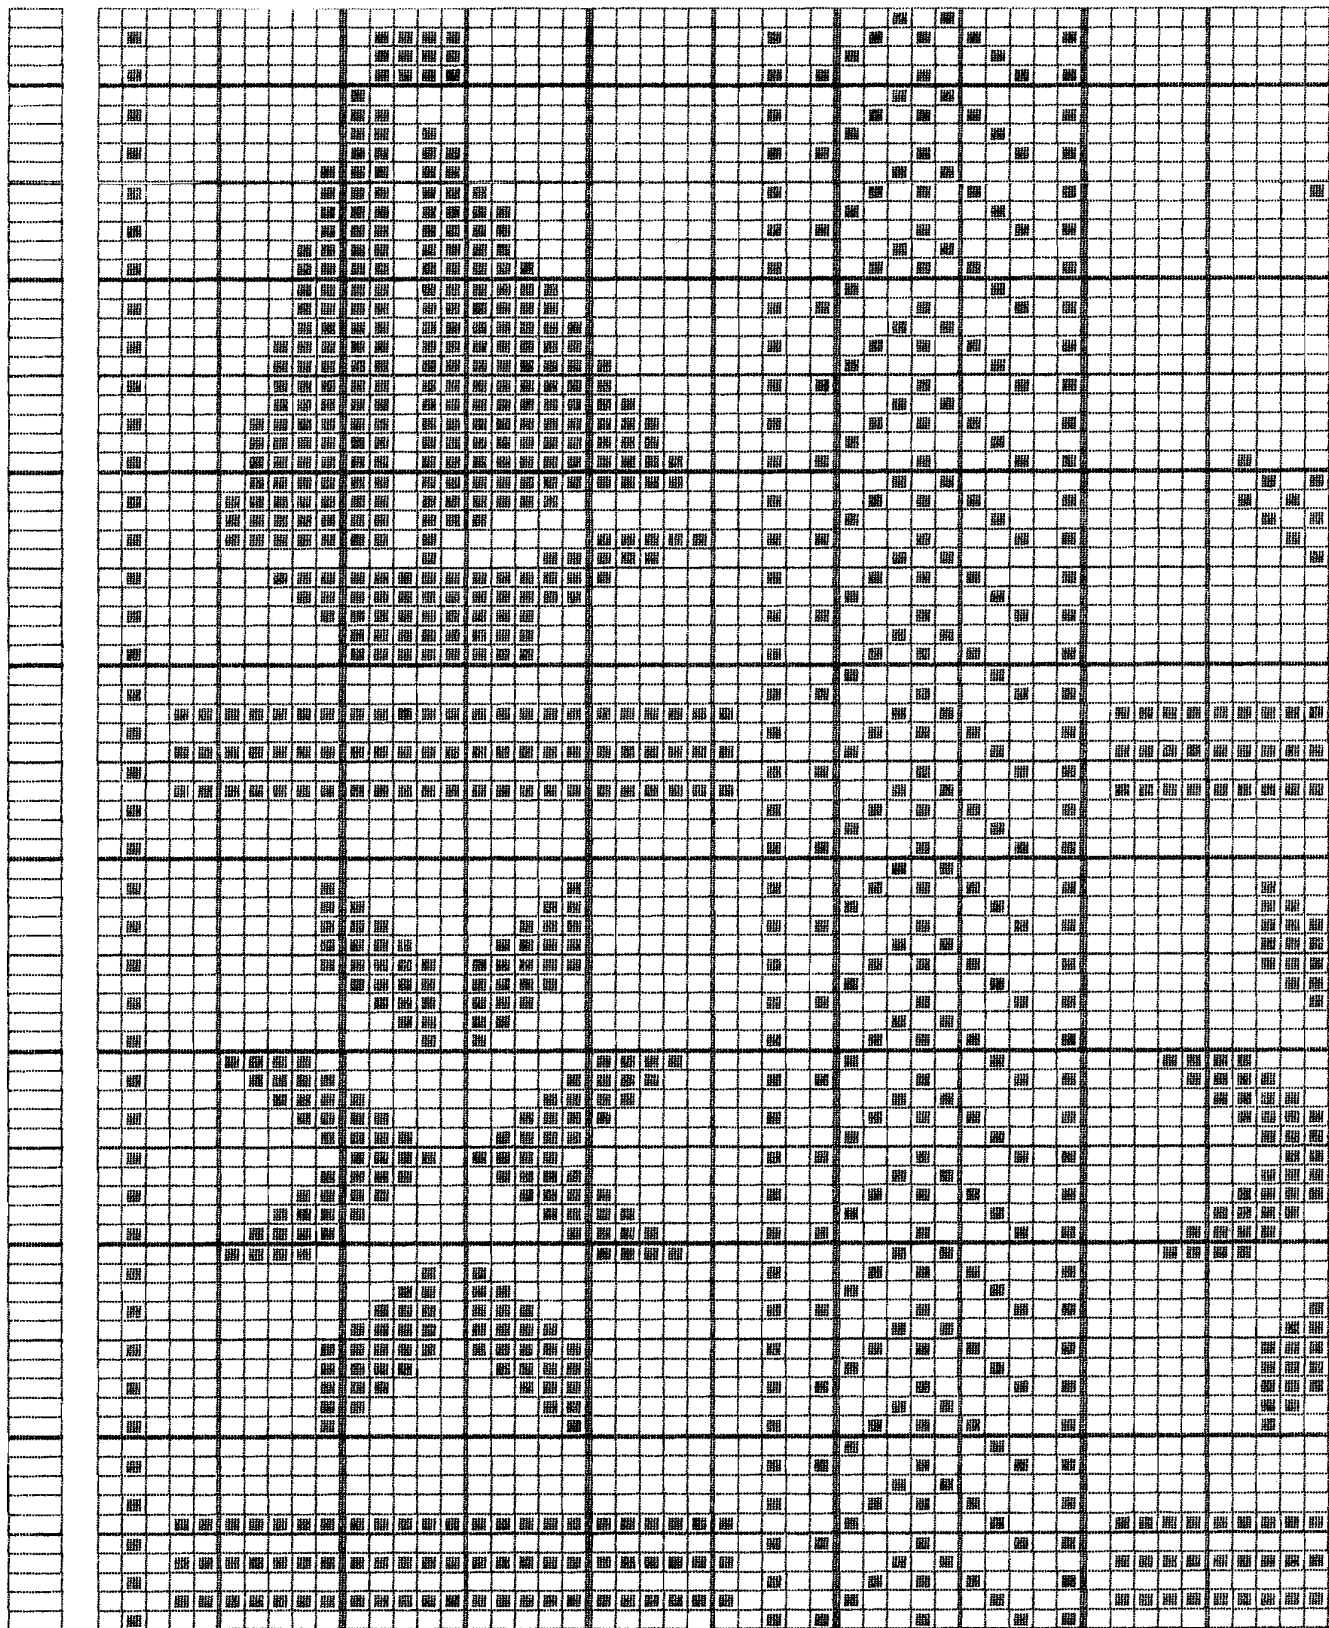



DISC No. = 3 TRACK No. = 14 PAGE No. = 14 PATTERN No. = 901
STITCHES = 129 ROWS = 84 PRINTING ORDER (3- 1)

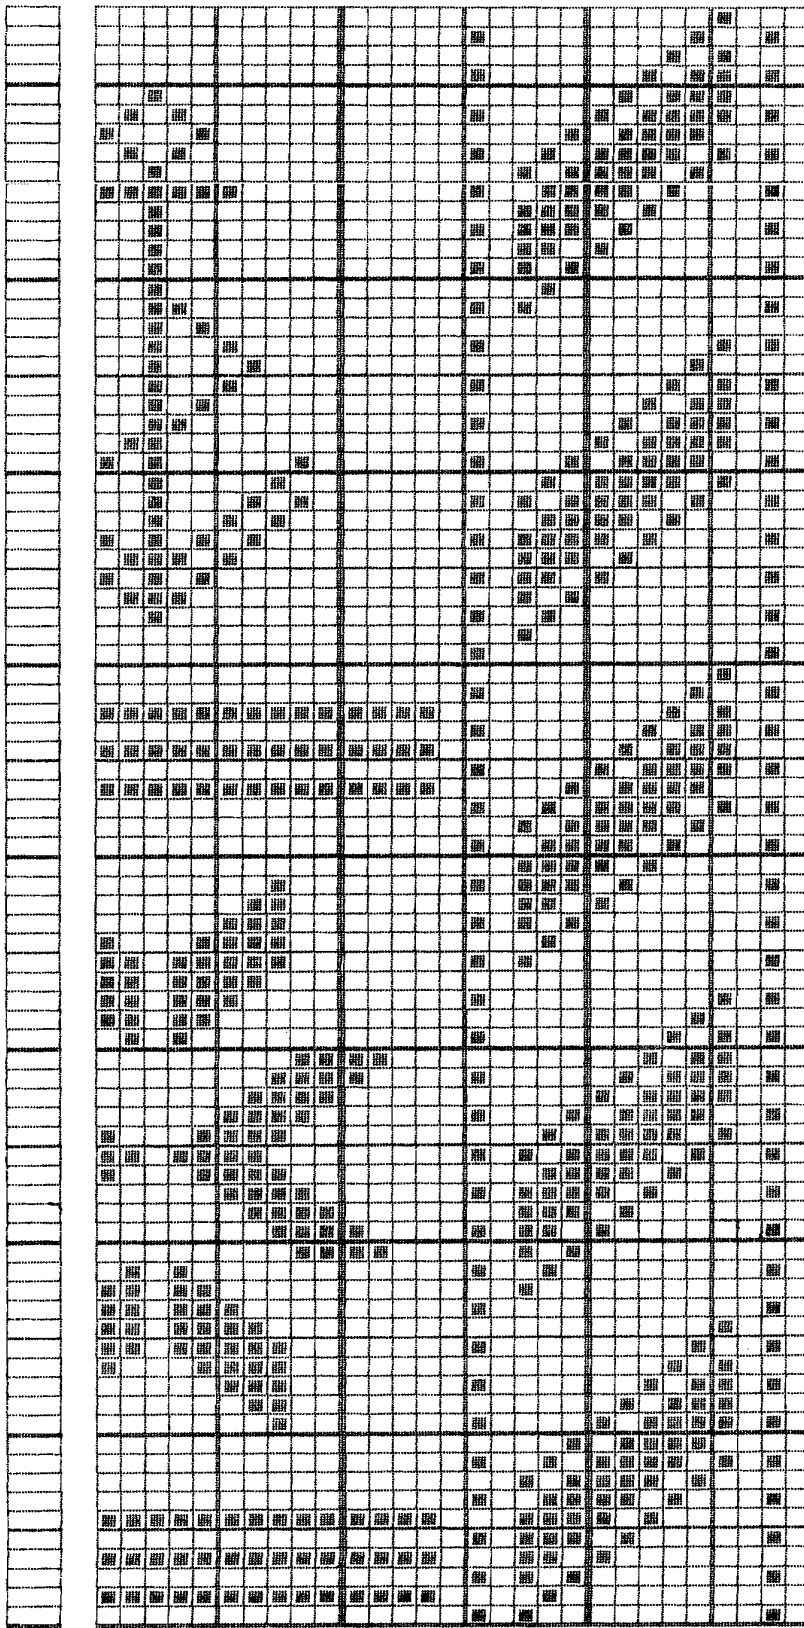

DISC No. = 3 TRACK No. = 15 PAGE No. = 15 PATTERN No. = 901
STITCHES = 129 ROWS = 70 PRINTING ORDER (1- 1)

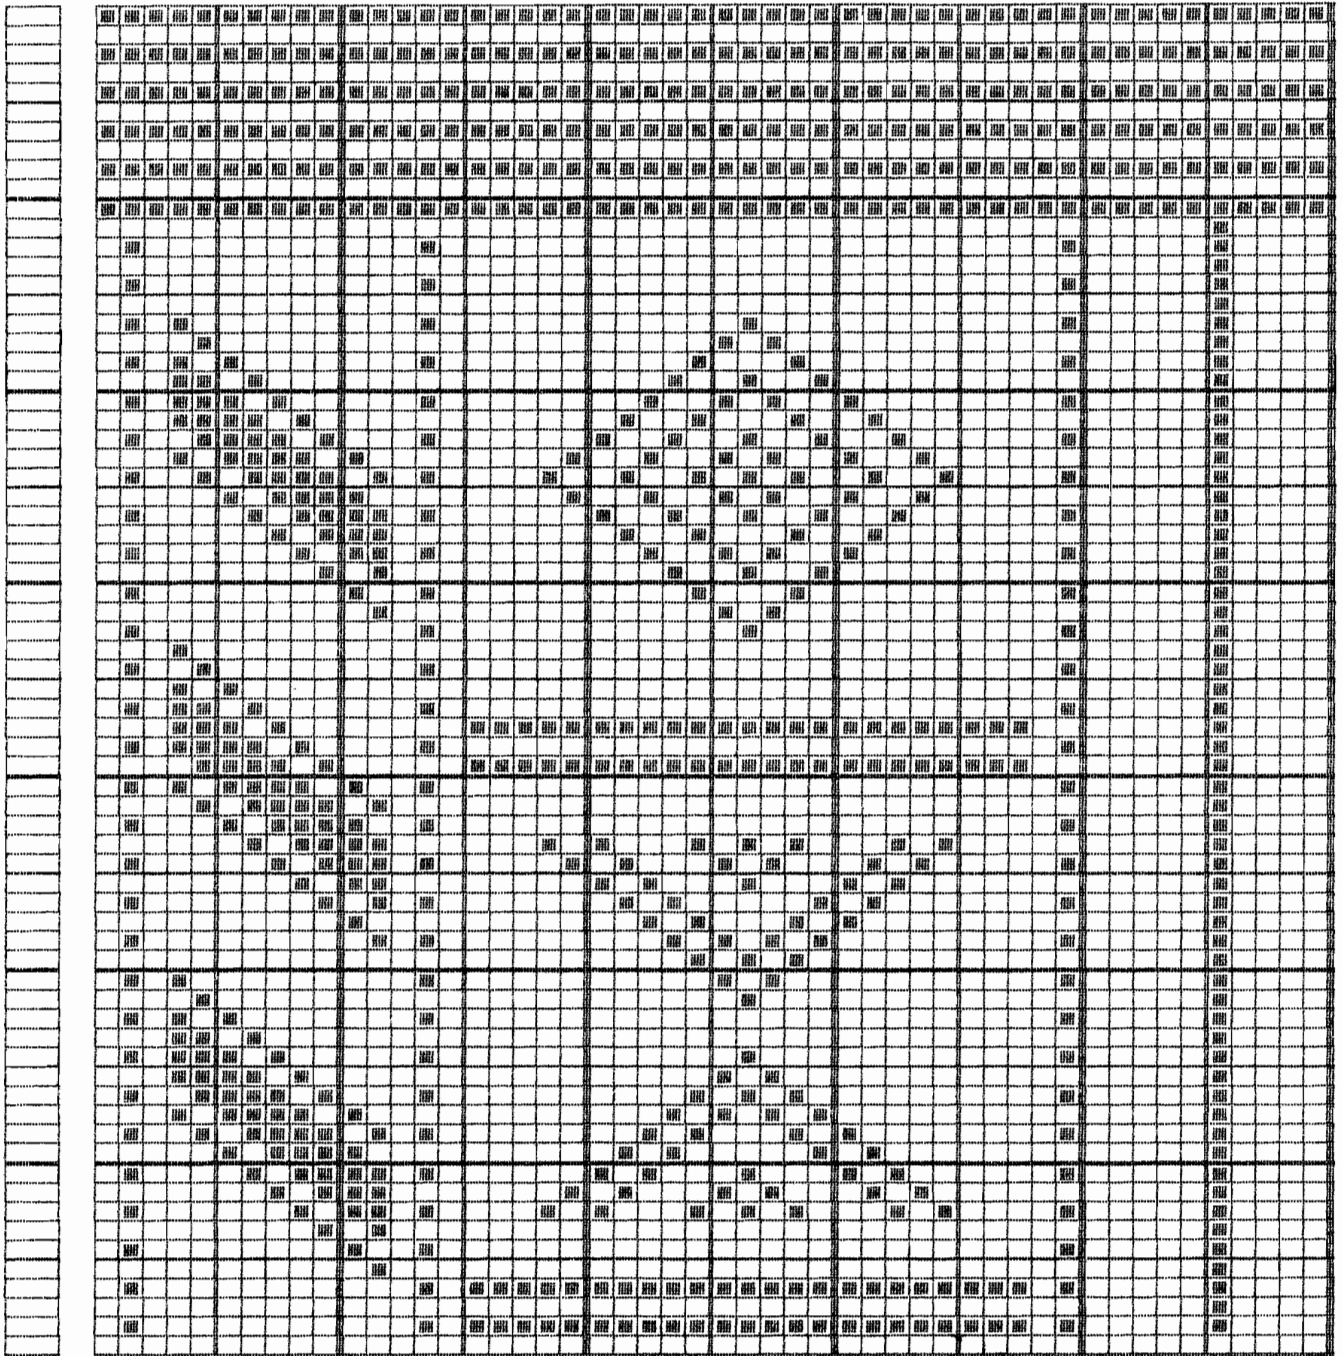

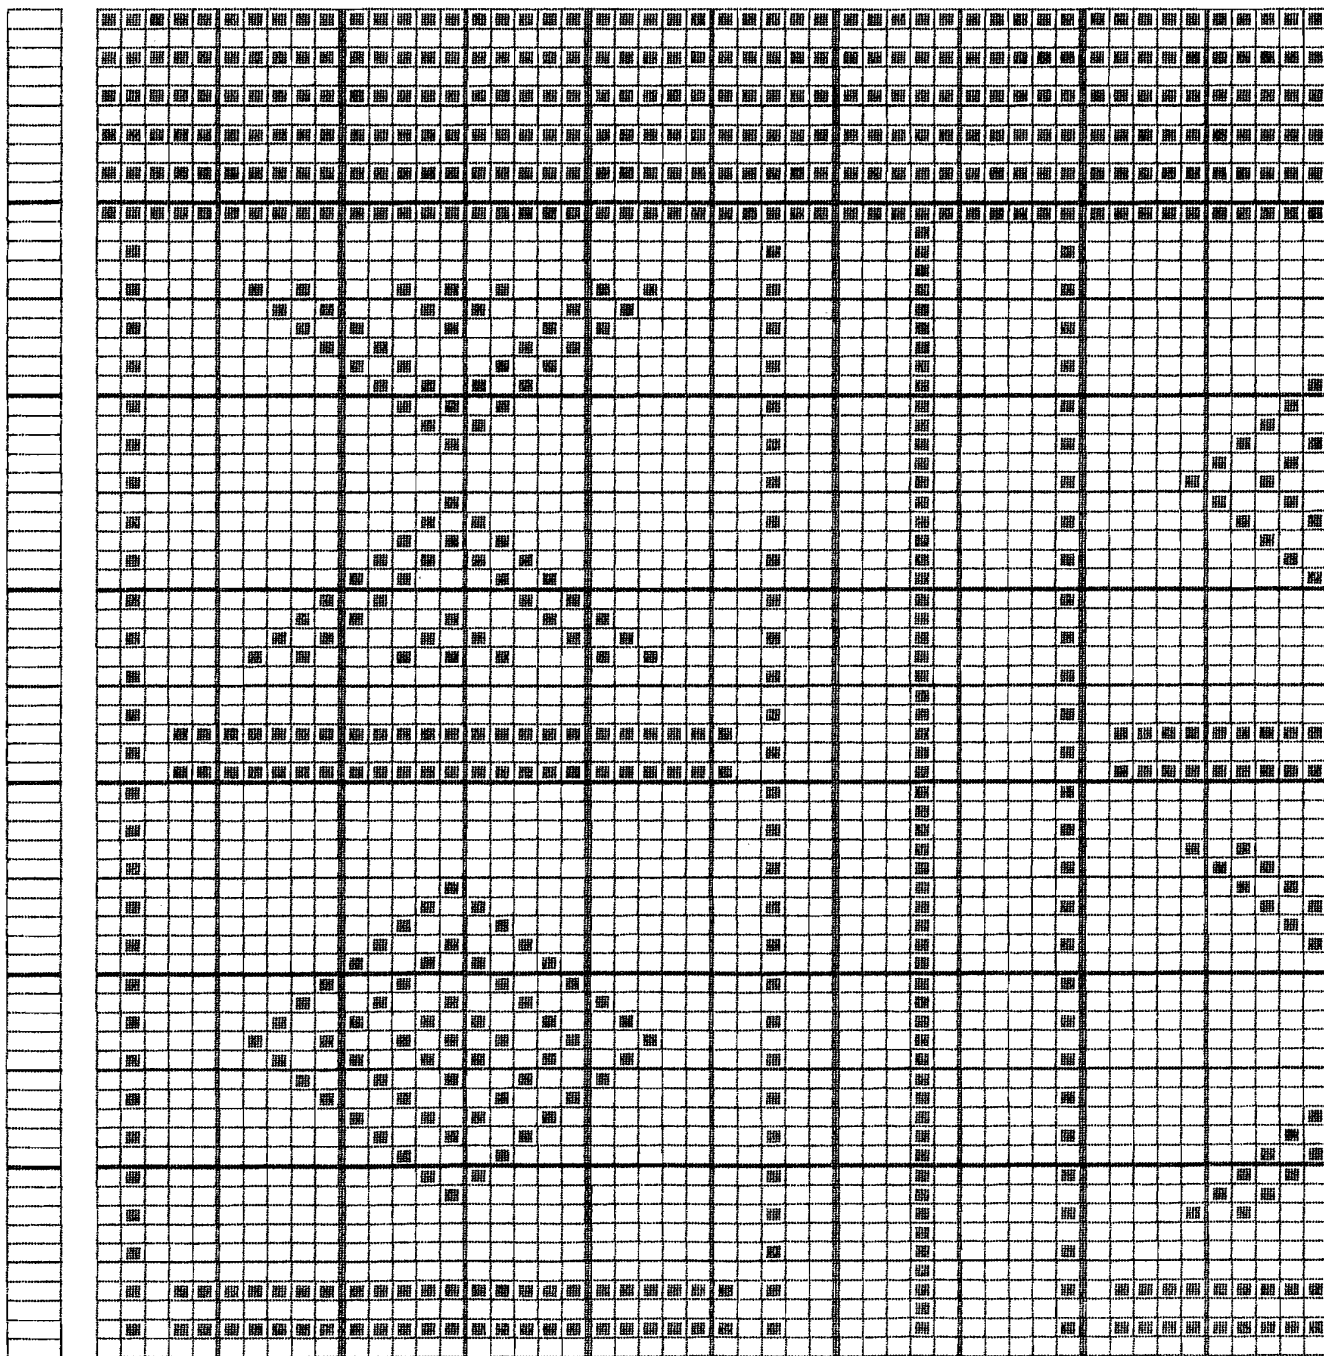

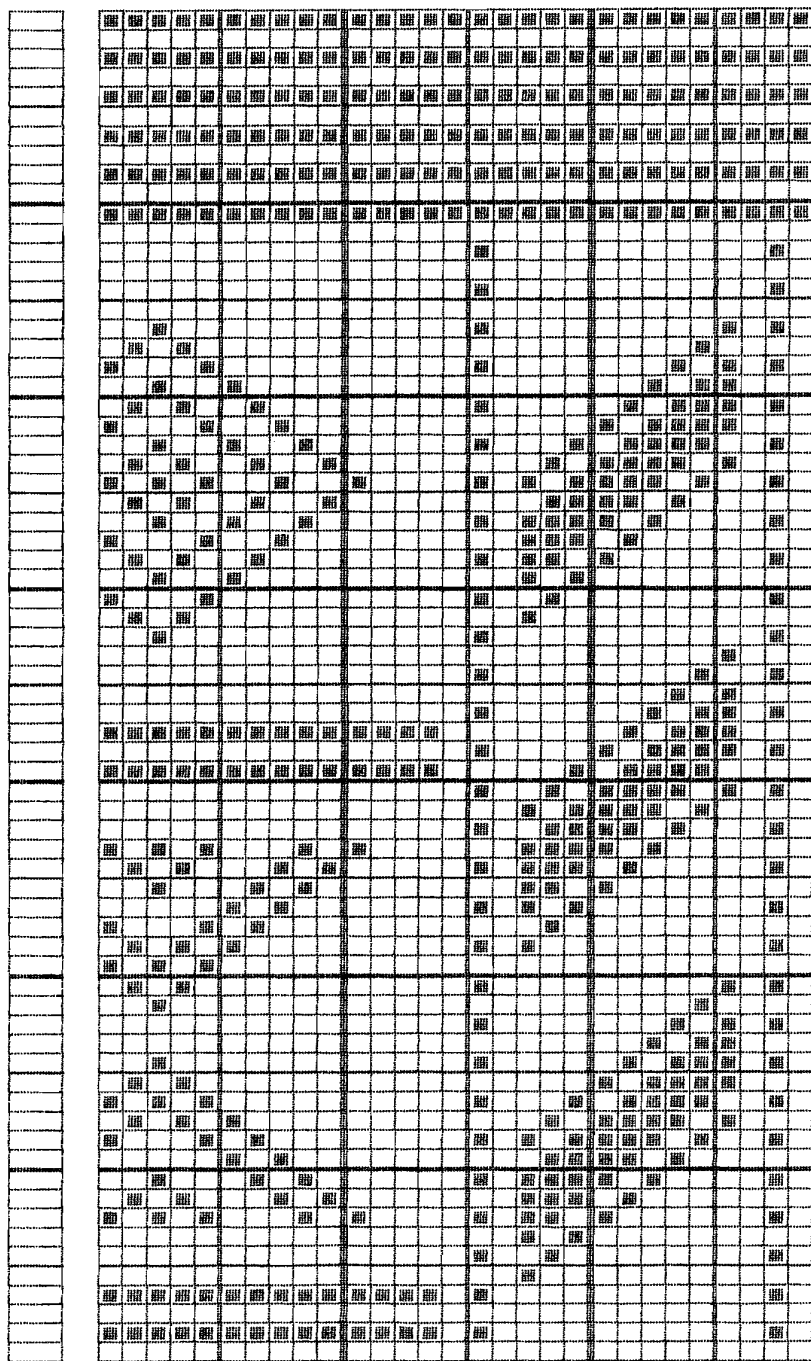

More Books by Phyllis Waterhouse

Long time knitter, demonstrator and author,
Phyllis Waterhouse is known for her classic styles
and easy-to-follow instructions.

Available for immediate download from :



North American Indian Designs 1	Classic Knits1
North American Indian Designs 2	Classic Knits 2
Nursery Rhyme Knits 1	Fisherman Ganseys 1
Nursery Rhyme Knits 2	Fisherman Ganseys 2
Picture Knits	Norwegian Sweaters
Sailing with the Garter Carriage	

