

01-06-2010


Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

Top Overlay

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

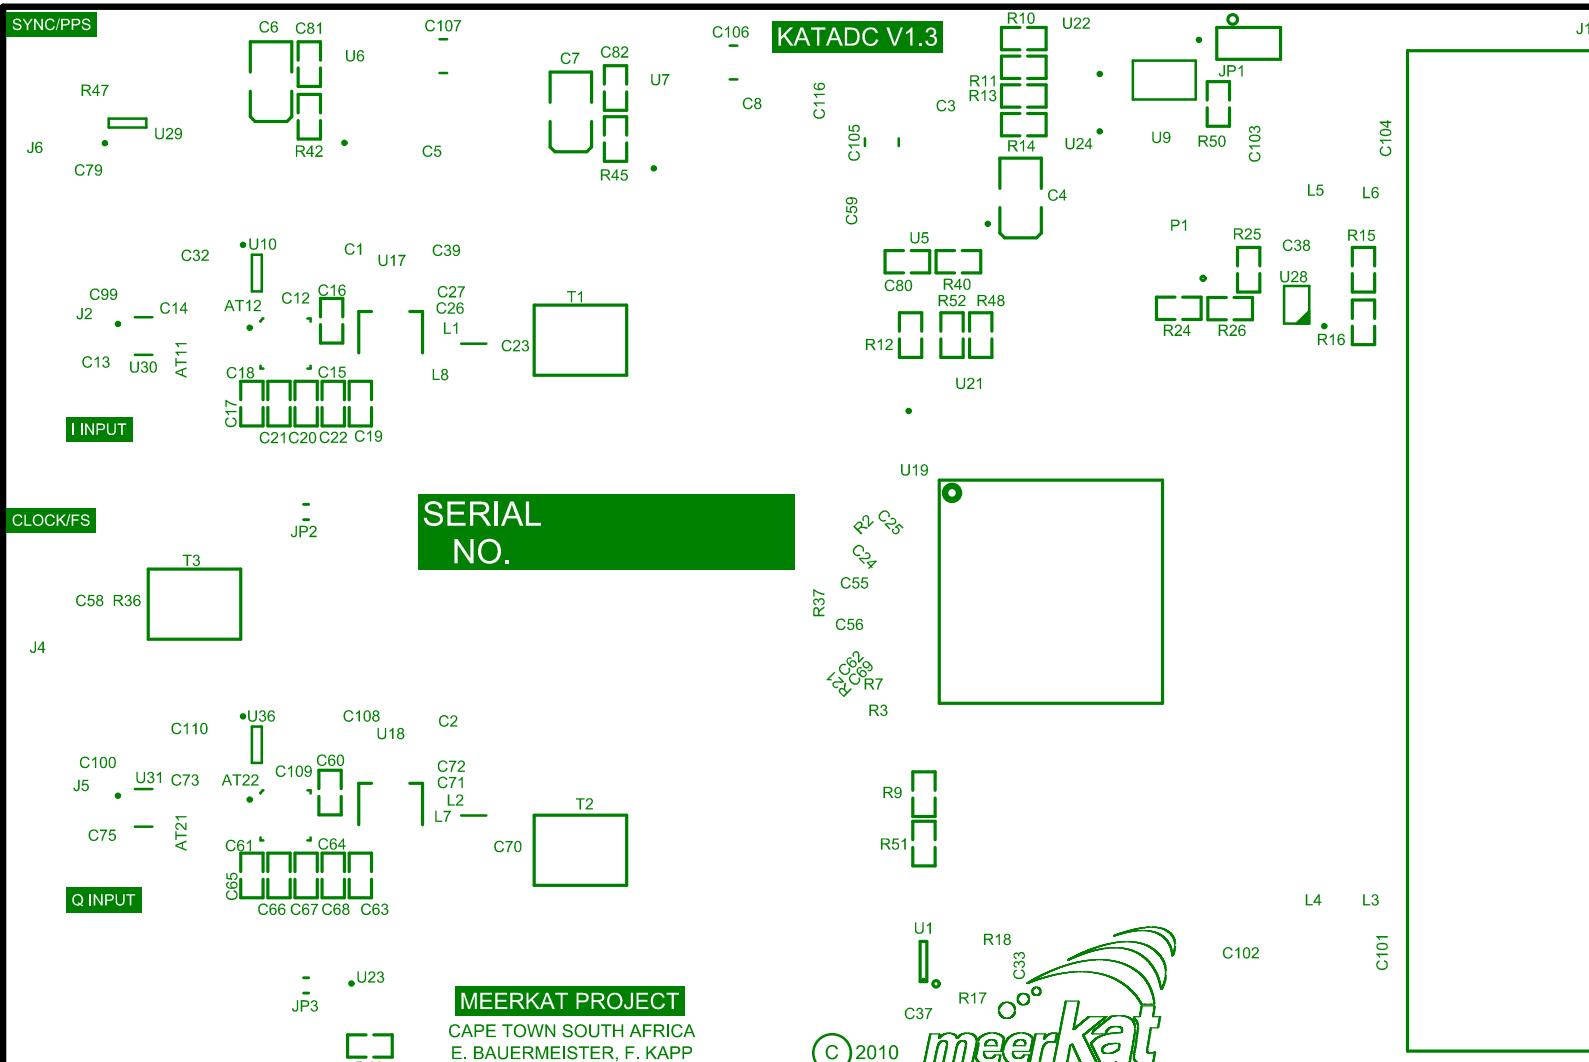

01-06-2010

Square Kilometer Array


SKA ADC PCB

KATADC_V1-3

Top Solder

EDA

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

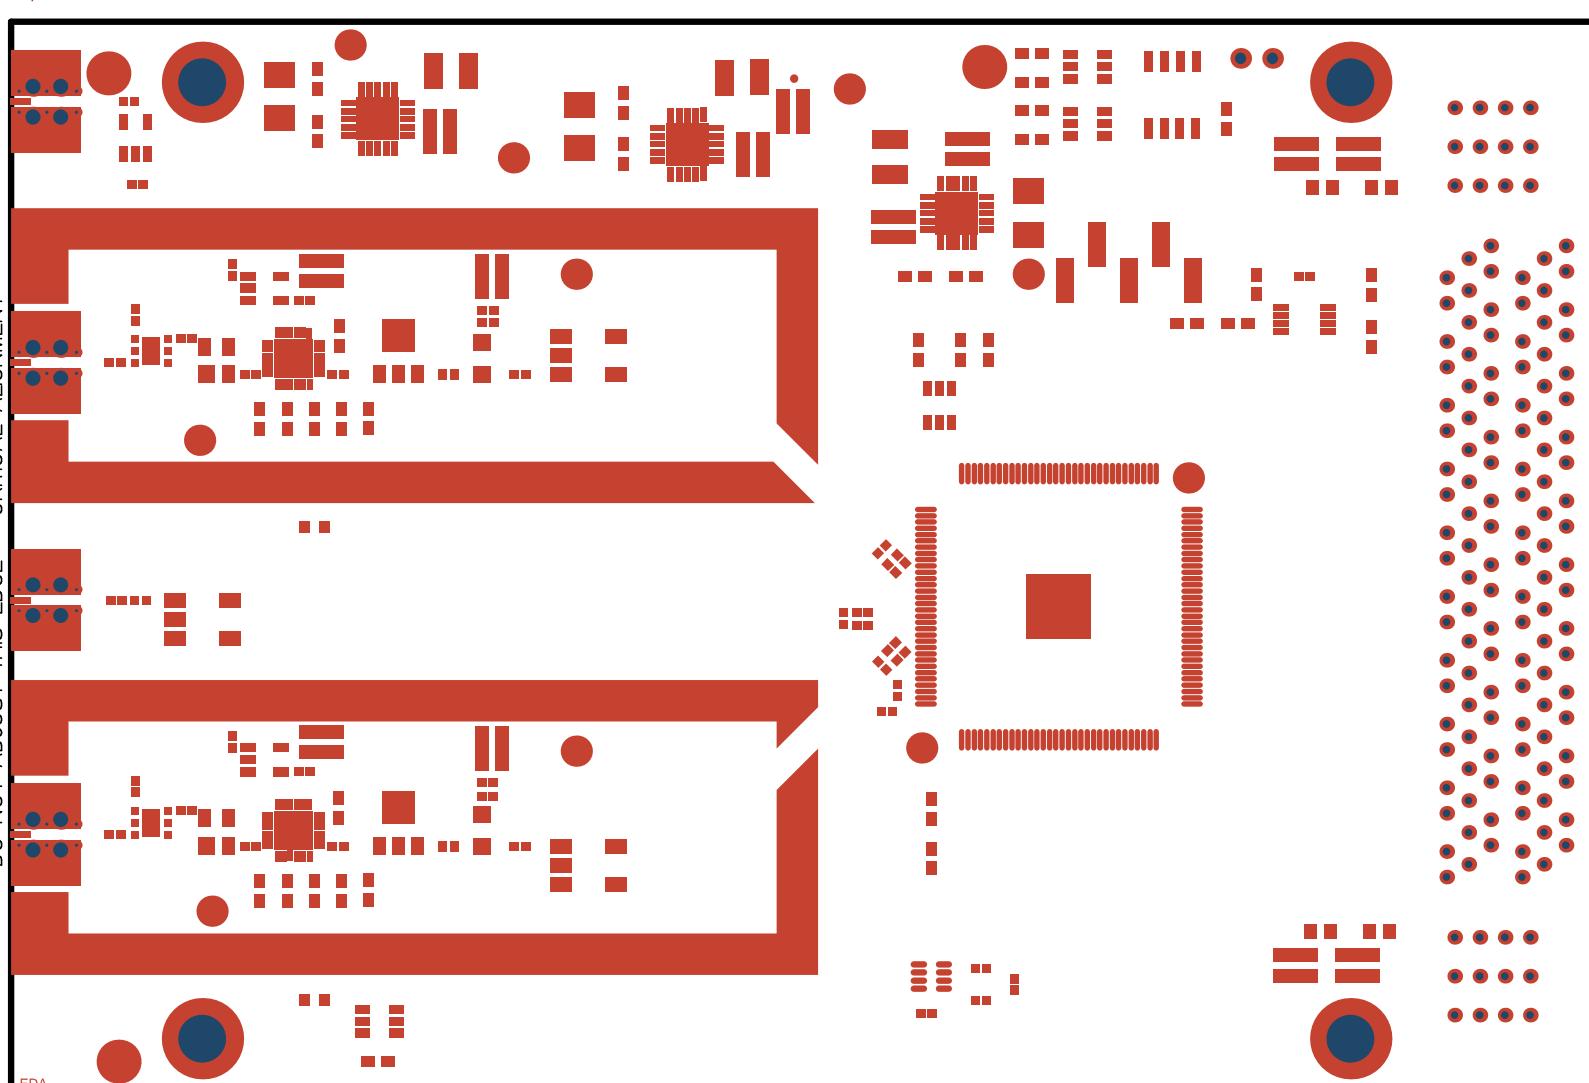

01-06-2010


Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

Top Layer

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

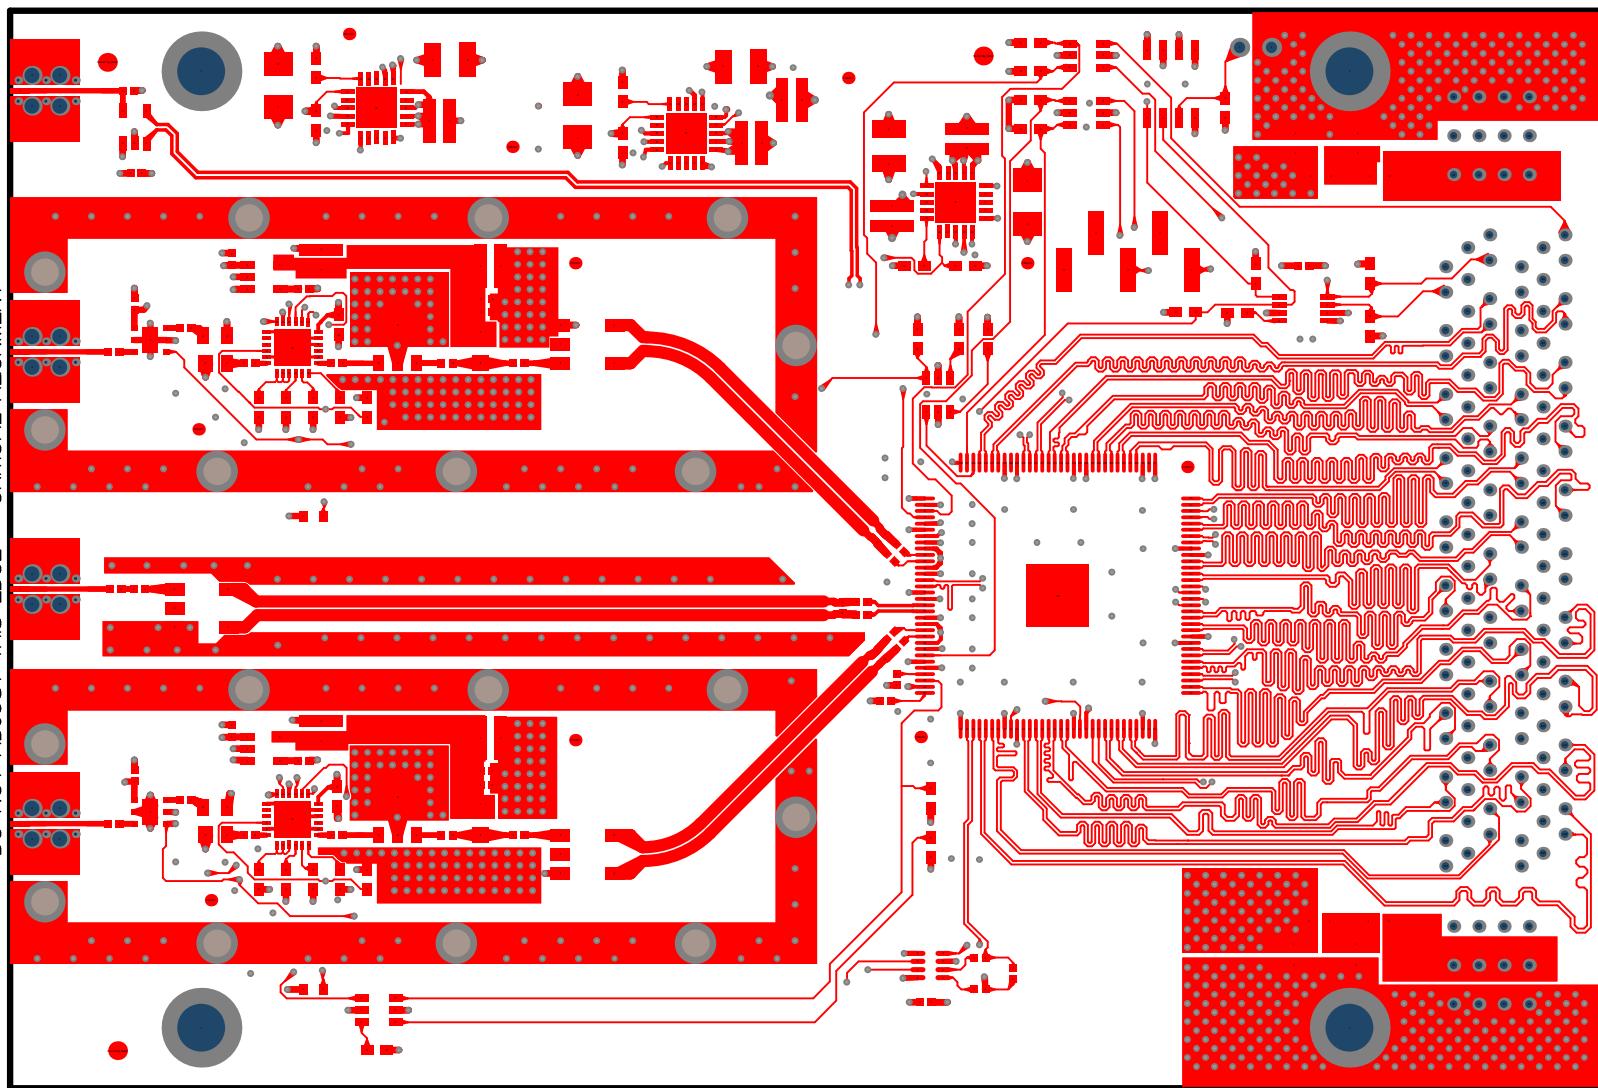

01-06-2010


Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

InnerPlane1

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

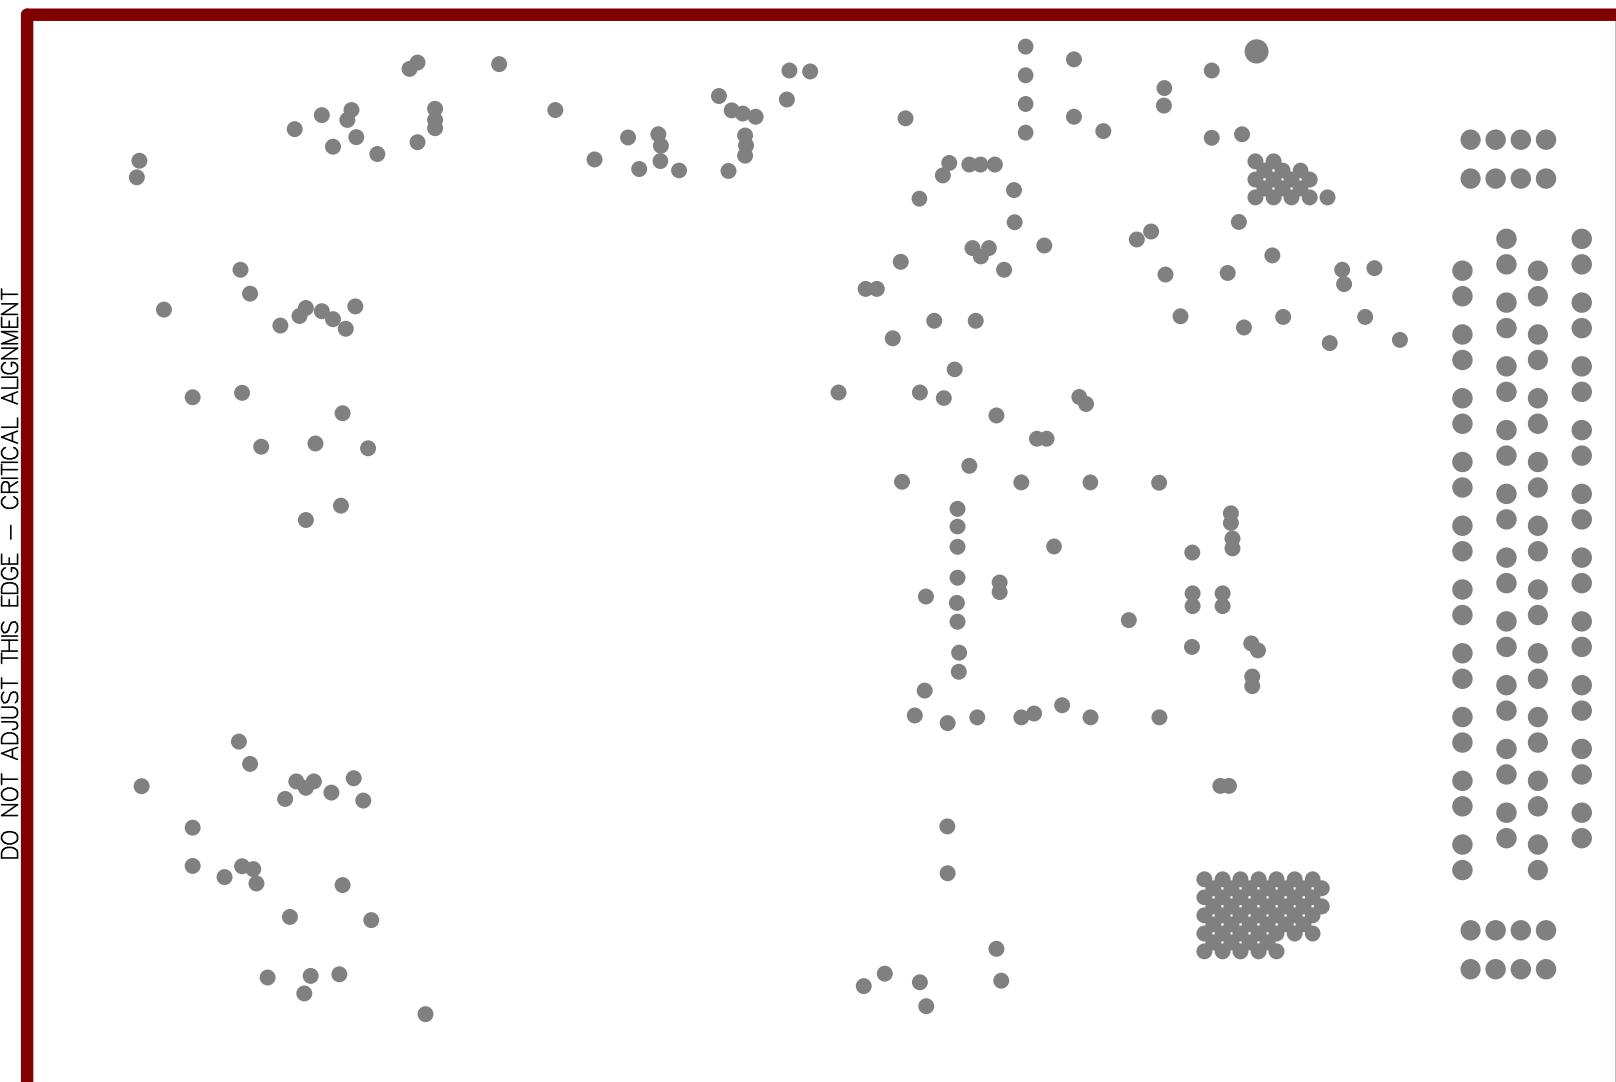

01-06-2010


Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

InnerPlane2

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

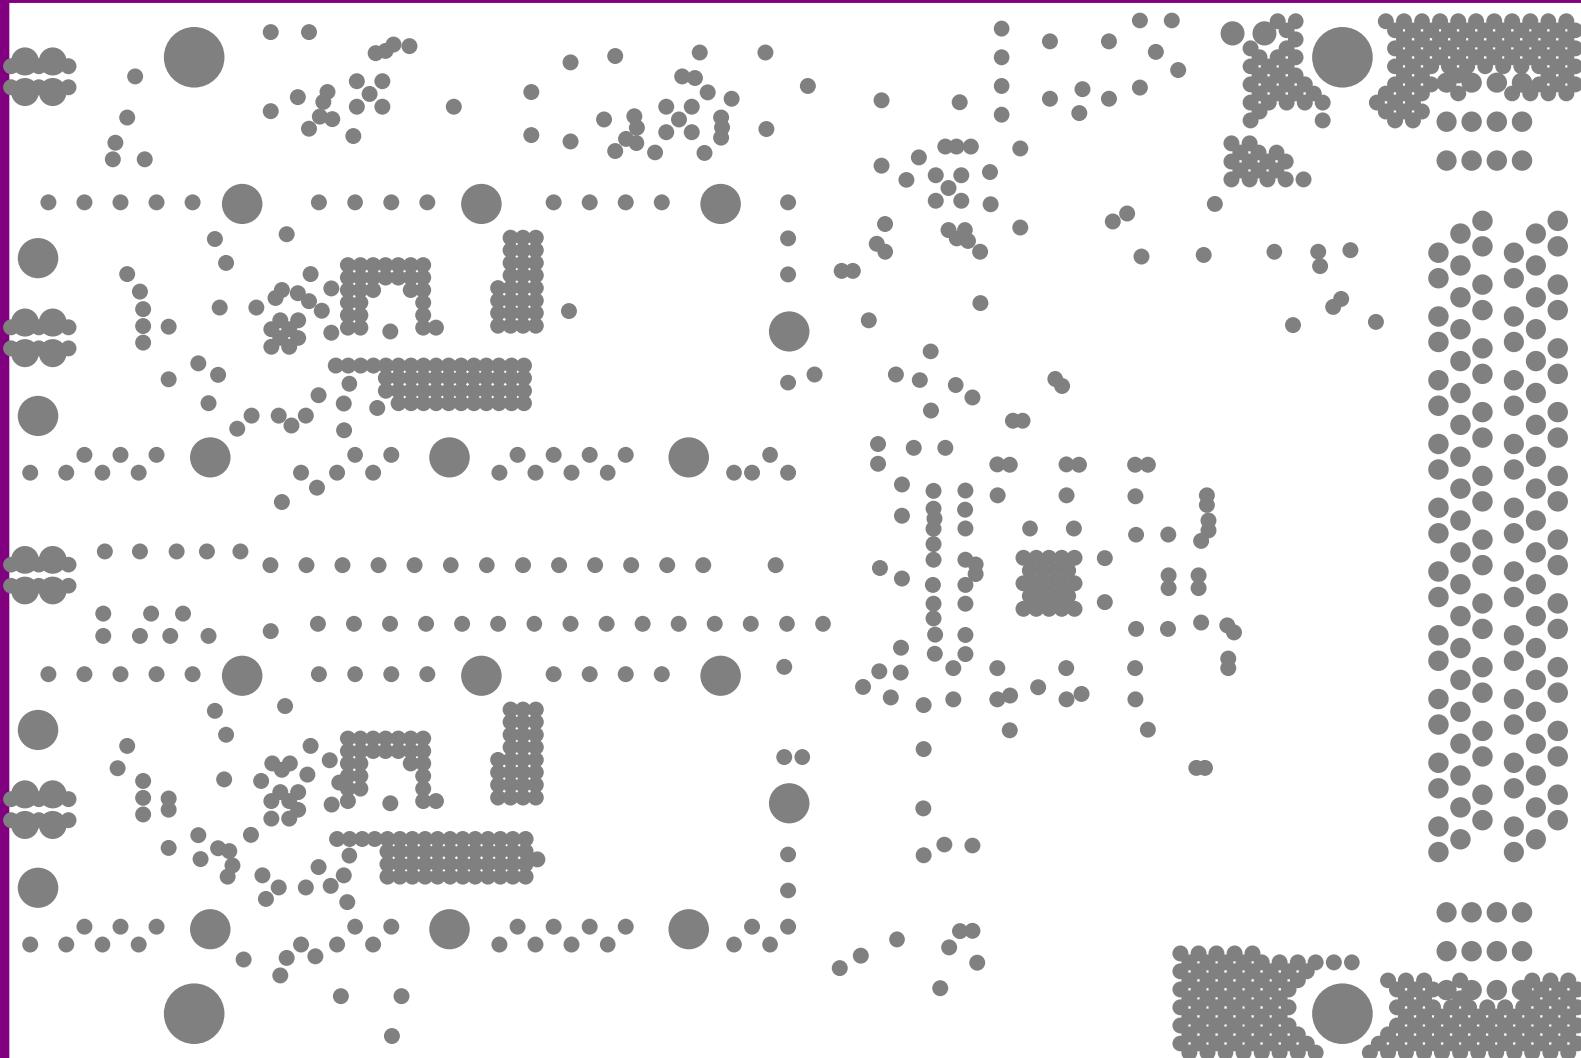

01-06-2010


Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

InnerPlane3

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

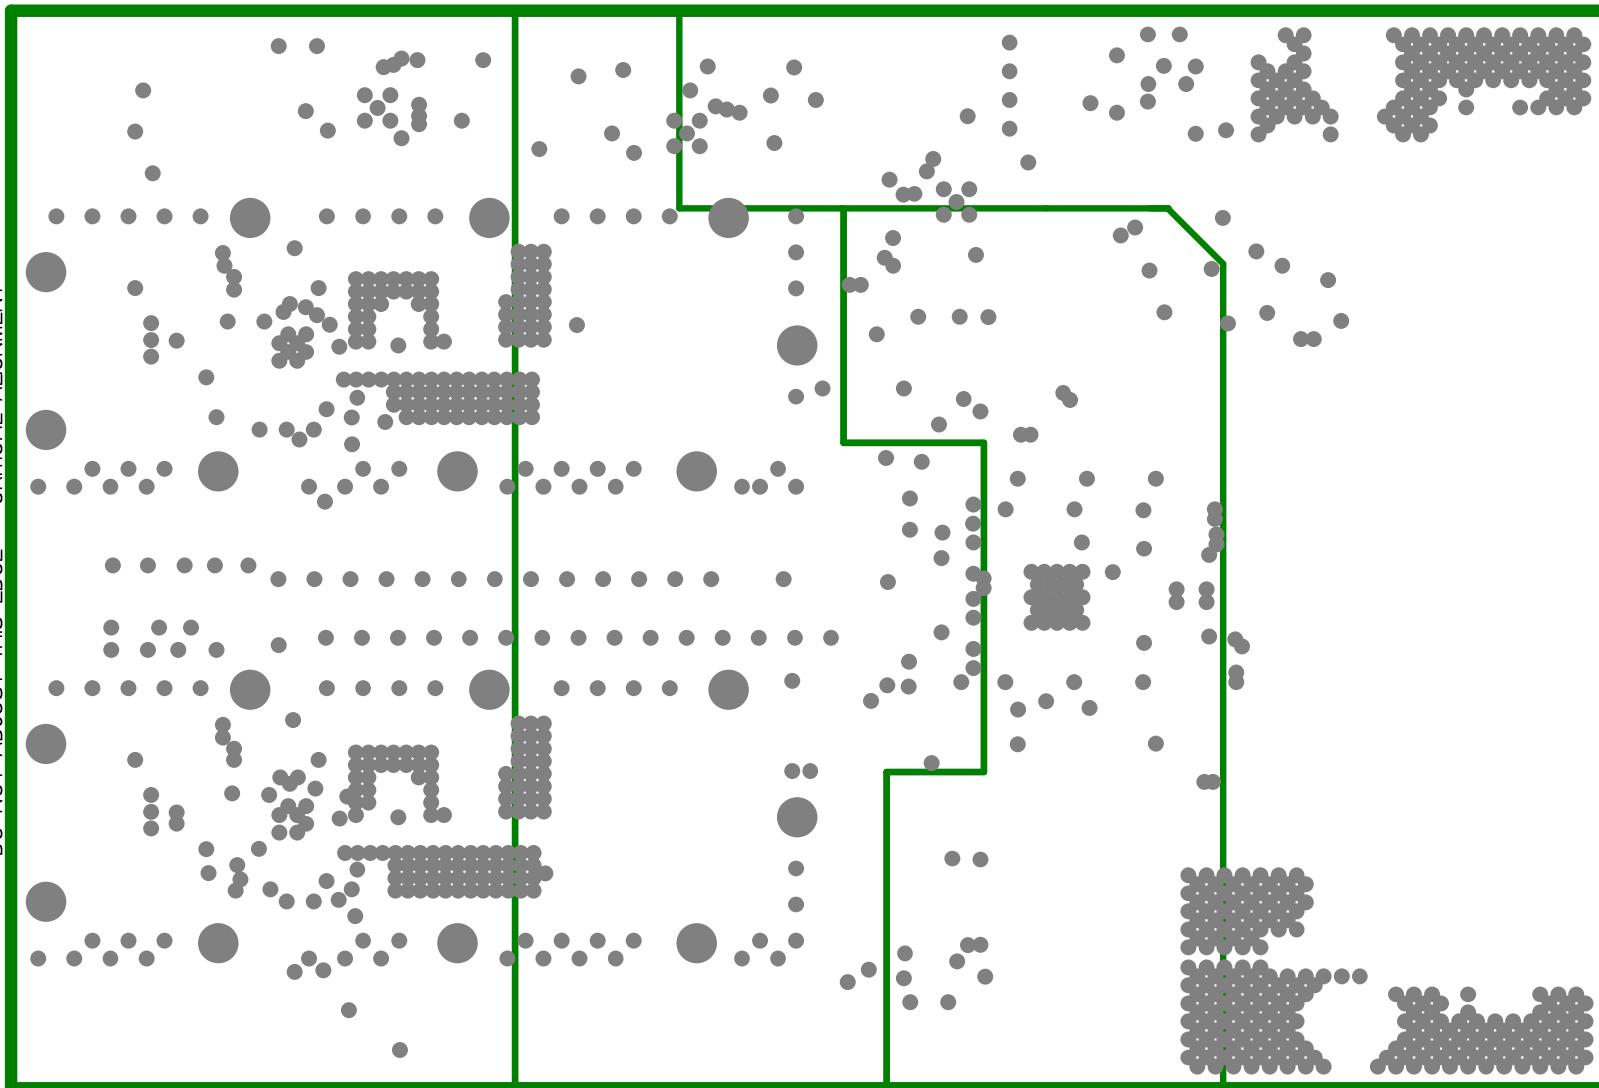

01-06-2010


Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

InnerPlane4

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

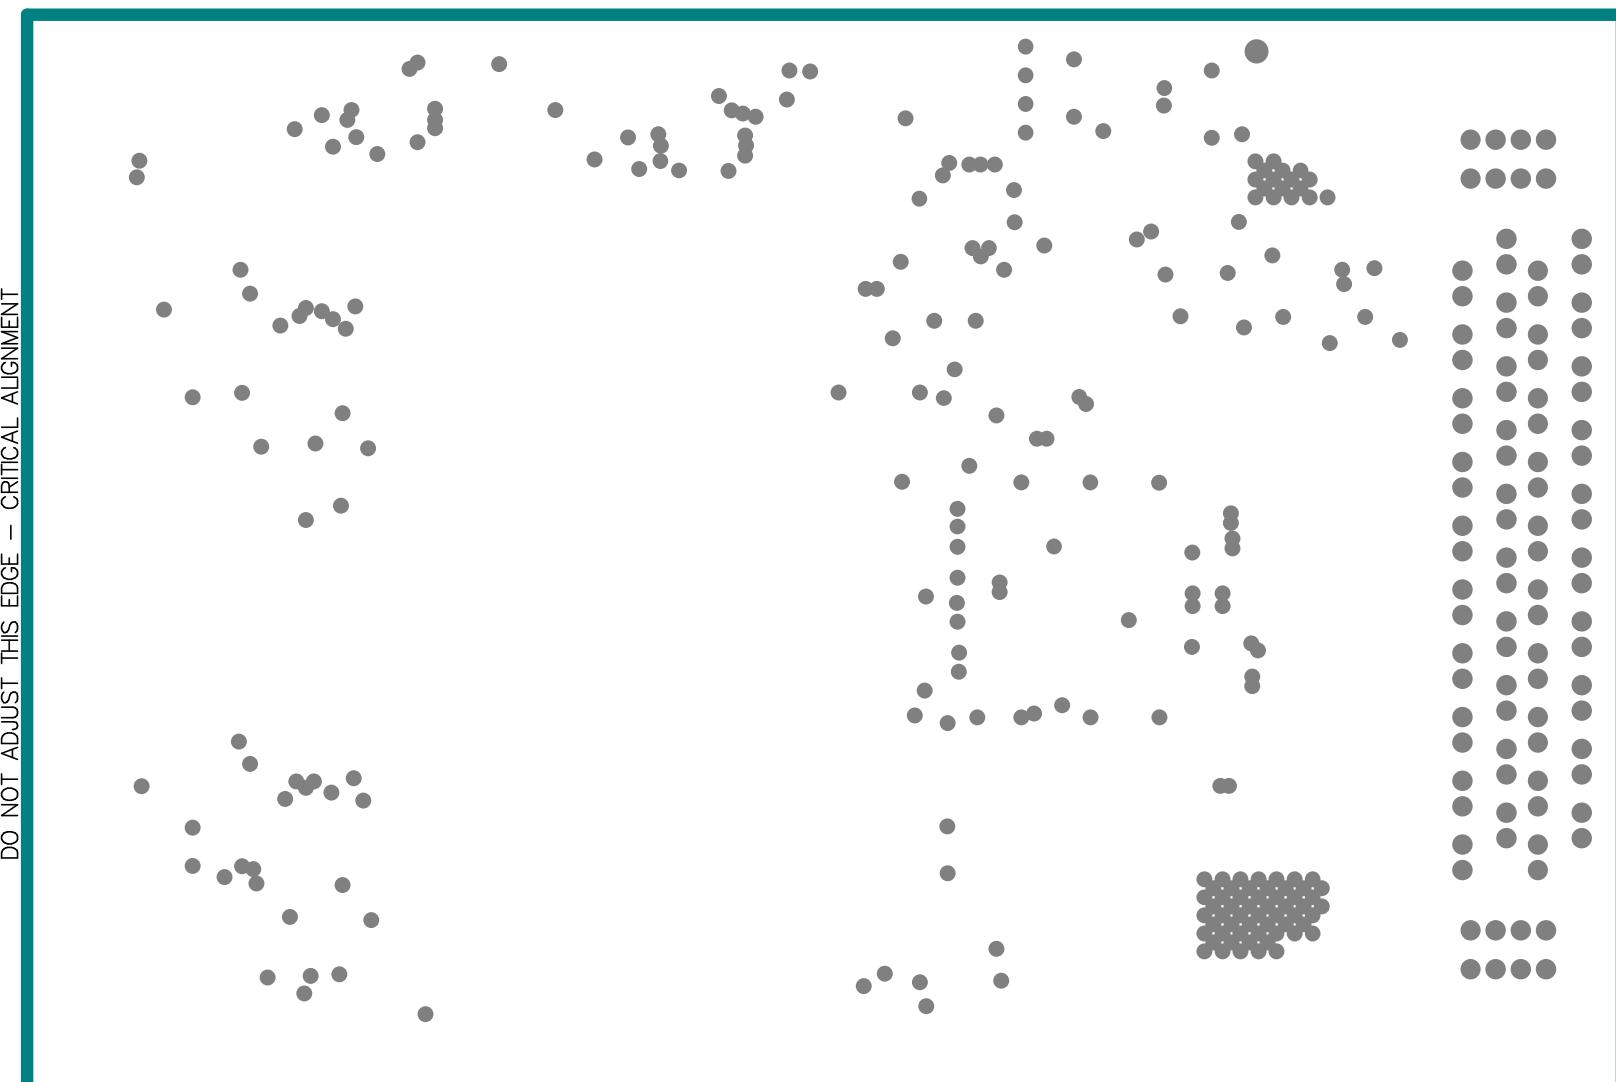

01-06-2010


Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

Bottom Layer

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

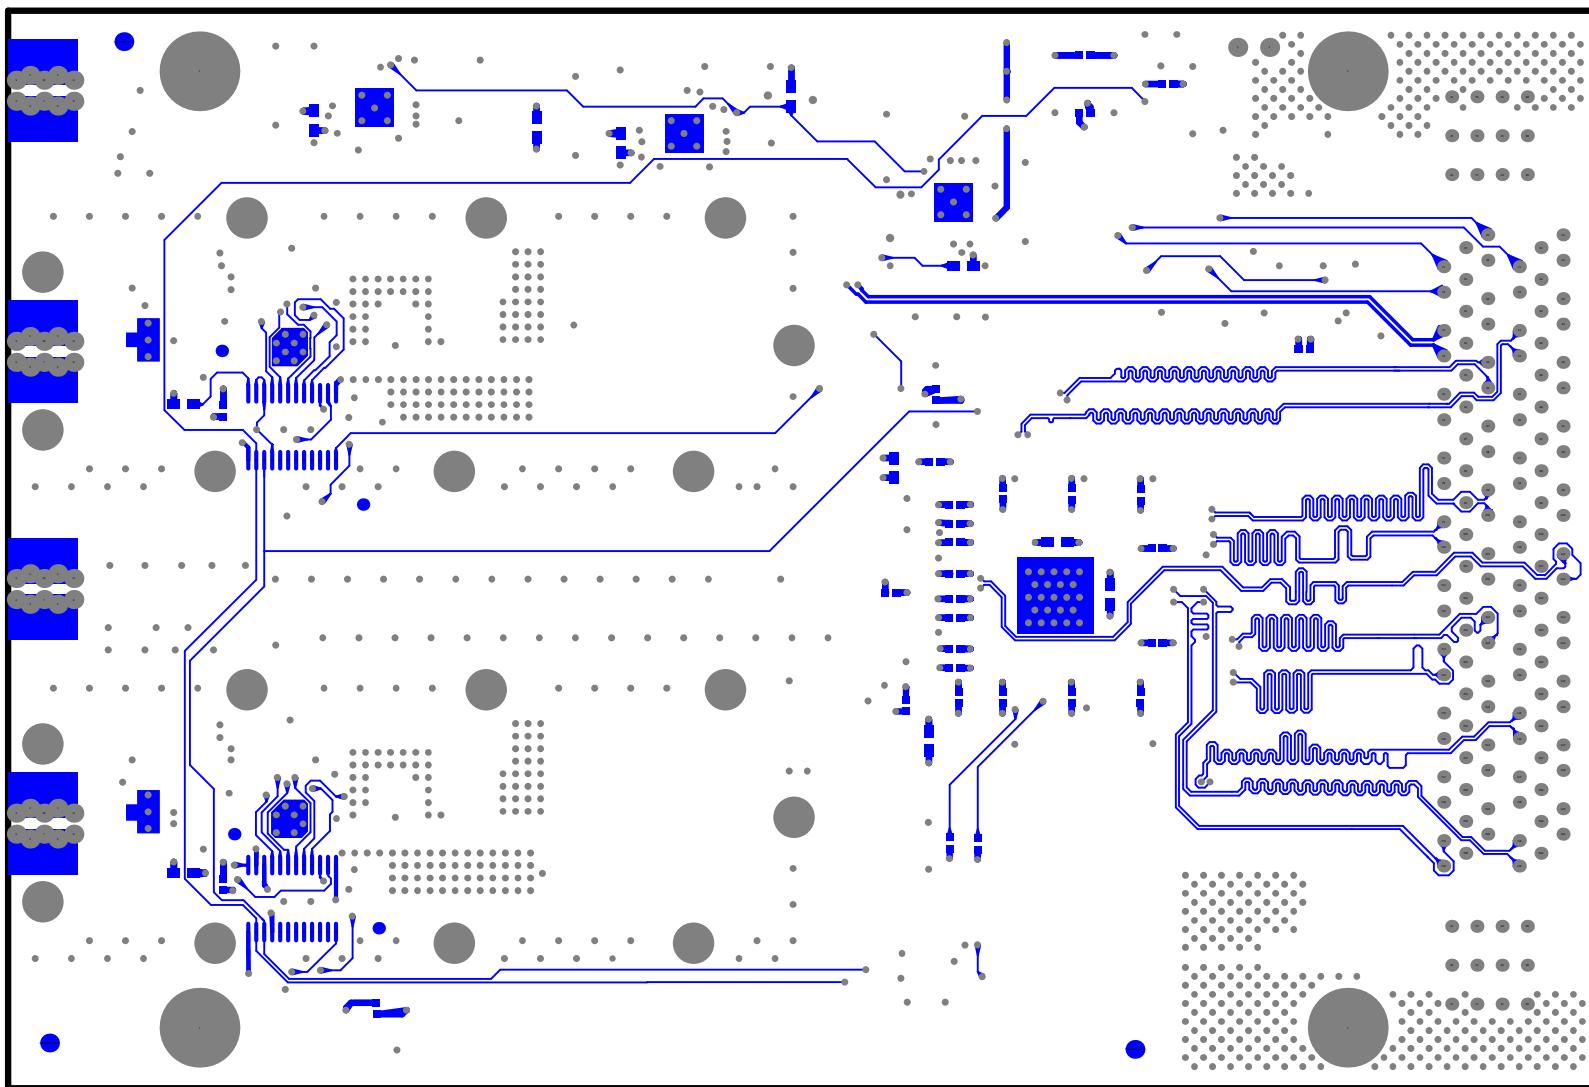

01-06-2010


Square Kilometer Array


SKA ADC PCB

KATADC_V1-3

Bottom Solder

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

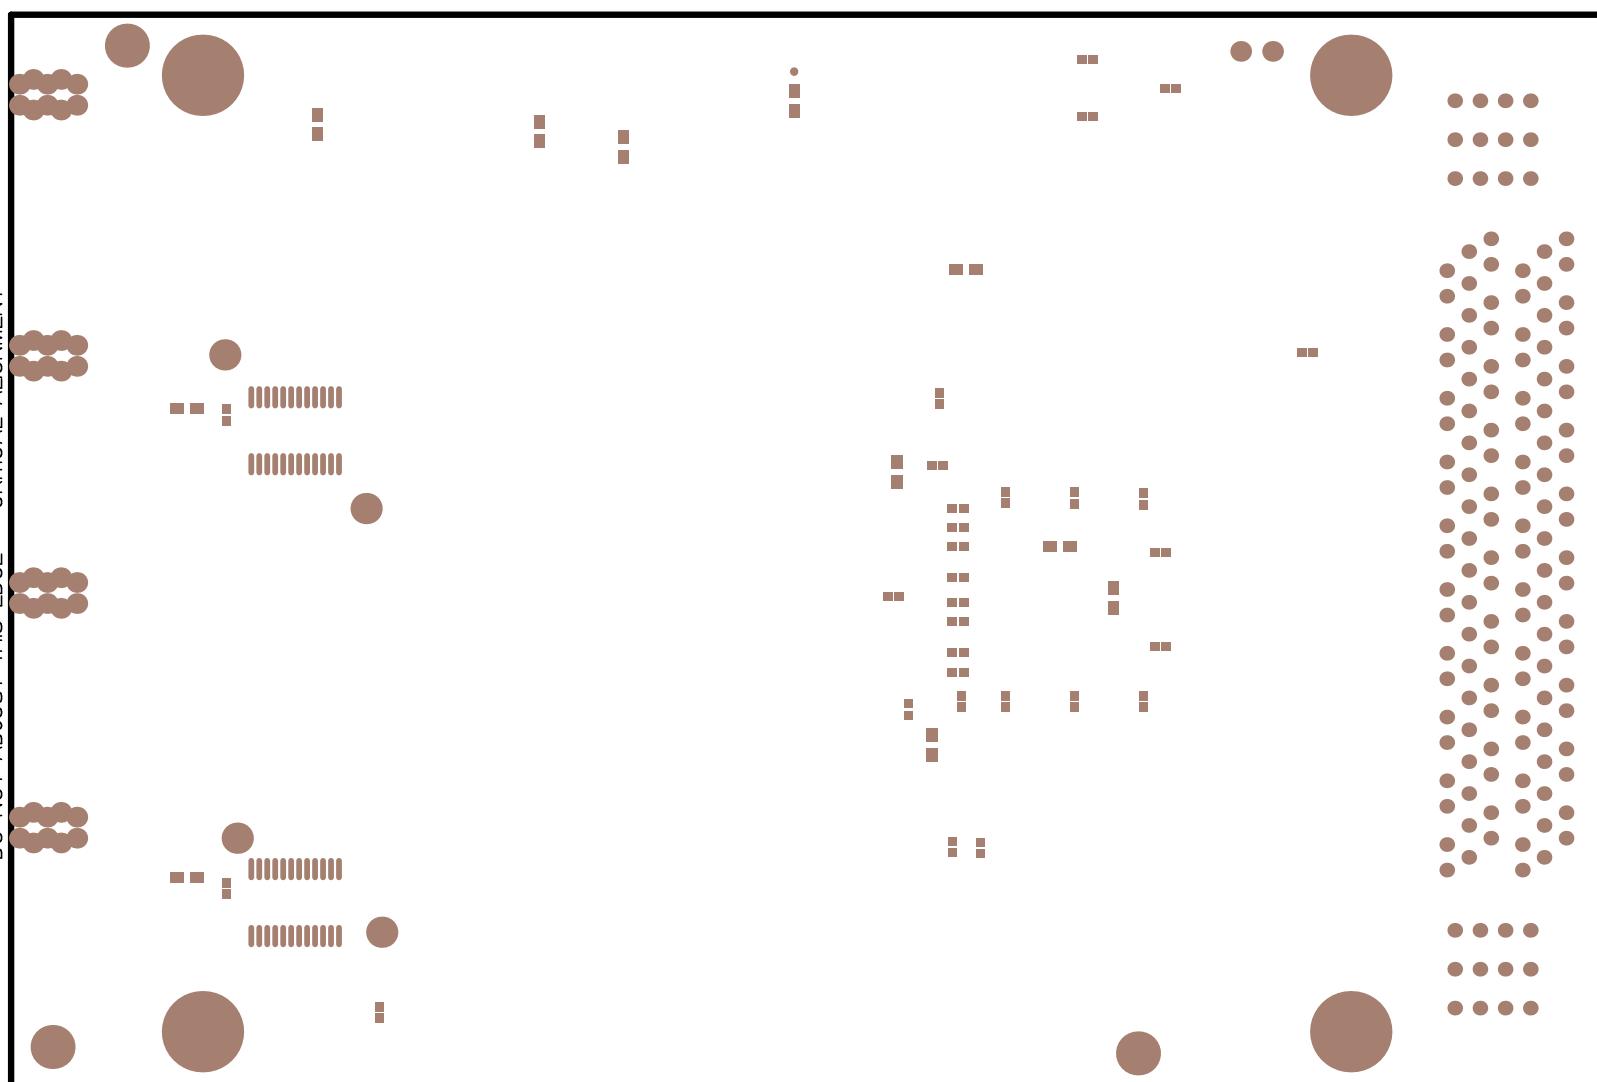

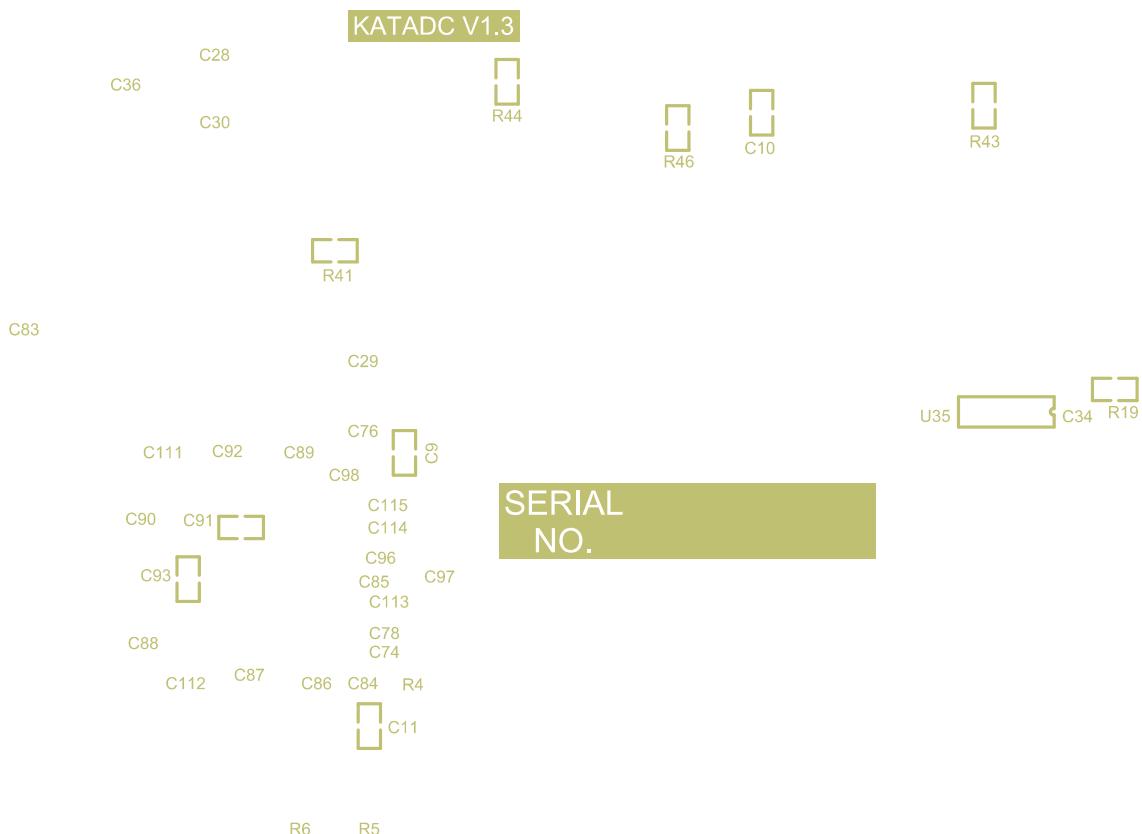


01-06-2010

Square Kilometer Array

SKA ADC PCB

KATADC_V1-3

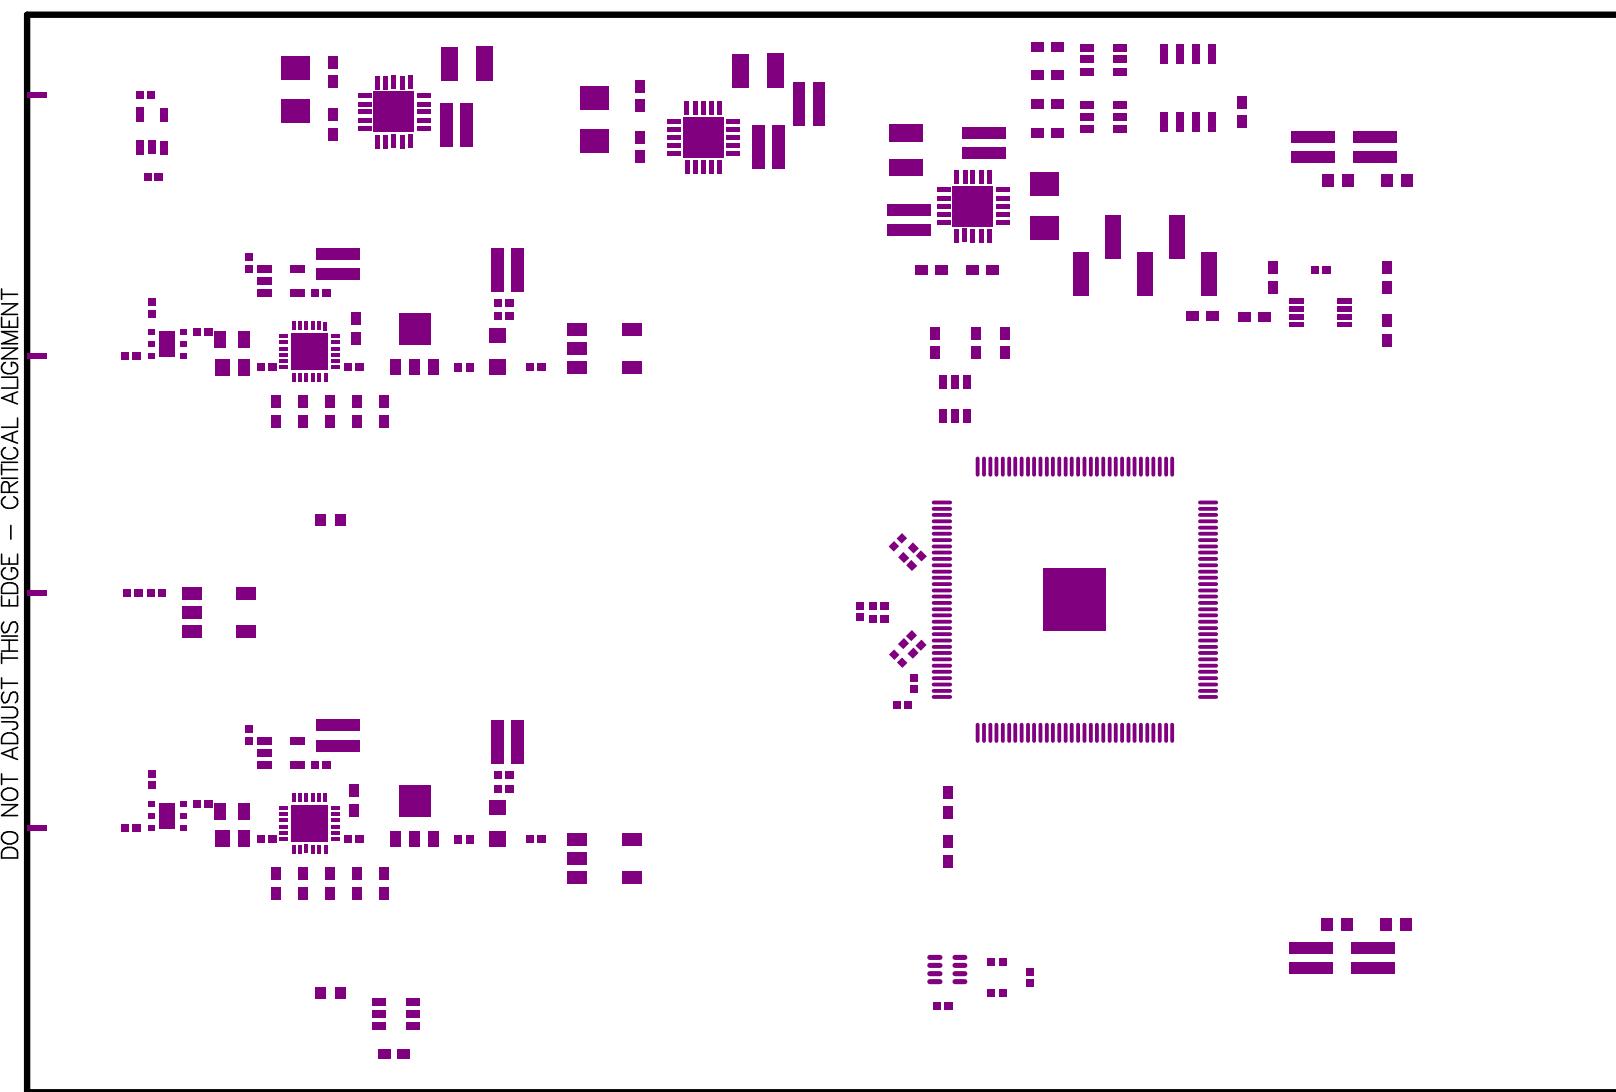

DO NOT ADJUST THIS EDGE - CRITICAL ALIGNMENT

