


AUTOMATIC WEATHER STATION

MANUAL

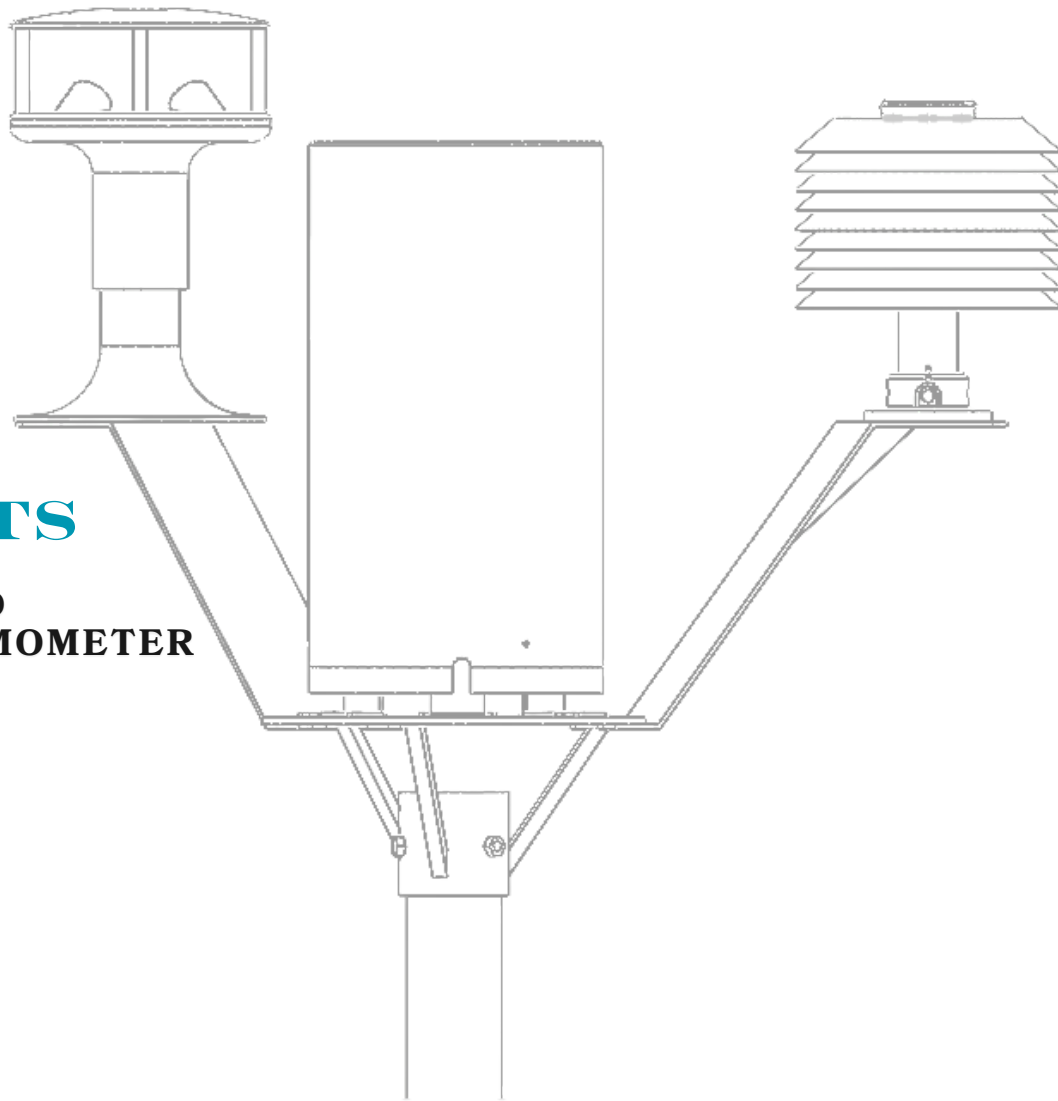


COMPONENTS

- RAIN GUAGE
- RADIATION SHIELD
- ULTRA SONIC ANEMOMETER
- DATA LOGGER
- SOLAR PANEL
- MOUNTINGS


RAIN GAUGE

Step 1

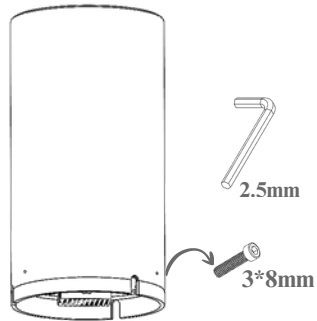


Open the Cylinder using Allen key

Step 2

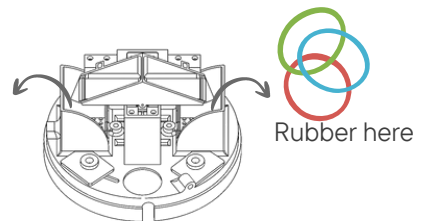


Remove the rubber from the seesaw

Step 3

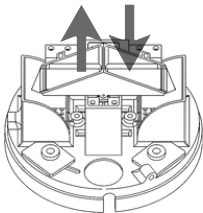


Gently Check the movement of seesaw

Step 4

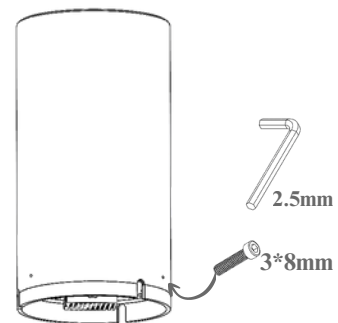

Close the cylinder properly


Step 5

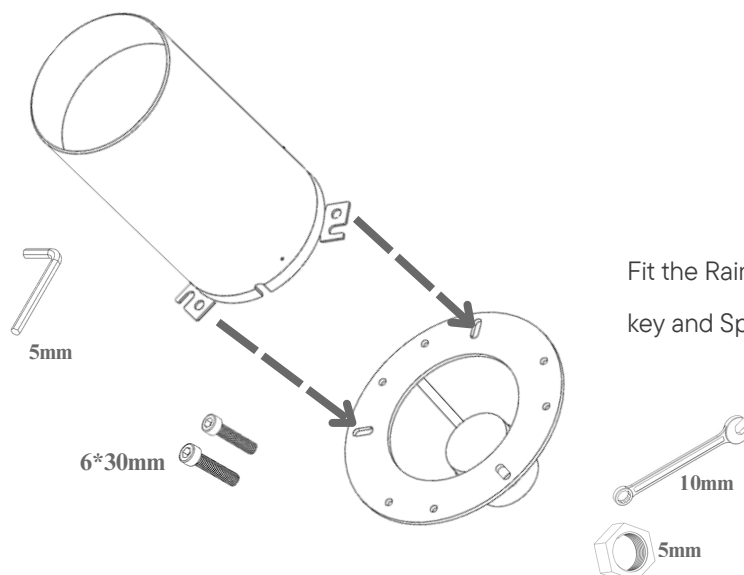

Fit the Rain Gauge in the stand with Allen key and Spanner


RADIATION SHIELD

Step 1

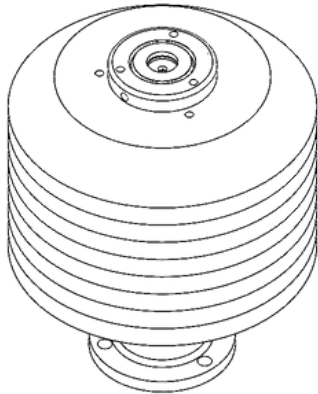


Gently Check the Plates and Wiring

Step 2

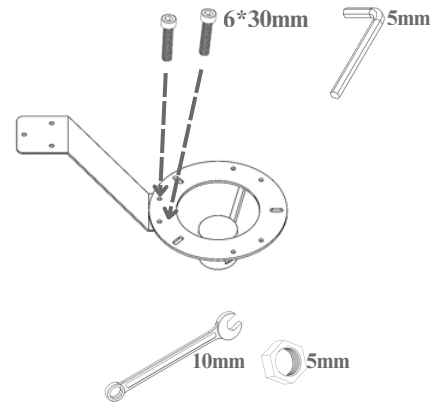


Joint Radiation Shield Mounting of Rain Gauge Mounting

Step 3

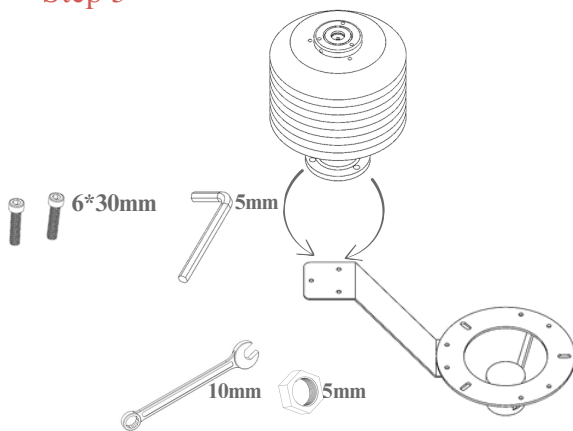


Joint the Mounting plate with the base of Radiation Shield

Step 4

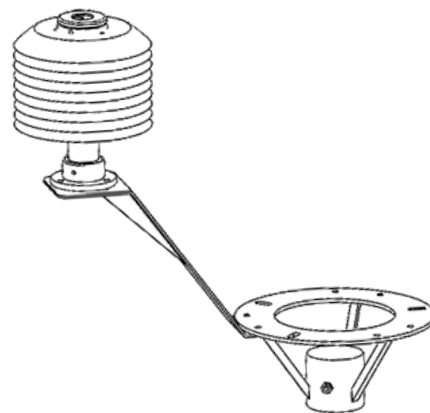

Check the level of the Radiation Shield


Step 5

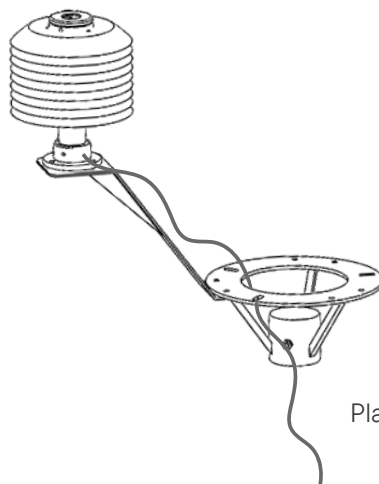

Place the wire Through the base


ULTRA SONIC ANEMOMETER

Step 1

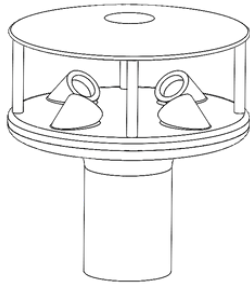


Gently Check the Structure and Wiring

Step 2

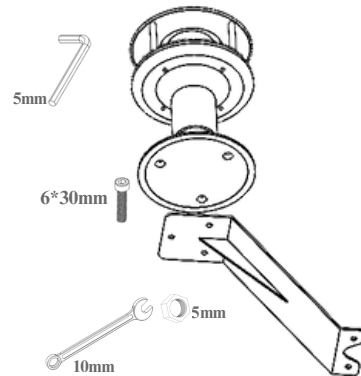


Joint the Mounting plate with the base of Ultra-Sonic Anemometer

Step 3

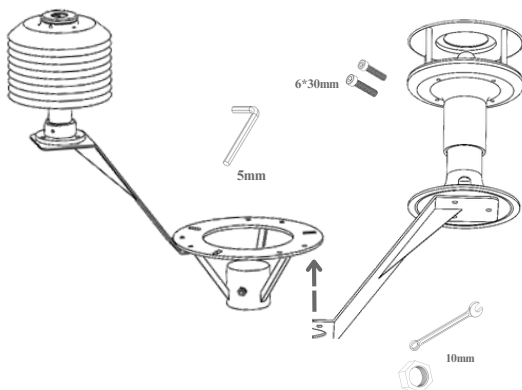


Joint the Ultra-Sonic Anemometer Mounting of with Rain Guage Mounting

Step 4

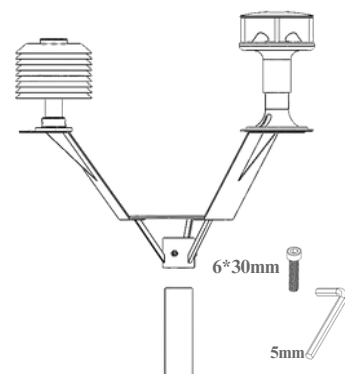

Joint Pole with Rain Guage Mounting


Step 5

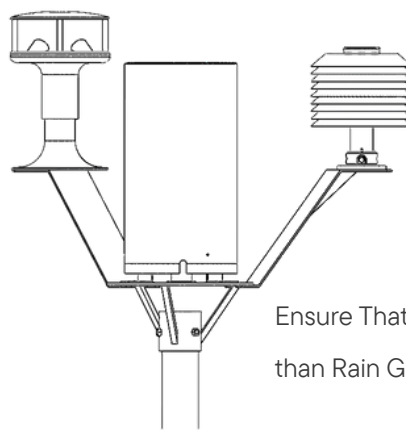

Ensure That the height of Ultra sonic should higher than Rain Guage.

DATA LOGGER


Step 1

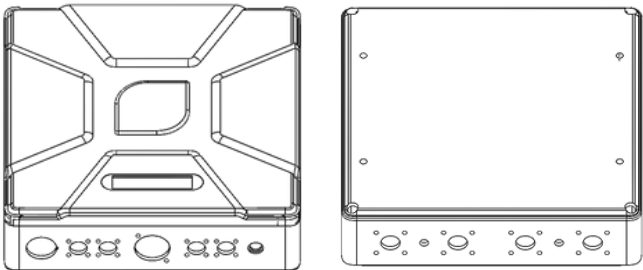

2.5mm



Open the Data Logger Lid With Allen Key

Step 2

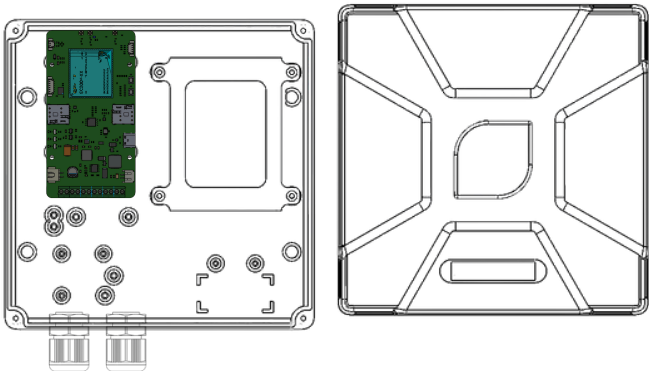


Check The wire,battery and POLY CIRCUIT BORAD (PCB)

Step 3

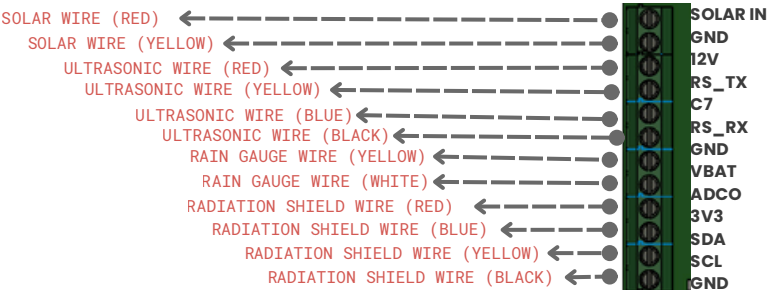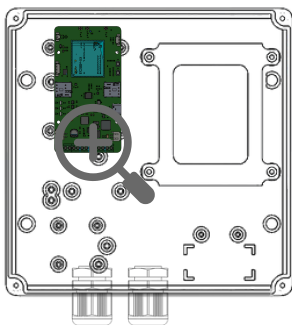

Check the Connections of wires of sensors


Step 4

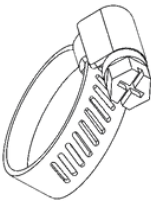

Clip the Hose Clamp into the Mounting of the Logger with help of screwdriver.


SOLAR PANEL

Step 1

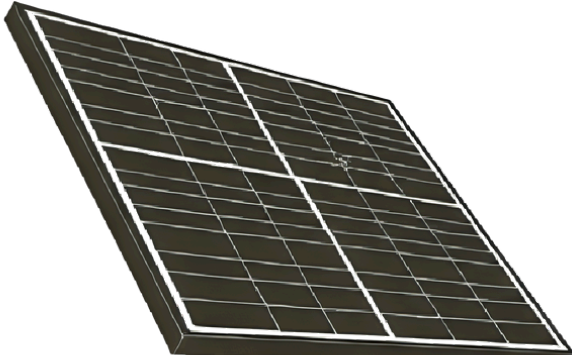


Place the Solar on a flat and stable surface. Ensure the base is firm to avoid tilting.

Step 2

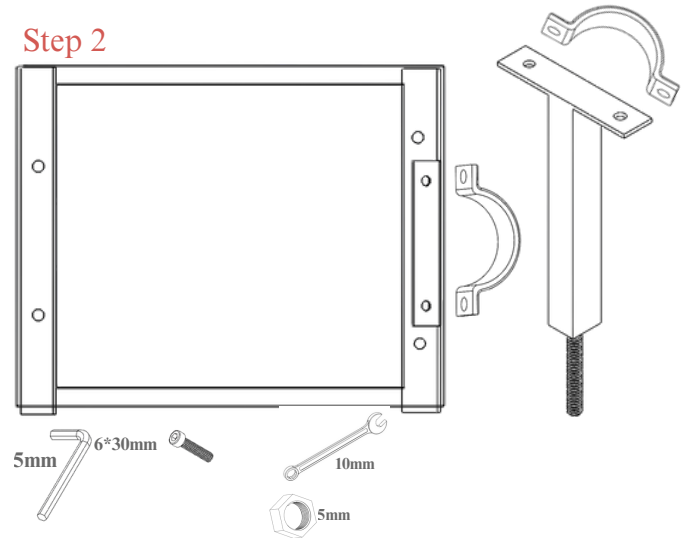



Tighten all screws/bolts with the mounting to fix the solar panel firmly in place.

Step 3

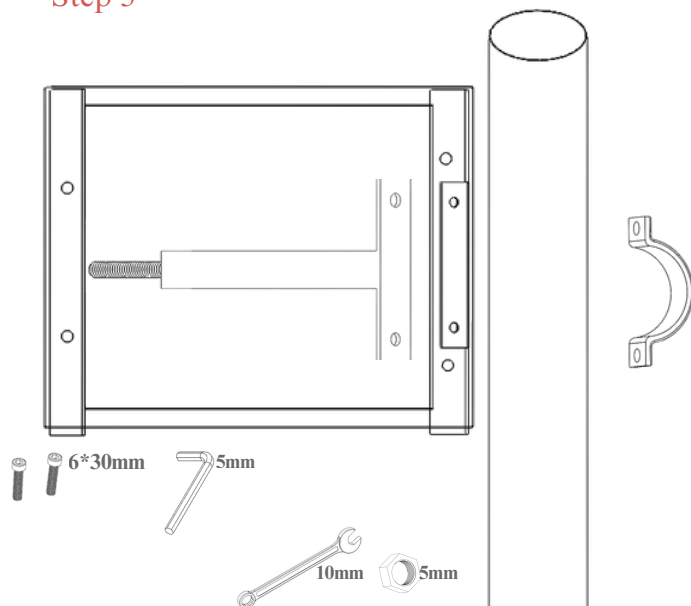


Attach the solar panel to the stand carefully. Align the slots/holes properly for a secure fit.

Step 4

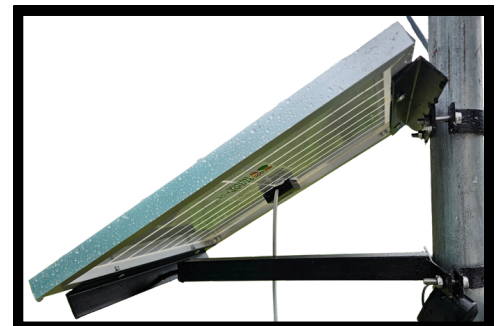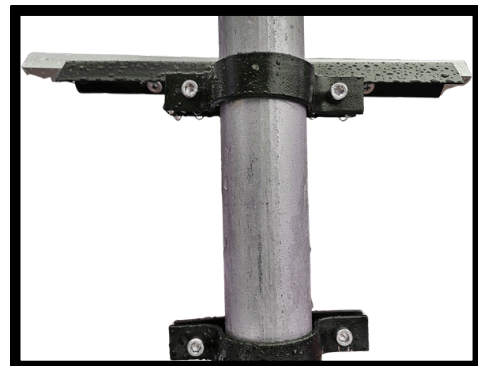

Adjust the solar panel angle as per sunlight direction for maximum efficiency.

STAND

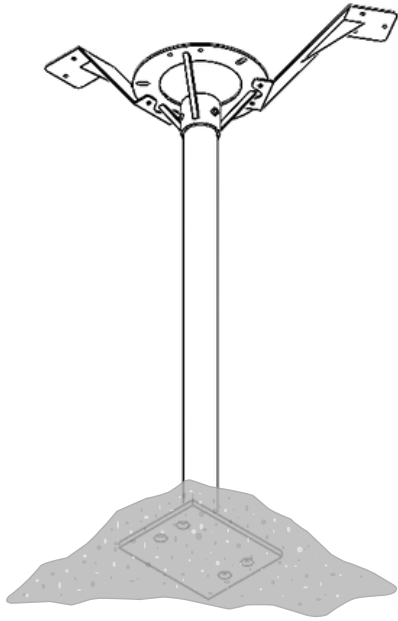

Step 1

Mark the installation spot and dig a small pit (as per base size).

Step 2

Place the stand/pole base inside the pit.

Step 3

Prepare cement mixture (cement, sand, gravel, and water in proper ratio).

Step 4

Pour the cement around the base to fix it firmly with the surface. Make sure the pole is vertical.

REQUIREMENT

- 1.Allen Key (5 mm) (2.5mm) (4 mm)
- 2.Spanner (10mm)
- 3.Cement, Sand & Gravel (for fixing base to surface)
- 4.Water (for cement mixture)
- 5.Gloves & Safety Gear (for safe handling)
- 6.Level, Measuring Tool (to ensure vertical alignment of pole)
- 7.Ensure that the pole diameter should be **1.5 inches - 1.75 inches (38.1mm - 44.45 mm)**.