

Bulletin No: 17-012


Date: 1/Aug/17

SUBJECT: RAMP procedures reminder

APPLICABLE TO: FLIGHT COORDINATORS

When assign to work a flight using a bul loaded such as Viva Colombia, XTRA, SWIFT, ARUBA, World Atlantic you must insure that

- | |
|--|
| 1- No GSE that needs to mate with the aircraft does not touches the fuselage. They must leave 2" gap |
| 2- You take pictures of the bin nets in closed position before the C doors are closed |
| 3- Make sure that the 2' gap between the ceiling and the last bag are respected/ follow |
| 4- All agents use a guide person when approaching the Aircraft with a piece of GSE |
| 5- Everyone use the appropriate PPE |
| 6- No GSE is inside the ERA, when marshalling in or pushing aircraft back. Including wheel chocks |

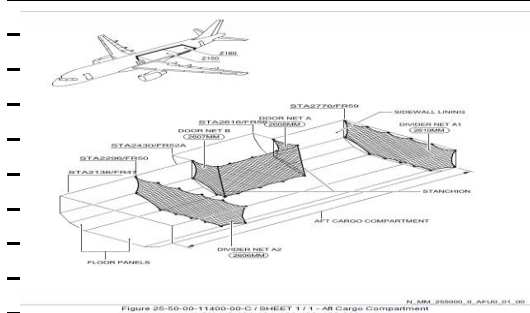

PREPARED BY:

Safety Department