# Arduino Tutorials from www.arduino.cc

# **Table of Content**


Reading a Potentiometer (analog input)	2
Code	2
The "Hello World!" of Physical Computing	
Code	4
Blinking an LED without using the delay() function	
Code	6
Pushbutton	
Switch	11
Circuit	11
Code	11
Interfacing a Joystick	
Knock Sensor	16
Representing the Knock in Processing	17
Memsic 2125 Accelerometer	
PING range finder	22
Play Melody	24
Example 1: Play Melody	
Keyboard Serial	
LCD Display - 8 bits	31
Unipolar Stepper Motor	
Example 1: Simple example	
Example 2: Stepper Unipolar Advanced	
References	

# Reading a Potentiometer (analog input)

A potentiometer is a simple knob that provides a variable resistance, which we can read into the Arduino board as an analog value. In this example, that value controls the rate at which an LED blinks.

We connect three wires to the Arduino board. The first goes to ground from one of the outer pins of the potentiometer. The second goes from 5 volts to the other outer pin of the potentiometer. The third goes from analog input 2 to the middle pin of the potentiometer.

By turning the shaft of the potentiometer, we change the amount of resistence on either side of the wiper which is connected to the center pin of the potentiometer. This changes the relative "closeness" of that pin to 5 volts and ground, giving us a different analog input. When the shaft is turned all the way in one direction, there are 0 volts going to the pin, and we read 0. When the shaft is turned all the way in the other direction, there are 5 volts going to the pin and we read 1023. In between, analogRead() returns a number between 0 and 1023 that is proportional to the amount of voltage being applied to the pin.

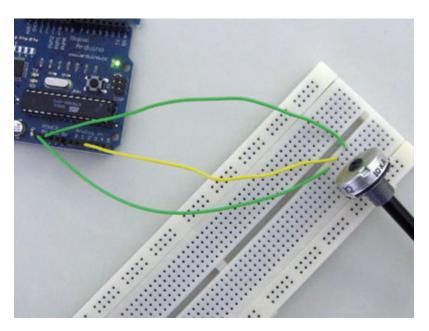

#### Code

```
/* Analog Read to LED
* ------
*

* turns on and off a light emitting diode(LED) connected to digital
* pin 13. The amount of time the LED will be on and off depends on
* the value obtained by analogRead(). In the easiest case we connect
* a potentiometer to analog pin 2.

*

* Created 1 December 2005
* copyleft 2005 DojoDave <a href="http://www.0j0.org">http://arduino.berlios.de
*
*/
```


# The "Hello World!" of Physical Computing

The first program every programmer learns consists in writing enough code to make their code show the sentence "Hello World!" on a screen.

As a microcontroller, Arduino doesn't have any pre-established output devices. Willing to provide newcomers with some help while debugging programs, we propose the use of one of the board's pins plugging a LED that we will make blink indicating the right functionallity of the program.

We have added a 1K resistor to pin 13, what allows the immediate connection of a LED between that pin and ground.

LEDs have polarity, which means they will only light up if you orient the legs properly. The long leg is typically positive, and should connect to pin 13. The short leg connects to GND; the bulb of the LED will also typically have a flat edge on this side. If the LED doesn't light up, trying reversing the legs (you won't hurt the LED if you plug it in backwards for a short period of time).

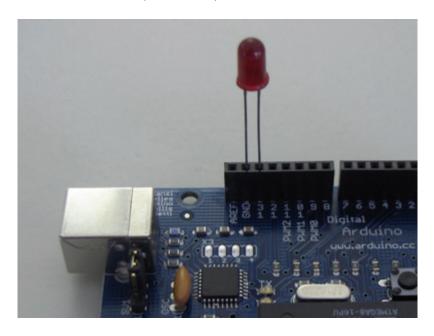

# Code

The example code is very simple, credits are to be found in the comments.

4

 $<sup>^{\</sup>star}$  turns on and off a light emitting diode(LED) connected to a digital

 $<sup>^{\</sup>star}$  pin, in intervals of 2 seconds. Ideally we use pin 13 on the Arduino

<sup>\*</sup> board because it has a resistor attached to it, needing only an LED

<sup>\*</sup> Created 1 June 2005

# Blinking an LED without using the delay() function.

Sometimes you need to blink an LED (or some other time sensitive function) at the same time as something else (like watching for a button press). That means you can't use delay(), or you'd stop everything else the program while the LED blinked. Here's some code that demonstrates how to blink the LED without using delay(). It keeps track of the last time it turned the LED on or off. Then, each time through loop() it checks if a sufficient interval has passed - if it has, it turns the LED off if it was on and vice-versa.

## Code

```
/* Blinking LED without using delay
* turns on and off a light emitting diode(LED) connected to a digital
* pin, without using the delay() function. this means that other code
* can run at the same time without being interrupted by the LED code.
* Created 14 February 2006
                              // LED connected to digital pin 13
// previous value of the LED
// will store last time LED was updated
int ledPin = 13;
int value = LOW;
long previousMillis = 0;
long interval = 1000;
                                // interval at which to blink
(milliseconds)
void setup()
 pinMode(ledPin, OUTPUT); // sets the digital pin as output
void loop()
 // here is where you'd put code that needs to be running all the
time.
 // check to see if it's time to blink the LED; that is, is the
difference
 // between the current time and last time we blinked the LED bigger
 // the interval at which we want to blink the LED.
 if (millis() - previousMillis > interval) {
   previousMillis = millis(); // remember the last time we blinked
the LED
    // if the LED is off turn it on and vice-versa.
    if (value == LOW)
     value = HIGH;
    else
      value = LOW;
   digitalWrite(ledPin, value);
}
```

```
* Code for cross-fading 3 LEDs, red, green and blue, or one tri-color
LED, using PWM
* The program cross-fades slowly from red to green, green to blue, and
blue to red
* The debugging code assumes Arduino 0004, as it uses the new
Serial.begin()-style functions
* Clay Shirky <clay.shirky@nyu.edu>
// Output
int redPin = 9; // Red LED, connected to digital pin 9
int greenPin = 10; // Green LED, connected to digital pin 10
int bluePin = 11; // Blue LED, connected to digital pin 11
// Program variables
int redVal = 255; // Variables to store the values to send to the
pins
int greenVal = 1; // Initial values are Red full, Green and Blue off
int blueVal = 1;
            // Loop counter
int i = 0;
int wait = 50; // 50ms (.05 second) delay; shorten for faster fades
int DEBUG = 0; // DEBUG counter; if set to 1, will write values back
via serial
void setup()
 pinMode(redPin, OUTPUT); // sets the pins as output
 pinMode(greenPin, OUTPUT);
 pinMode(bluePin, OUTPUT);
 if (DEBUG) {
                        // If we want to see the pin values for
debugging...
   Serial.begin(9600); // ...set up the serial ouput on 0004 style
  }
}
// Main program
void loop()
  i += 1; // Increment counter
 if (i < 255) // First phase of fades
   redVal -= 1; // Red down
   greenVal += 1; // Green up
   blueVal = 1; // Blue low
  else if (i < 509) // Second phase of fades
            = 1; // Red low
   redVal
   greenVal -= 1; // Green down
   blueVal += 1; // Blue up
  else if (i < 763) // Third phase of fades
   redVal += 1; // Red up
   greenVal = 1; // Green low
```


```
blueVal -= 1; // Blue down
 else // Re-set the counter, and start the fades again
   i = 1;
  }
 analogWrite(redPin, redVal); // Write current values to LED pins
  analogWrite(greenPin, greenVal);
 analogWrite(bluePin, blueVal);
 if (DEBUG) { // If we want to read the output
   DEBUG += 1; // Increment the DEBUG counter
   if (DEBUG > 10) // Print every 10 loops
     DEBUG = 1;  // Reset the counter
                             // Serial commands in 0004 style
     Serial.print(i);
     Serial.print("\t");
                            // Print a tab
                            // Indicate that output is red value
     Serial.print("R:");
     Serial.print(redVal); // Print red value
     Serial.print("\t");  // Print a tab
Serial.print("G:");  // Repeat for green and blue...
     Serial.print(greenVal);
     Serial.print("\t");
     Serial.print("B:");
      Serial.println(blueVal); // println, to end with a carriage
return
 delay(wait); // Pause for 'wait' milliseconds before resuming the
loop
}
```

# **Pushbutton**

The pushbutton is a component that connects two points in a circuit when you press it. The example turns on an LED when you press the button.

We connect three wires to the Arduino board. The first goes from one leg of the pushbutton through a pull-up resistor (here 2.2 KOhms) to the 5 volt supply. The second goes from the corresponding leg of the pushbutton to ground. The third connects to a digital i/o pin (here pin 7) which reads the button's state.

When the pushbutton is open (unpressed) there is no connection between the two legs of the pushbutton, so the pin is connected to 5 volts (through the pull-up resistor) and we read a HIGH. When the button is closed (pressed), it makes a connection between its two legs, connecting the pin to ground, so that we read a LOW. (The pin is still connected to 5 volts, but the resistor in-between them means that the pin is "closer" to ground.)

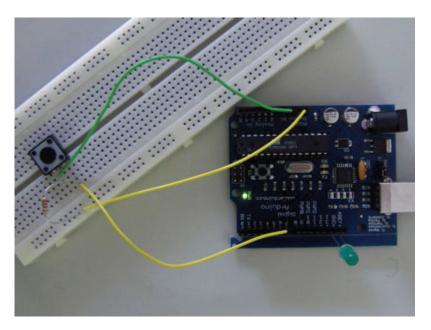

```
/* Basic Digital Read
    * ------
    *
    * turns on and off a light emitting diode(LED) connected to digital
    * pin 13, when pressing a pushbutton attached to pin 7. It illustrates
the
    * concept of Active-Low, which consists in connecting buttons using a
    * 1K to 10K pull-up resistor.
    *
    * Created 1 December 2005
    * copyleft 2005 DojoDave <a href="http://www.0j0.org">http://arduino.berlios.de</a>
    *
    */


int ledPin = 13; // choose the pin for the LED
int inPin = 7; // choose the input pin (for a pushbutton)
int val = 0; // variable for reading the pin status
```

#### **Switch**

This example demonstrates the use of a pushbutton as a switch: each time you press the button, the LED (or whatever) is turned on (if it's off) or off (if on). It also debounces the input, without which pressing the button once would appear to the code as multiple presses.

#### Circuit

A push-button on pin 2 and an LED on pin 13.

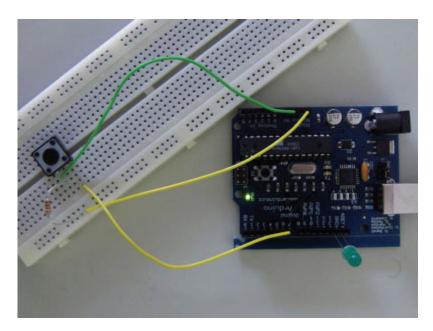


#### Code

```
/* switch
* Each time the input pin goes from LOW to HIGH (e.g. because of a
push-button
* press), the output pin is toggled from LOW to HIGH or HIGH to LOW.
* a minimum delay between toggles to debounce the circuit (i.e. to
ignore
* noise).
* David A. Mellis
* 21 November 2006
*/
                  // the number of the input pin
int inPin = 2;
int outPin = 13;
                   // the number of the output pin
int previous = LOW; // the previous reading from the input pin
```


```
// the follow variables are long's because the time, measured in
miliseconds,
// will quickly become a bigger number than can be stored in an int.
long time = 0;  // the last time the output pin was toggled
long debounce = 200; // the debounce time, increase if the output
flickers
void setup()
 if (DEBUG)
   Serial.begin(19200);
 pinMode(inPin, INPUT);
 pinMode(outPin, OUTPUT);
void loop()
 reading = digitalRead(inPin);
 // if the input just went from LOW and HIGH and we've waited long
enough
 // to ignore any noise on the circuit, toggle the output pin and
remember
 // the time
 if (reading == HIGH && previous == LOW && millis() - time > debounce)
   if (state == HIGH)
     state = LOW;
   else
     state = HIGH;
   time = millis();
  digitalWrite(outPin, state);
 previous = reading;
```

# **Interfacing a Joystick**

The Joystick

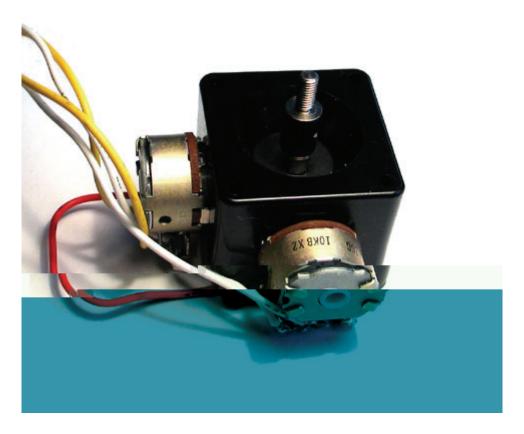

Schematic

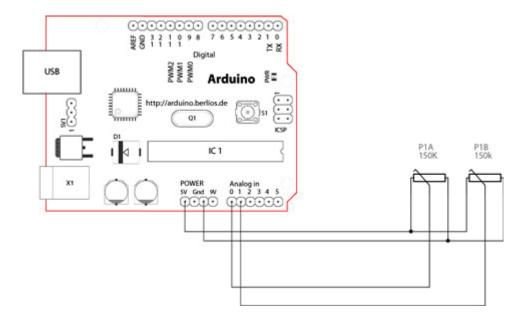

#### **How this works**

The joystick in the picture is nothing but two potentiometers that allow us to messure the movement of the stick in 2-D. Potentiometers are variable resistors and, in a way, they act as sensors providing us with a variable voltage depending on the rotation of the device around its shaft.

The kind of program that we need to monitor the joystick has to make a polling to two of the analog pins. We can send these values back to the computer, but then we face the classic problem that the transmission over the communication port has to be made with 8bit values, while our DAC (Digital to Analog Converter - that is messuring the values from the potentiometers in the joystick) has a resolution of 10bits. In other words this means that our sensors are characterized with a value between 0 and 1024.

The following code includes a method called *treatValue()* that is transforming the sensor's messurement into a value between 0 and 9 and sends it in ASCII back to the computer. This allows to easily send the information into e.g. Flash and parse it inside your own code.

Finally we make the LED blink with the values read from the sensors as a direct visual feedback of how we control the joystick.

```
// slider variable connecetd to
int joyPin1 = 0;
analog pin 0
int joyPin2 = 1;
                               // slider variable connecetd to
analog pin 1
int value1 = 0;
                               // variable to read the value from
the analog pin 0
int value2 = 0;
                               // variable to read the value from
the analog pin 1
void setup() {
 pinMode(ledPin, OUTPUT);
                                     // initializes digital pins 0
to 7 as outputs
 beginSerial(9600);
 int treatValue(int data) {
 return (data * 9 / 1024) + 48;
 void loop() {
 // reads the value of the variable resistor
 value1 = analogRead(joyPin1);
 // this small pause is needed between reading
 // analog pins, otherwise we get the same value twice
 delay(100);
 // reads the value of the variable resistor
 value2 = analogRead(joyPin2);
 digitalWrite(ledPin, HIGH);
 delay(value1);
 digitalWrite(ledPin, LOW);
 delay(value2);
 serialWrite('J');
  serialWrite(treatValue(value1));
 serialWrite(treatValue(value2));
 serialWrite(10);
 serialWrite(13);
```


## **Knock Sensor**

Here we use a Piezo element to detect sound, what will allow us to use it as a knock sensor. We are taking advantage of the processors capability to read analog signals through its ADC - analog to digital converter. These converters read a voltage value and transform it into a value encoded digitally. In the case of the Arduino boards, we transform the voltage into a value in the range 0..1024. 0 represents 0volts, while 1024 represents 5volts at the input of one of the six analog pins.

A Piezo is nothing but an electronic device that can both be used to play tones and to detect tones. In our example we are plugging the Piezo on the analog input pin number 0, that supports the functionality of reading a value between 0 and 5volts, and not just a plain HIGH or LOW.

The other thing to remember is that Piezos have polarity, commercial devices are usually having a red and a black wires indicating how to plug it to the board. We connect the black one to ground and the red one to the input. We also have to connect a resistor in the range of the Megaohms in parallel to the Piezo element; in the example we have plugged it directly in the female connectors. Sometimes it is possible to acquire Piezo elements without a plastic housing, then they will just look like a metallic disc and are easier to use as input sensors.

The code example will capture the knock and if it is stronger than a certain threshold, it will send the string "Knock!" back to the computer over the serial port. In order to see this text you could either use a terminal program, which will read data from the serial port and show it in a window, or make your own program in e.g. Processing. Later in this article we propose a program that works for the software designed by Reas and Fry.

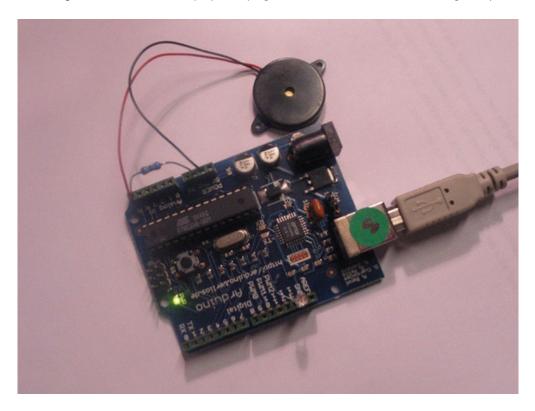

Example of connection of a Piezo to analog pin 0 with a resistor

/\* Knock Sensor

16

```
* Program using a Piezo element as if it was a knock sensor.
 * We have to basically listen to an analog pin and detect
 * if the signal goes over a certain threshold. It writes
 * "knock" to the serial port if the Threshold is crossed,
 * and toggles the LED on pin 13.
 * (cleft) 2005 D. Cuartielles for K3
int ledPin = 13;
int knockSensor = 0;
byte val = 0;
int statePin = LOW;
int THRESHOLD = 100;
void setup() {
pinMode(ledPin, OUTPUT);
beginSerial(9600);
void loop() {
 val = analogRead(knockSensor);
 if (val >= THRESHOLD) {
   statePin = !statePin;
   digitalWrite(ledPin, statePin);
   printString("Knock!");
   printByte(10);
   printByte(13);
 delay(100); // we have to make a delay to avoid overloading the
serial port
}
```

#### **Representing the Knock in Processing**

If, e.g. we would like to capture this "knock" from the Arduino board, we have to look into how the information is transferred from the board over the serial port. First we see that whenever there is a knock bigger that the threshold, the program is printing (thus sending) "Knock!" over the serial port. Directly after sends the byte 10, what stands for EOLN or End Of LiNe, and byte 13, or CR - Carriage Return. Those two symbols will be useful to determine when the message sent by the board is over. Once that happens, the processing program will toggle the background color of the screen and print out "Knock!" in the command line.

```
// Knock In
// by David Cuartielles <http://www.0j0.org>
// based on Analog In by Josh Nimoy <http://itp.jtnimoy.com>

// Reads a value from the serial port and makes the background
// color toggle when there is a knock on a piezo used as a knock
// sensor.
// Running this example requires you have an Arduino board
// as peripheral hardware sending values and adding an EOLN + CR
```


```
// in the end. More information can be found on the Arduino
// pages: http://www.arduino.cc
// Created 23 November 2005
// Updated 23 November 2005
import processing.serial.*;
String buff = "";
int val = 0;
int NEWLINE = 10;
Serial port;
void setup()
 size(200, 200);
 // Open your serial port
 port = new Serial(this, "COMXX", 9600); // <-- SUBSTITUTE COMXX with
your serial port name!!
void draw()
 // Process each one of the serial port events
 while (port.available() > 0) {
   serialEvent(port.read());
 background(val);
void serialEvent(int serial)
 if(serial != NEWLINE) {
   buff += char(serial);
  } else {
   buff = buff.substring(1, buff.length()-1);
   // Capture the string and print it to the commandline
   // we have to take from position 1 because
   // the Arduino sketch sends EOLN (10) and CR (13)
   if (val == 0) {
     val = 255;
    } else {
    val = 0;
   println(buff);
   // Clear the value of "buff"
   buff = "";
   }
```

# **Memsic 2125 Accelerometer**

The Memsic 2125 is a dual axis accelerometer sensor from Parallax able of measuring up to a 2g acceleration. When making very accurate measurements, the sensor counts with a temperature pin that can be used to compensate possible errors.

The pins dedicated to measure acceleration can be connected directly to digital inputs to the Arduino board, while the temperature should be taken as an analog input. The acceleration pins send the signals back to the computer in the form of pulses which width represents the acceleration.

The example shown here was mounted by Anders Gran, while the software was created by Marcos Yarza, who is Arduino's accelerometer technology researcher, at the University of Zaragoza, Spain. The board is connected minimally, only the two axis pins are plugged to the board, leaving the temperature pin open.

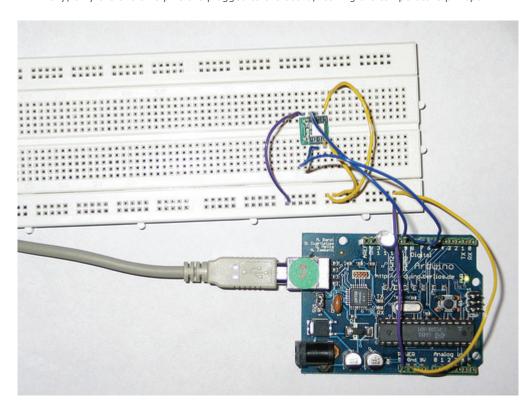


Protoboard with an Accelerometer, picture by Anders Gran

```
/* Accelerometer Sensor
* ------
*
* Reads an 2-D accelerometer
* attached to a couple of digital inputs and
* sends their values over the serial port; makes
* the monitor LED blink once sent
*
* http://www.0j0.org
```

```
* copyleft 2005 K3 - Malmo University - Sweden
* @author: Marcos Yarza
* @hardware: Marcos Yarza
* @project: SMEE - Experiential Vehicles
* @sponsor: Experiments in Art and Technology Sweden, 1:1 Scale
int ledPin = 13;
int xaccPin = 7;
int yaccPin = 6;
int value = 0;
int accel = 0;
char sign = ' ';
int timer = 0;
int count = 0;
void setup() {
beginSerial(9600); // Sets the baud rate to 9600
pinMode(ledPin, OUTPUT);
pinMode(xaccPin, INPUT);
pinMode(yaccPin, INPUT);
/* (int) Operate Acceleration
* function to calculate acceleration
* returns an integer
*/
int operateAcceleration(int time1) {
return abs(8 * (time1 / 10 - 500));
/* (void) readAccelerometer
* procedure to read the sensor, calculate
* acceleration and represent the value
void readAcceleration(int axe) {
timer = 0;
count = 0;
value = digitalRead(axe);
while (value == HIGH) { // Loop until pin reads a low
value = digitalRead(axe);
while(value == LOW) { // Loop until pin reads a high
value = digitalRead(axe);
while (value == HIGH) { // Loop until pin reads a low and count
value = digitalRead(axe);
count = count + 1;
timer = count * 18; //calculate the teme in miliseconds
//operate sign
if (timer > 5000) {
sign = '+';
if (timer < 5000) {
```

```
sign = '-';
//determine the value
accel = operateAcceleration(timer);
//Represent acceleration over serial port
if (axe == 7) {
printByte('X');
else {
printByte('Y');
printByte(sign);
printInteger(accel);
printByte(' ');
void loop() {
readAcceleration(xaccPin); //reads and represents acceleration X
readAcceleration(yaccPin); //reads and represents acceleration Y
digitalWrite(ledPin, HIGH);
delay(300);
digitalWrite(ledPin, LOW);
```

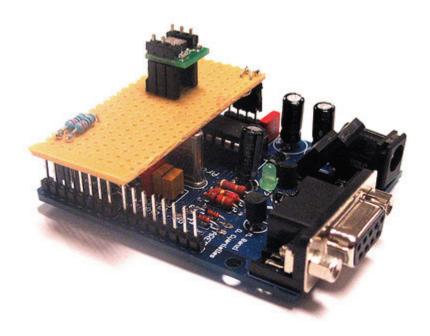

Accelerometer mounted on prototyping board, by M. Yarza


The following example is an adaptation of the previous one. Marcos Yarza added two 2200hm resistors to the pins coming out of the accelerometer. The board chosen for this small circuit is just a piece of prototyping board. Here the code is exactly the same as before (changing the input pins to be 2 and 3), but the installation on the board allows to embed the whole circuity in a much smaller housing.

## PING range finder

The PING range finder is an ultrasound sensor from Parallax able of detecting objects up to a 3 mts distance. The sensor counts with 3 pins, two are dedicated to power and ground, while the third one is used both as input and output.

The pin dedicated to make the readings has to be shifting configuration from input to output according to the PING specification sheet. First we have to send a pulse that will make the sensor send an ultrasound tone and wait for an echo. Once the tone is received back, the sensor will send a pulse over the same pin as earlier. The width of that pulse will determine the distance to the object.

The example shown here was mounted by Marcus Hannerstig, while the software was created by David Cuartielles. The board is connected as explained using only wires coming from an old computer.

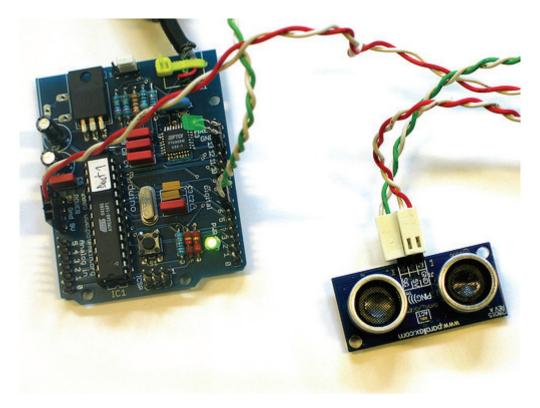

Ultrasound sensor connected to an Arduino USB v1.0

```
/* Ultrasound Sensor
* Reads values (00014-01199) from an ultrasound sensor (3m sensor)
  * and writes the values to the serialport.
* http://www.xlab.se | http://www.0j0.org
  * copyleft 2005 Mackie for XLAB | DojoDave for DojoCorp
*/
int ultraSoundSignal = 7; // Ultrasound signal pin
int val = 0;
int ultrasoundValue = 0;
int timecount = 0; // Echo counter
int ledPin = 13; // LED connected to digital pin 13
```

```
void setup() {
 beginSerial(9600);
void loop() {
timecount = 0;
val = 0;
pinMode(ultraSoundSignal, OUTPUT); // Switch signalpin to output
/* Send low-high-low pulse to activate the trigger pulse of the
sensor*/
digitalWrite(ultraSoundSignal, LOW); // Send low pulse
delayMicroseconds(2); // Wait for 2 microseconds
digitalWrite(ultraSoundSignal, HIGH); // Send high pulse
delayMicroseconds(5); // Wait for 5 microseconds
digitalWrite(ultraSoundSignal, LOW); // Holdoff
/* Listening for echo pulse*/
pinMode(ultraSoundSignal, INPUT); // Switch signalpin to input
val = digitalRead(ultraSoundSignal); // Append signal value to val
while (val == LOW) { // Loop until pin reads a high value
 val = digitalRead(ultraSoundSignal);
while (val == HIGH) { // Loop until pin reads a high value
 val = digitalRead(ultraSoundSignal);
 timecount = timecount +1;
                                     // Count echo pulse time
/* Writing out values to the serial port*/
ultrasoundValue = timecount; // Append echo pulse time to
ultrasoundValue
serialWrite('A'); // Example identifier for the sensor
printInteger(ultrasoundValue);
serialWrite(10);
serialWrite(13);
/* Lite up LED if any value is passed by the echo pulse*/
if(timecount > 0){
 digitalWrite(ledPin, HIGH);
/* Delay of program*/
delay(100);
```


# **Play Melody**

This example makes use of a Piezo Speaker in order to play melodies. We are taking advantage of the processors capability to produde PWM signals in order to play music. There is more information about how PWM works written by David Cuartielles here and even at K3's old course guide

A Piezo is nothing but an electronic device that can both be used to play tones and to detect tones. In our example we are plugging the Piezo on the pin number 9, that supports the functionality of writing a PWM signal to it, and not just a plain HIGH or LOW value.

The first example of the code will just send a square wave to the piezo, while the second one will make use of the PWM functionality to control the volume through changing the Pulse Width.

The other thing to remember is that Piezos have polarity, commercial devices are usually having a red and a black wires indicating how to plug it to the board. We connect the black one to ground and the red one to the output. Sometimes it is possible to acquire Piezo elements without a plastic housing, then they will just look like a metallic disc.

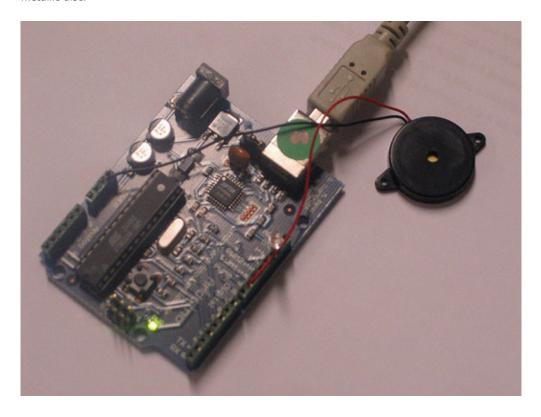

Example of connection of a Piezo to pin 9

## **Example 1: Play Melody**

```
/* Play Melody
  * -----
  *
  * Program to play a simple melody
```

```
* Tones are created by quickly pulsing a speaker on and off
   using PWM, to create signature frequencies.
 * Each note has a frequency, created by varying the period of
 * vibration, measured in microseconds. We'll use pulse-width
 * modulation (PWM) to create that vibration.
 * We calculate the pulse-width to be half the period; we pulse
 * the speaker HIGH for 'pulse-width' microseconds, then LOW
   for 'pulse-width' microseconds.
   This pulsing creates a vibration of the desired frequency.
 * (cleft) 2005 D. Cuartielles for K3
 * Refactoring and comments 2006 clay.shirky@nyu.edu
 * See NOTES in comments at end for possible improvements
// Start by defining the relationship between
   note, period, & frequency.
                    // 261 Hz
#define c
              3830
#define d 3400 // 294 Hz
#define e 3038 // 329 Hz
#define f 2864 // 349 Hz
#define g 2550 // 392 Hz
#define a 2272 // 440 Hz
#define b 2028 // 493 Hz
#define C 1912 // 523 Hz
#define d
                      // 294 Hz
             3400
// Define a special note, 'R', to represent a rest
#define R 0
// Set up speaker on a PWM pin (digital 9, 10 or 11)
int speakerOut = 9;
// Do we want debugging on serial out? 1 for yes, 0 for no
int DEBUG = 1;
void setup() {
 pinMode(speakerOut, OUTPUT);
  if (DEBUG) {
    Serial.begin(9600); // Set serial out if we want debugging
// melody[] is an array of notes, accompanied by beats[],
// which sets each note's relative length (higher #, longer note)
int melody[] = { C, b, g, C, b, e, R, C, c, g, a, C };
int beats[] = { 16, 16, 16, 8, 8, 16, 32, 16, 16, 8, 8 };
int MAX COUNT = sizeof(melody) / 2; // Melody length, for looping.
// Set overall tempo
long tempo = 10000;
// Set length of pause between notes
int pause = 1000;
// Loop variable to increase Rest length
```

```
int rest count = 100; //<-BLETCHEROUS HACK; See NOTES
// Initialize core variables
int tone = 0;
int beat = 0;
long duration = 0;
// Pulse the speaker to play a tone for a particular duration
void playTone() {
 long elapsed time = 0;
 if (tone > 0) { // if this isn't a Rest beat, while the tone has
   // played less long than 'duration', pulse speaker HIGH and LOW
   while (elapsed time < duration) {</pre>
     digitalWrite(speakerOut, HIGH);
     delayMicroseconds(tone / 2);
     // DOWN
     digitalWrite(speakerOut, LOW);
     delayMicroseconds(tone / 2);
     // Keep track of how long we pulsed
     elapsed time += (tone);
 else { // Rest beat; loop times delay
   for (int j = 0; j < rest count; j++) { // See NOTE on rest count
     delayMicroseconds(duration);
}
// LET THE WILD RUMPUS BEGIN ================================
void loop() {
 // Set up a counter to pull from melody[] and beats[]
 for (int i=0; i<MAX COUNT; i++) {</pre>
   tone = melody[i];
   beat = beats[i];
   duration = beat * tempo; // Set up timing
   playTone();
   // A pause between notes...
   delayMicroseconds(pause);
   if (DEBUG) { // If debugging, report loop, tone, beat, and duration
     Serial.print(i);
     Serial.print(":");
     Serial.print(beat);
     Serial.print(" ");
     Serial.print(tone);
     Serial.print(" ");
     Serial.println(duration);
   }
 }
```

```
* NOTES
 * The program purports to hold a tone for 'duration' microseconds.
* Lies lies! It holds for at least 'duration' microseconds,
* any overhead created by incremeting elapsed time (could be in
excess of
* 3K microseconds) plus overhead of looping and two digitalWrites()
* As a result, a tone of 'duration' plays much more slowly than a rest
* of 'duration.' rest_count creates a loop variable to bring 'rest'
 * in line with 'tone' beats of the same length.
* rest count will be affected by chip architecture and speed, as well
as
* overhead from any program mods. Past behavior is no guarantee of
future
* performance. Your mileage may vary. Light fuse and get away.
* This could use a number of enhancements:
* ADD code to let the programmer specify how many times the melody
should
* loop before stopping
* ADD another octave
* MOVE tempo, pause, and rest count to #define statements
 * RE-WRITE to include volume, using analogWrite, as with the second
program at
           http://www.arduino.cc/en/Tutorial/PlayMelody
 * ADD code to make the tempo settable by pot or other input device
 * ADD code to take tempo or volume settable by serial communication
           (Requires 0005 or higher.)
* ADD code to create a tone offset (higer or lower) through pot etc
 * REPLACE random melody with opening bars to 'Smoke on the Water'
 * /
Second version, with volume control set using analogWrite()
/* Play Melody
 * -----
 * Program to play melodies stored in an array, it requires to know
 * about timing issues and about how to play tones.
 * The calculation of the tones is made following the mathematical
 * operation:
         timeHigh = 1/(2 * toneFrequency) = period / 2
 * where the different tones are described as in the table:
              frequency
                             period PW (timeHigh)
 * note
 * C
               261 Hz
                              3830
                                    1915
```


```
* d
               294 Hz
                               3400
                                     1700
 * e
               329 Hz
                                     1519
                               3038
 * f
                349 Hz
                                       1432
                                2864
 * g
                392 Hz
                                2550
                                       1275
 * a
               440 Hz
                                      1136
                                2272
 * b
                493 Hz
                                2028
                                     1014
 * C
                523 Hz
                               1912
                                     956
 * (cleft) 2005 D. Cuartielles for K3
int ledPin = 13;
int speakerOut = 9;
byte names[] = {'c', 'd', 'e', 'f', 'g', 'a', 'b', 'C'};
int tones[] = {1915, 1700, 1519, 1432, 1275, 1136, 1014, 956};
byte melody[] = "2d2a1f2c2d2a2d2c2f2d2a2c2d2a1f2c2d2a2a2g2p8p8p8p";
// count length: 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7
8 9 0
//
                                   10
                                                       20
30
int count = 0;
int count2 = 0;
int count3 = 0;
int MAX COUNT = 24;
int statePin = LOW;
void setup() {
pinMode(ledPin, OUTPUT);
void loop() {
  analogWrite(speakerOut, 0);
  for (count = 0; count < MAX COUNT; count++) {</pre>
    statePin = !statePin;
    digitalWrite(ledPin, statePin);
    for (count3 = 0; count3 <= (melody[count*2] - 48) * 30; count3++) {
      for (count2=0; count2<8; count2++) {</pre>
        if (names[count2] == melody[count*2 + 1]) {
          analogWrite(speakerOut, 500);
          delayMicroseconds(tones[count2]);
          analogWrite(speakerOut, 0);
          delayMicroseconds(tones[count2]);
        if (melody[count*2 + 1] == 'p') {
          // make a pause of a certain size
          analogWrite(speakerOut, 0);
          delayMicroseconds(500);
      }
   }
 }
```

# **Keyboard Serial**

This example makes use of a Piezo Speaker in order to play tones. We are taking advantage of the processors capability to produde PWM signals in order to play music. There is more information about how PWM works written by David Cuartielles here and even at K3's old course guide

A Piezo is nothing but an electronic device that can both be used to play tones and to detect tones. In our example we are plugging the Piezo on the pin number 9, that supports the functionality of writing a PWM signal to it, and not just a plain HIGH or LOW value.

The tones can be lauched using any program able of sending ascii values over the serial port. Terminal software packages, Processing, Pure Data, Director, or the serial proxy + Flash combination can be used to launch the tones.

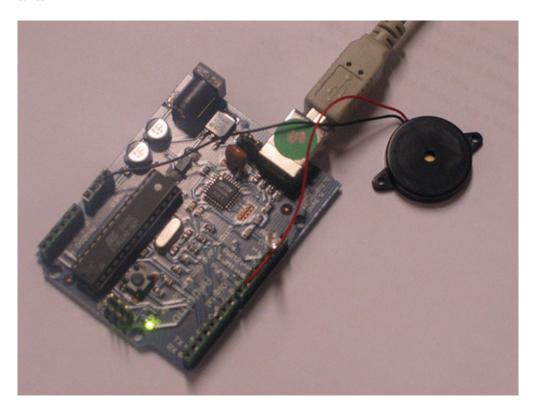

Example of connection of a Piezo to pin 9

```
/* Keyboard Serial
* -----
*

* Program to play tones depending on the
* data coming from the serial port.
*

* The calculation of the tones is made following the mathematical
* operation:
*

* timeHigh = 1/(2 * toneFrequency) = period / 2
```


```
* where the different tones are described as in the table:
 * note
                             period PW (timeHigh)
              frequency
 * C
                              3830 1915
               261 Hz
               294 Hz
                              3400
                                    1700
 * e
               329 Hz
                              3038
                                    1519
 * f
               349 Hz
                              2864
                                    1432
 * g
               392 Hz
                              2550
                                    1275
 * a
               440 Hz
                               2272
                                     1136
 * b
               493 Hz
                               2028
                                    1014
 * C
                              1912
               523 Hz
                                    956
 * (cleft) 2005 D. Cuartielles for K3
int ledPin = 13;
int speakerOut = 9;
byte names[] ={'c', 'd', 'e', 'f', 'g', 'a', 'b', 'C'};
int tones[] = {1915, 1700, 1519, 1432, 1275, 1136, 1014, 956};
byte val = 0;
int serByte = -1;
int statePin = LOW;
int count = 0;
void setup() {
pinMode(ledPin, OUTPUT);
pinMode(speakerOut, OUTPUT);
beginSerial(9600);
void loop() {
  digitalWrite(speakerOut, LOW);
  serByte = serialRead();
  if (serByte !=-1) {
   val = serByte;
    printByte(val);
    statePin = !statePin;
   digitalWrite(ledPin, statePin);
  for (count=0;count<=8;count++) {</pre>
    if (names[count] == val) {
      digitalWrite(speakerOut, HIGH);
      delayMicroseconds(tones[count]);
      digitalWrite(speakerOut, LOW);
      delayMicroseconds(tones[count]);
  }
}
```

# LCD Display - 8 bits

This example shows the most basic action to be done with a LCD display: to show a welcome message. In our case we have an LCD display with backlight and contrast control. Therefore we will use a potentiometer to regulate the contrast.

LCD displays are most of the times driven using an industrial standard established by Hitachi. According to it there is a group of pins dedicated to sending data and locations of that data on the screen, the user can choose to use 4 or 8 pins to send data. On top of that three more pins are needed to synchronize the communication towards the display.

The backdrop of this example is that we are using almost all the available pins on Arduino board in order to drive the display, but we have decided to show it this way for simplicity.

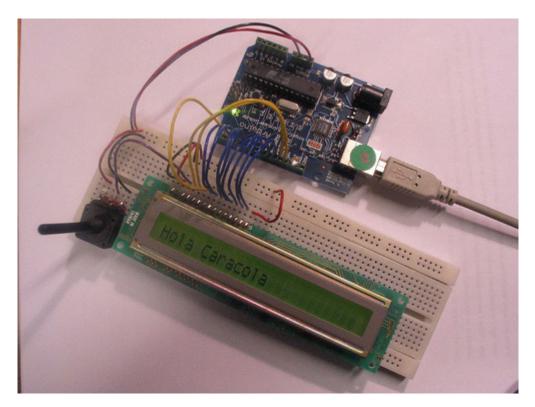

Picture of a protoboard supporting the display and a potentiometer

```
/* LCD Hola
* -----
*

* This is the first example in how to use an LCD screen
* configured with data transfers over 8 bits. The example
* uses all the digital pins on the Arduino board, but can
* easily display data on the display
*

* There are the following pins to be considered:
*
```

```
* - DI, RW, DB0..DB7, Enable (11 in total)
 * the pinout for LCD displays is standard and there is plenty
 * of documentation to be found on the internet.
 * (cleft) 2005 DojoDave for K3
 * /
int DI = 12;
int RW = 11;
int DB[] = \{3, 4, 5, 6, 7, 8, 9, 10\};
int Enable = 2;
void LcdCommandWrite(int value) {
 // poll all the pins
 int i = 0;
 for (i=DB[0]; i <= DI; i++) {
  digitalWrite(i,value & 01);
  value >>= 1;
 digitalWrite(Enable, LOW);
 delayMicroseconds(1);
 // send a pulse to enable
 digitalWrite(Enable, HIGH);
 delayMicroseconds(1); // pause 1 ms according to datasheet
 digitalWrite (Enable, LOW);
 delayMicroseconds(1); // pause 1 ms according to datasheet
void LcdDataWrite(int value) {
 // poll all the pins
 int i = 0;
 digitalWrite(DI, HIGH);
 digitalWrite(RW, LOW);
 for (i=DB[0]; i \le DB[7]; i++) {
  digitalWrite(i,value & 01);
  value >>= 1;
 digitalWrite (Enable, LOW);
 delayMicroseconds(1);
 // send a pulse to enable
digitalWrite(Enable, HIGH);
 delayMicroseconds(1);
 digitalWrite (Enable, LOW);
 delayMicroseconds(1); // pause 1 ms according to datasheet
void setup (void) {
 int i = 0;
 for (i=Enable; i <= DI; i++) {</pre>
  pinMode(i,OUTPUT);
 delay(100);
 // initiatize lcd after a short pause
 // needed by the LCDs controller
 LcdCommandWrite(0x30); // function set:
```


```
// 8-bit interface, 1 display lines, 5x7 font
 delay(64);
 LcdCommandWrite(0x30); // function set:
                         // 8-bit interface, 1 display lines, 5x7 font
 delay(50);
LcdCommandWrite(0x30); // function set:
                        // 8-bit interface, 1 display lines, 5x7 font
delay(20);
LcdCommandWrite(0x06); // entry mode set:
                        // increment automatically, no display shift
delay(20);
LcdCommandWrite(0x0E); // display control:
                        // turn display on, cursor on, no blinking
delay(20);
LcdCommandWrite(0x01); // clear display, set cursor position to zero
delay(100);
LcdCommandWrite(0x80); // display control:
                        // turn display on, cursor on, no blinking
delay(20);
void loop (void) {
 LcdCommandWrite(0x02); // set cursor position to zero
 delay(10);
 // Write the welcome message
 LcdDataWrite('H');
 LcdDataWrite('o');
 LcdDataWrite('l');
 LcdDataWrite('a');
 LcdDataWrite(' ');
 LcdDataWrite('C');
 LcdDataWrite('a');
 LcdDataWrite('r');
 LcdDataWrite('a');
 LcdDataWrite('c');
 LcdDataWrite('o');
 LcdDataWrite('l');
 LcdDataWrite('a');
 delay(500);
```

# **Unipolar Stepper Motor**

This page shows two examples on how to drive a unipolar stepper motor. These motors can be found in old floppy drives and are easy to control. The one we use has 6 connectors of which one is power (VCC) and the other four are used to drive the motor sending synchronous signals.

The first example is the basic code to make the motor spin in one direction. It is aiming those that have no knowledge in how to control stepper motors. The second example is coded in a more complex way, but allows to make the motor spin at different speeds, in both directions, and controlling both from a potentiometer.

The prototyping board has been populated with a 10K potentiomenter that we connect to an analog input, and a ULN2003A driver. This chip has a bunch of transistors embedded in a single housing. It allows the connection of devices and components that need much higher current than the ones that the ATMEGA8 from our Arduino board can offer.

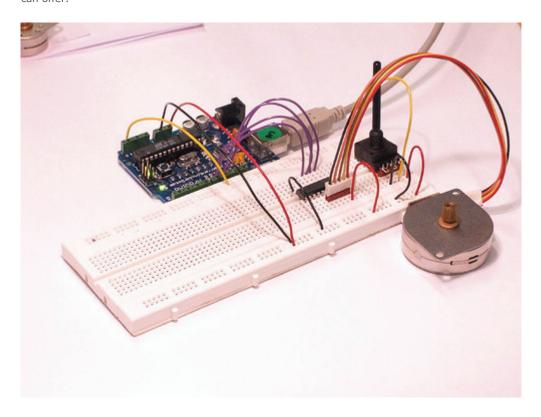

Picture of a protoboard supporting the ULN2003A and a potentiometer

#### **Example 1: Simple example**

```
/* Stepper Copal

* -----

*

* Program to drive a stepper motor coming from a 5'25 disk drive

* according to the documentation I found, this stepper: "[...] motor

* made by Copal Electronics, with 1.8 degrees per step and 96 ohms

* per winding, with center taps brought out to separate leads [...]"
```

```
* [http://www.cs.uiowa.edu/~jones/step/example.html]
 * It is a unipolar stepper motor with 5 wires:
 * - red: power connector, I have it at 5V and works fine
 * - orange and black: coil 1
 * - brown and yellow: coil 2
 * (cleft) 2005 DojoDave for K3
 * http://www.0j0.org | http://arduino.berlios.de
 * @author: David Cuartielles
 * @date: 20 Oct. 2005
int motorPin1 = 8;
int motorPin2 = 9;
int motorPin3 = 10;
int motorPin4 = 11;
int delayTime = 500;
void setup() {
 pinMode(motorPin1, OUTPUT);
  pinMode(motorPin2, OUTPUT);
 pinMode(motorPin3, OUTPUT);
 pinMode(motorPin4, OUTPUT);
void loop() {
  digitalWrite(motorPin1, HIGH);
  digitalWrite(motorPin2, LOW);
  digitalWrite(motorPin3, LOW);
  digitalWrite(motorPin4, LOW);
  delay(delayTime);
  digitalWrite(motorPin1, LOW);
  digitalWrite(motorPin2, HIGH);
  digitalWrite(motorPin3, LOW);
  digitalWrite (motorPin4, LOW);
  delay(delayTime);
  digitalWrite(motorPin1, LOW);
  digitalWrite (motorPin2, LOW);
  digitalWrite(motorPin3, HIGH);
  digitalWrite(motorPin4, LOW);
  delay(delayTime);
  digitalWrite(motorPin1, LOW);
  digitalWrite(motorPin2, LOW);
  digitalWrite(motorPin3, LOW);
  digitalWrite(motorPin4, HIGH);
  delay(delayTime);
```

### **Example 2: Stepper Unipolar Advanced**

```
/* Stepper Unipolar Advanced
 * Program to drive a stepper motor coming from a 5'25 disk drive
 * according to the documentation I found, this stepper: "[...] motor
 * made by Copal Electronics, with 1.8 degrees per step and 96 ohms
 * per winding, with center taps brought out to separate leads [...]"
 * [http://www.cs.uiowa.edu/~jones/step/example.html]
 * It is a unipolar stepper motor with 5 wires:
 \star - red: power connector, I have it at 5V and works fine
 * - orange and black: coil 1
 * - brown and yellow: coil 2
 * (cleft) 2005 DojoDave for K3
 * http://www.0j0.org | http://arduino.berlios.de
 * @author: David Cuartielles
 * @date: 20 Oct. 2005
 */
int motorPins[] = \{8, 9, 10, 11\};
int count = 0;
int count2 = 0;
int delayTime = 500;
int val = 0;
void setup() {
  for (count = 0; count < 4; count++) {</pre>
   pinMode (motorPins[count], OUTPUT);
}
void moveForward() {
  if ((count2 == 0) || (count2 == 1)) {
   count2 = 16;
  count2>>=1;
  for (count = 3; count \geq 0; count--) {
   digitalWrite(motorPins[count], count2>>count&0x01);
  delay(delayTime);
void moveBackward() {
  if ((count2 == 0) || (count2 == 1)) {
   count2 = 16;
  count2>>=1;
  for (count = 3; count \geq 0; count--) {
   digitalWrite(motorPins[3 - count], count2>>count&0x01);
  delay(delayTime);
void loop() {
```

```
val = analogRead(0);
if (val > 540) {
    // move faster the higher the value from the potentiometer
    delayTime = 2048 - 1024 * val / 512 + 1;
    moveForward();
} else if (val < 480) {
    // move faster the lower the value from the potentiometer
    delayTime = 1024 * val / 512 + 1;
    moveBackward();
} else {
    delayTime = 1024;
}</pre>
```

#### References

In order to work out this example, we have been looking into quite a lot of documentation. The following links may be useful for you to visit in order to understand the theory underlying behind stepper motors:

- information about the motor we are using here
- basic explanation about steppers here
- good PDF with basic information here