


电机校准

准备步骤

- 1.设备通电状态下
- 2.启动CAN设备，注意对应设备的CAN序号
- 3.打开终端，手动扶正，发送对应关节校准命令即可

下图位置为零点 注意发送命令时刻，电机所在位置即为零点

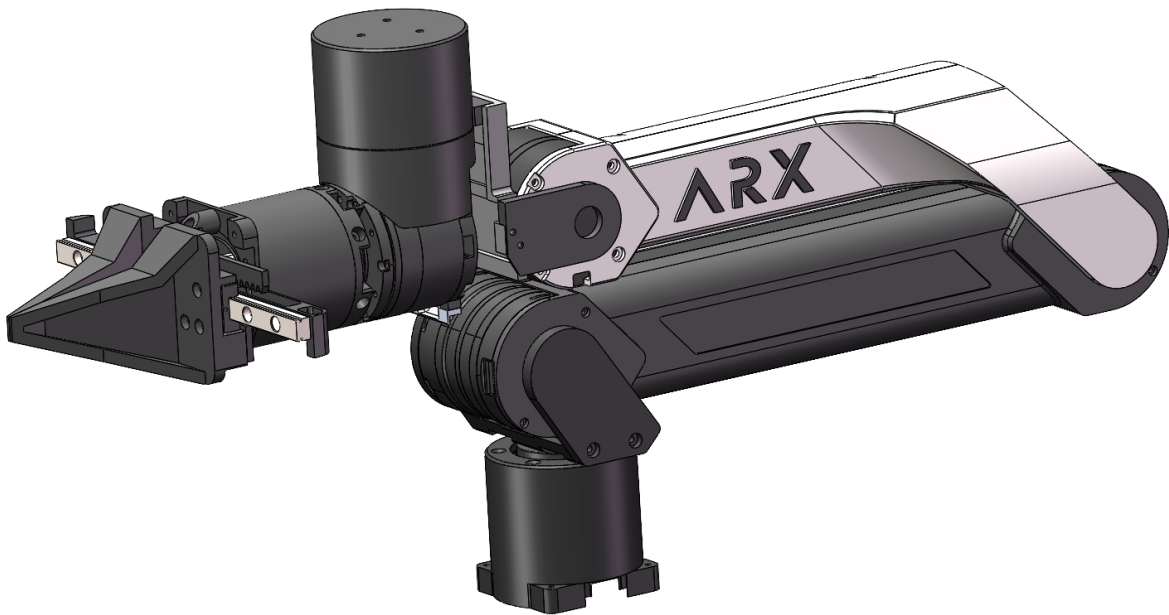

校准命令

ARX方舟无限-R5

关节	校准命令 以CAN0为例，如校准CAN1 更改为can1即可
joint1	cansend can0 001#FFFFFFFFFFFFFFFE
joint2	cansend can0 002#FFFFFFFFFFFFFFFE
joint3	cansend can0 004#FFFFFFFFFFFFFFFE

joint4	cansend can0 005#FFFFFFFFFFFFFFFE
joint5	cansend can0 006#FFFFFFFFFFFFFFFE
joint6	cansend can0 007#FFFFFFFFFFFFFFFE
gripper	cansend can0 008#FFFFFFFFFFFFFFFE

ARX方舟无限-X5

关节	校准命令 以CAN0为例，如校准CAN1 更改为can1即可
joint1	cansend can0 7FF#00010003
joint2	cansend can0 7FF#00020003
joint3	cansend can0 7FF#00040003
joint4	cansend can0 005#FFFFFFFFFFFFFFFE
joint5	cansend can0 006#FFFFFFFFFFFFFFFE
joint6	cansend can0 007#FFFFFFFFFFFFFFFE
gripper	cansend can0 008#FFFFFFFFFFFFFFFE

ARX方舟无限-X7s

左臂 CAN0

右臂 CAN1

关节	校准命令 以CAN0为例，如校准CAN1 更改为can1即可
joint1	cansend can0 001#FFFFFFFFFFFFFFFE
joint2	cansend can0 002#FFFFFFFFFFFFFFFE
joint3	cansend can0 003#FFFFFFFFFFFFFFFE
joint4	cansend can0 004#FFFFFFFFFFFFFFFE
joint5	cansend can0 005#FFFFFFFFFFFFFFFE
joint6	cansend can0 006#FFFFFFFFFFFFFFFE
joint7	cansend can0 007#FFFFFFFFFFFFFFFE

gripper	cansend can0 008#FFFFFFFFFFFFFFFE
---------	-----------------------------------